




MAKE SURE MEMBRANE  
CABLE IS FIRMLY INSERTED  
IN CONNECTOR

LOCK DOWN TABS  
SHOULD BE FULLY  
ENGAGED WITH PCA.

Install FCC Label as shown

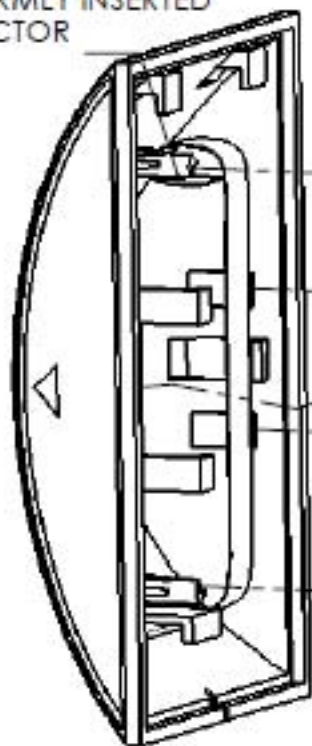

10

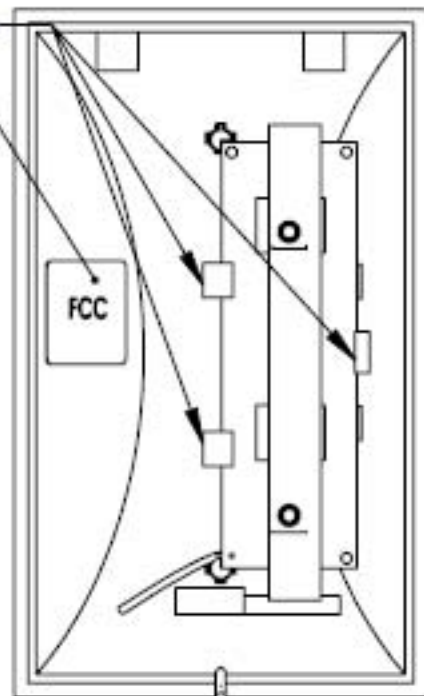

**Do NOT peel off back of DST**  
(DST is only to prevent leads from  
touching membrane tail)

*INDYME*