


Photograph No.1 OBW measurement setup



Photograph No.2 Radiated emissions measurement setup in the anechoic chamber below 30 MHz Photograph No.3 Radiated emissions measurement setup in the anechoic chamber in 30 – 1000 MHz

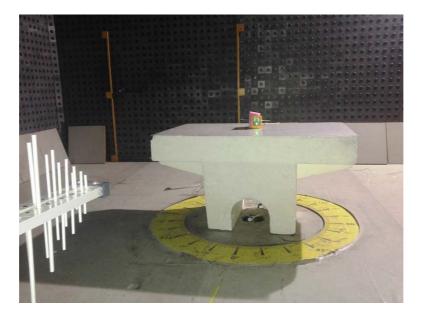

Photograph No.4 Radiated emissions measurement setup in the anechoic chamber above 1 GHz





Photograph No.5 Radiated emissions measurement setup at the OATS above 1 GHz



Photograph No.6 Radiated emissions measurement setup at the OATS above 1 GHz



Photograph No.7 Frequency stability measurement setup



Photograph No.8 Setup for conducted emission measurement on AC power lines