

Figure 1. Conducted Emissions, Test Setup, Setup Rear View

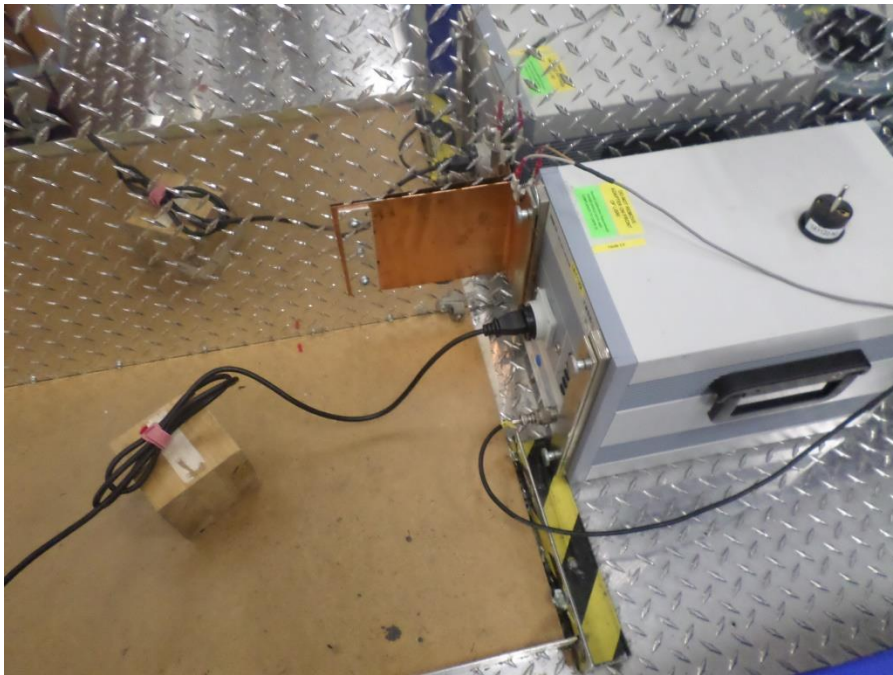


Figure 2. Conducted Emissions, Test Setup, Setup LISN View



Figure 3. Conducted Emissions, Test Setup, Setup Front View



Figure 4. 20 dB Occupied Bandwidth, Test Setup

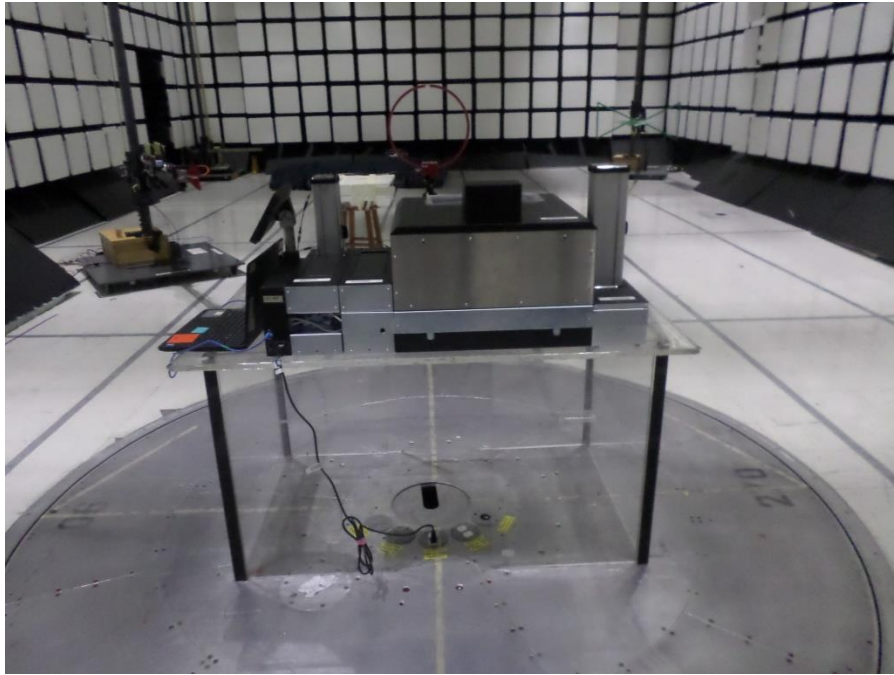


Figure 5. Spurious Emissions Within the Band, Test Setup Rear View

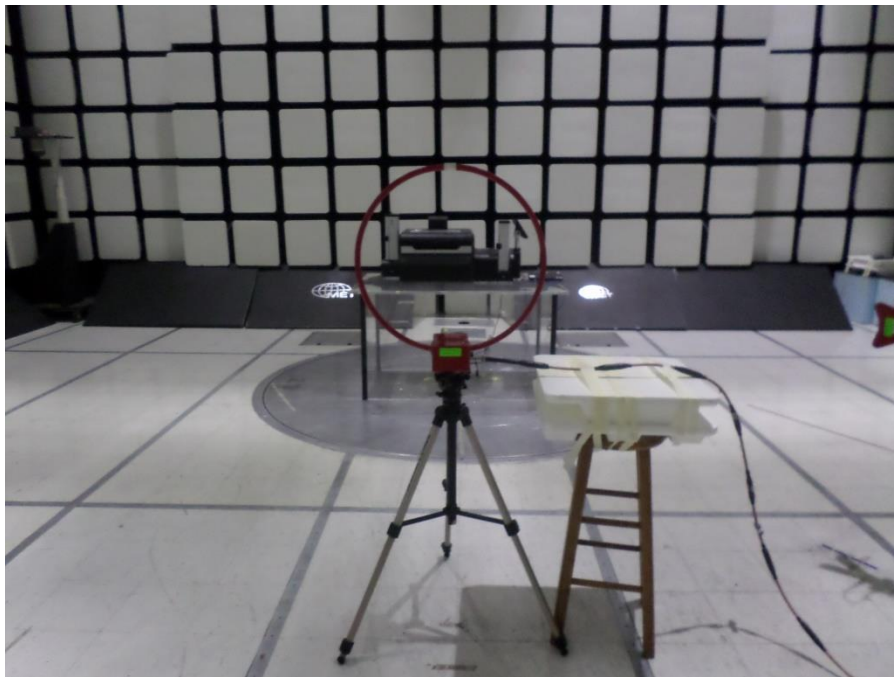


Figure 6. Spurious Emissions within the Band, Test Setup Front View

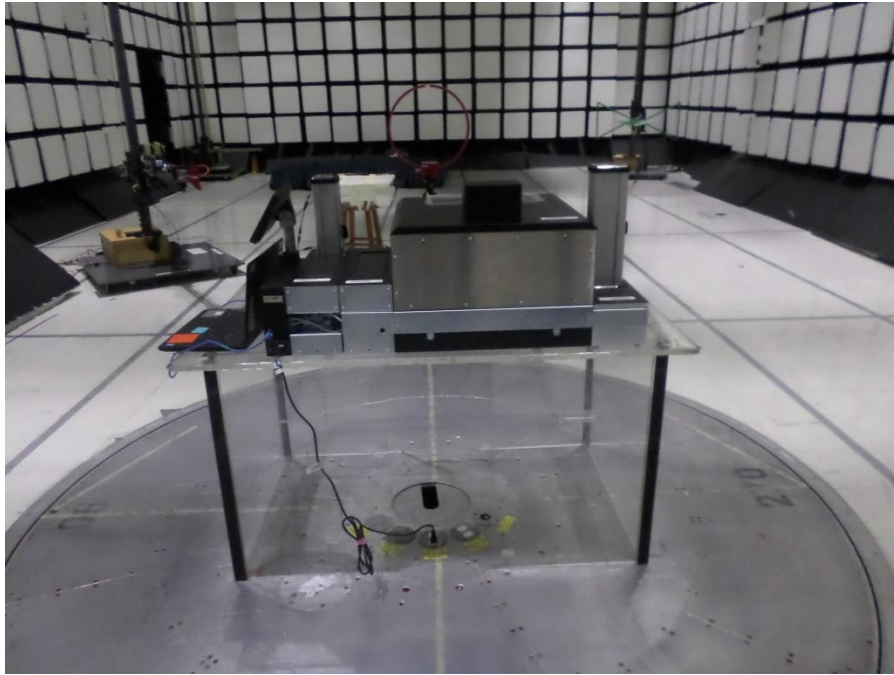


Figure 7. Spurious Emissions Outside the Band 13.110 – 13.410 MHz, 0.009 – 30 MHz, Setup Rear View

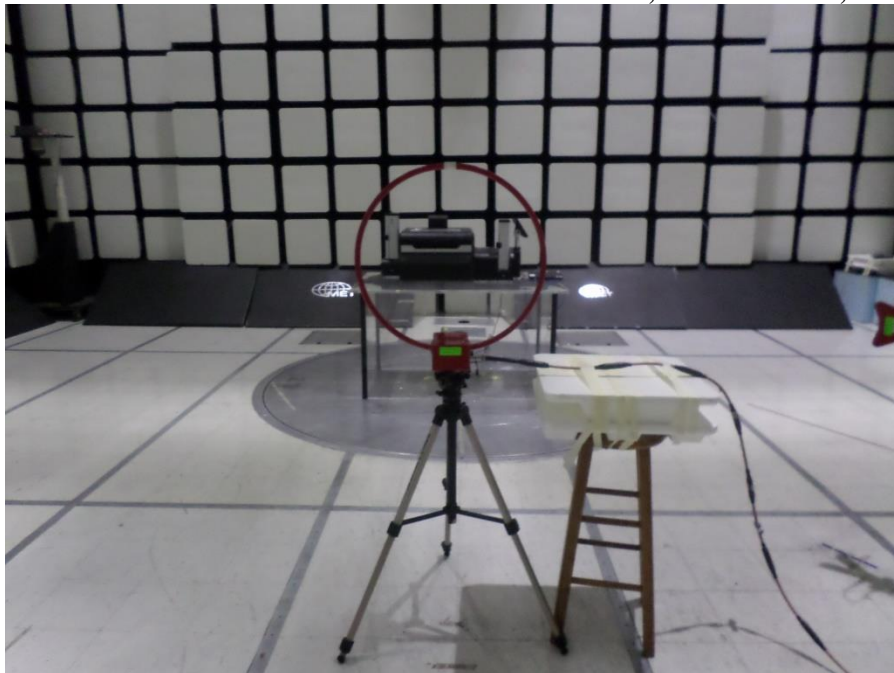


Figure 8. Spurious Emissions Outside the Band 13.110 – 14.010 MHz, 0.009 – 30 MHz, Setup Front View

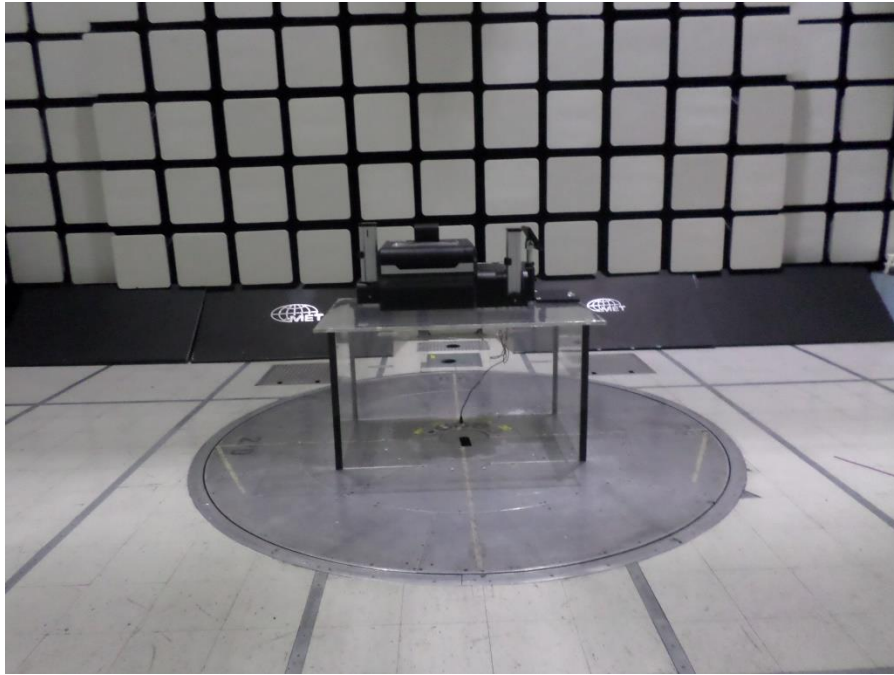


Figure 9. Spurious Emissions Outside the Band 13.110 – 13.410 MHz, 30 – 1000 MHz, Setup Front View

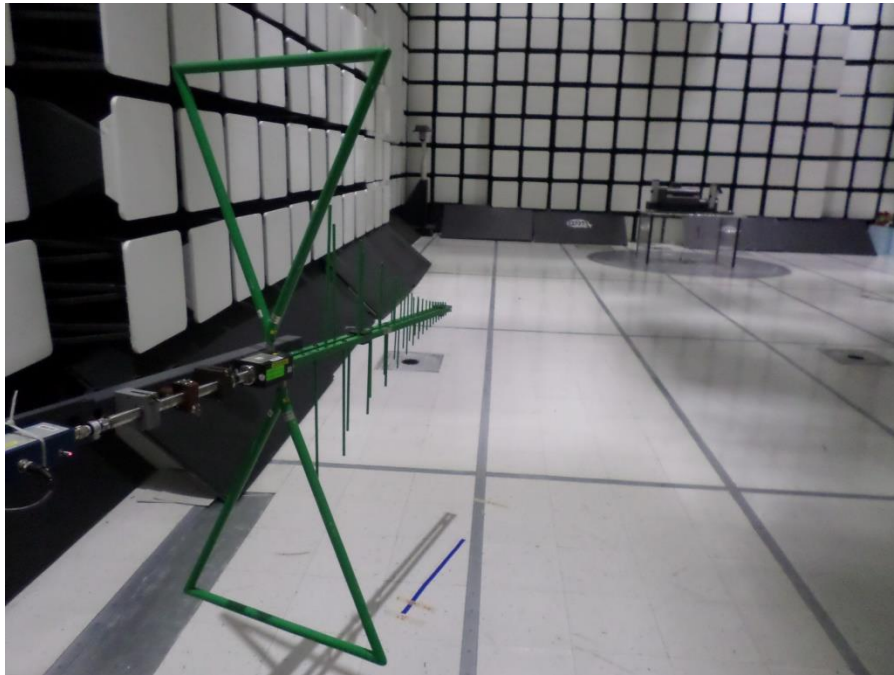


Figure 10. Spurious Emissions Outside the Band 13.110 – 14.010 MHz, 30 – 1000 MHz, Setup Antenna View

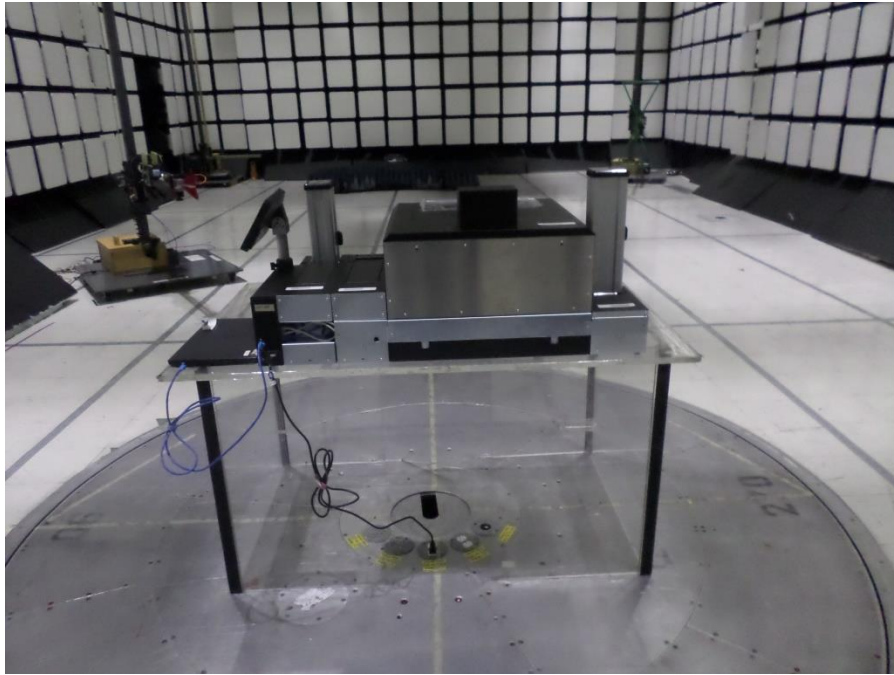


Figure 11. Spurious Emissions Outside the Band 13.110 – 13.410 MHz, 30 – 1000 MHz, Setup Rear View



Figure 12. Frequency Tolerance, Test Setup