


CCA installed in POD base

Step 4: Attach POD cover with screws.

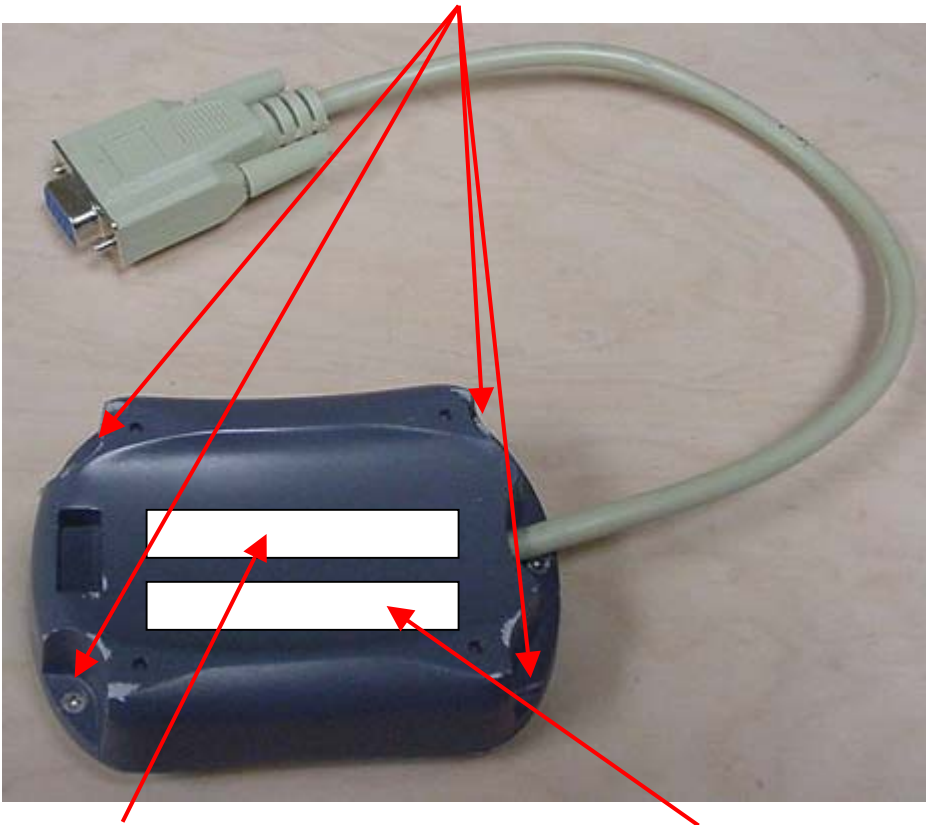

Model/Serial number

Compliance label

Step 5: Apply Model number/Serial number and Compliance labels.