


With Compliance approval: Apply label (Item 12) in this location.

Without Compliance approval: Apply label (Item 13) in this location.

**NOTE: Label is not shown.**

Assemble cable to the SMR using two T8 PNH screws (Item 18).

Note: picture shown with philip PNH screws for reference only.

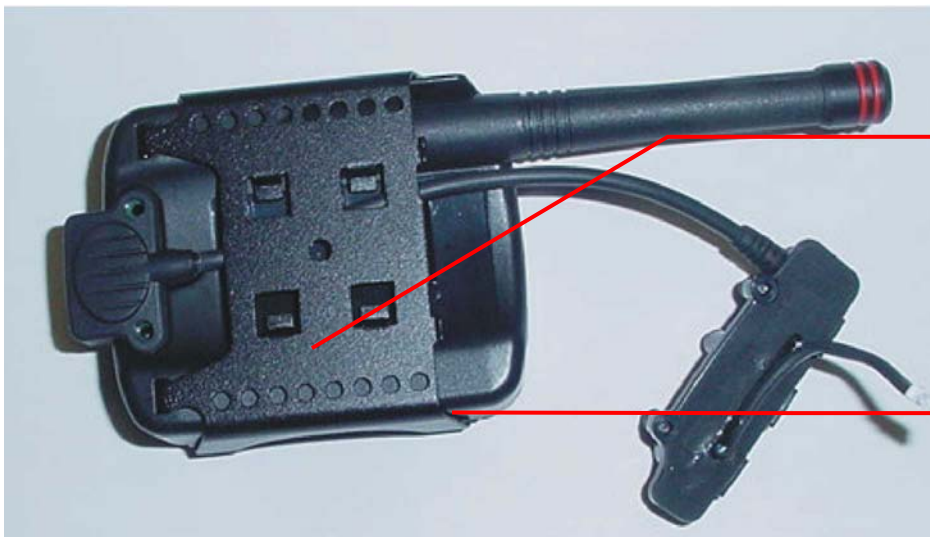

Apply label (Item 13) in this location.

**NOTE: Label is not shown.**

Assemble SMR bracket clip (Item 16)