


800MHz CELLULAR (TDMA)- DOWNLINK

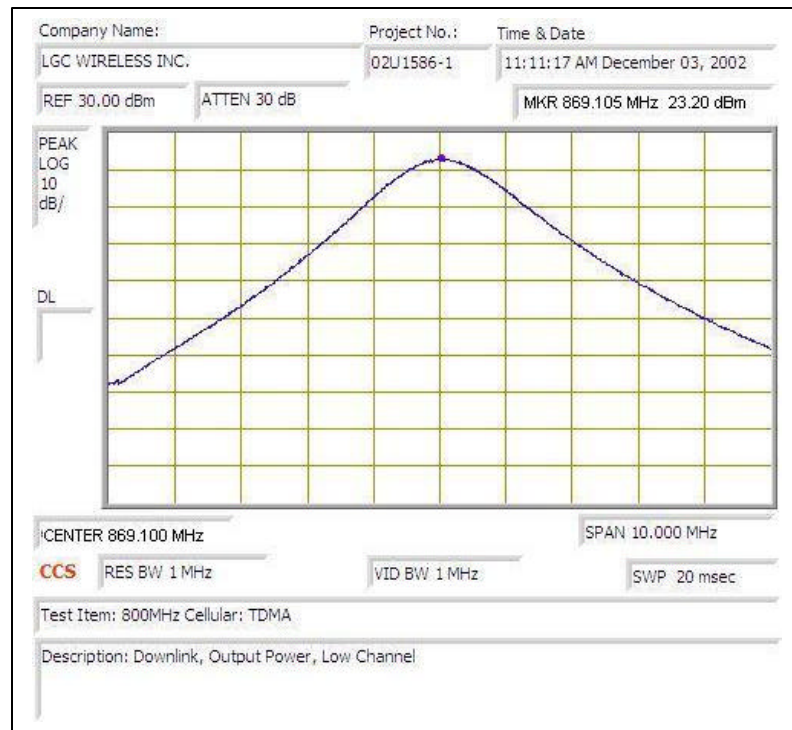

Plot # 1





Plot # 2

Plot # 3




Plot # 4

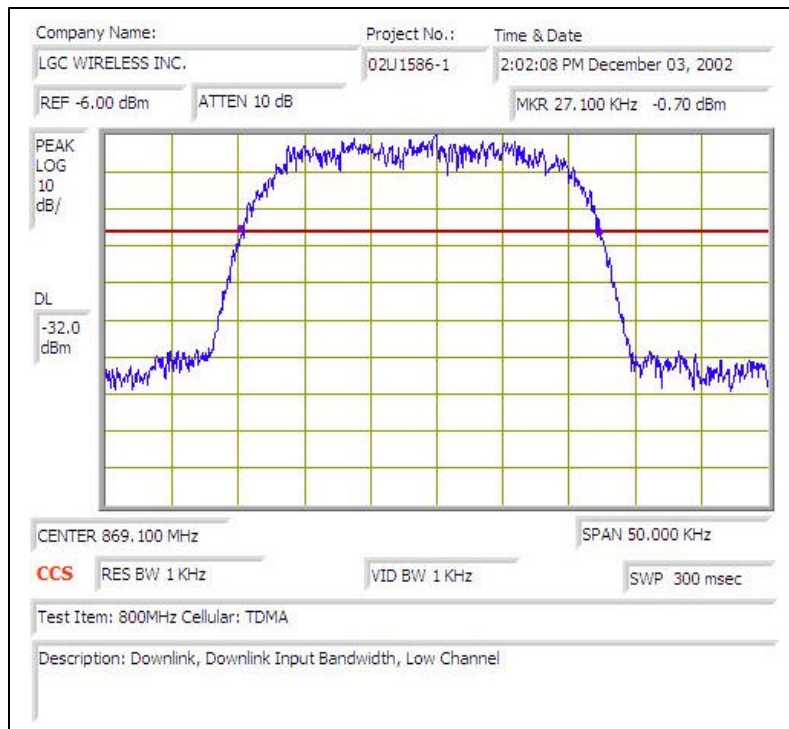


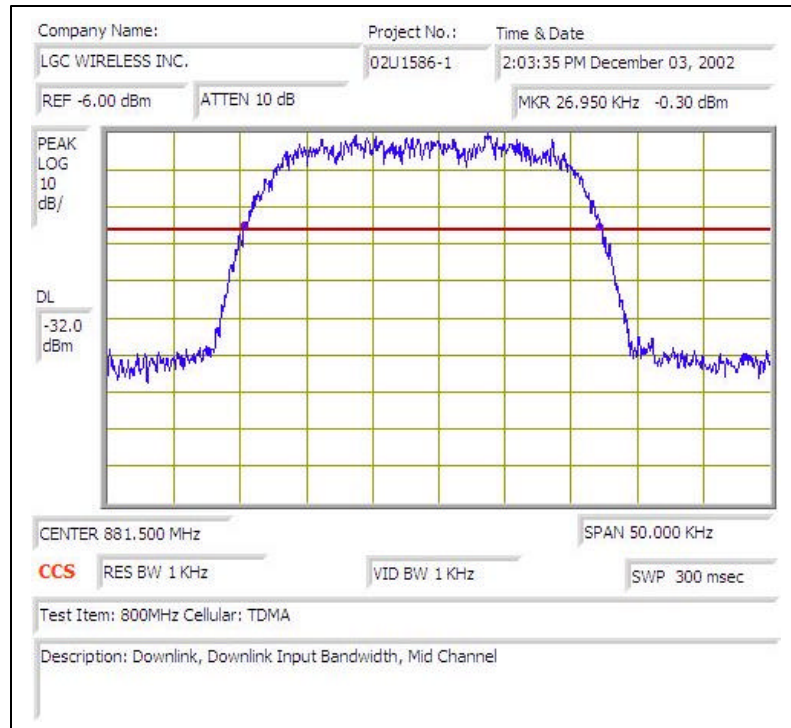


Plot # 5

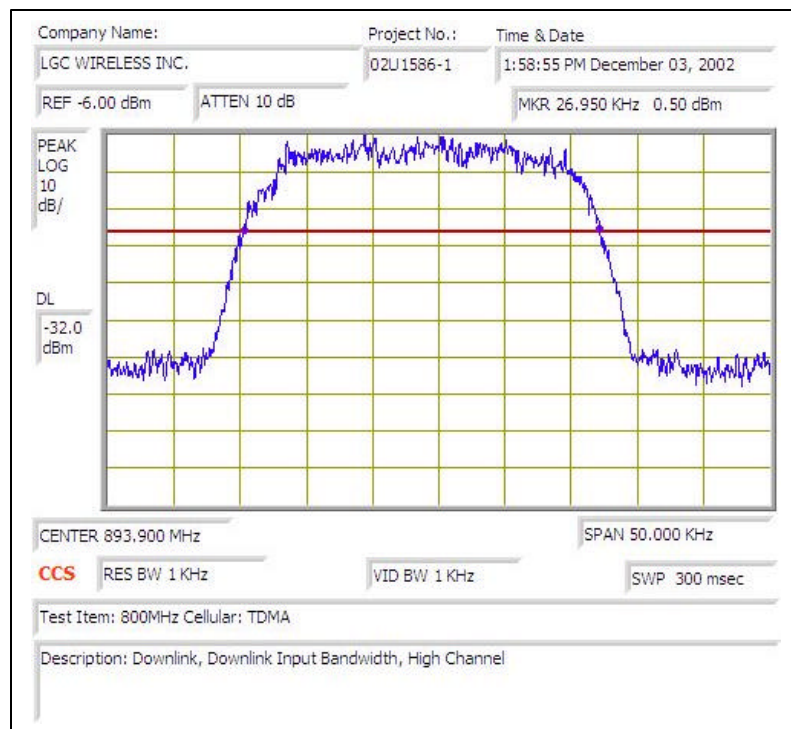


Plot # 6

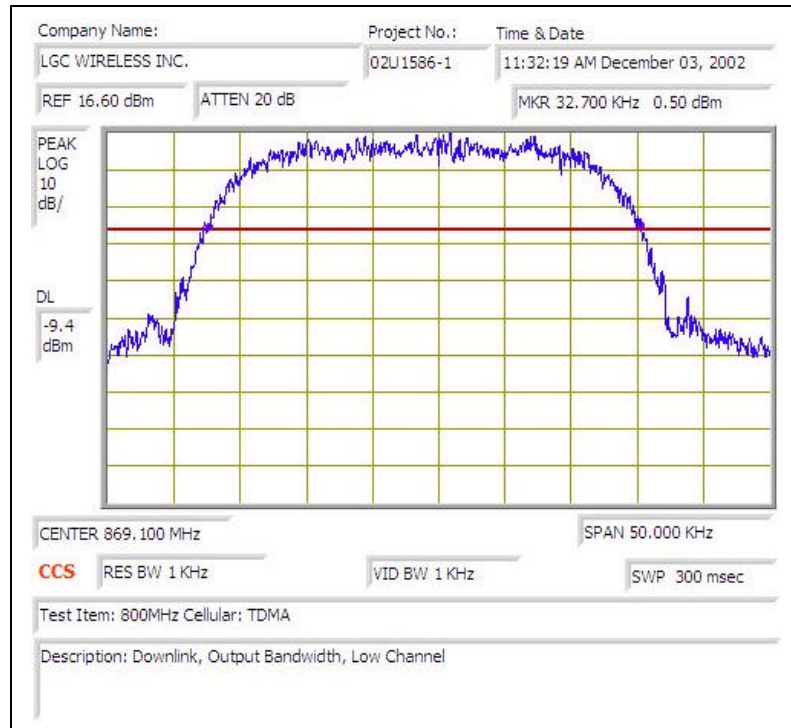


Plot # 7

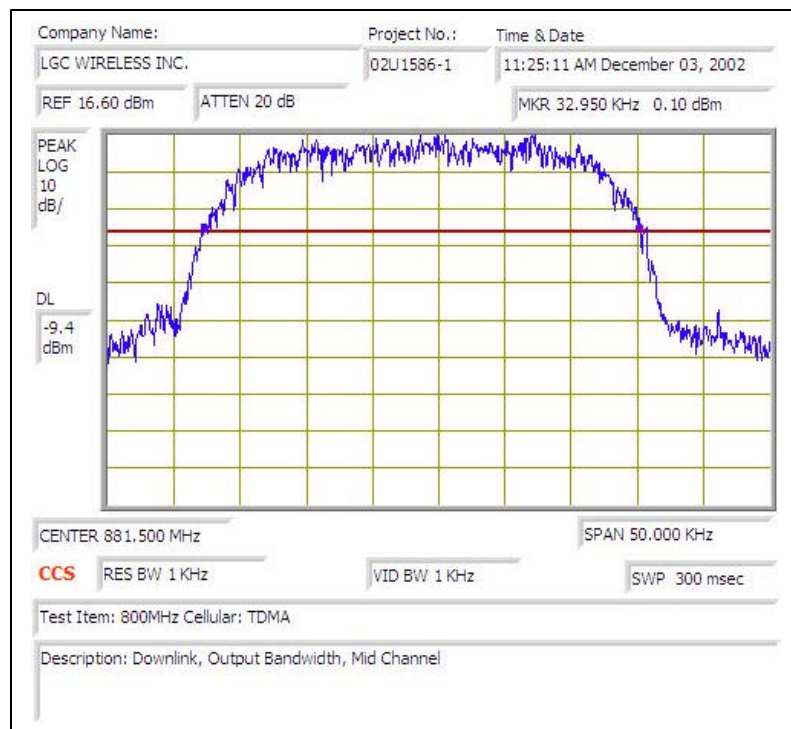

Plot # 8

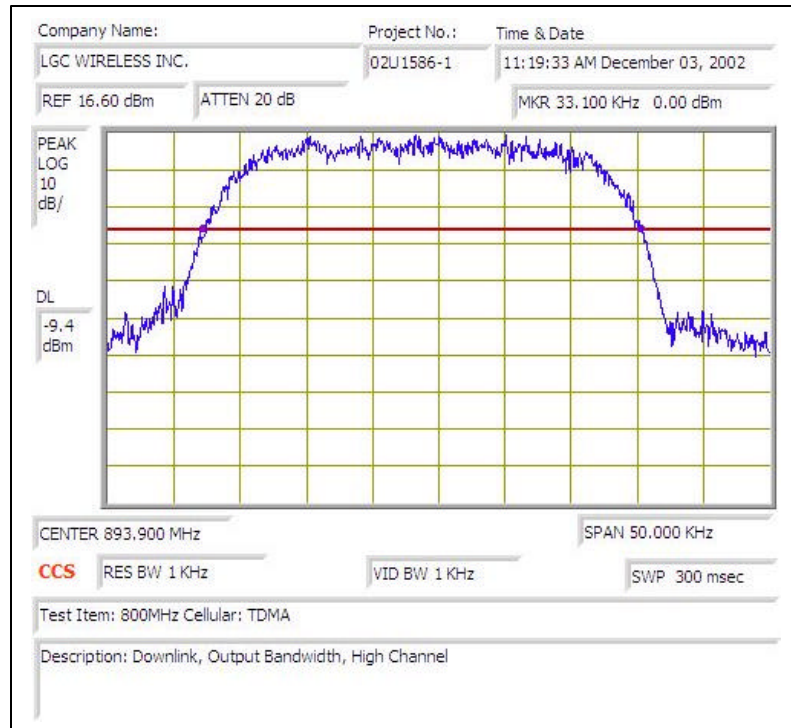

Plot # 9

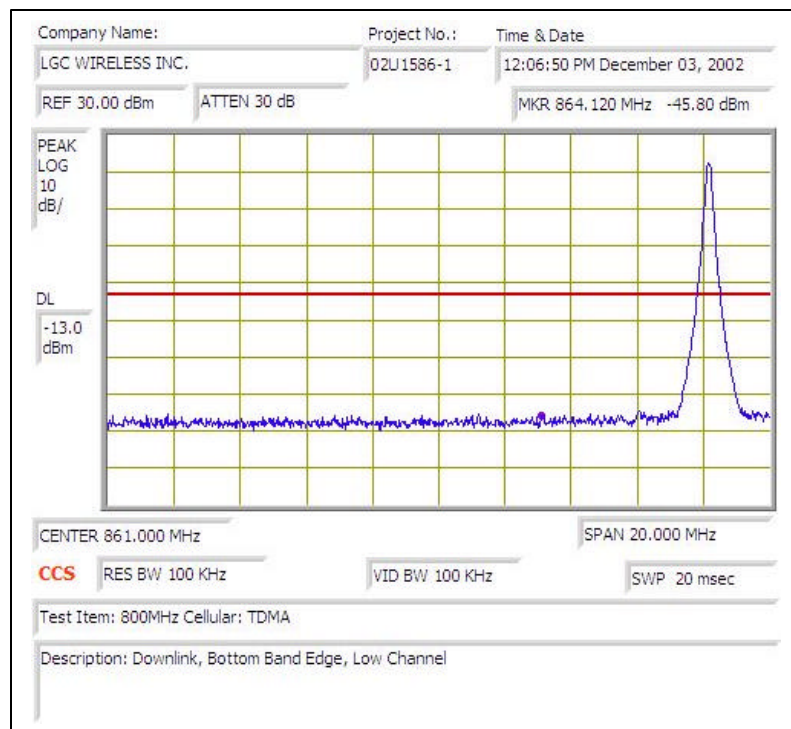


Plot # 10




Plot # 11




Plot # 12

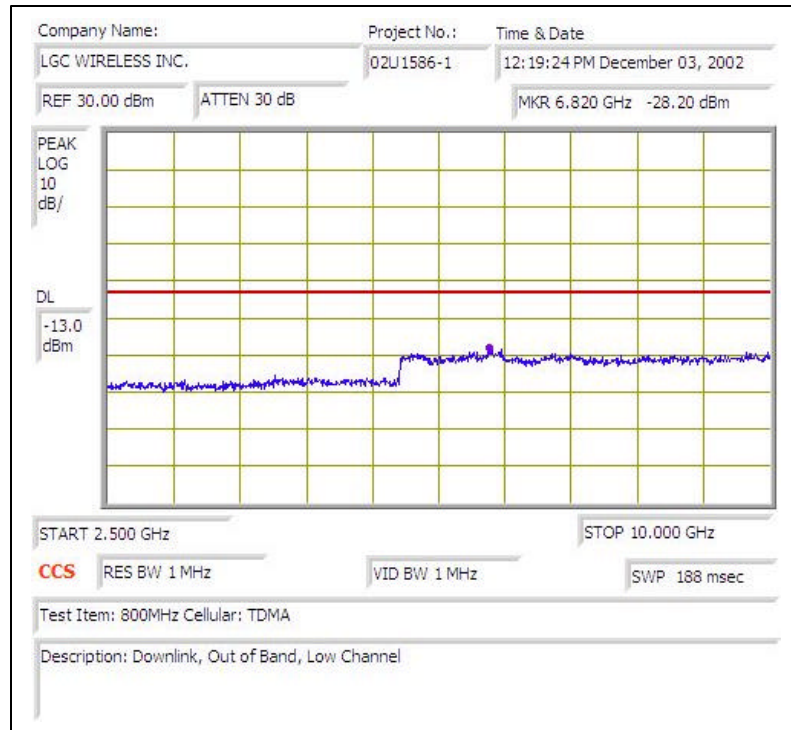


Plot # 13

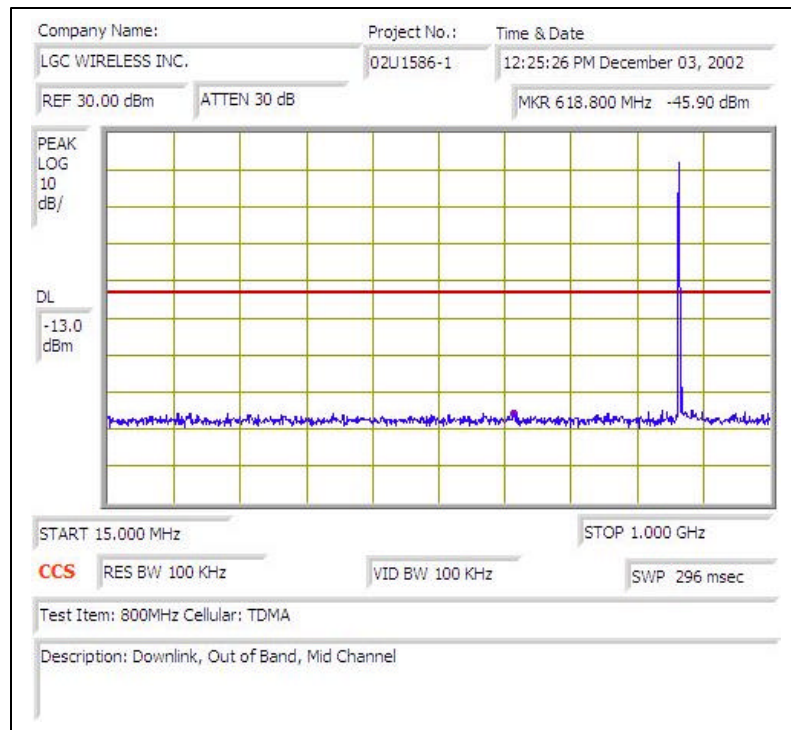


Plot # 14

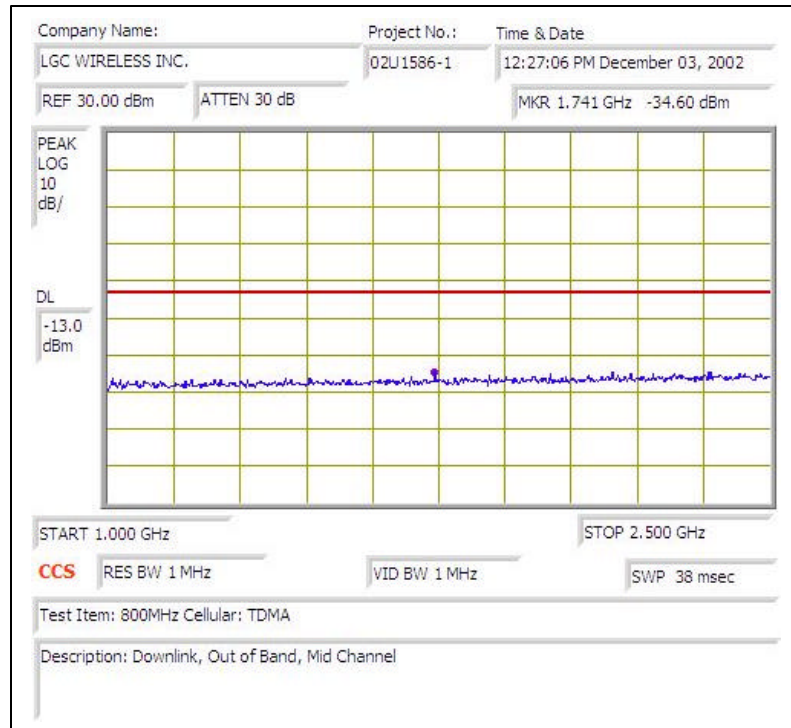

Plot # 15

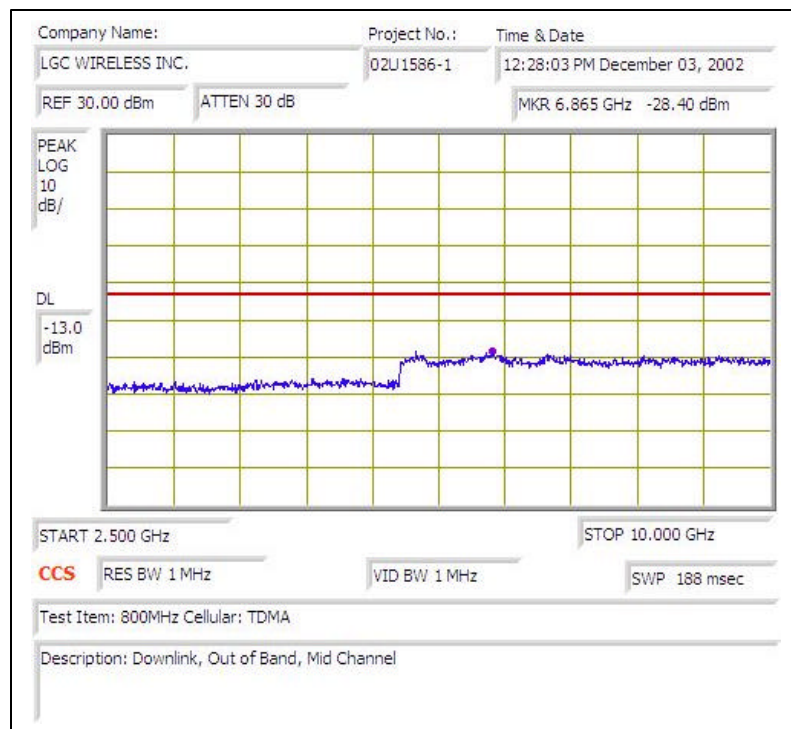

Plot # 16

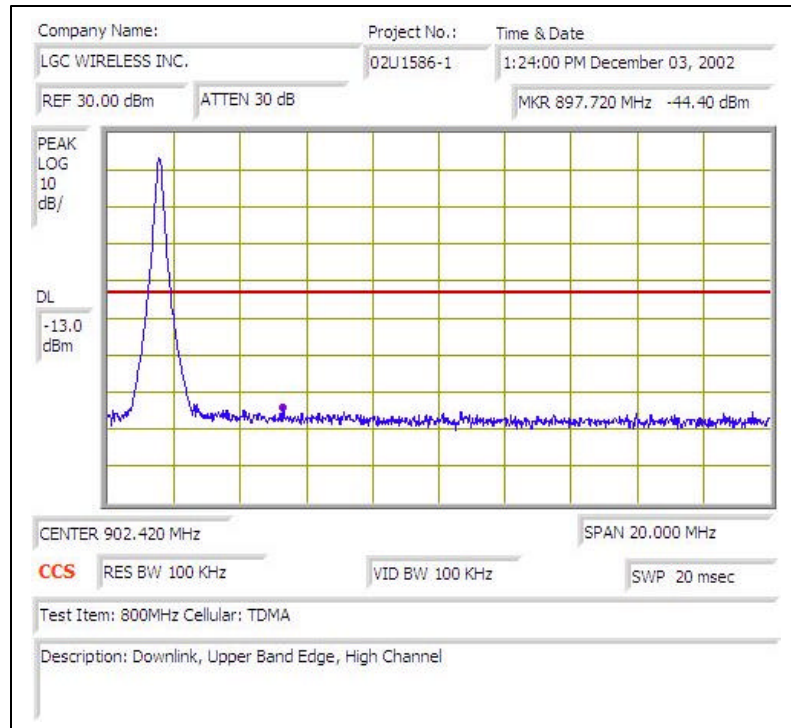


Plot # 17





Plot # 18

Plot # 19

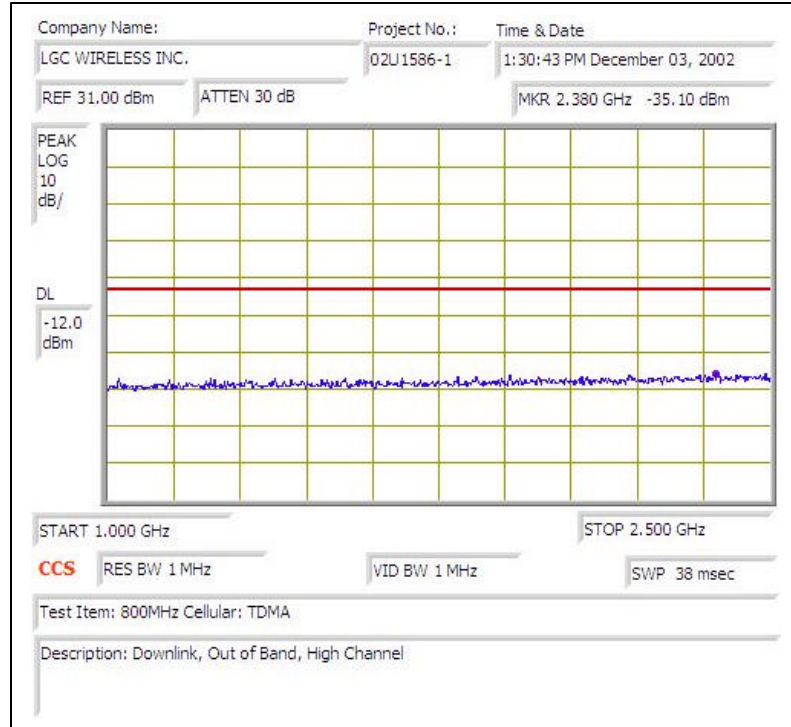


Plot # 20

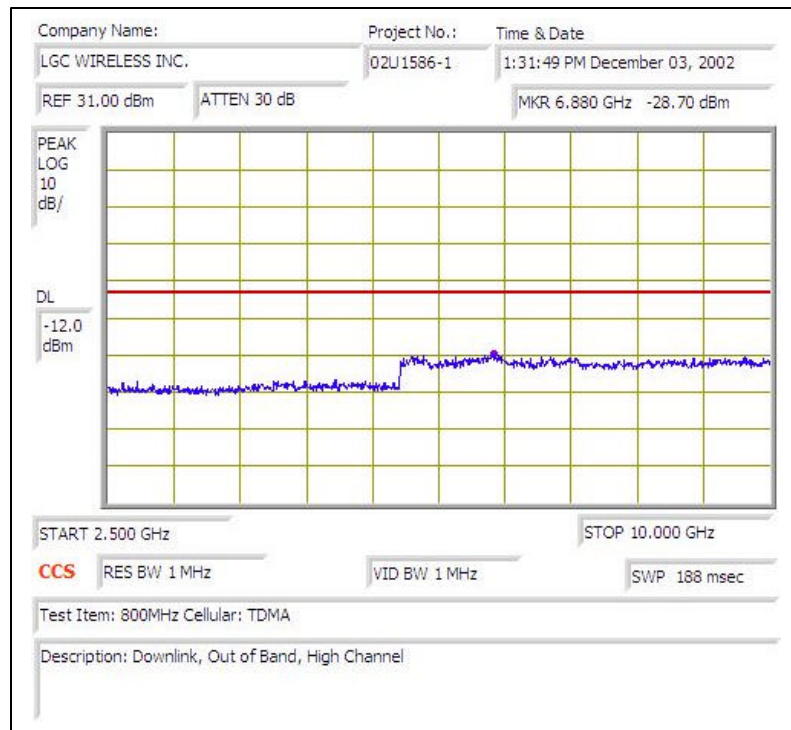

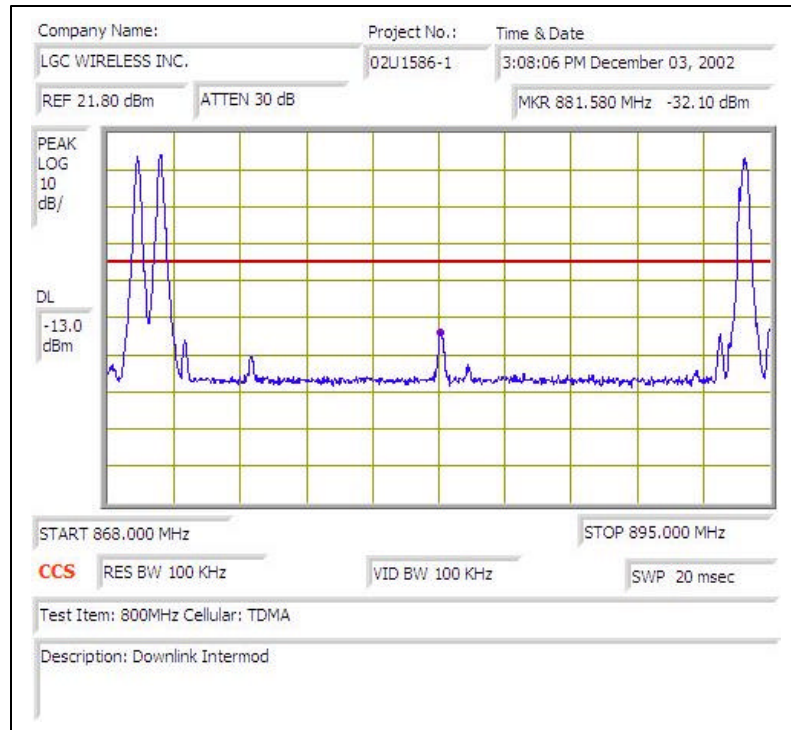


Plot # 21

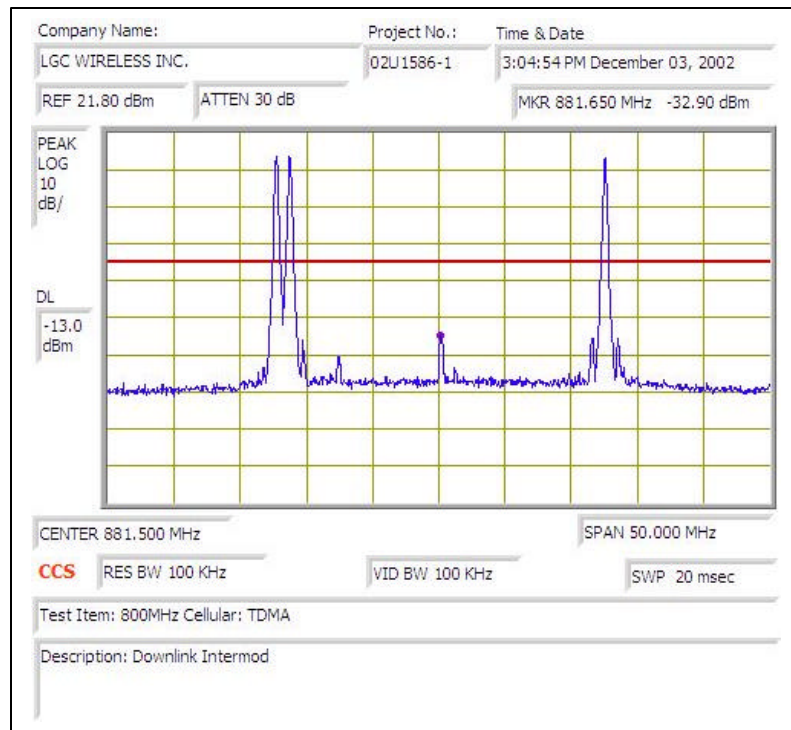



Plot # 22

Plot # 23

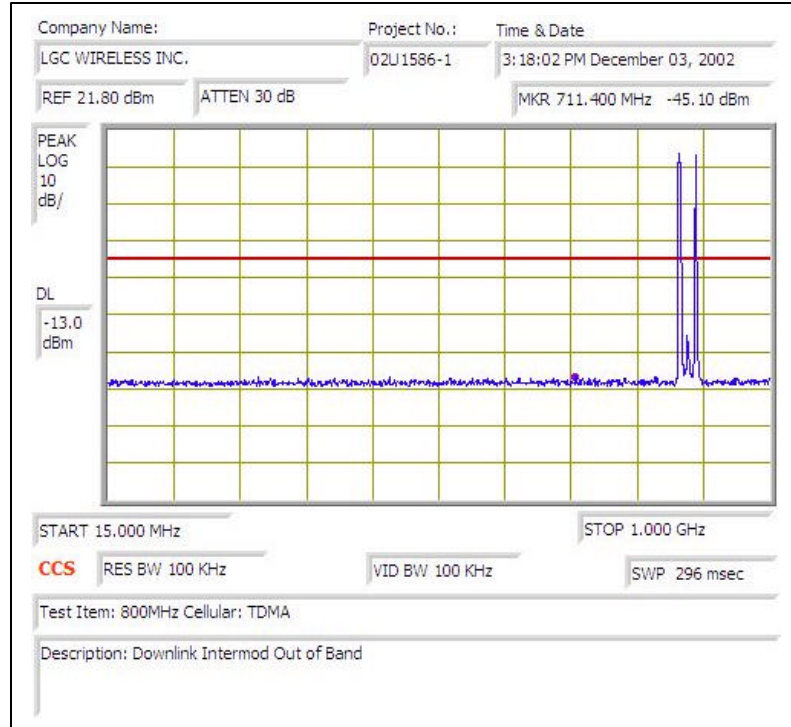

Plot # 24

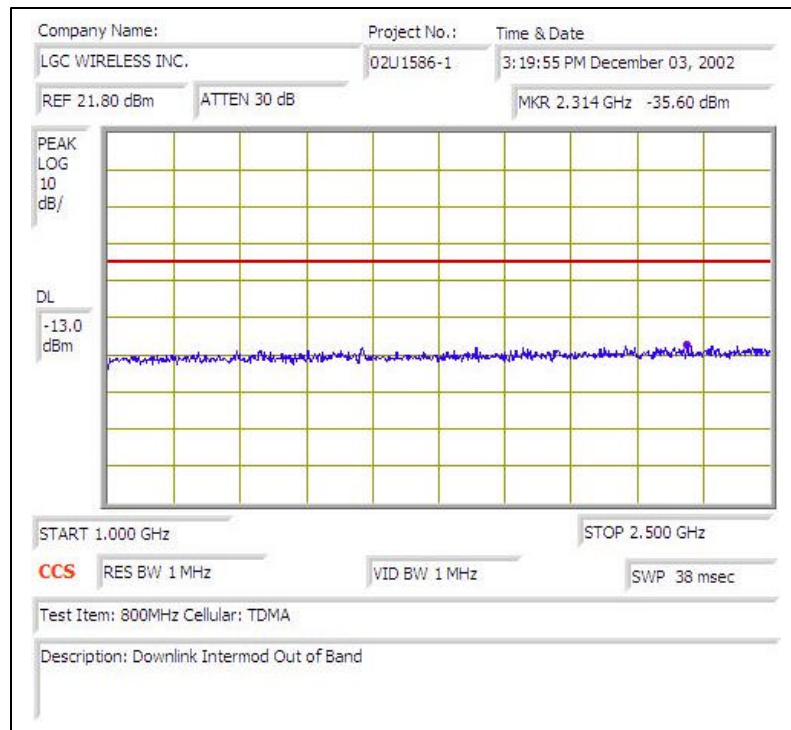

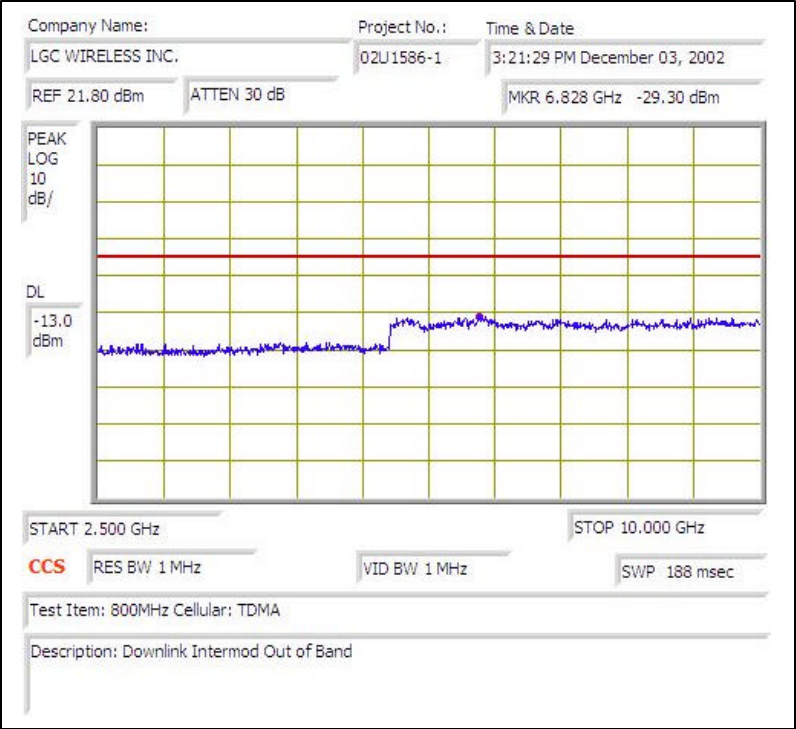

Plot # 25