




900MHz EGSM (AMPS)- DOWNLINK

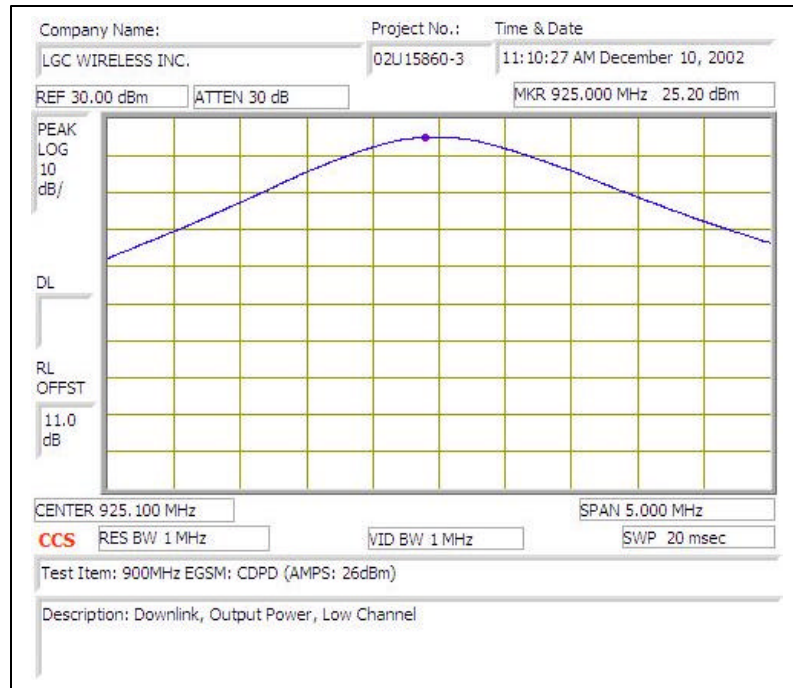


Plot # 1

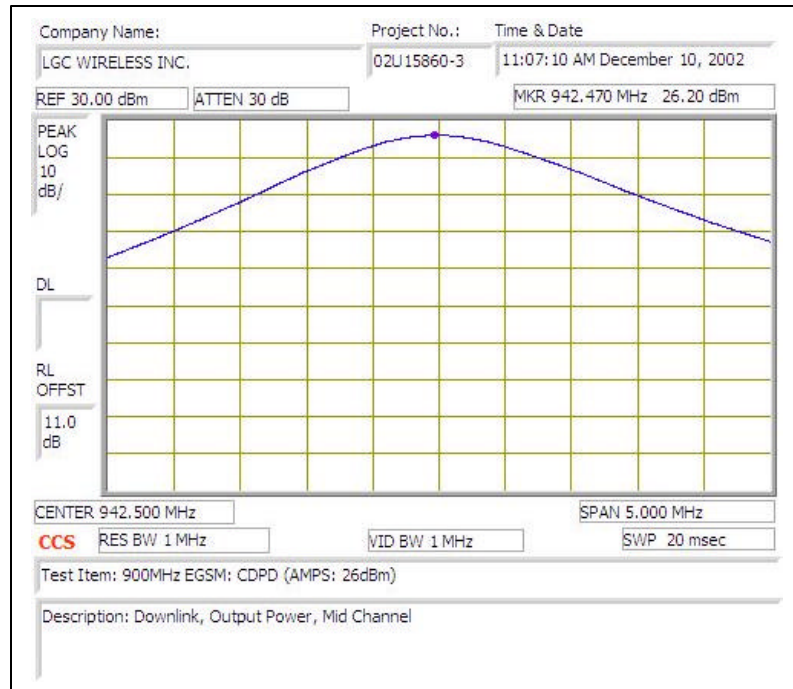


Plot # 2

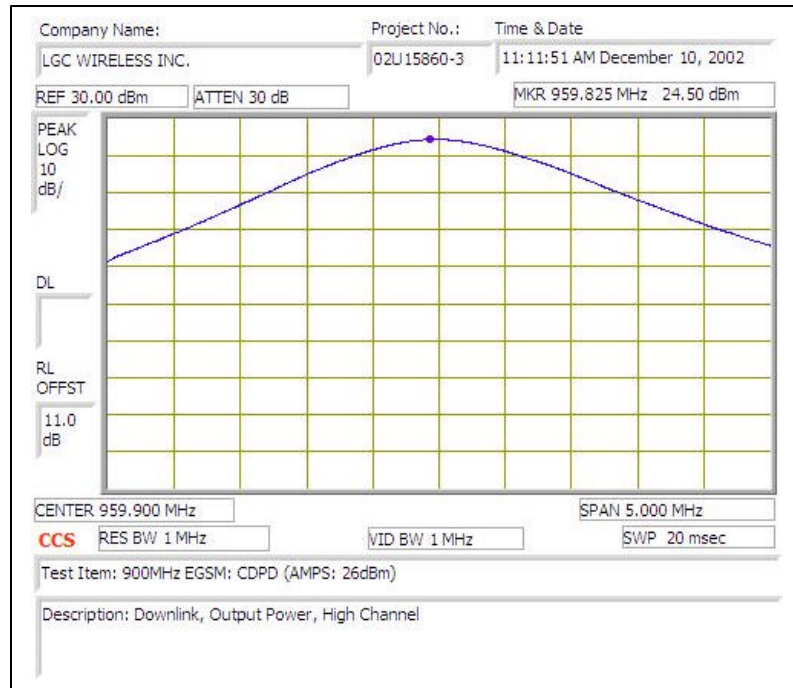


Plot # 3

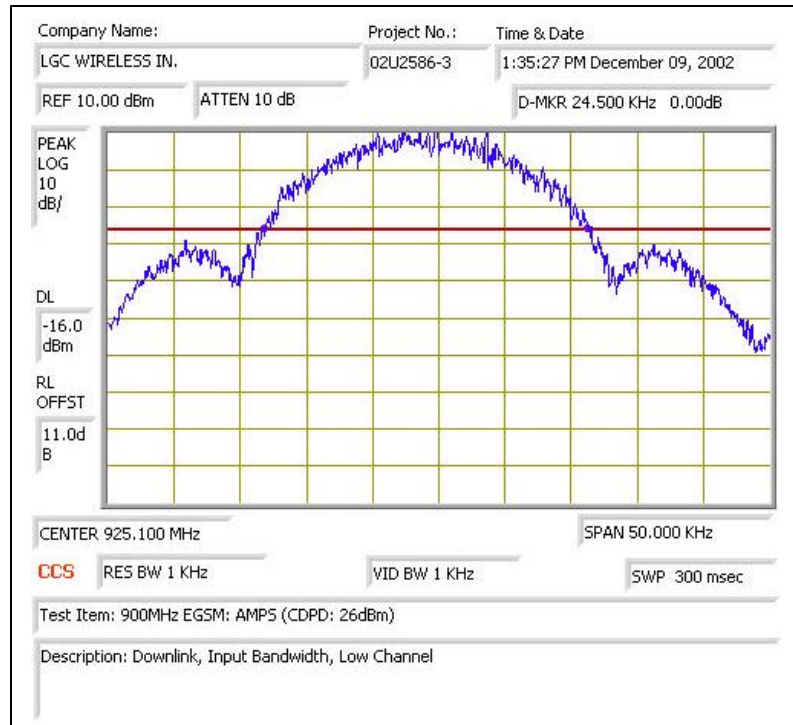


Plot # 4

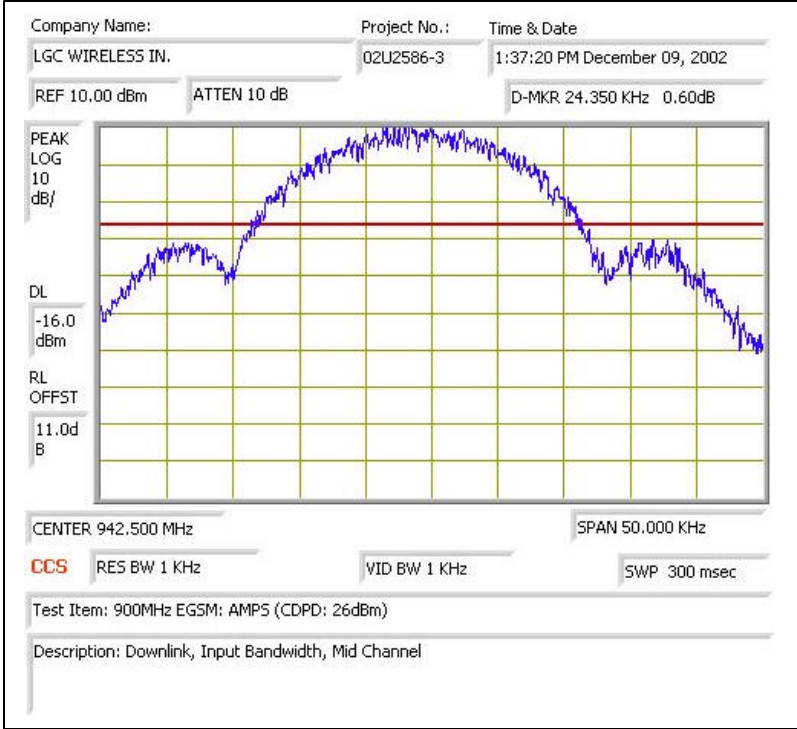


Plot # 5

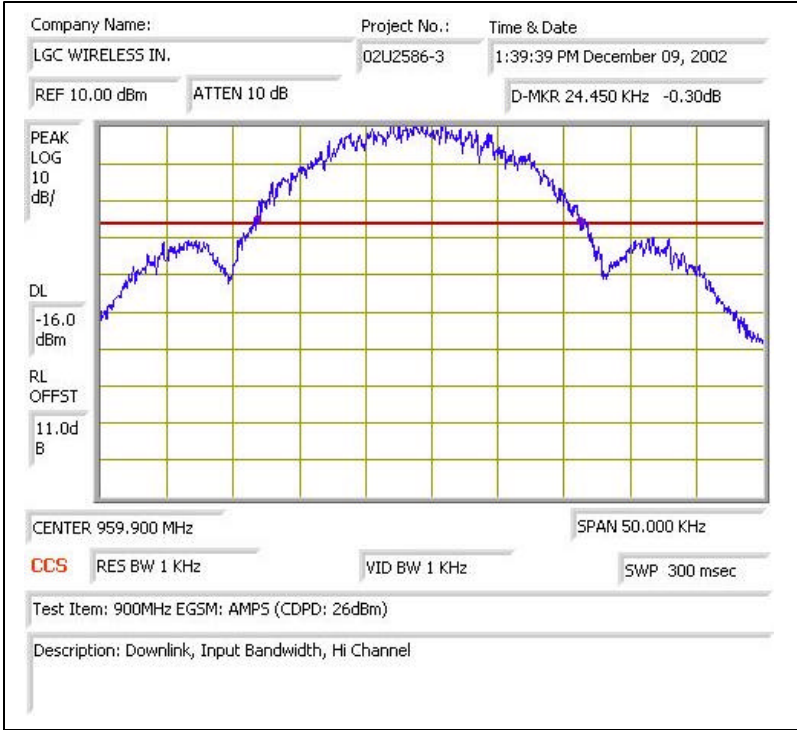


Plot # 6

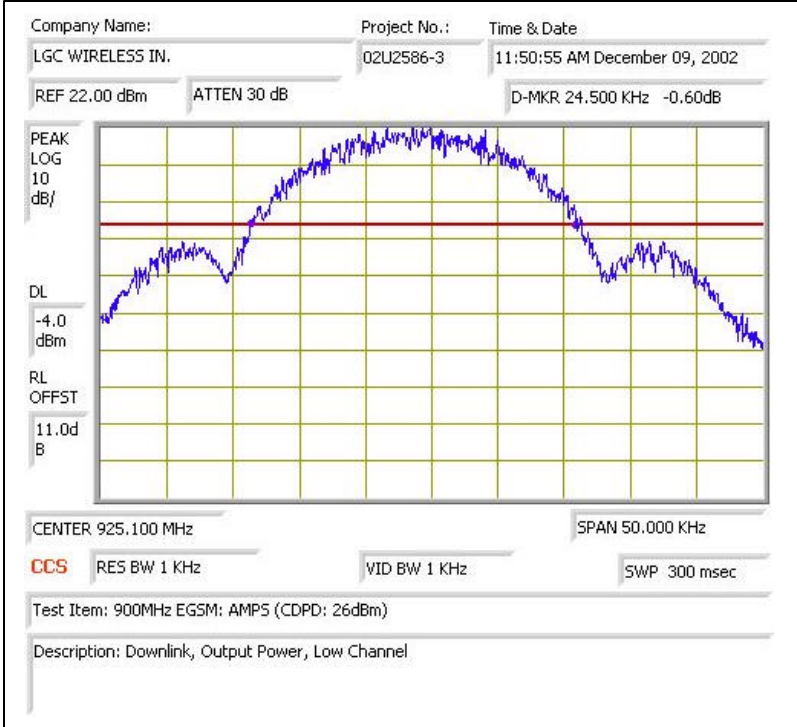


Plot # 7

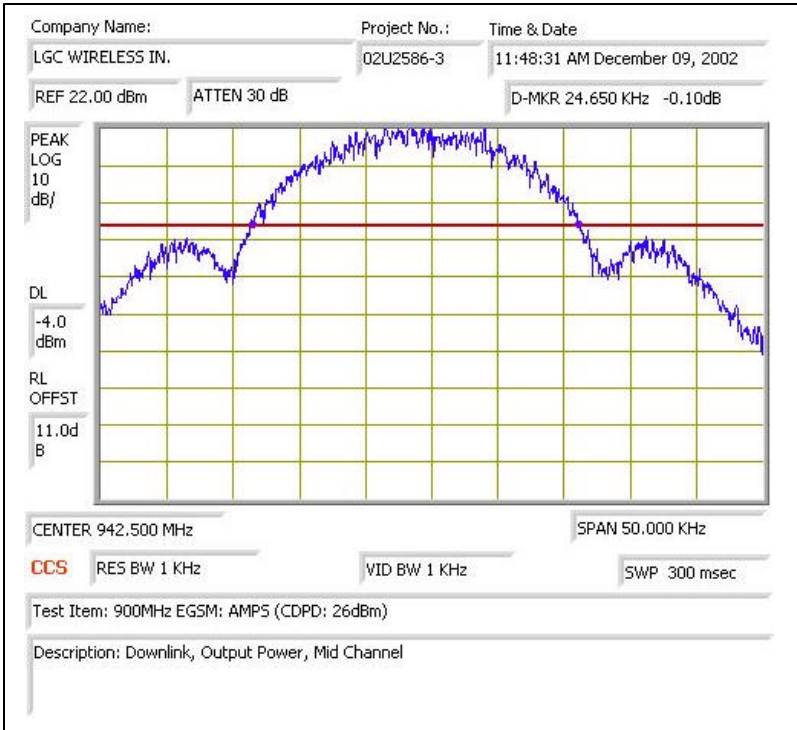


Plot # 8

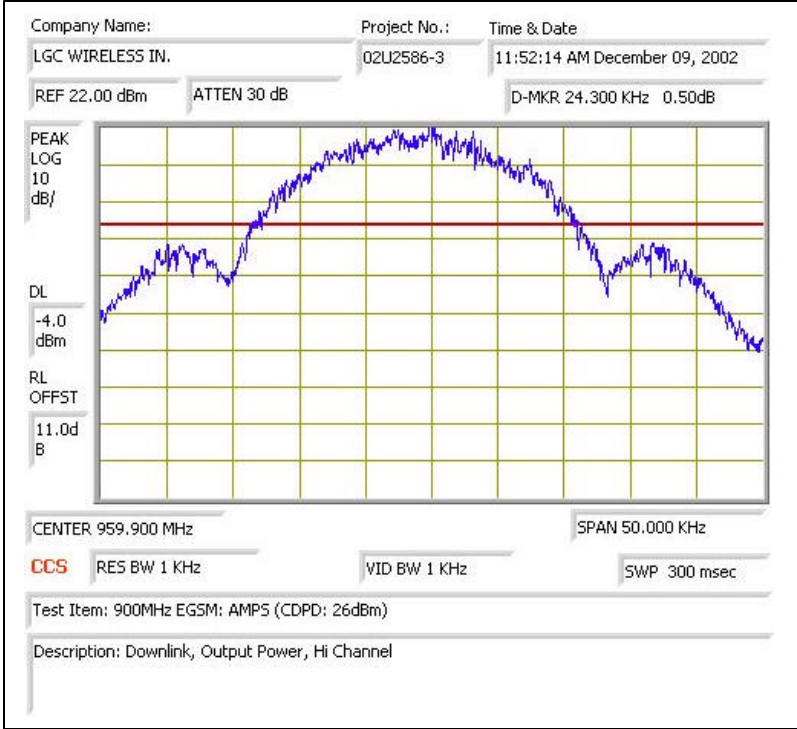

Plot # 9

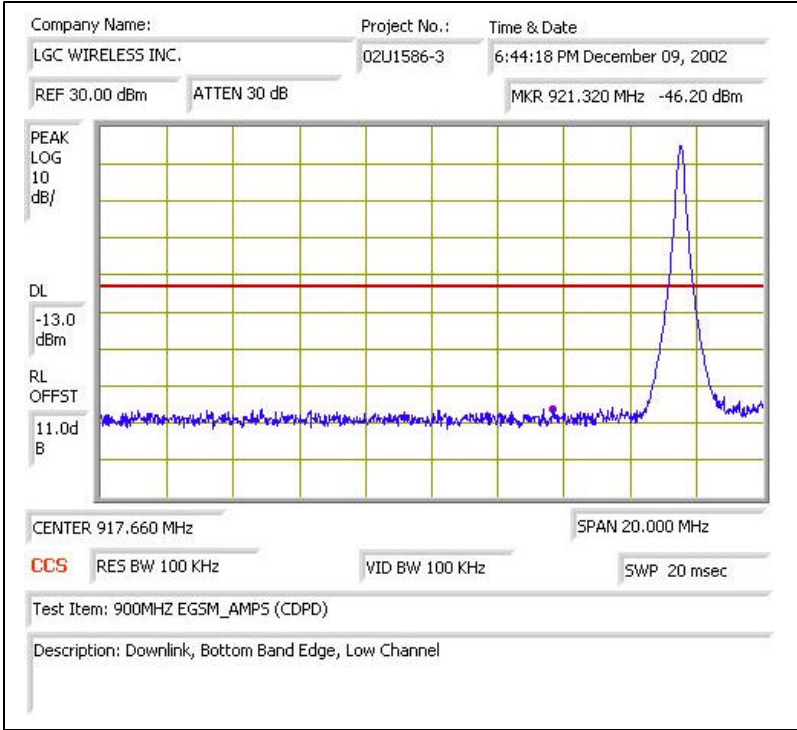


Plot # 10

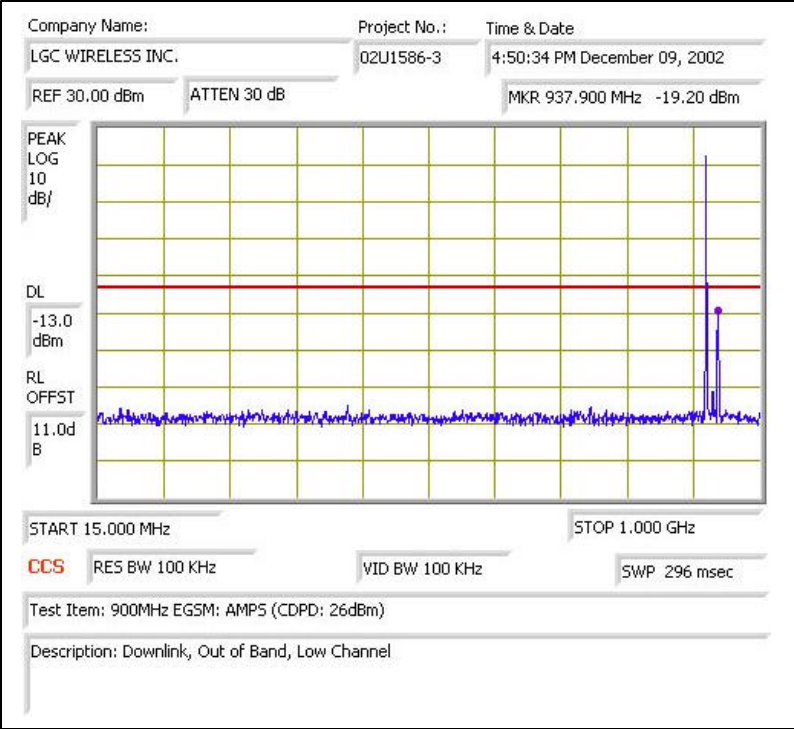


Plot # 11




Plot # 12

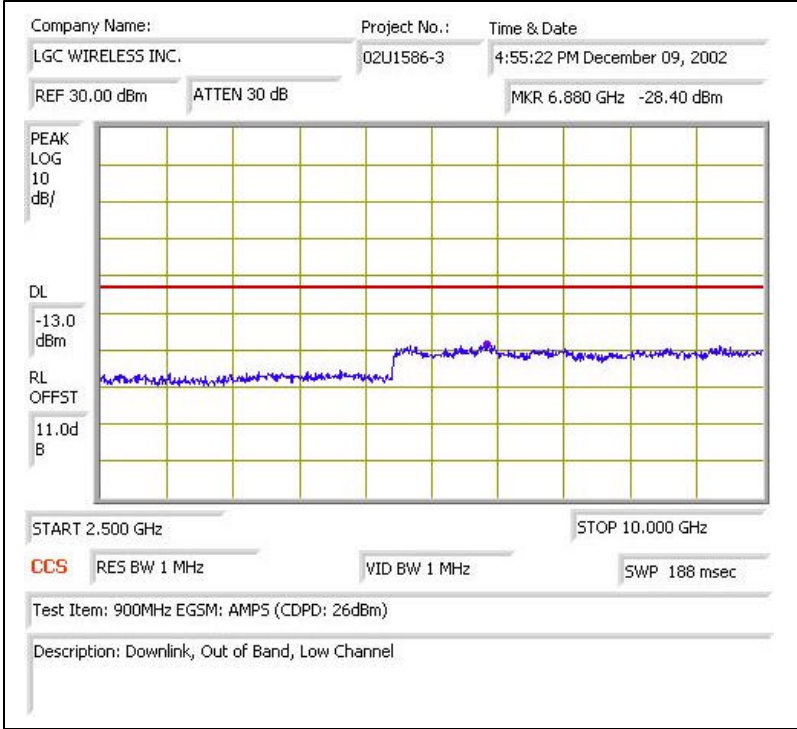


Plot # 13

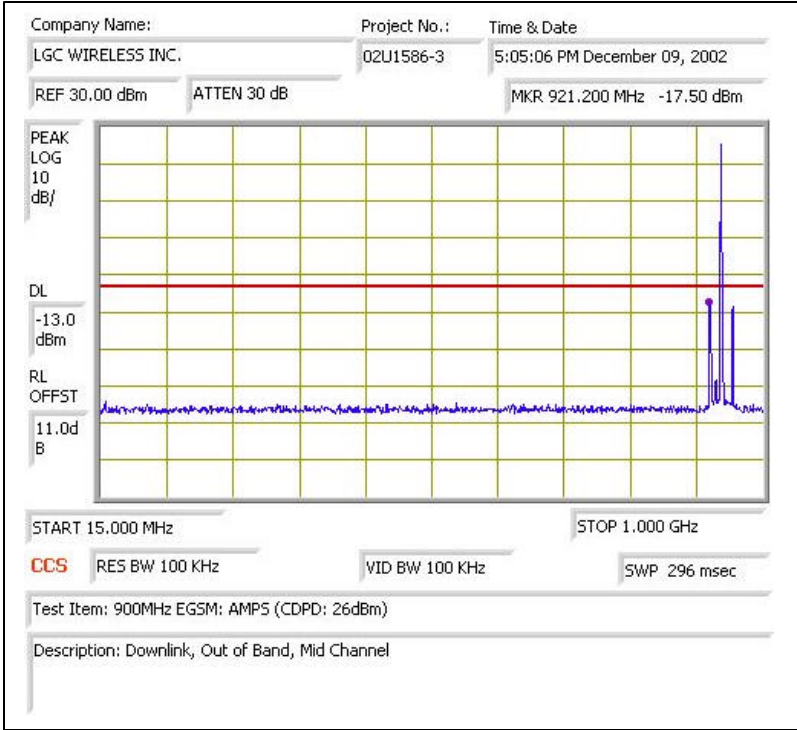


Plot # 14

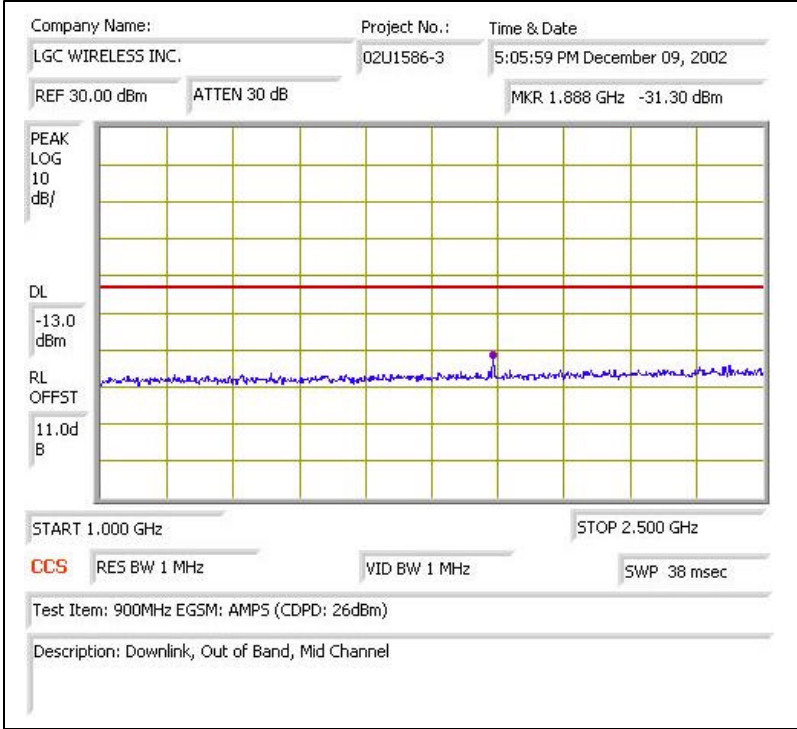


Plot # 15

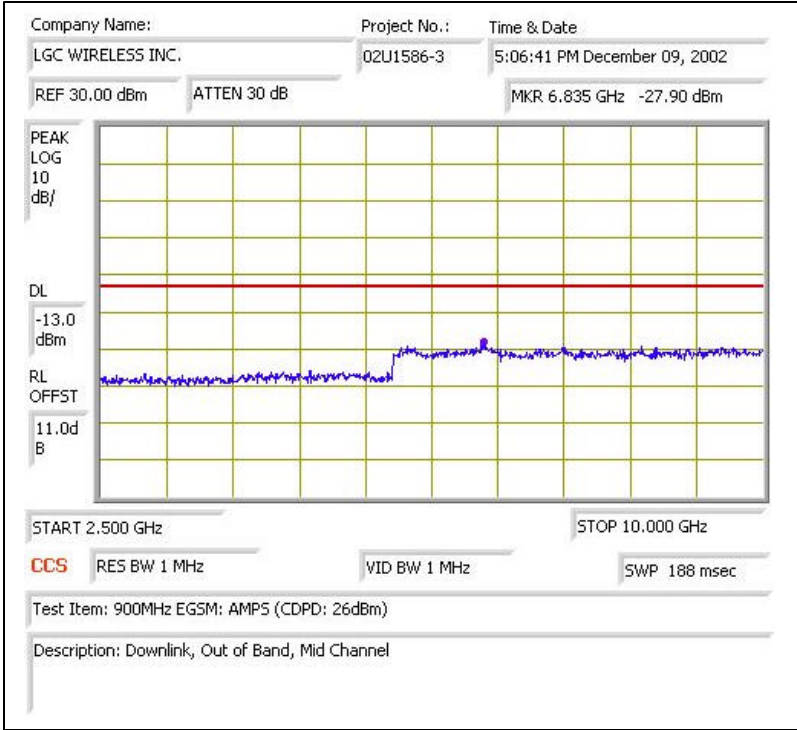


Plot # 16

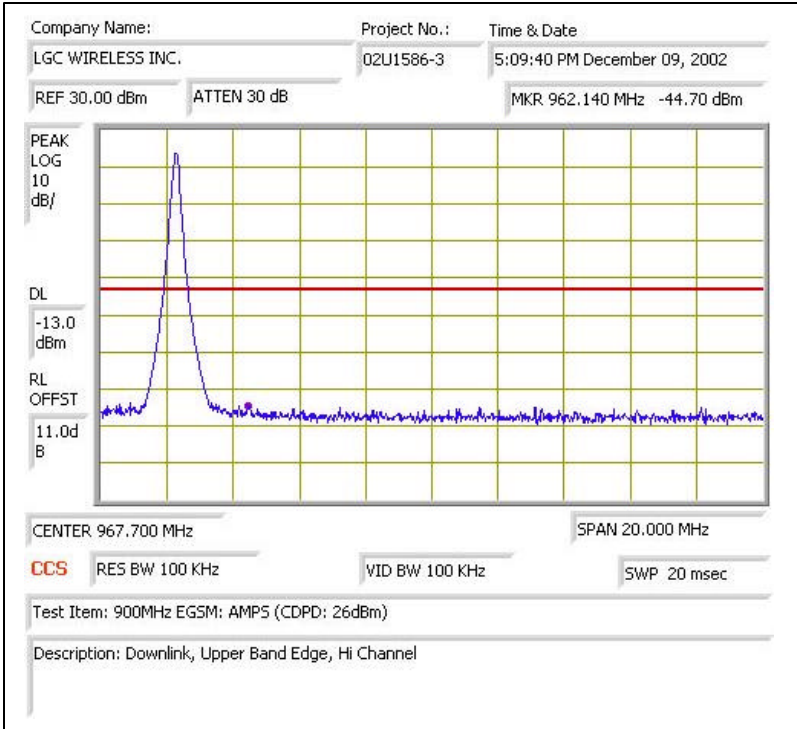


Plot # 17

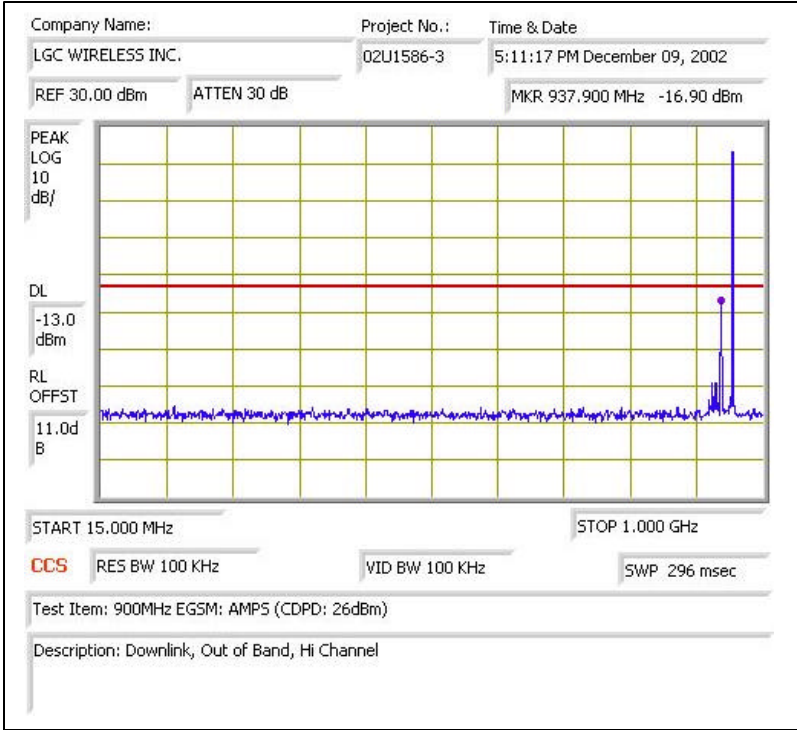

Plot # 18

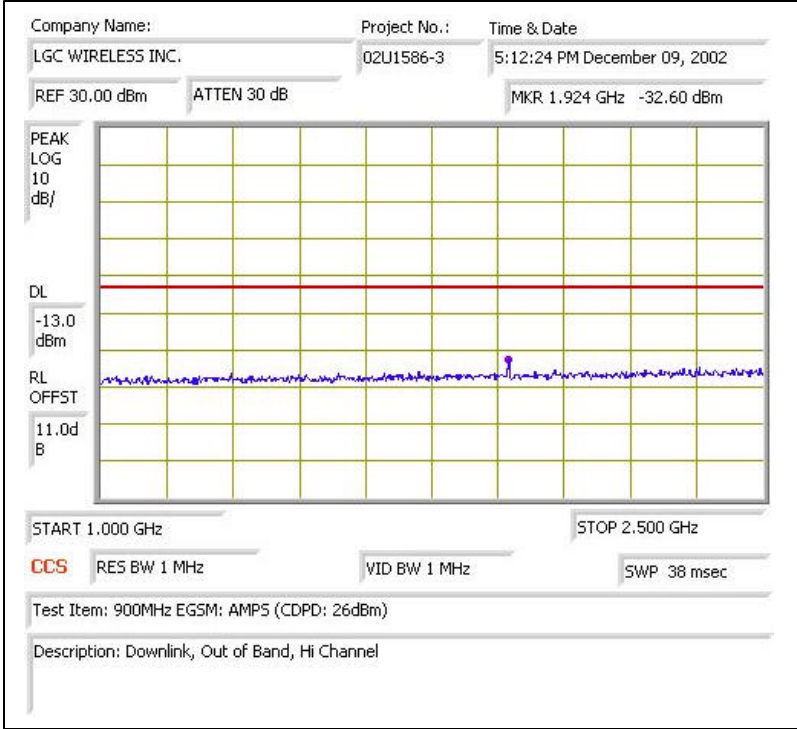


Plot # 19

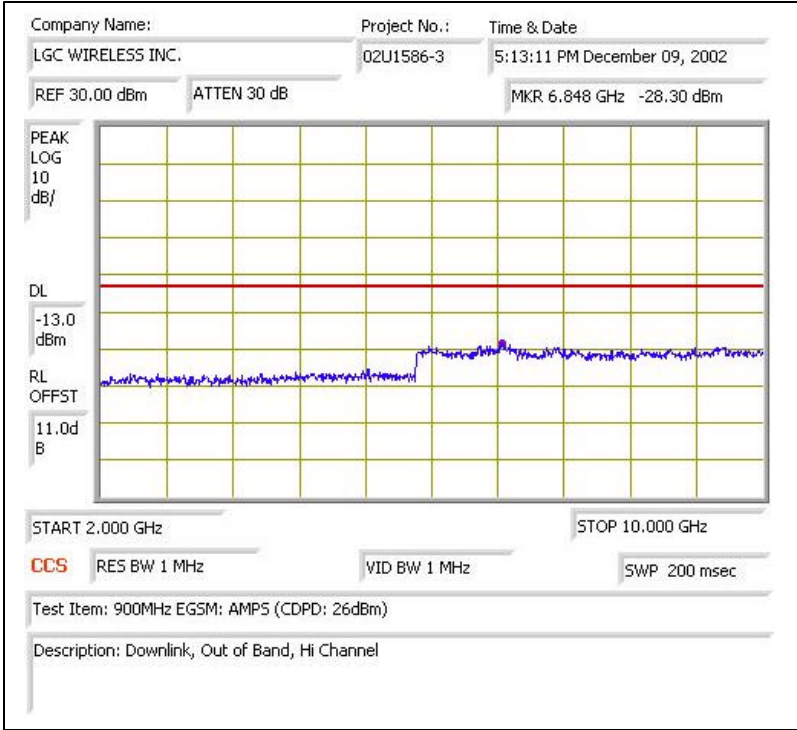


Plot # 20



Plot # 21

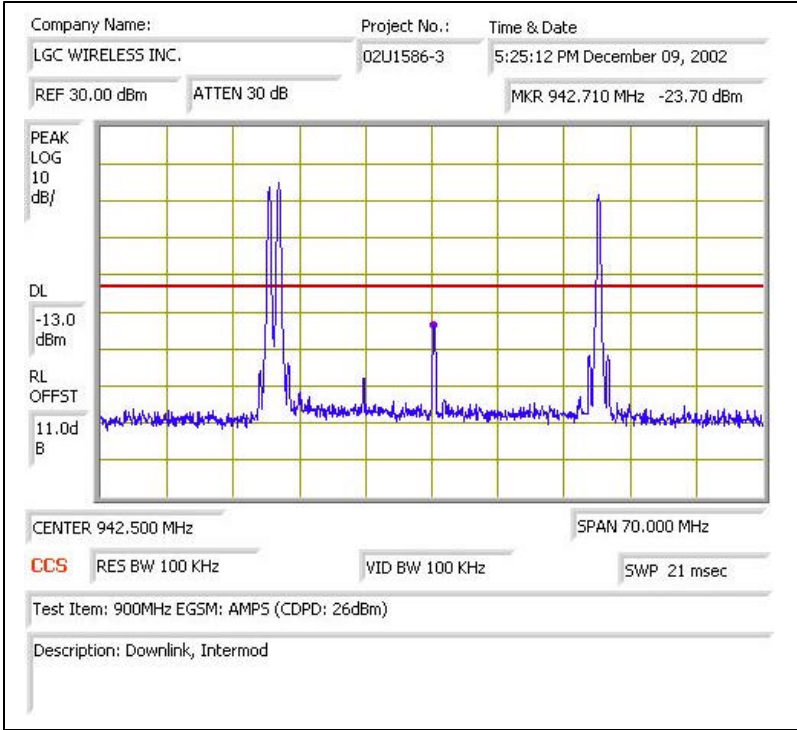


Plot # 22

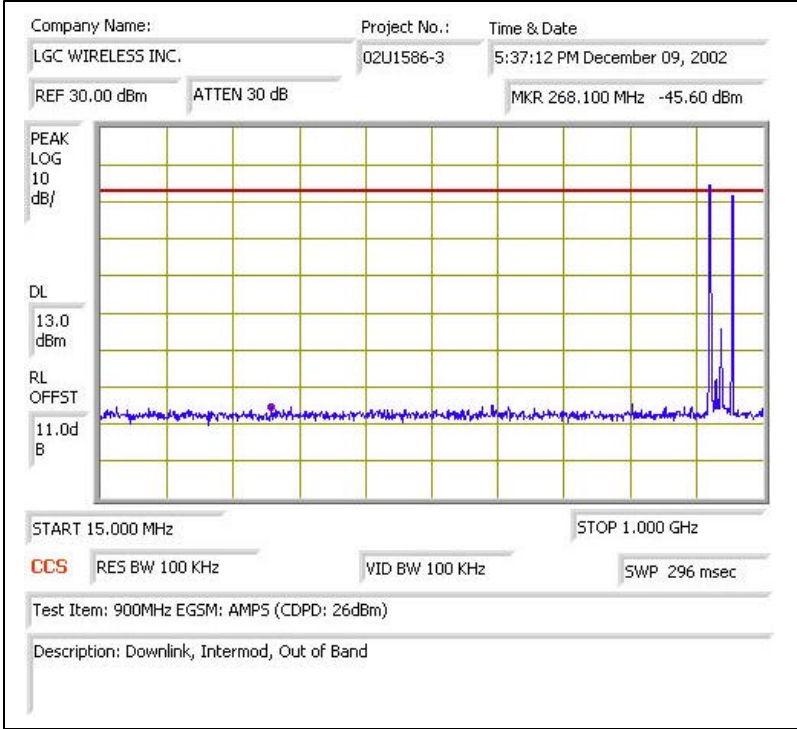

Plot # 23



Plot # 24

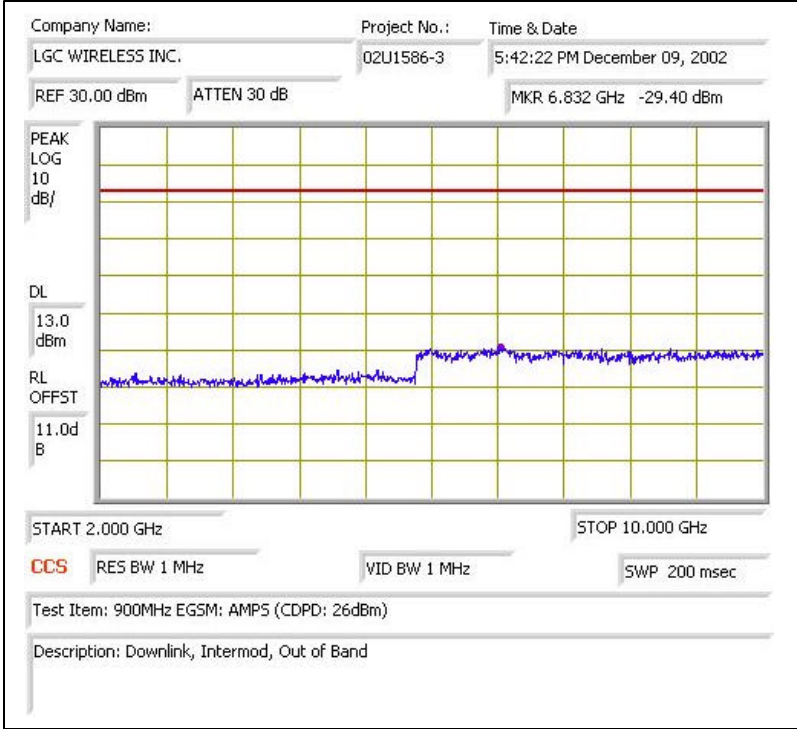

Plot # 25