




1900MHz PCS (TDMA)- DOWNLINK

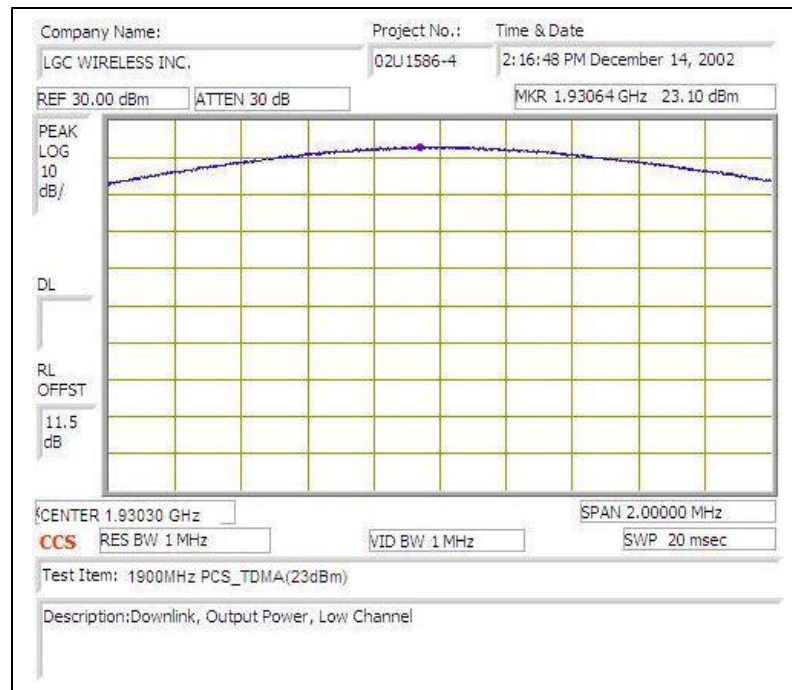


Plot # 1

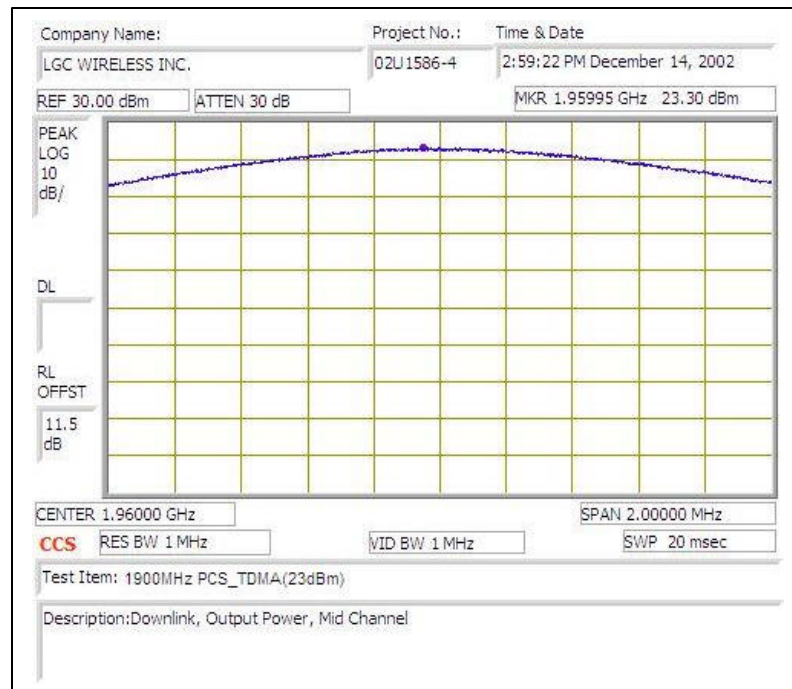


Plot # 2

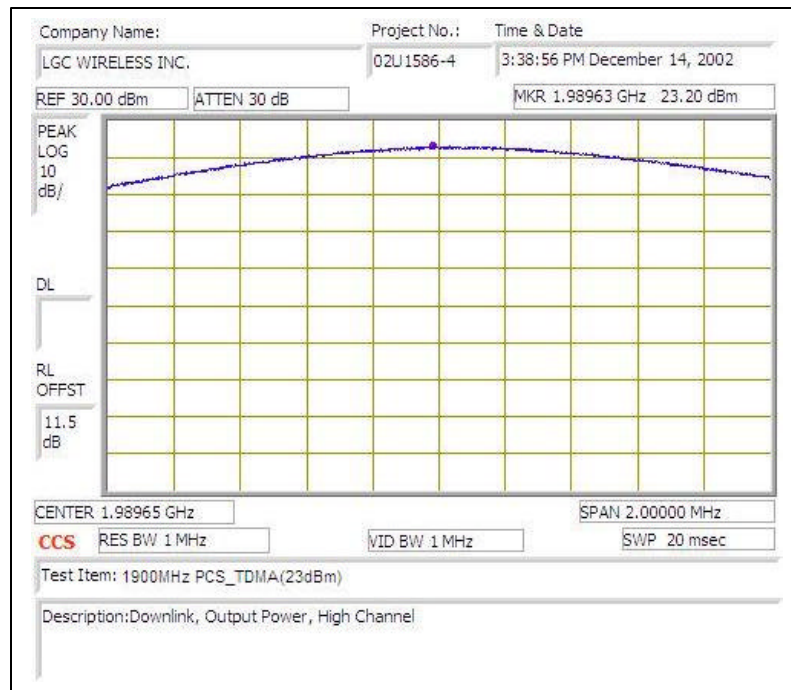


Plot # 3

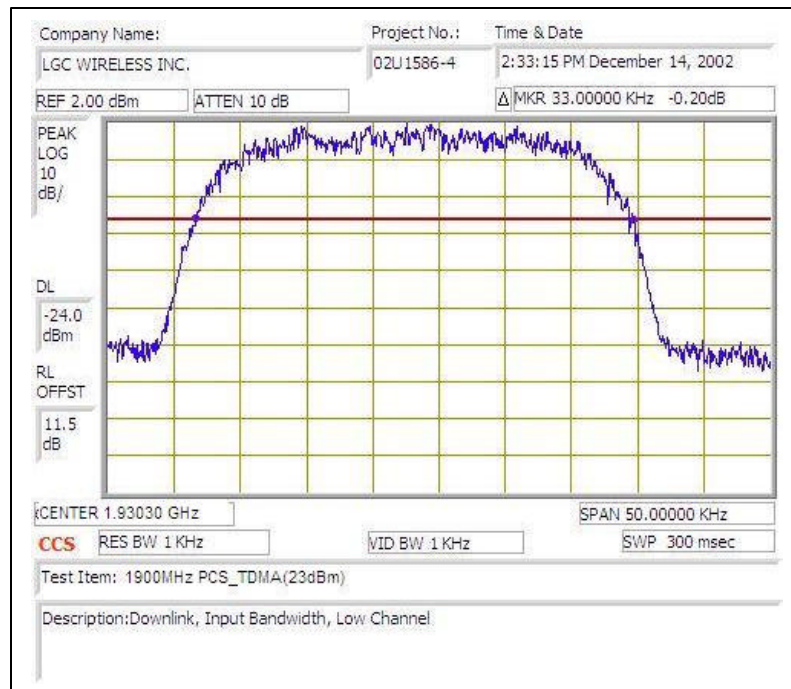


Plot # 4

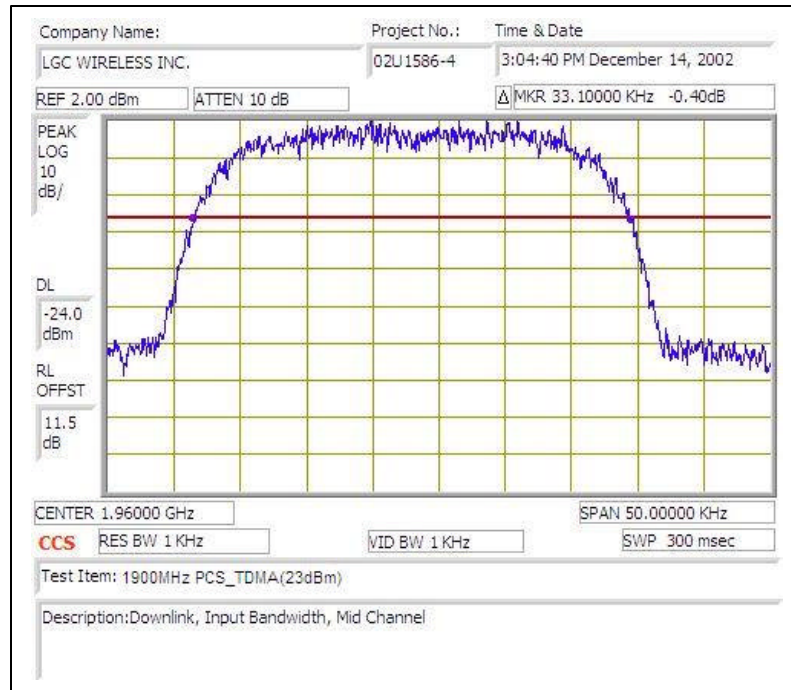


Plot # 5

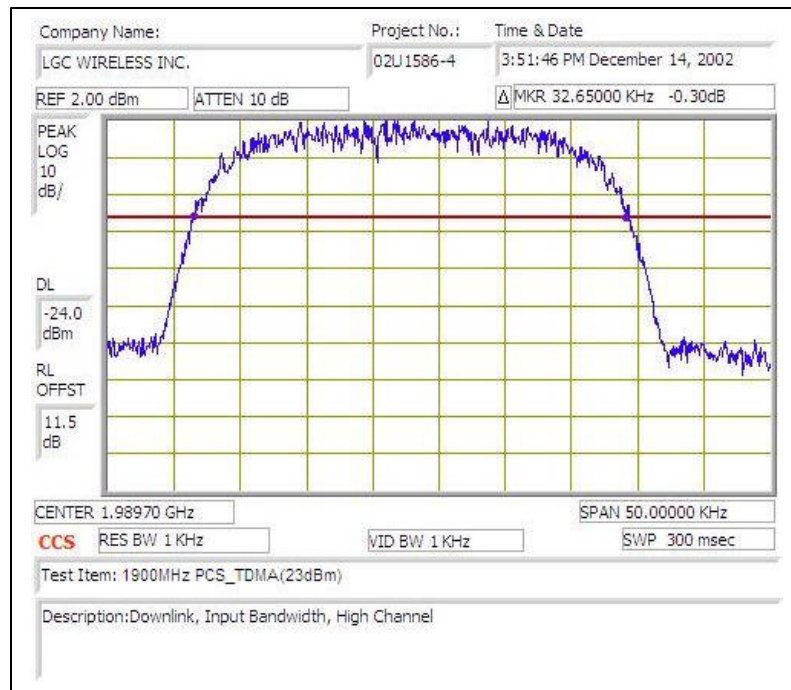


Plot # 6

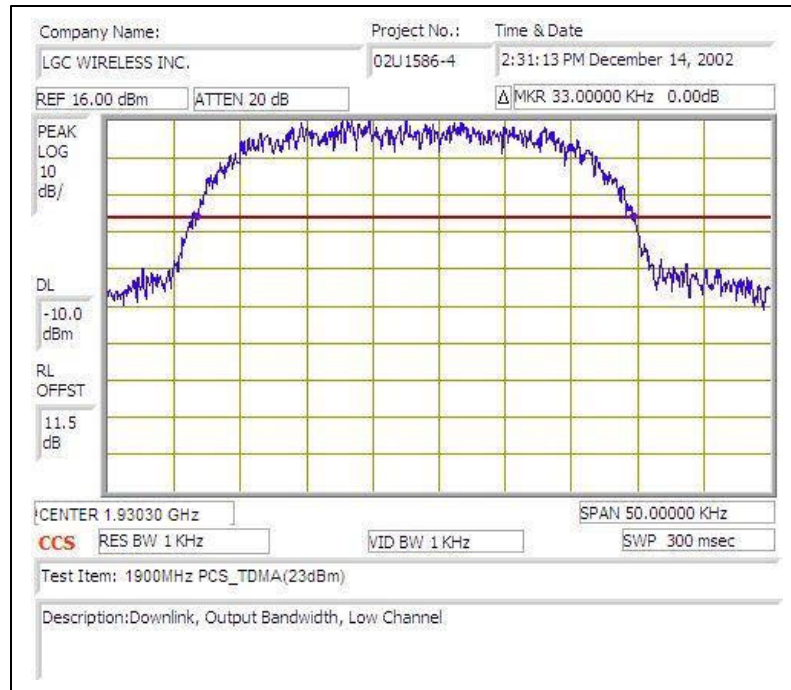


Plot # 7

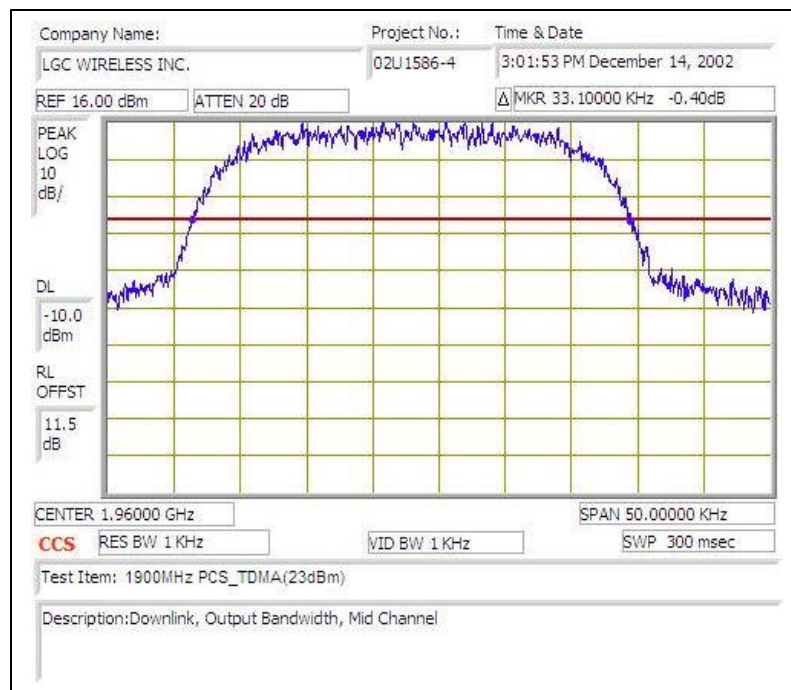


Plot # 8

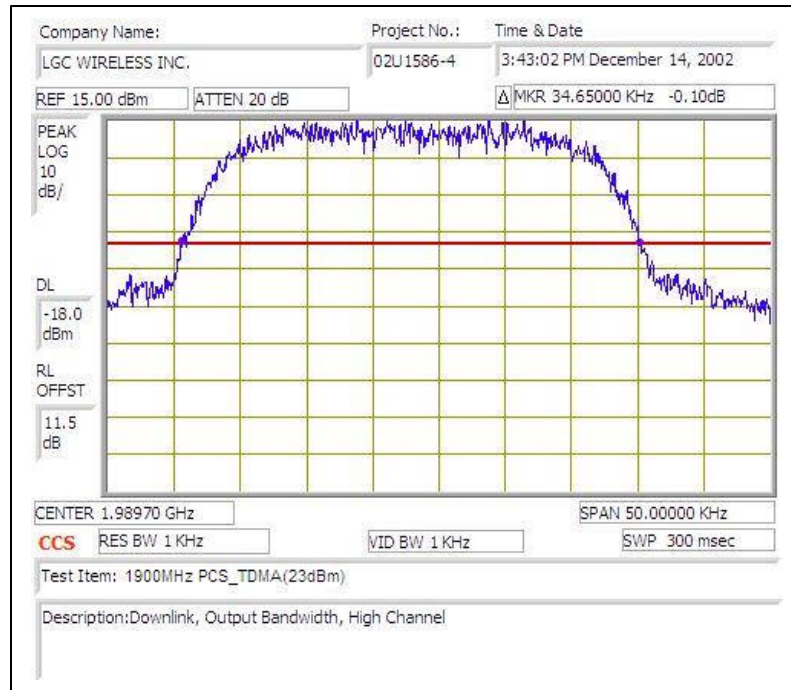


Plot # 9

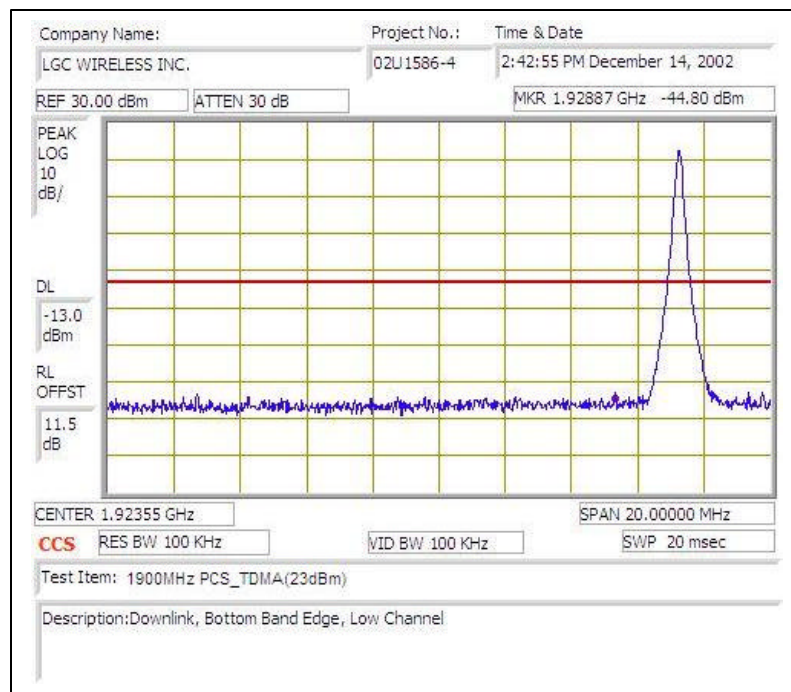

Plot # 10

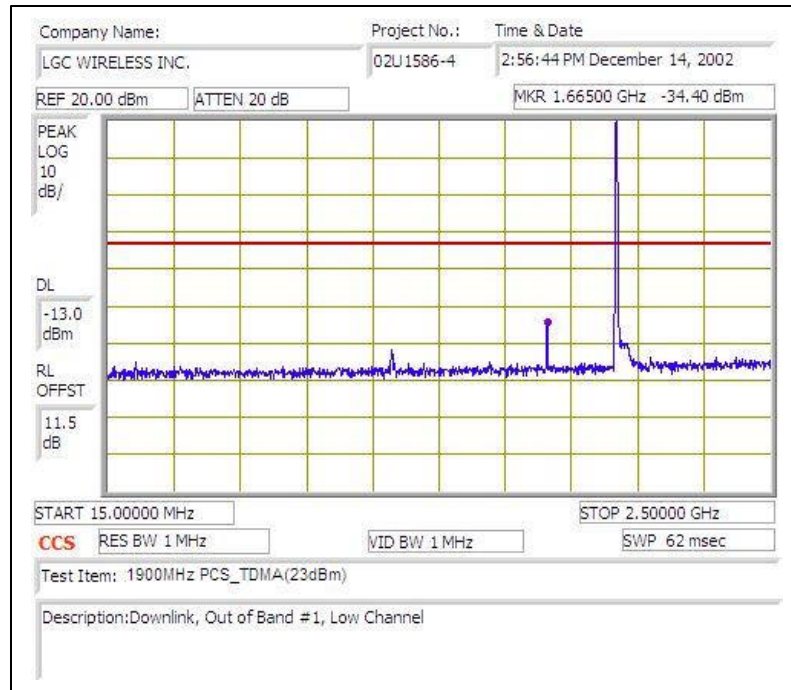


Plot # 11

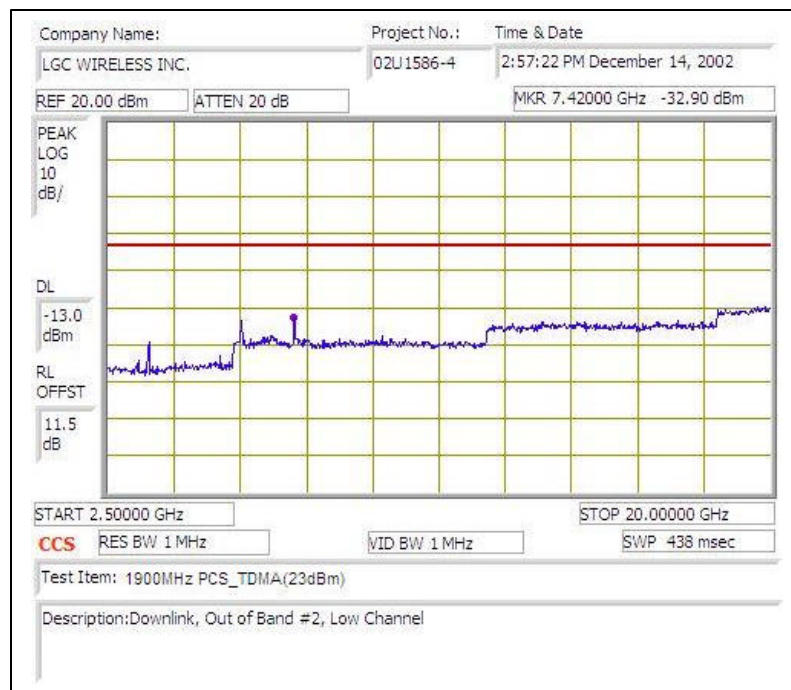


Plot # 12




Plot # 13

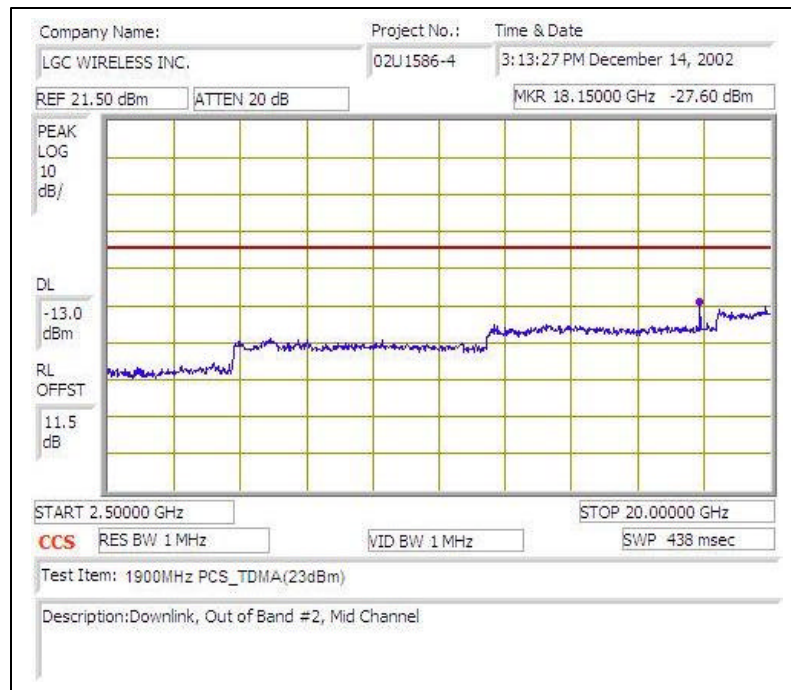


Plot # 14

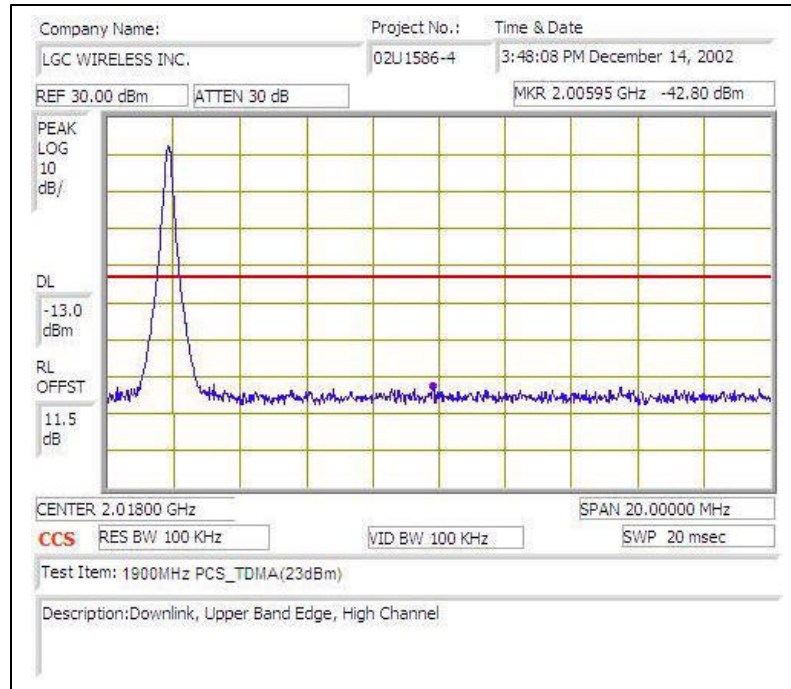


Plot # 15

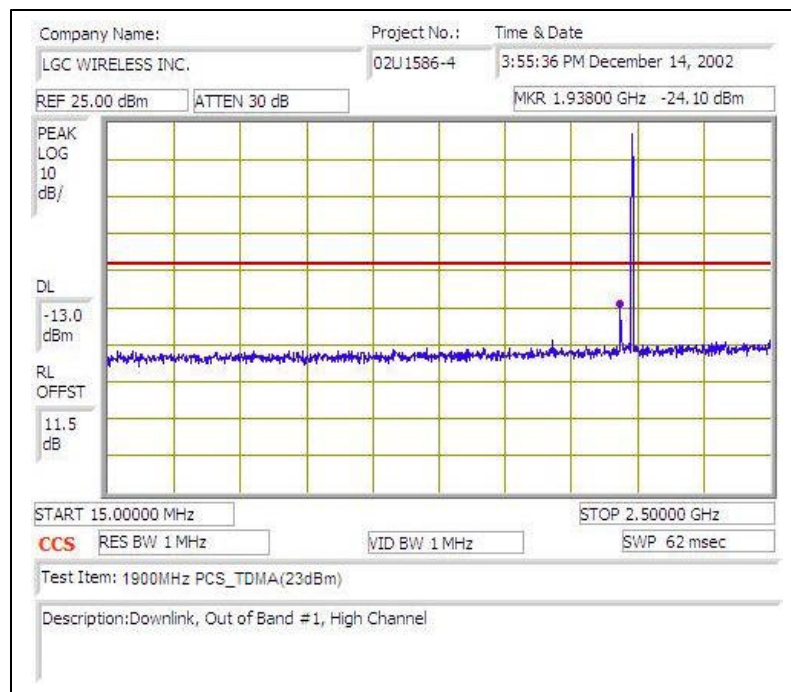


Plot # 16

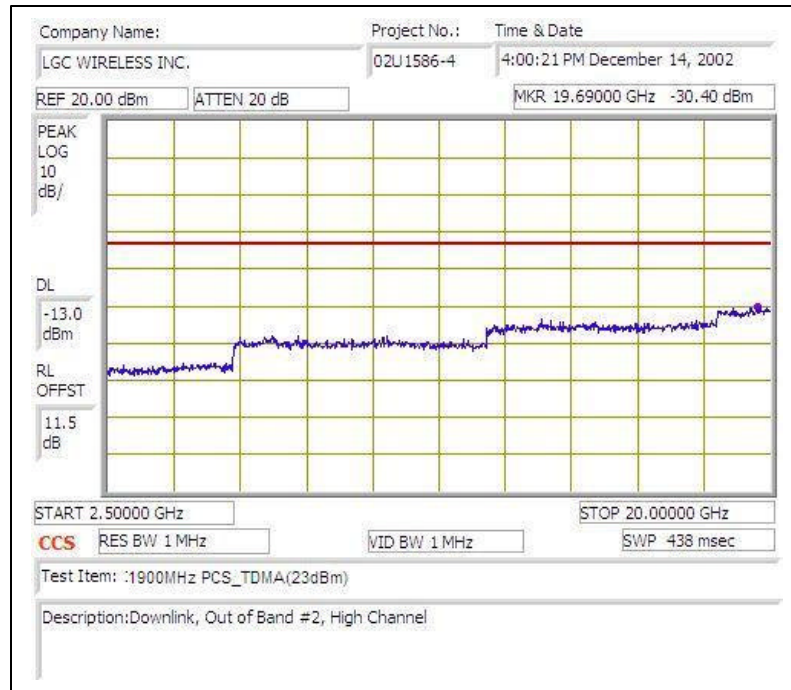


Plot # 17

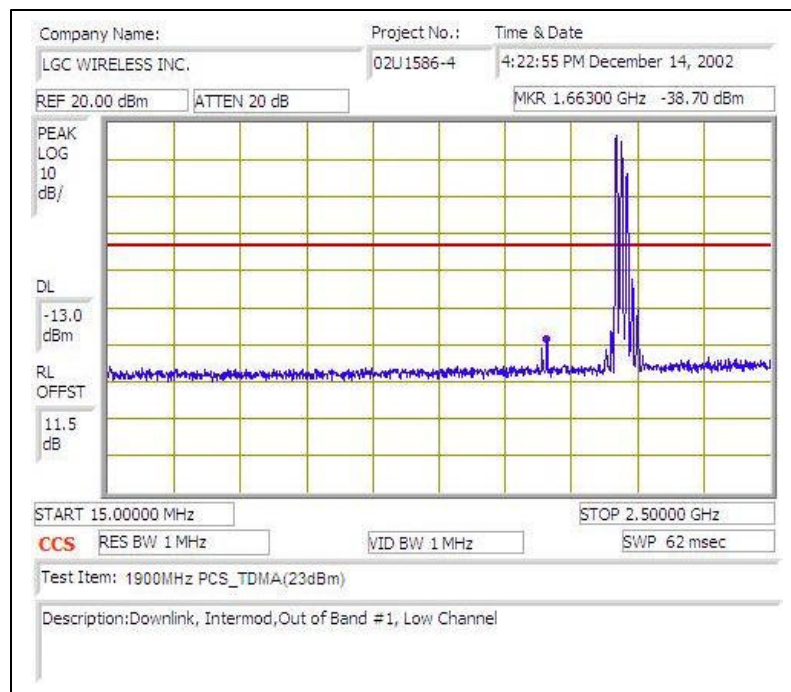


Plot # 18

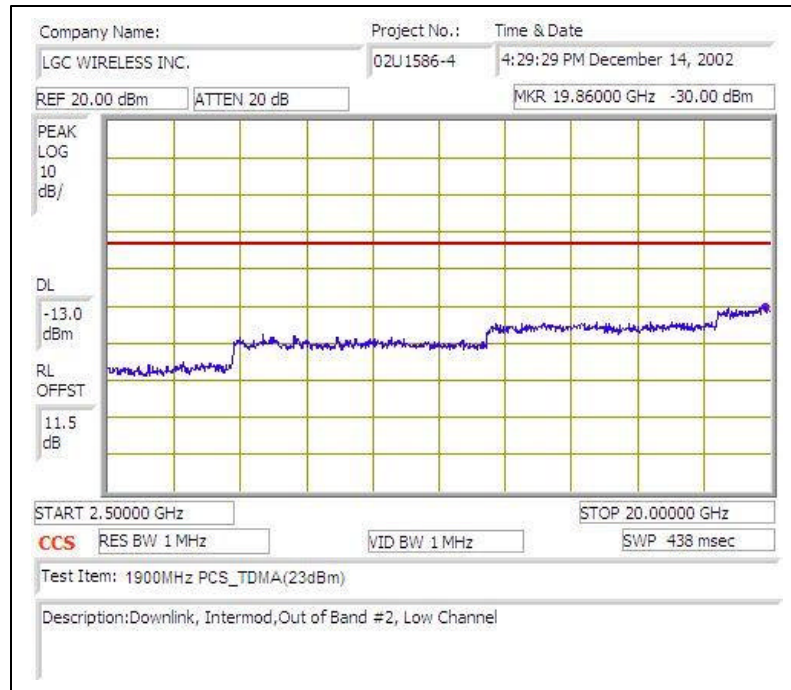


Plot # 19

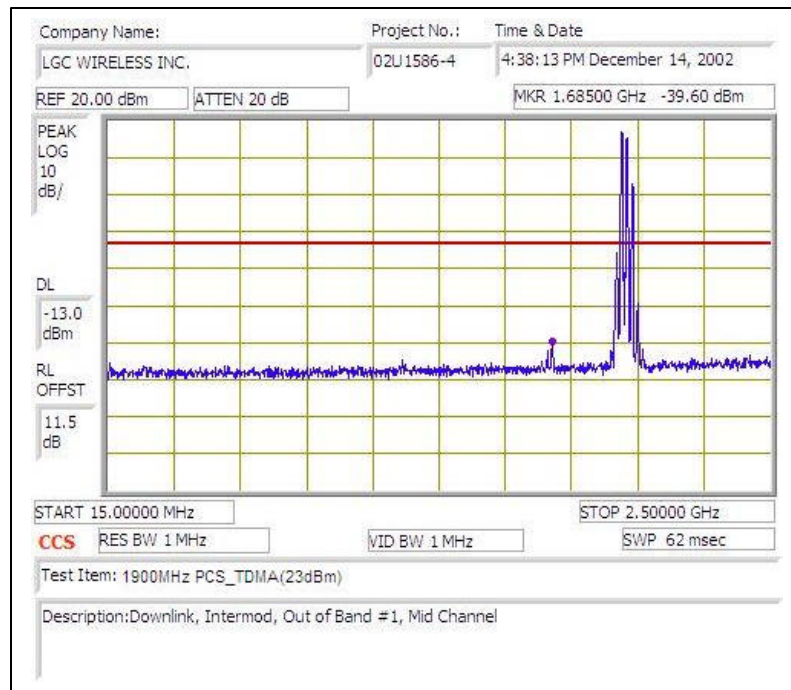


Plot # 20

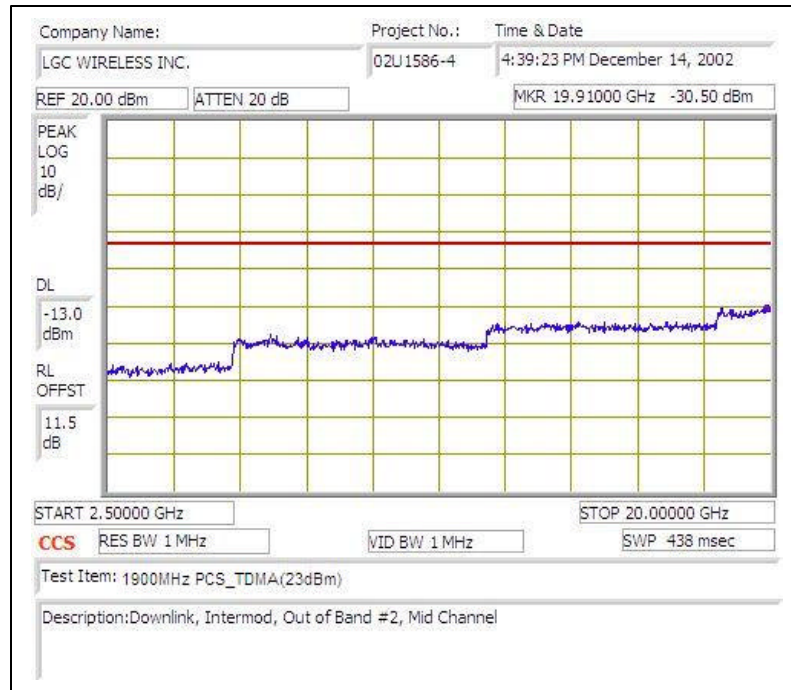


Plot # 21

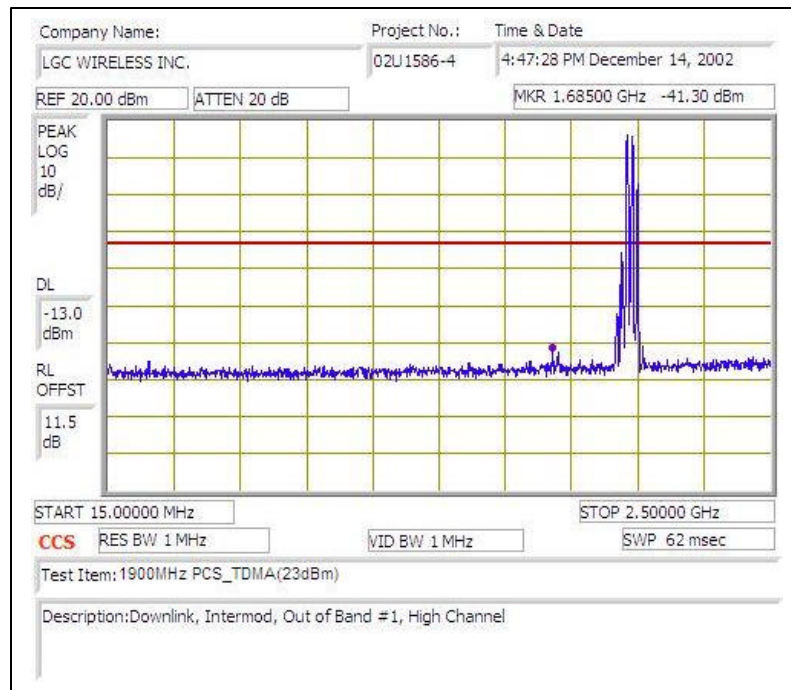

Plot # 22

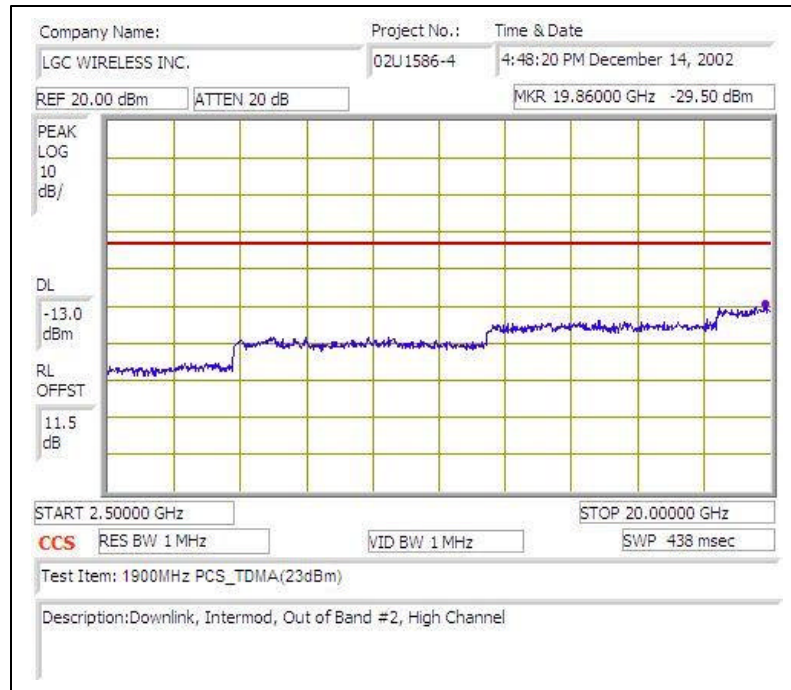


Plot # 23

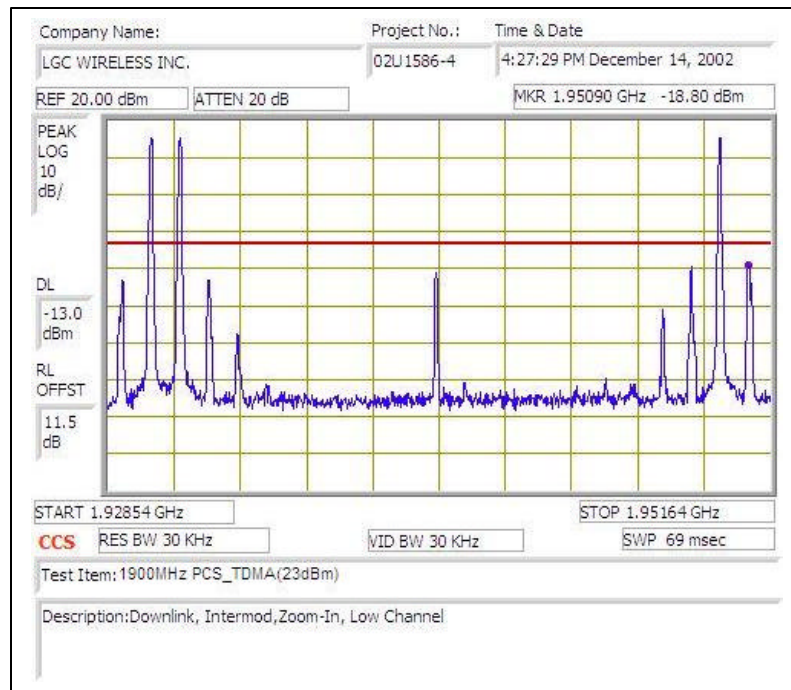


Plot # 24




Plot # 25

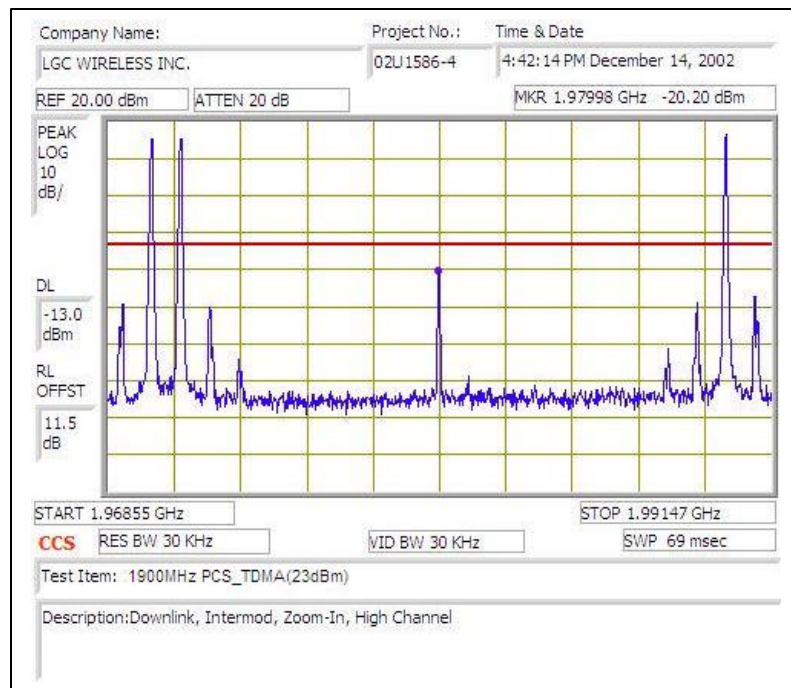

Plot # 26

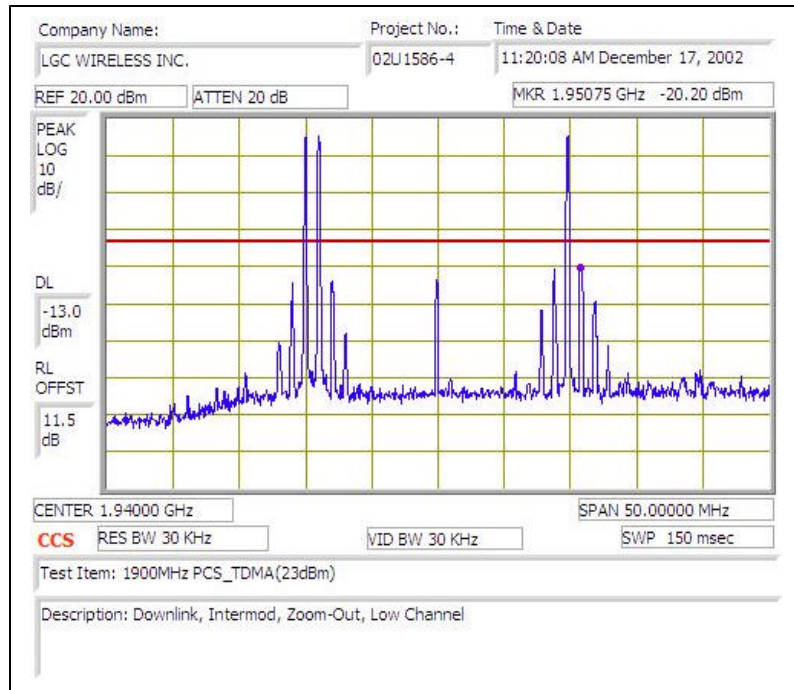

Plot # 27

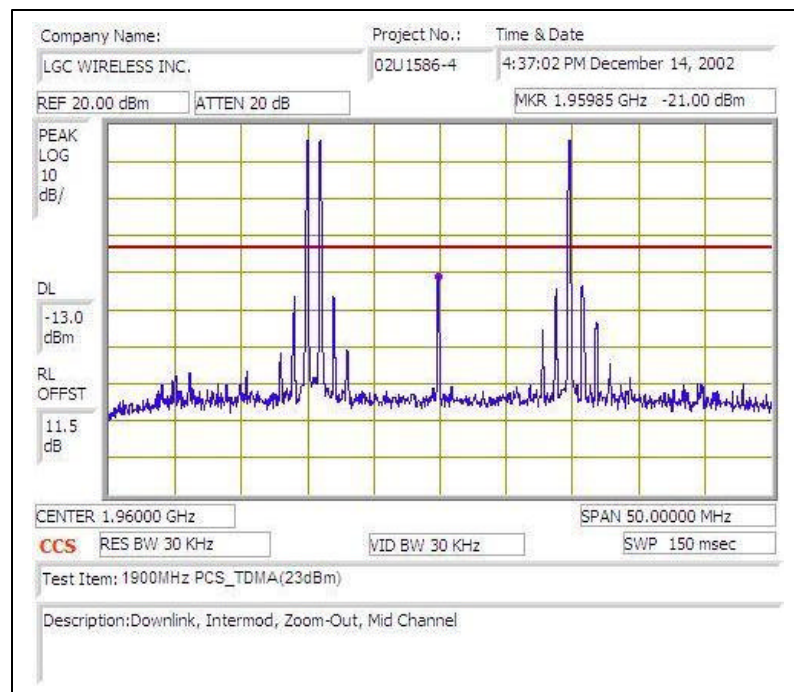

Plot # 28

Plot # 29

