




1900MHz PCS (GSM)- DOWNLINK

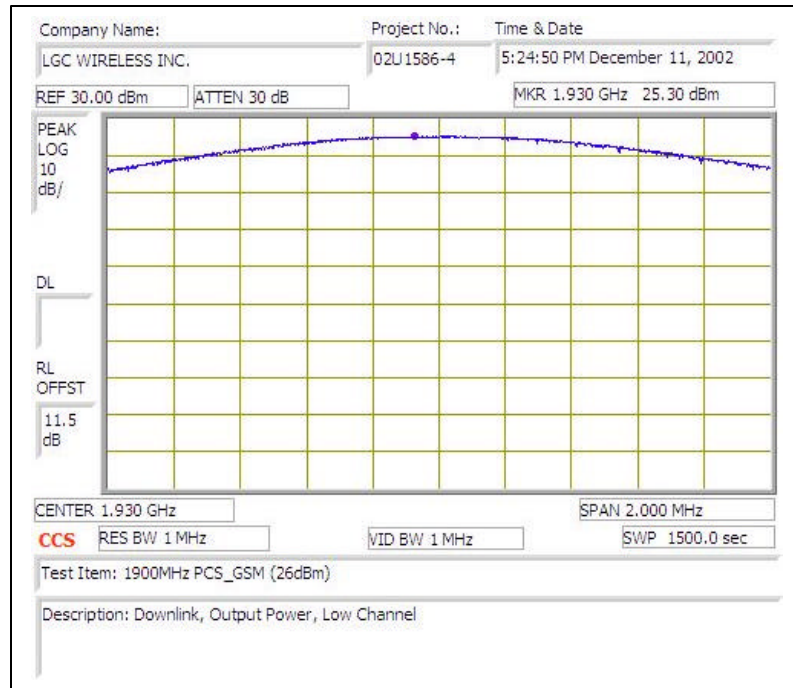


Plot # 1

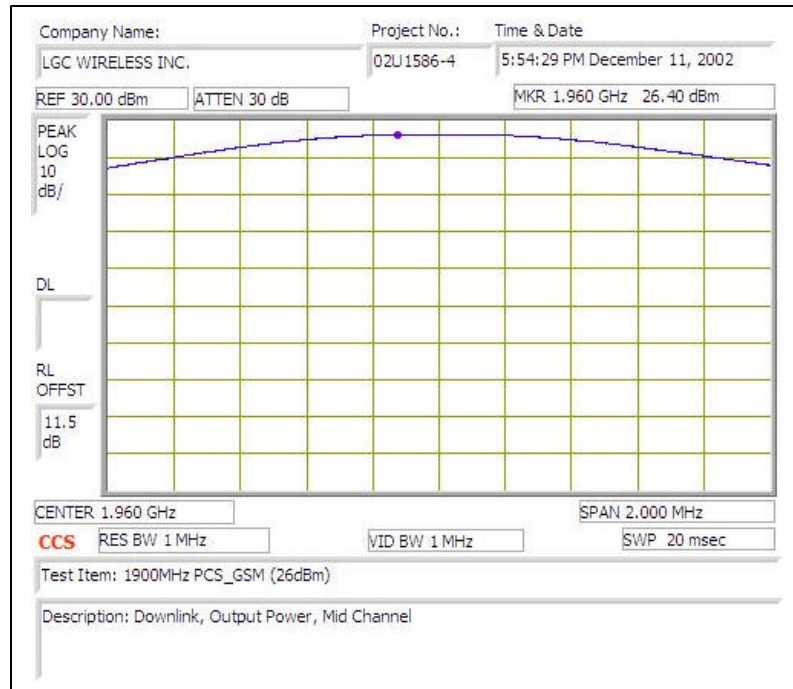


Plot # 2

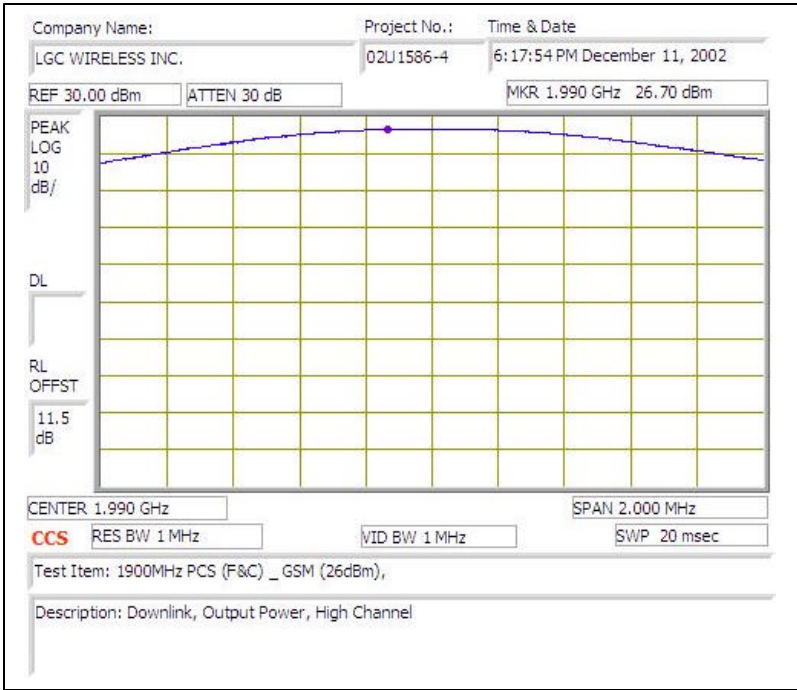


Plot # 3

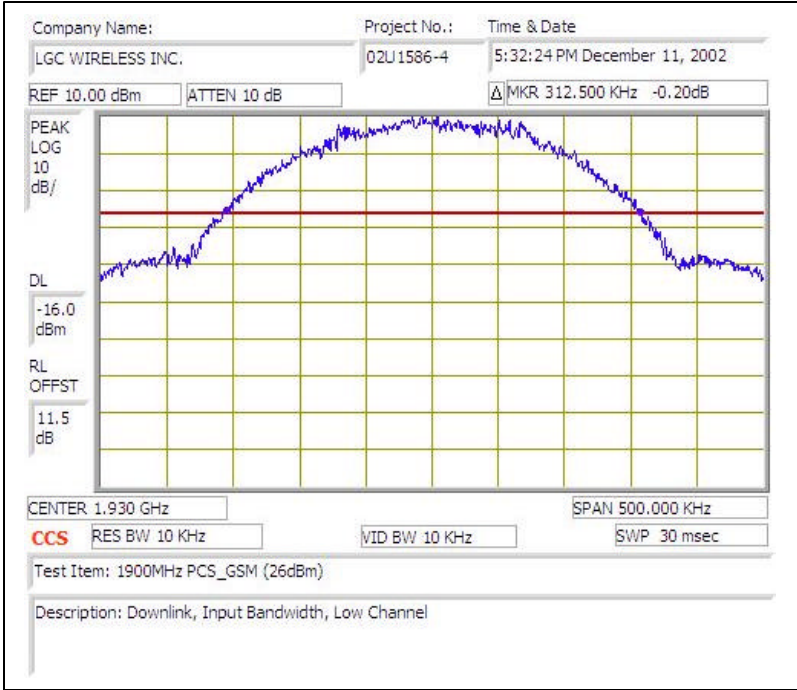


Plot # 4

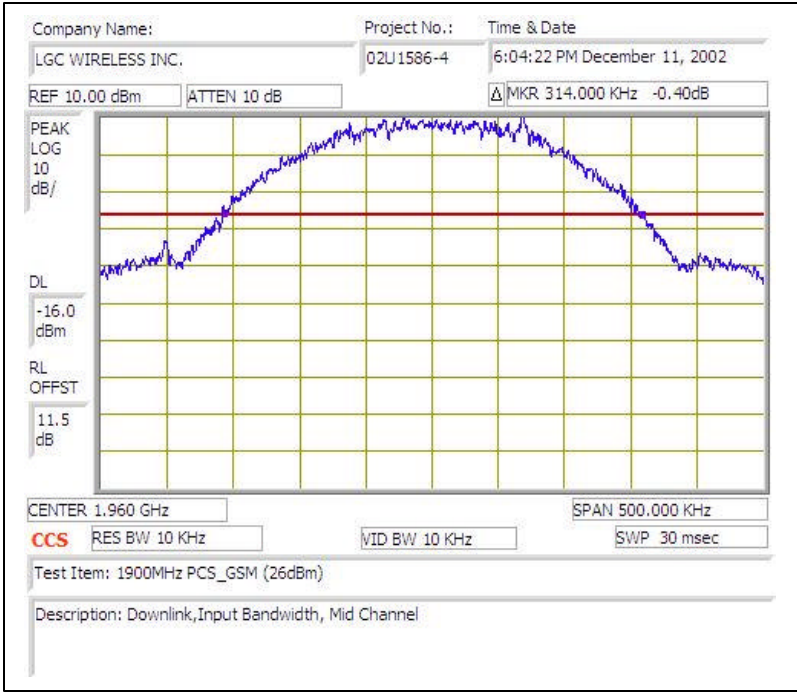


Plot # 5

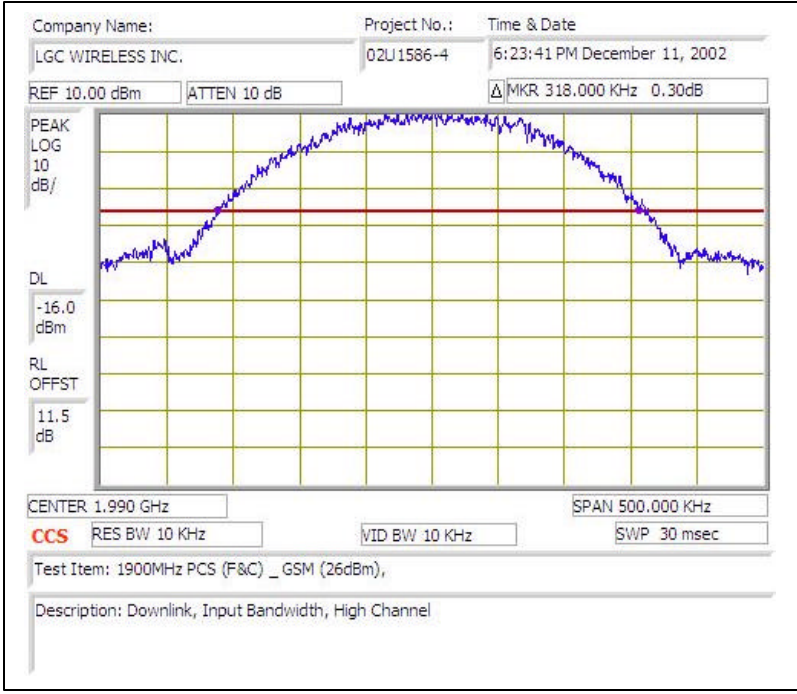


Plot # 6

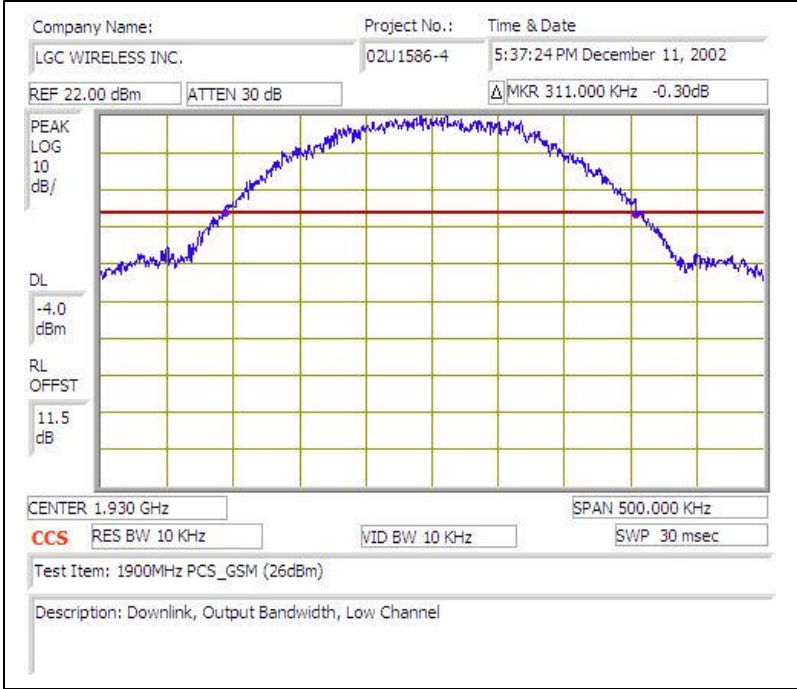


Plot # 7

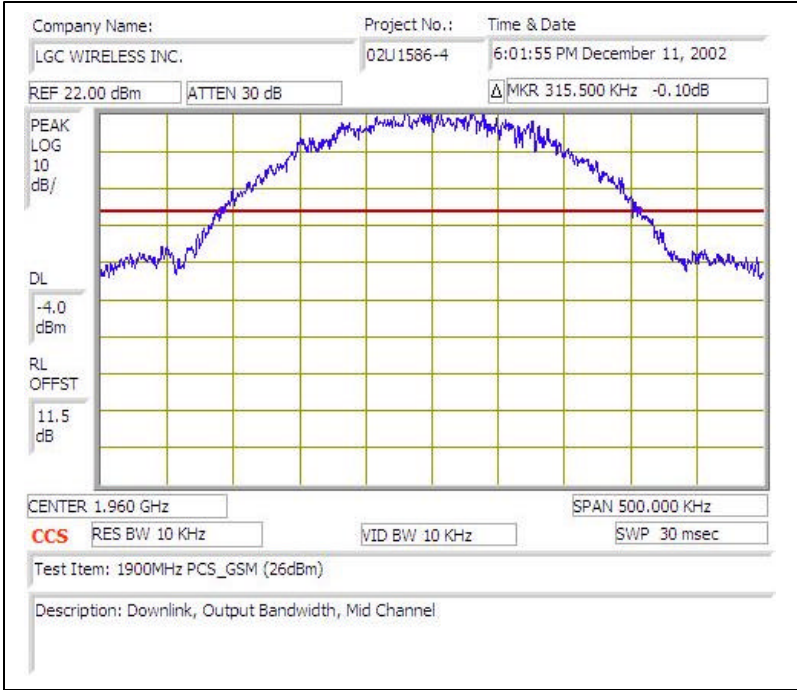


Plot # 8

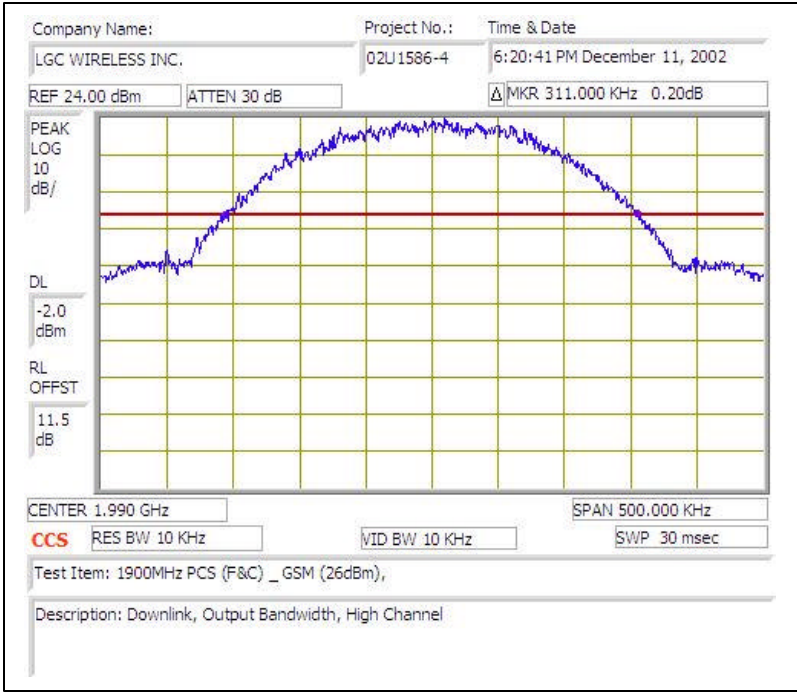


Plot # 9

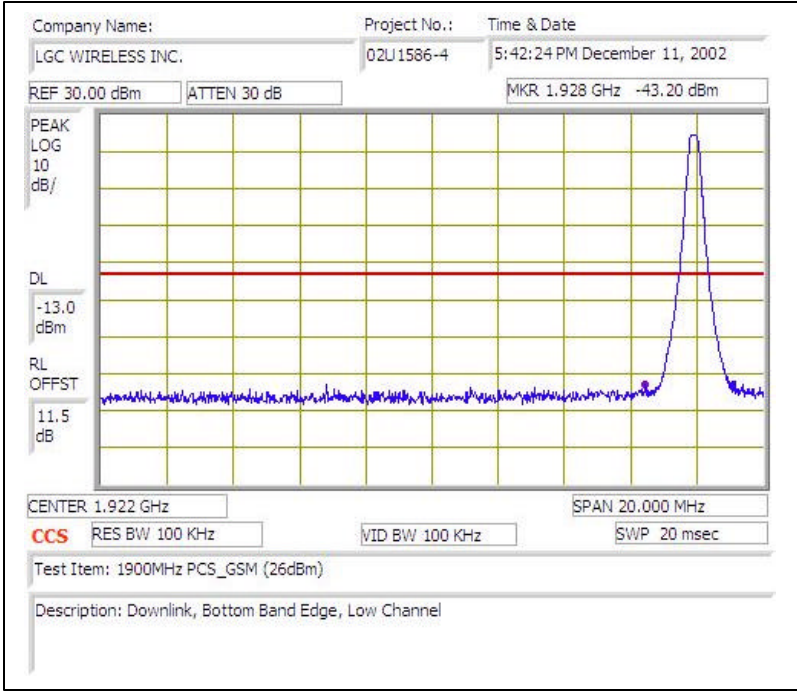


Plot # 10

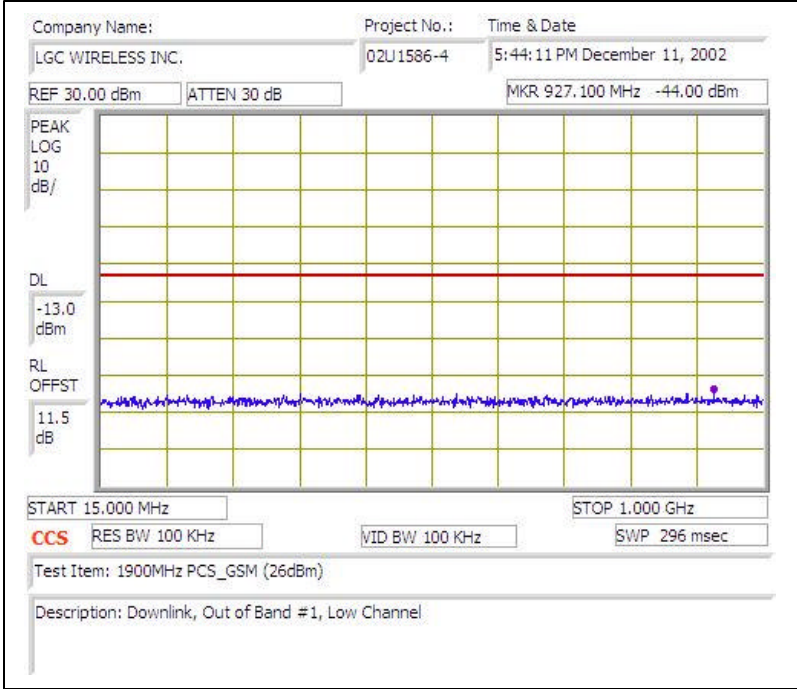


Plot # 11

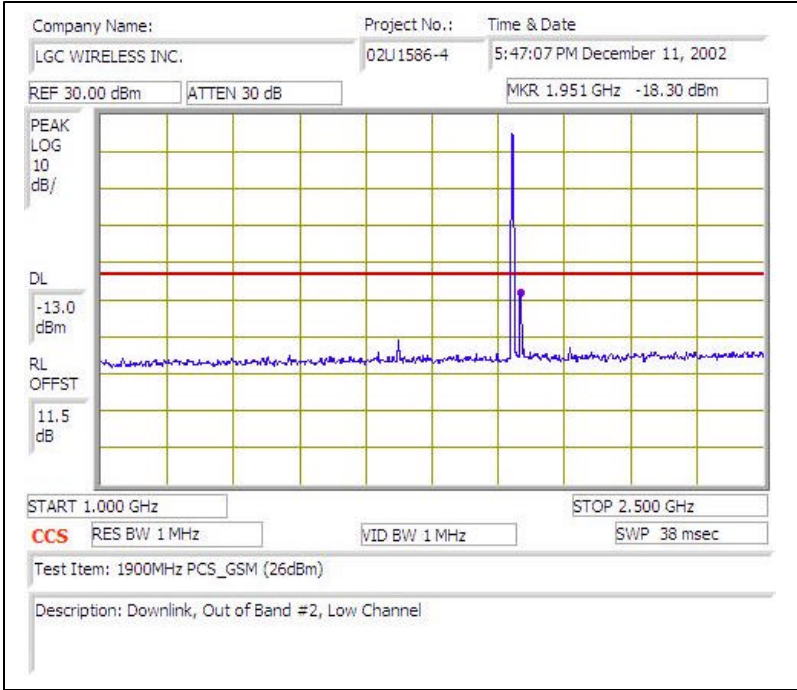


Plot # 12

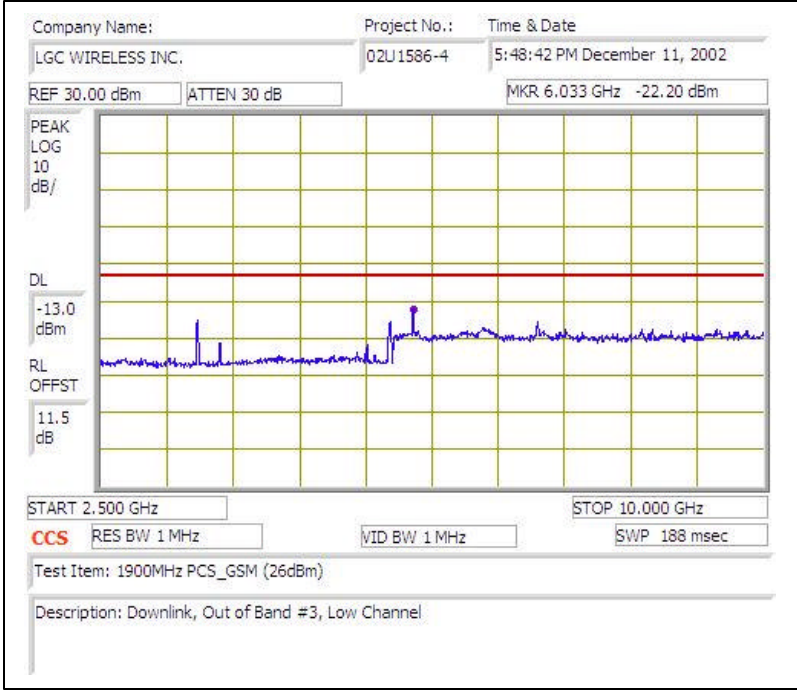


Plot # 13

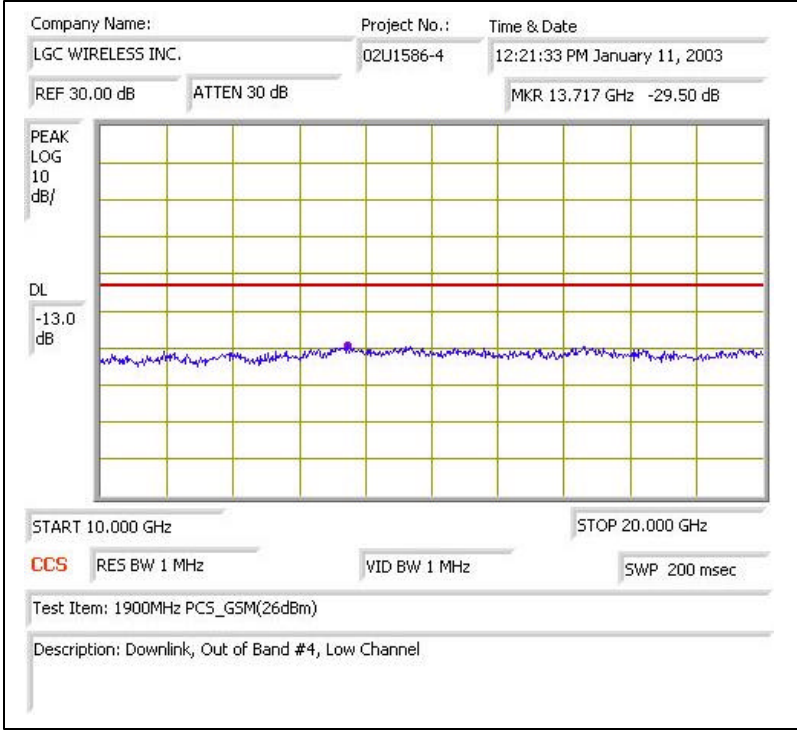


Plot # 14

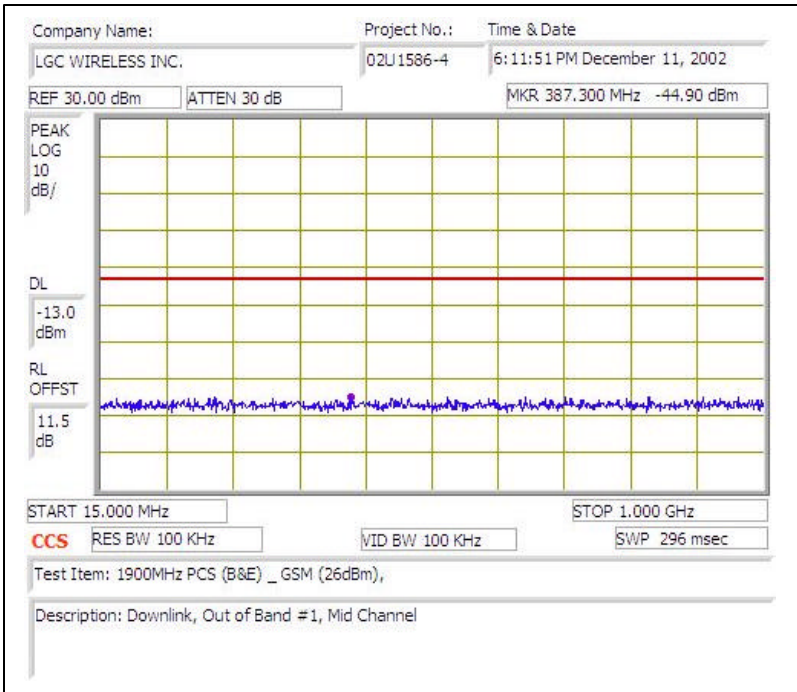


Plot # 15

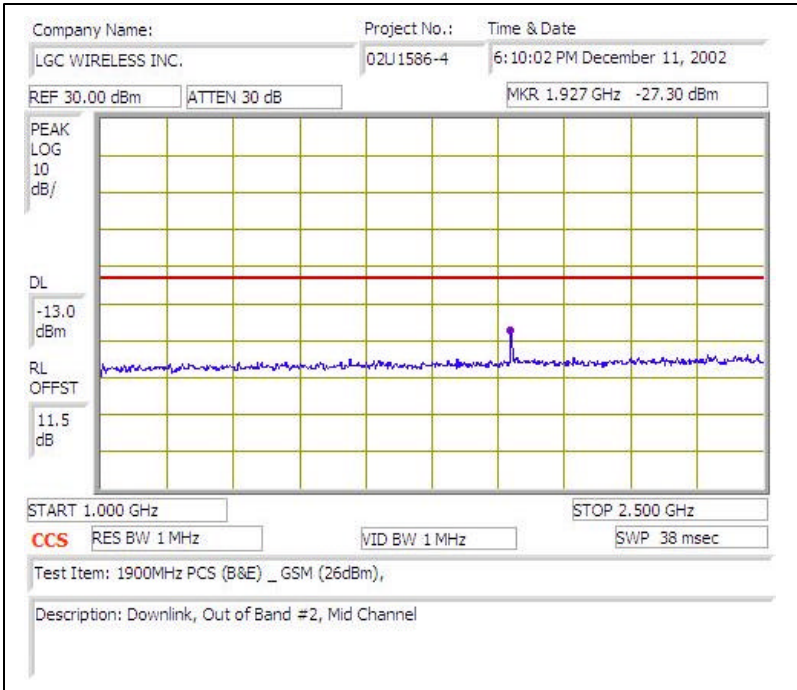

Plot # 16

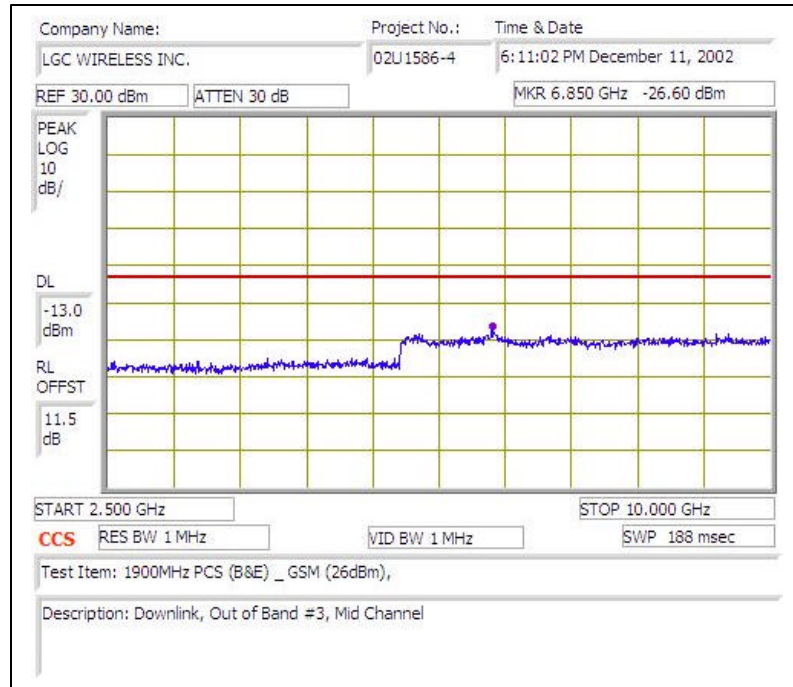

Plot # 17

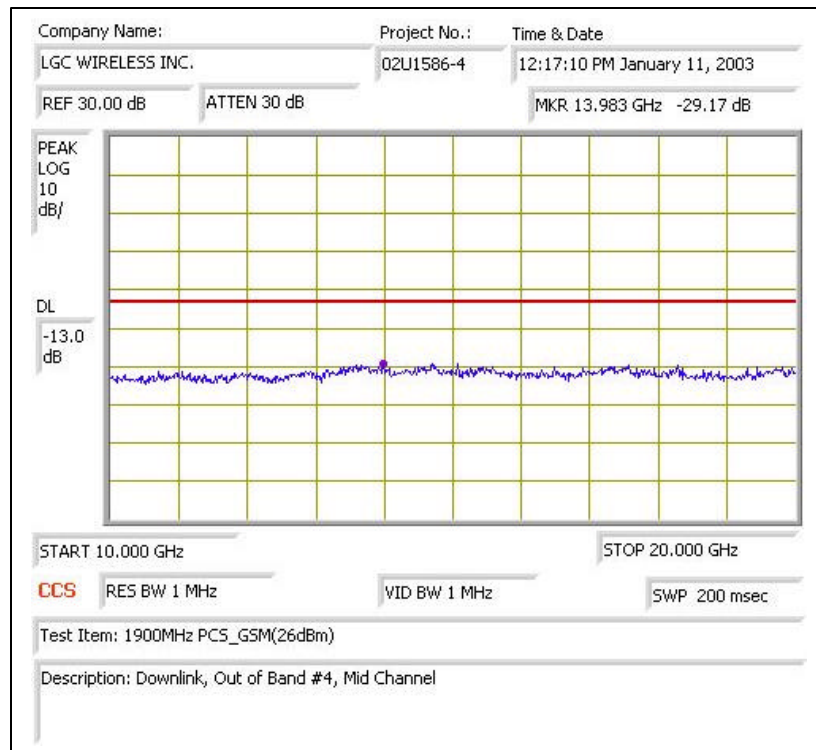

Plot # 18