




Ref -10 dBm Att 20 dB

*RBW 100 kHz Delta 1 [T1]
*VBW 100 kHz -41.46 dB
*SWT 100 ms -3.888000000 MHz

Bandedge Plot A

1 RM *
VIEW

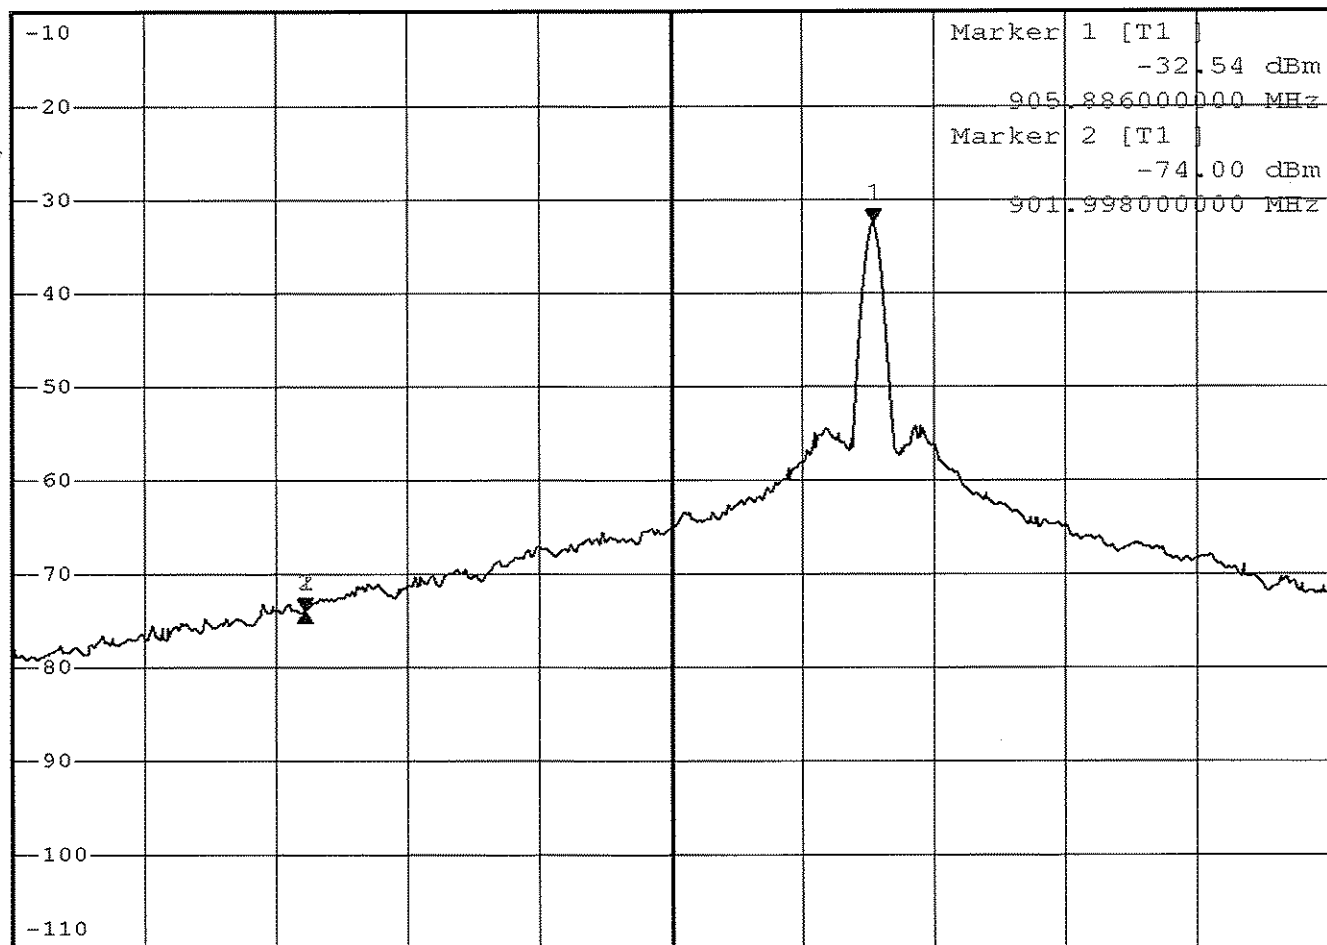

Start 900 MHz

900 kHz/

Stop 909 MHz




*RBW 300 kHz Delta 1 [T1]
*VBW 300 kHz -50.63 dB
*SWT 50 ms 19.980000000 MHz

Ref 0 dBm

*Att 10 dB

Bandedge Plot B

1 PK
VIEW

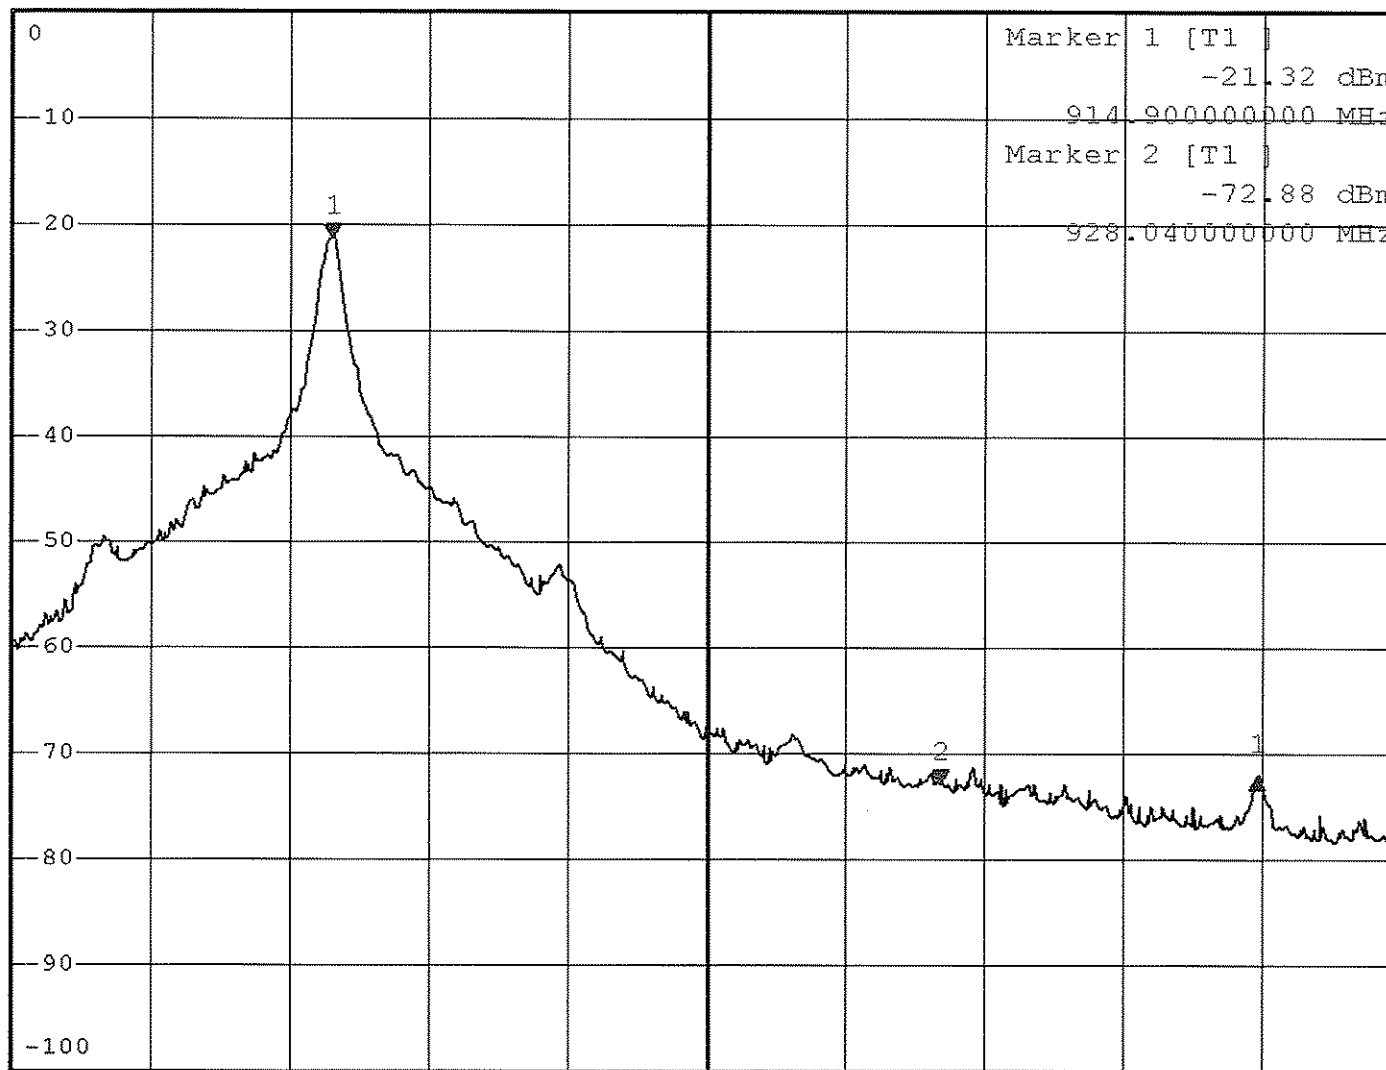

Start 908 MHz

3 MHz/

Stop 938 MHz