



ECO				
Revision	Number	Description of Change	Date	Approval
01	C00908	Engineering Release	9/20/05	D. Olsen

This document contains proprietary information of WhereNet Corp. and may not, in whole or in part be duplicated or disclosed or used for manufacture or any part disclosed herein without prior written permission of WhereNet.

WhereNet Corp.
2858 De La Cruz Blvd.
Santa Clara, CA 95050
408-845-8500

Title:	Assembly Procedure, WhereTag III TL / TLB (Thin Tag)	Author:	D. Olsen
Part Number:	D0991	Revision	01
Filename:	D0991r01 .doc		

1.0 Scope:

1.1 To illustrate the final assembly and welding procedures for WhereTag III TL variants.


2.0 Material required.

Part Number	Part Description
23493**	Assy, WhereTag III, TL, Not Configured
D0991	WhereTag III, TL Assy Procedure (This document)
23528**	Label Set, WhereTag TFF-1011-0DAA
23530**	Label Set, WhereTag TFF-1011-0BAA
23315**	PCBA, WTIII, TL
23373**	Housing Set, WhereTag III, TL

** See Agile System for current product part #'s and Revisions

3.0 Procedure

Preparation: Before beginning the tag assembly, the Bar Code Label is to be applied to the top of the Case. Refer to the current Bill of Materials for information regarding the proper Tag ID Label to use.

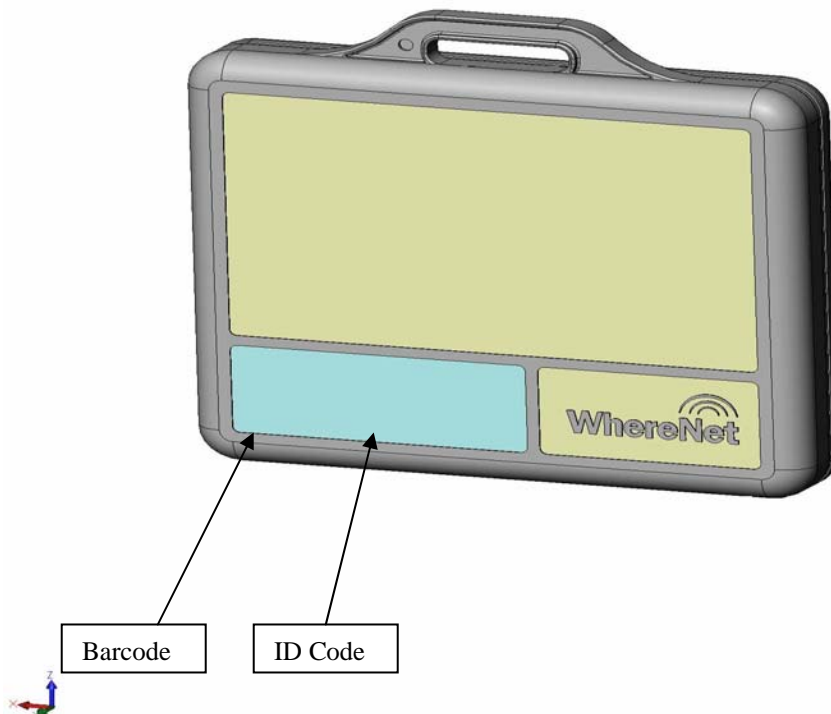

NOTE: The labels are to be aligned with and contained in the recessed areas.

