


1.1 Set-up for Conducted Emissions for 2/3/4G

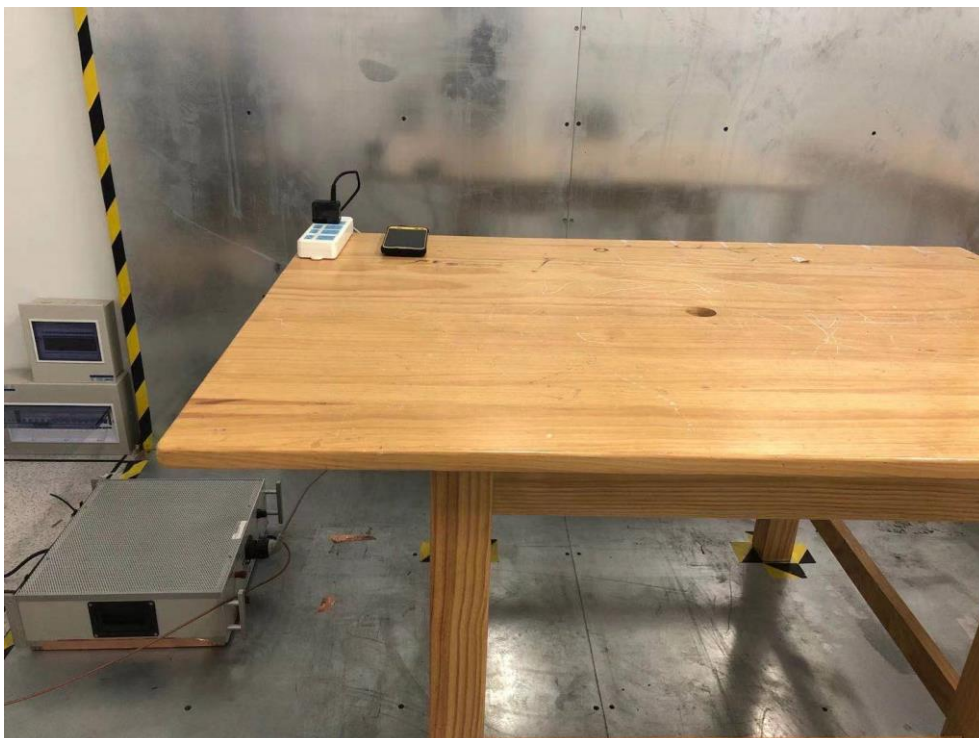

1.2 Set-up for Conducted Emissions for BT/WIFI



1.3 Set-up for Conducted RF test at Antenna Port



1.4 Set-up for Spurious Emissions below 1GHz




Below 1 GHz

1.5 Set-up for Spurious Emissions above 1GHz



Above 1GHz

1.6 Set-up for NFC below 30MHz

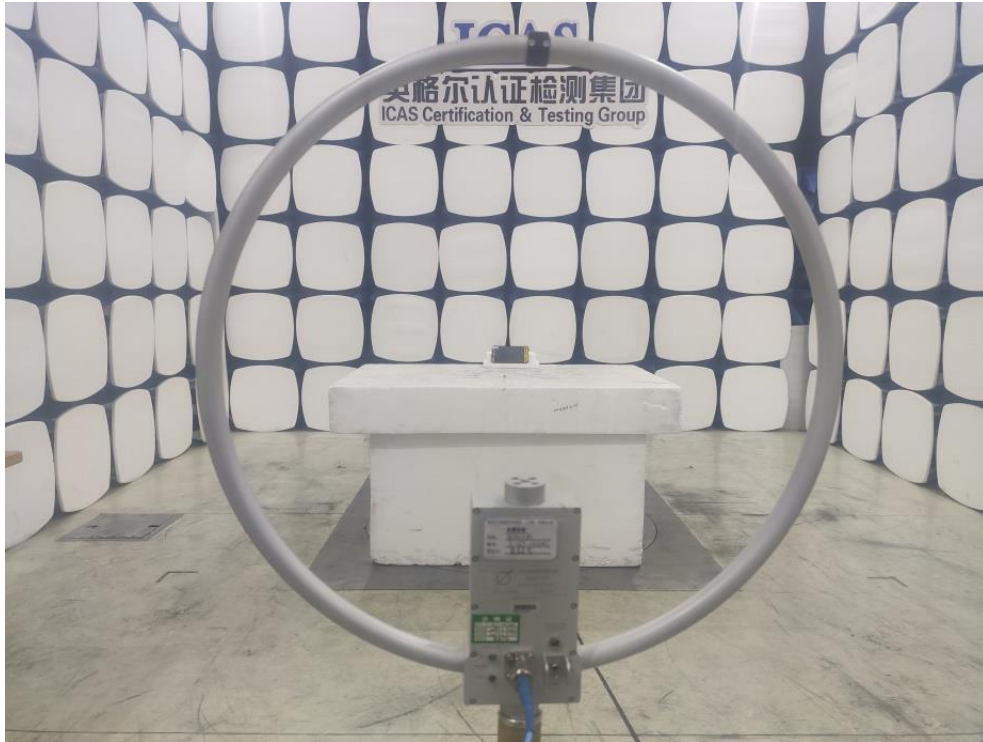

Below 30MHz

1.7 Set-up for NFC above 30MHz



Above 30MHz