




### 3. Installation

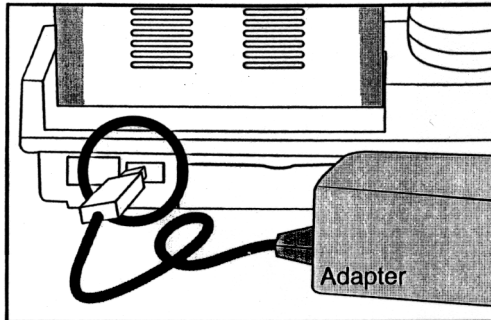

1. Plug the exclusive power supply to POWER connector on the GVP.

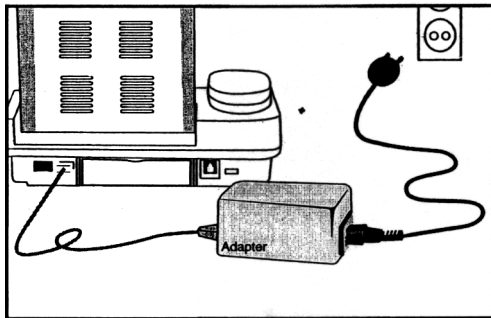

2. Connect the power cable to the power adapter and plug the other end of the cable into a wall outlet.

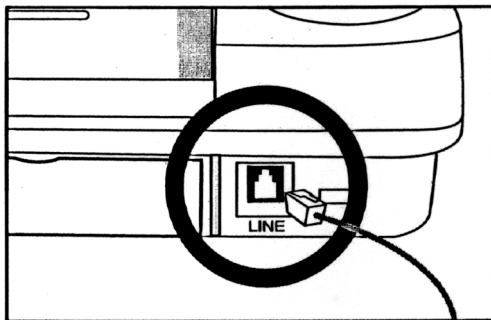

3. Plug a phone cable into the jack labeled LINE on the back of the GVP.

- ❖ We recommend you connecting power first, then connecting phone line to protect the modem inside the videophone.
- ❖ GVP cannot be applied to a 4pin phone line jack such as a key phone. If you connect GVP to a key phone line, the modem inside the GVP will go down.