


# Moto Magnet II™ Ultra

Patent Pending

## Decoy installation instructions

### 1 Shell Decoys

WARNING: Remove swing arm before installing swing arm. Place template on center of decoy back. Find center of decoy by balancing decoy with index finger. Drill two 3/8" holes.

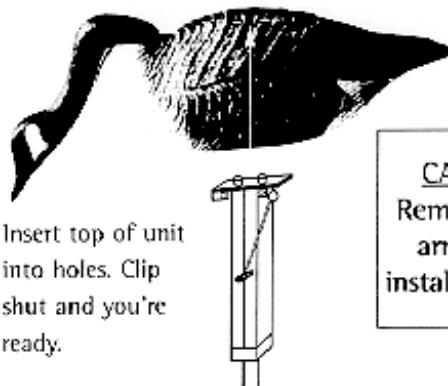


Insert top of unit into holes. Clip shut and you're ready.

**CAUTION:**  
Remove swing arm before installing decoy.


### 1 Silhouette Decoys

WARNING: Remove swing arm before installing swing arm.

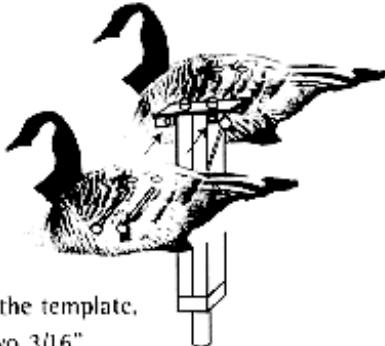

Using the template, drill two 3/16" holes in each side of the decoy, as shown. Insert the bolt from the outside of one decoy half, thru the mechanism and the other half of the decoy. Secure with nut.

2 Place the lower portion of the stake into the ground, up to the circular marker on stake.



3 Set the decoy and motion system onto the stake and turn on the switch.



You can find us on the internet at [www.trumotion.com](http://www.trumotion.com)

## Moto Magnet II™ Ultra Operating Instructions

### Remote Operation

1. Turn on switch on small black box
2. Turn unit on and off as desired, by remote control switch.

### Continuous Operation

1. Make sure small black box switch is off.
2. Turn on switch in front of main unit.