



PDQ-1900 Label Drawing

The following is a sample of the label with the FCC ID number located on the label. This label is located on behind the battery on the back bottom of the phone as indicated in the attached photo.

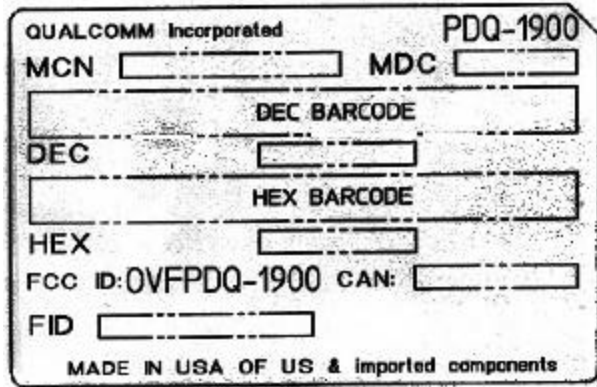

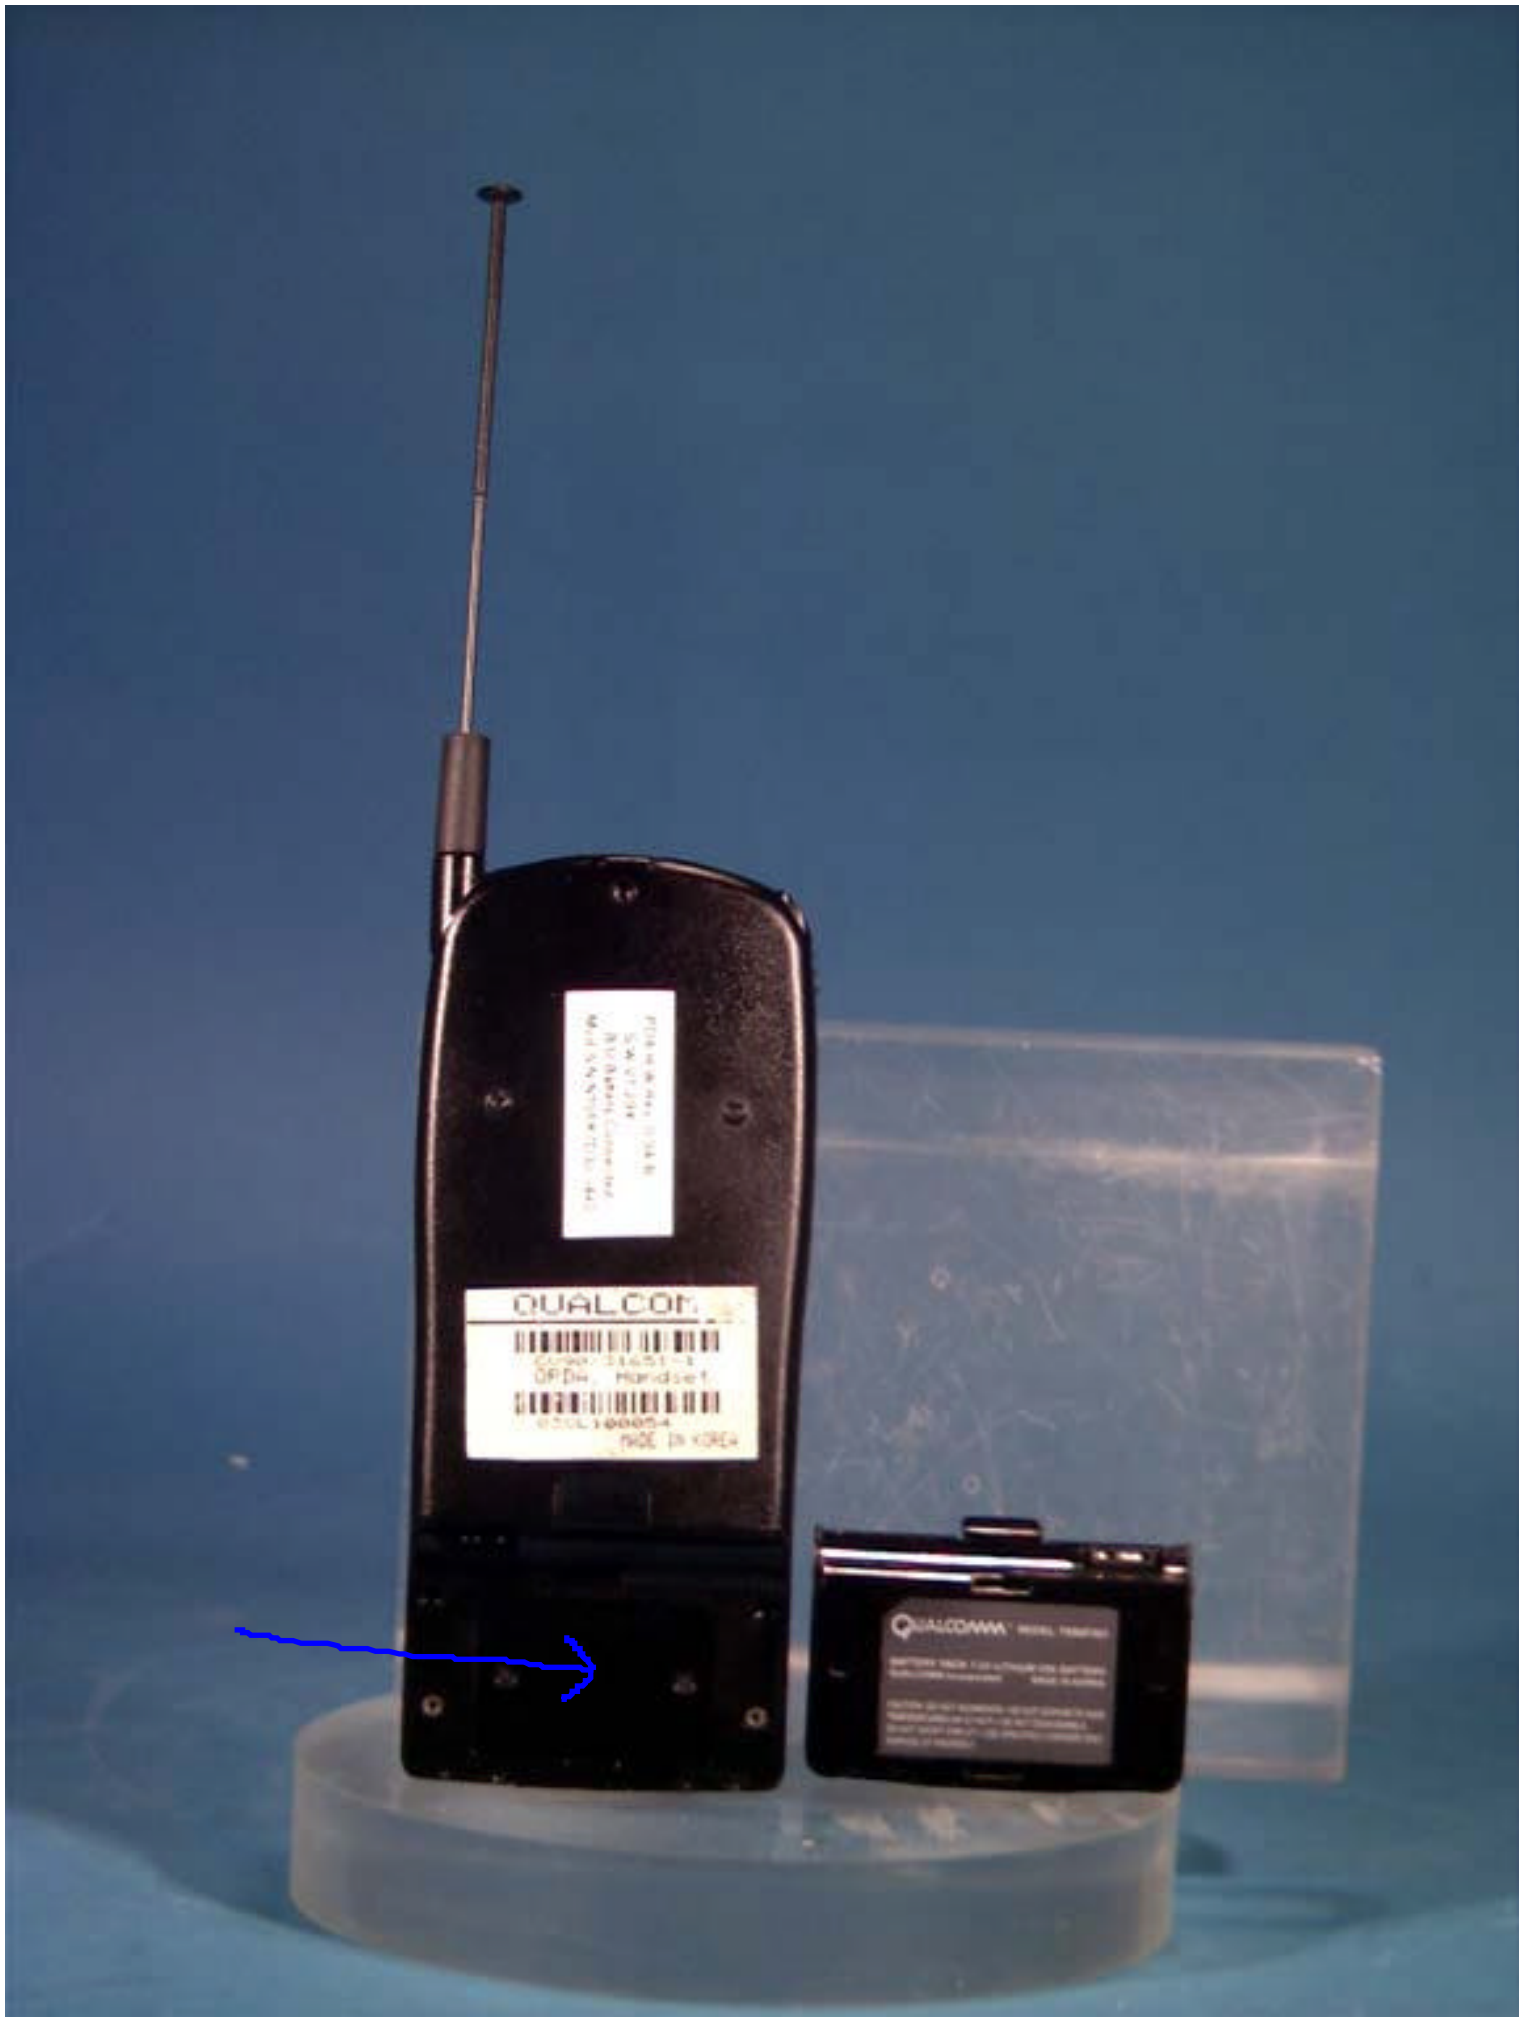

PTN 000001 000001
S.M. V7770
REV 000001 000001
MADE IN KOREA (T10) (40)

QUALCOMM
000001 000001
OPDA Handset
000001 000001
MADE IN KOREA

QUALCOMM MODEL: P8000
BATTERY MADE IN KOREA (T10) (40)
MADE IN KOREA

