


Assembly

1. Place the SDS on top of the Anti-Vibration Plate, ensuring that the feet and capstans are correctly aligned and drop into the keyway slots.

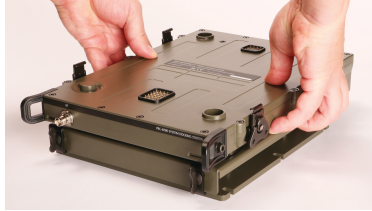

2. Push the SDS towards the rear of the anti-vibration plate, as shown below, so that the capstans and SDS click into place.



3. To secure the SDS, first ensure that the lock clamps are connected to the slots on the front of the SDS, then turn the fasteners a quarter turn.

