




P515-863

SCHLAGE
LiNK

Quick Start Guide

SCHLAGE

1 Install Lock

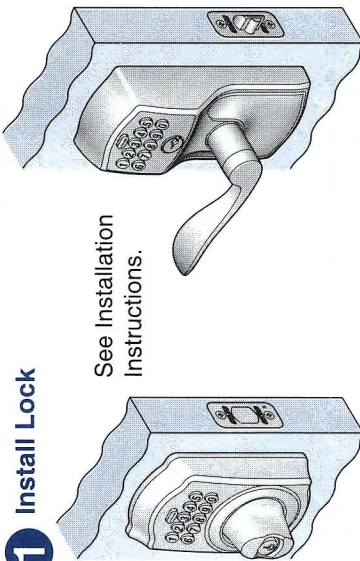


See Installation Instructions.

2 Install Battery in Bridge



Z-Wave Light
Slow Blink = Searching for Device
Rapid Blink, Then Solid = Enrollment Successful
+ Button
Press to enroll device


3 Prepare to Enroll Lock

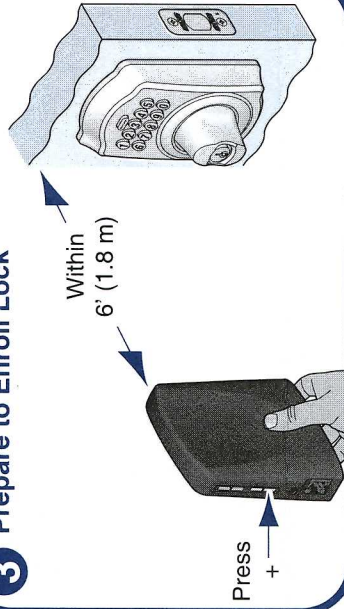

4 Press (six numbers) + 0




5 Install Light Module

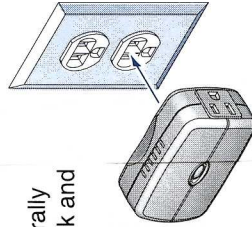


Locate centrally between lock and bridge.


6 Enroll Light Module

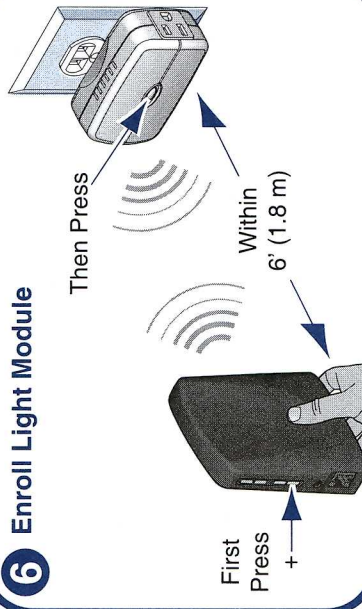


7 Install Bridge

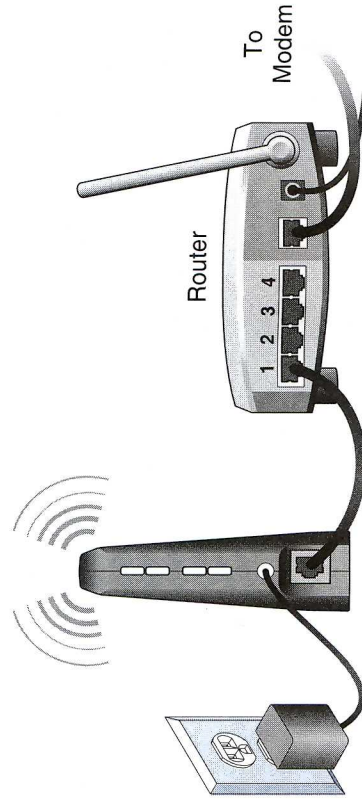

8 Set Up Online Account

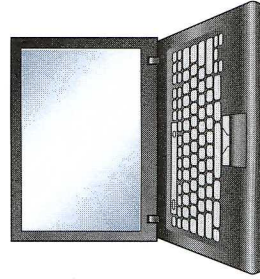

Browse to alpha.schlagelink.com.

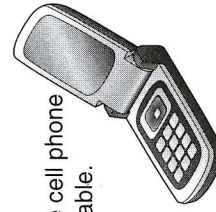

Have cell phone available.

See testmydoorlock.com for detailed information on all products.



©2008 Schlage Lock Company
Printed in Mexico
P515-863 Rev. 06/08-alpha-1