
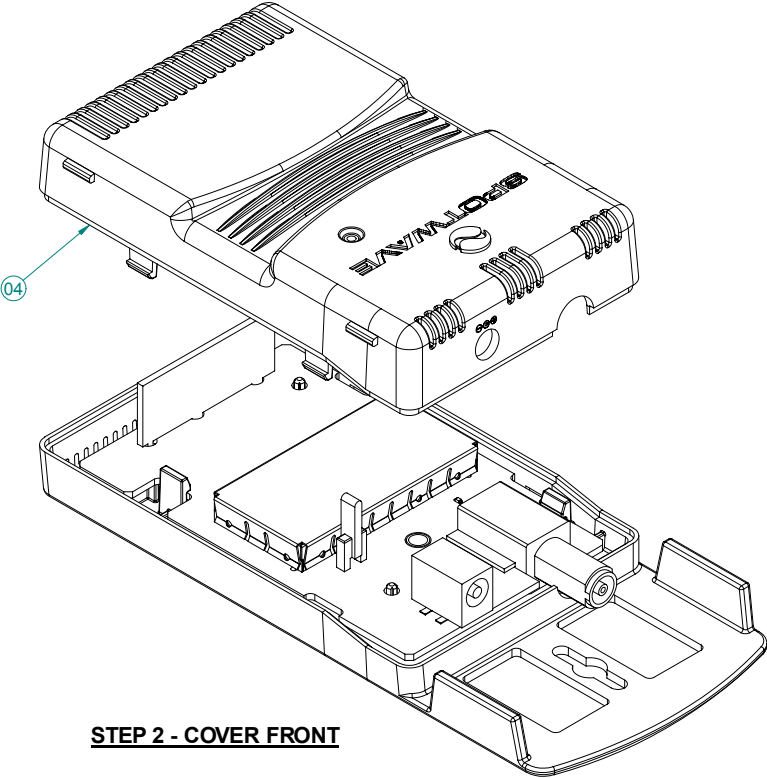


THIS DOCUMENT IS THE PROPERTY OF "Spotwave Wireless Inc." AND MAY BE NEITHER USED, COPIED, REPRODUCED OR OTHERWISE DEALT WITH NOR ITS CONTENTS COMMUNICATED TO OTHERS EXCEPT IN ACCORDANCE WITH WRITTEN INSTRUCTIONS RECEIVED FROM "Spotwave Wireless Inc."

REVISIONS			
REV.	DESCRIPTION	DATE	BY
01	INITIAL RELEASE FOR QUOTING	25NOV'05	MJS

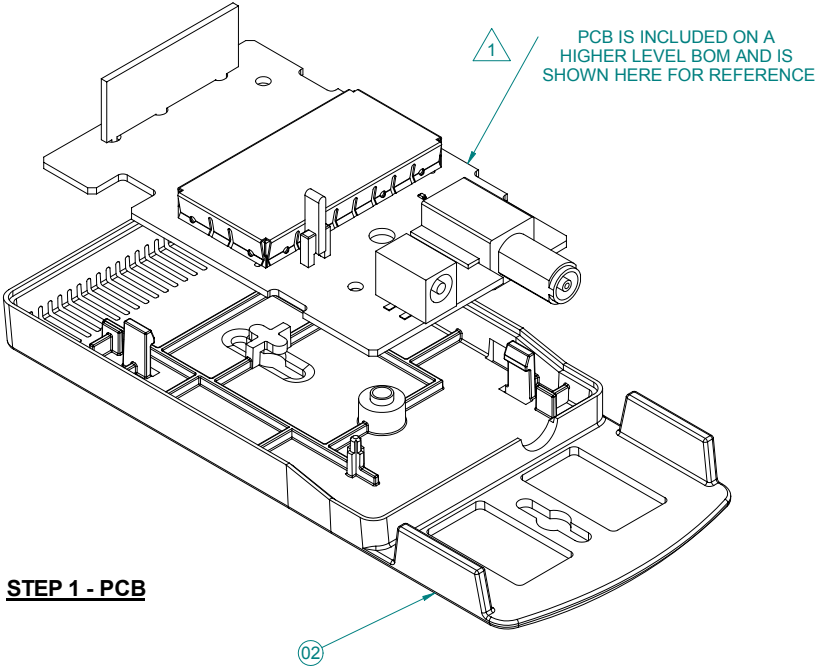


NOTES:

1. PCB IS INCLUDED ON A HIGHER LEVEL BOM AND IS SHOWN HERE FOR REFERENCE
2. ATTACH BAR CODE LABEL ENCODED WITH MANUFACTURER'S SERIAL NUMBER.



TOLERANCES			MATERIAL:
------------	--	--	---

STEP 3 - SCREW

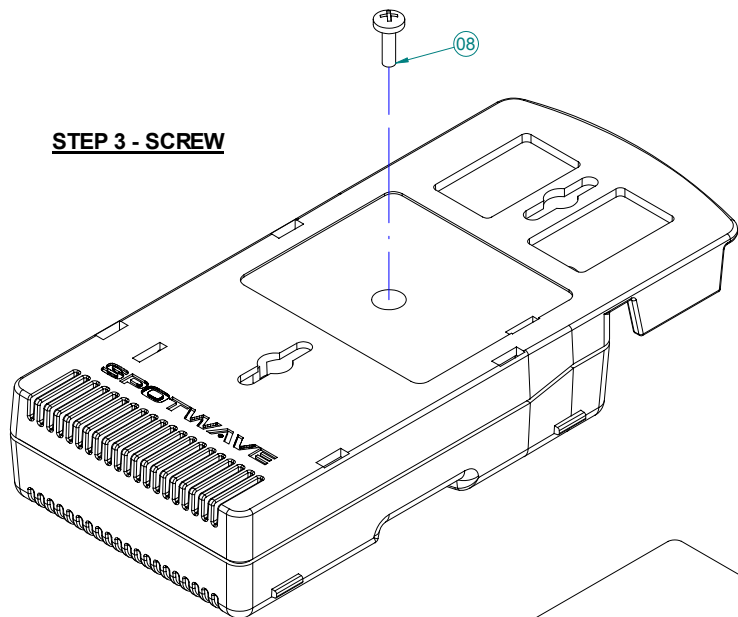

ENSURE SURFACE IS CLEAN AND FREE OF ANY RESIDUE. APPLY FINGER PRESSURE ACROSS LABEL ONCE PLACED AND HOLD PRESSURE FOR A FEW SECONDS.




STEP 4 - LABEL(S)

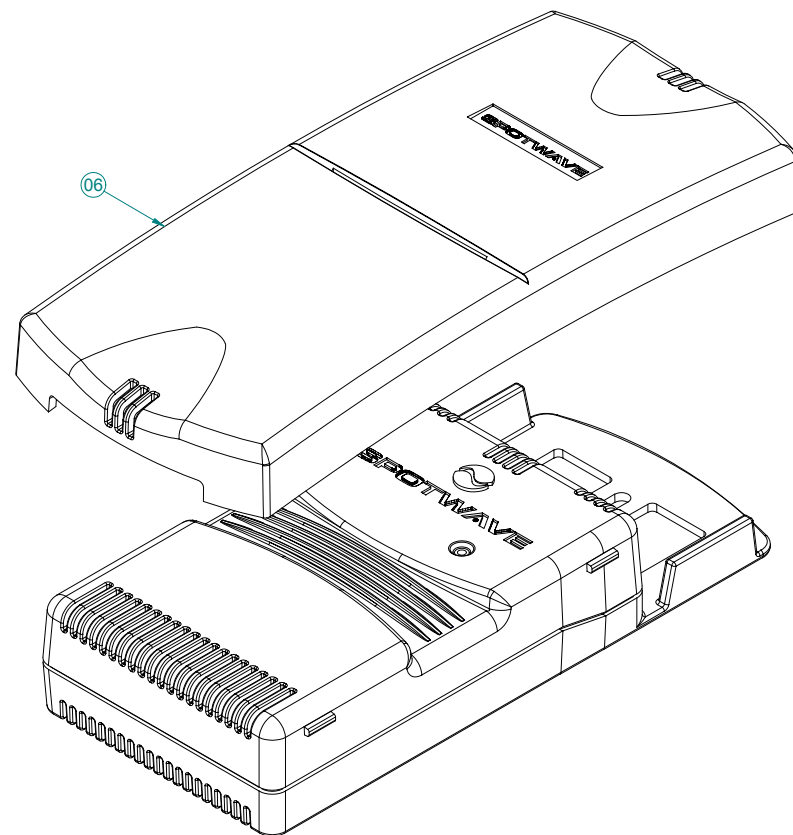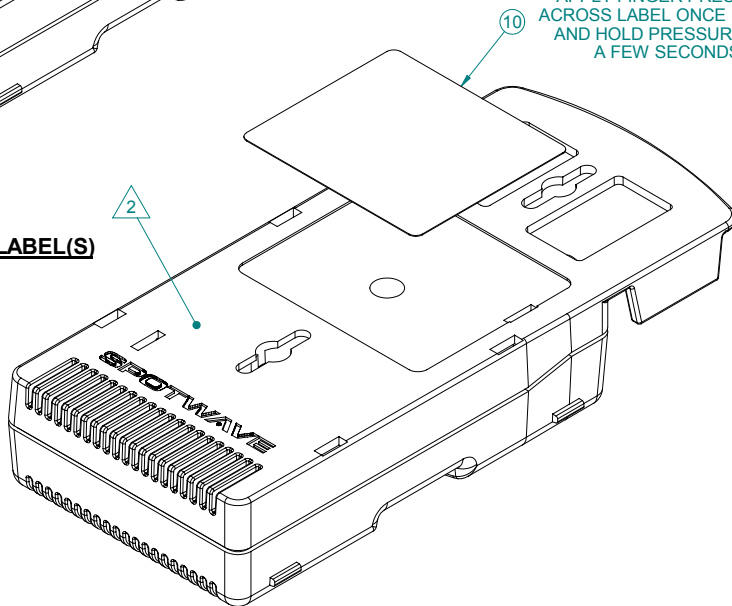

STEP 5 - FASCIA

THIS DOCUMENT IS THE PROPERTY OF "Spotwave Wireless Inc." AND MAY BE NEITHER USED, COPIED, REPRODUCED OR OTHERWISE DEALT WITH NOR ITS CONTENTS COMMUNICATED TO OTHERS EXCEPT IN ACCORDANCE WITH WRITTEN INSTRUCTIONS RECEIVED FROM "Spotwave Wireless Inc."

THESE VIEWS ARE
PROVIDED FOR
REFERENCE ONLY.

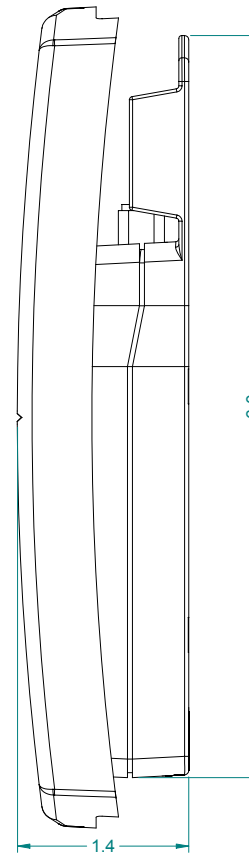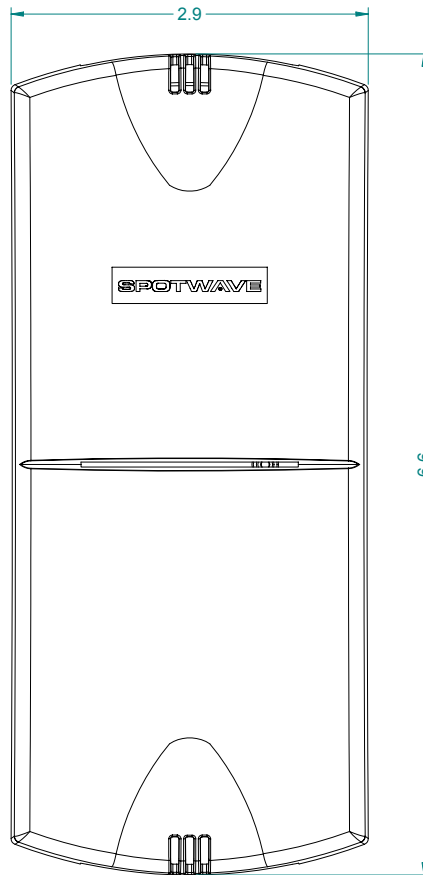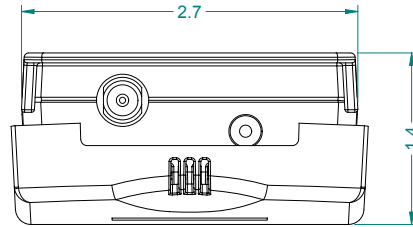

D	DWG NO.	111-00034-01	REV.	01
	SCALE	NCAGE L1156	SHEET 3 OF 3	

FILENAME: 111-00034-01-01 LCM FULL ASSEMBLY.dft