


Notes:

- 1) R1 is 1/4W Fuse Resistor, R3 for Low volume and R4 for High volume adjustment in production.
- 2) Trace VBAT should be 0.5mm clear from GND.
- 3) REF: means the value need adjust to meet EE spec for mass production
- 4) NL: means the component needn't load this moment

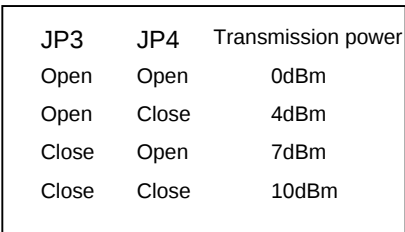

LEAPFROG ENTERPRISES, INC.			
6401 Hollis Street, Suite 150 Emeryville, CA 94608			
Title Shop and Learn Grocer 04/26/2010			
Size A	Document Number 845-30368		Rev 01
Date: Friday, July 09, 2010		Sheet 2 of 4	

