



Photos of Test Setup

For GSM&WCDMA<E

1. Radiated Spurious Emissions




Radiated Spurious Emission (below 3GHz)



Radiated Spurious Emission (3GHz to18GHz)

For Wlan/BT


2. Radiated Spurious Emissions

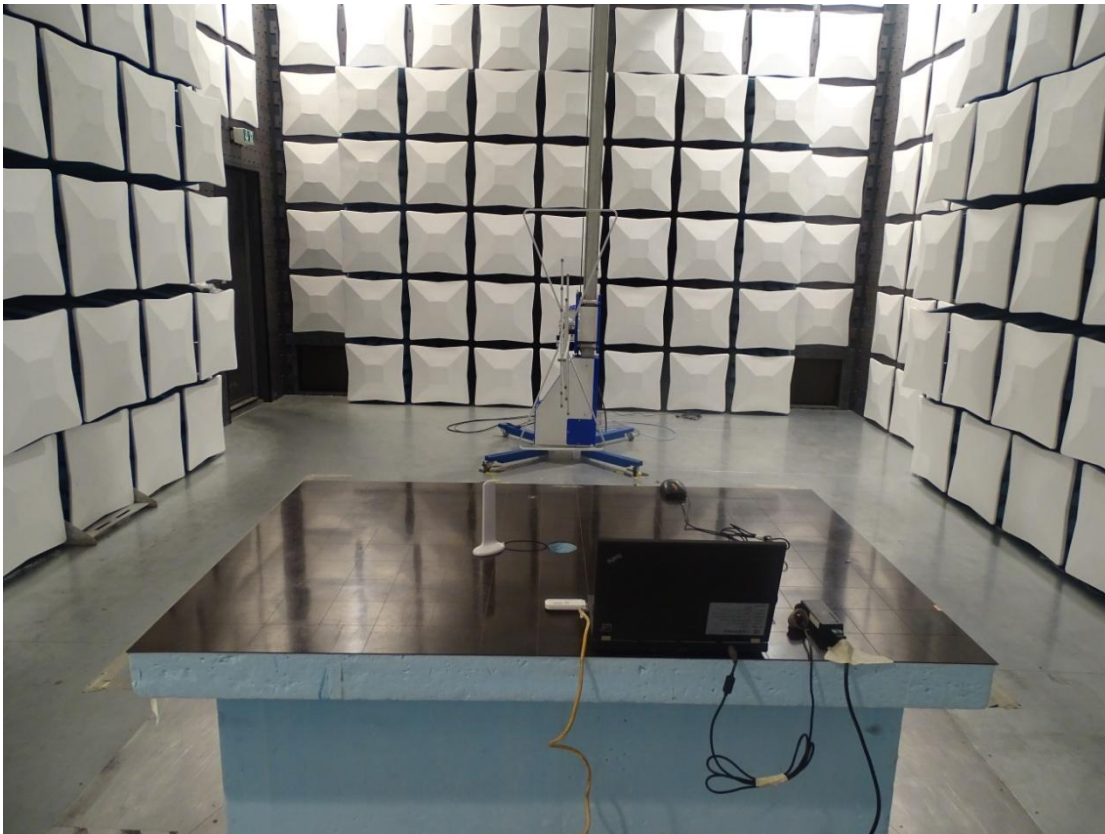

Radiated Spurious Emission (below 1GHz)



Radiated Spurious Emission (1GHz to18GHz)

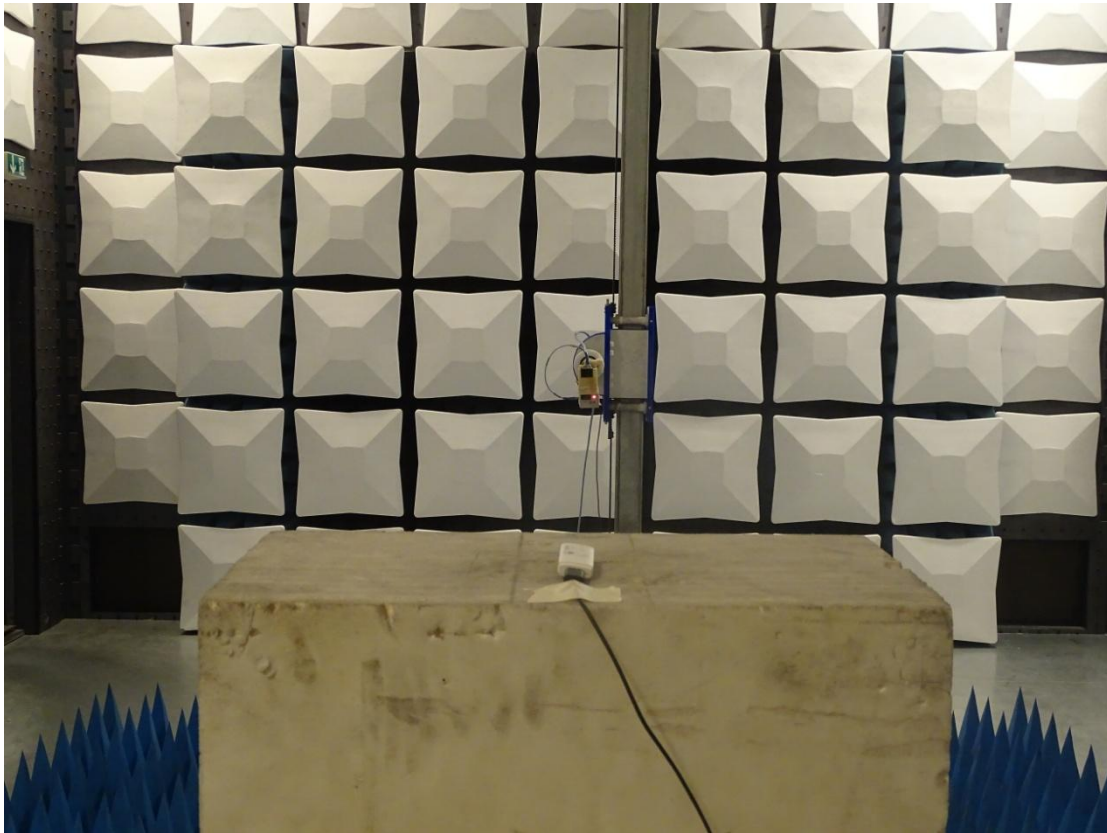

Radiated Spurious Emission (above 18GHz)

Conducted Emissions





-----The END-----