

## **Photos of Test Setup**

## For GSM&WCDMA&LTE

### 1. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)




Radiated Spurious Emission (1GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)

## For Wlan/BT

### 2. Radiated Spurious Emissions

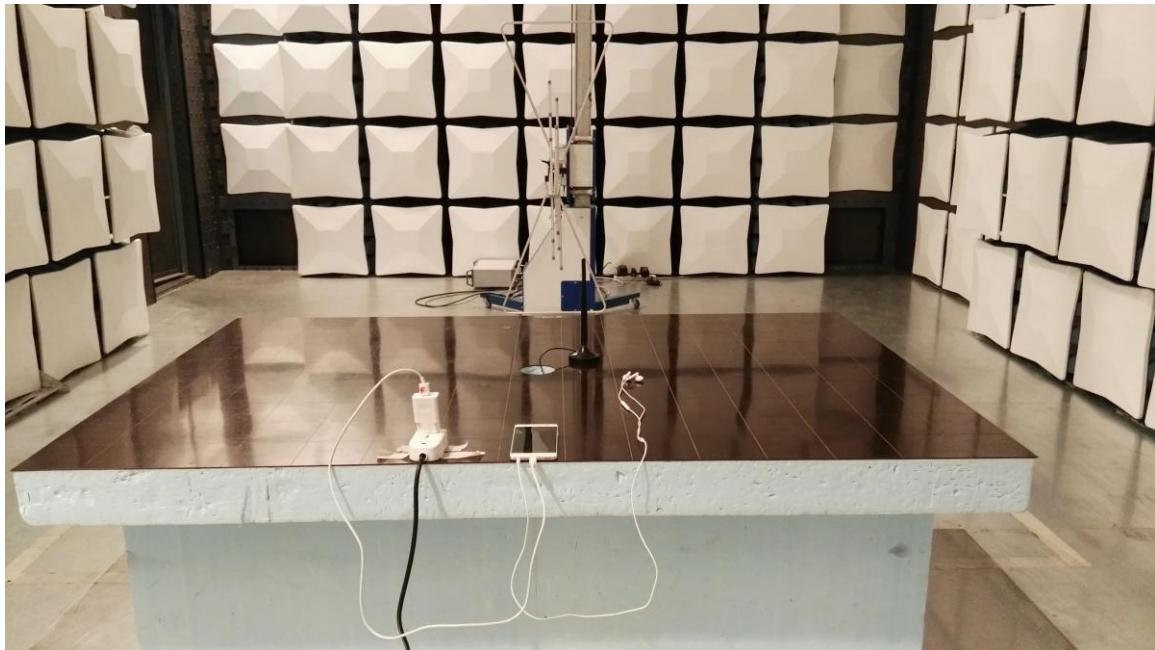

Radiated Spurious Emission (below 1GHz)

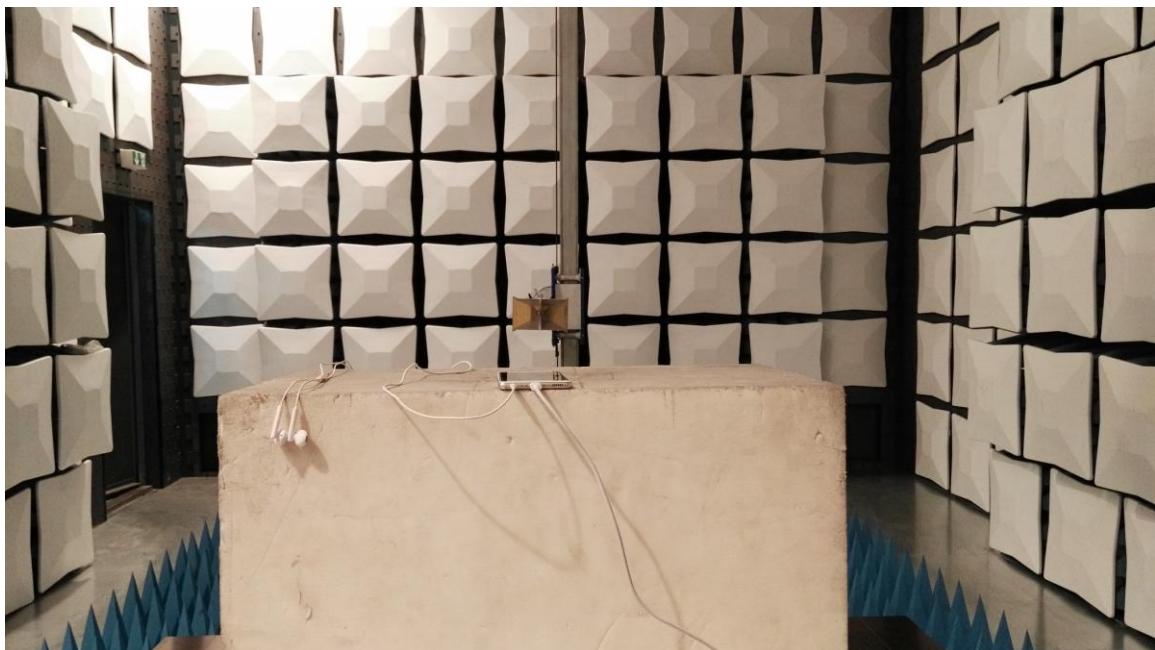

Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (above 18GHz)


# Conducted Emissions




-----The END-----



## For NFC

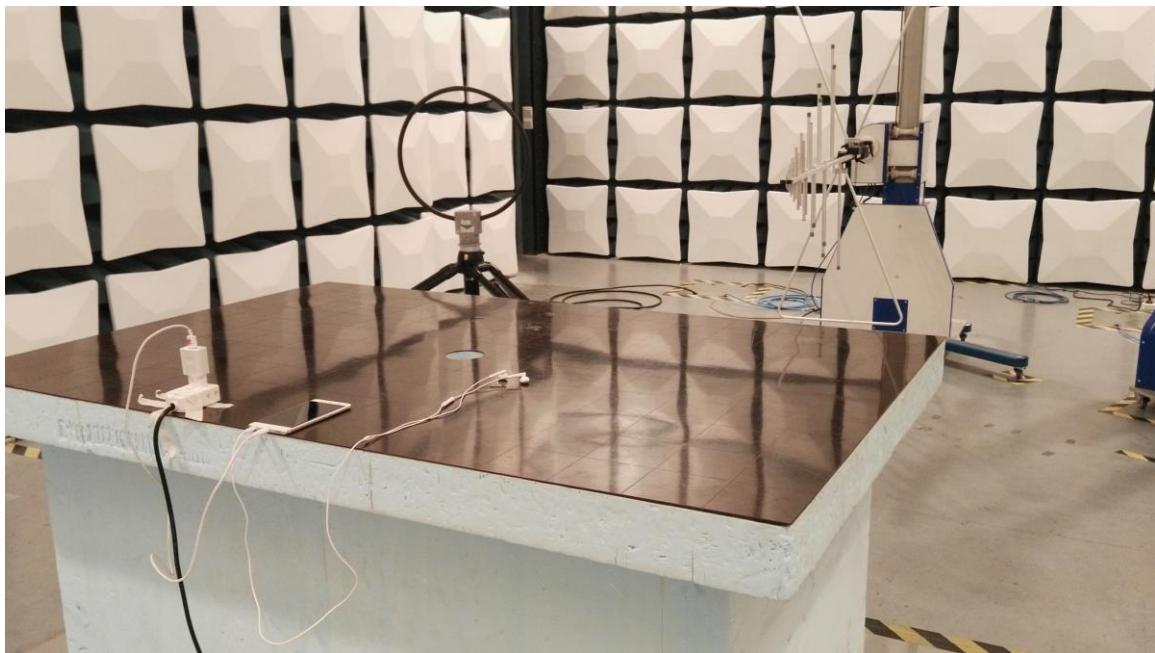

Measurement Setup 9KHz~30MHz

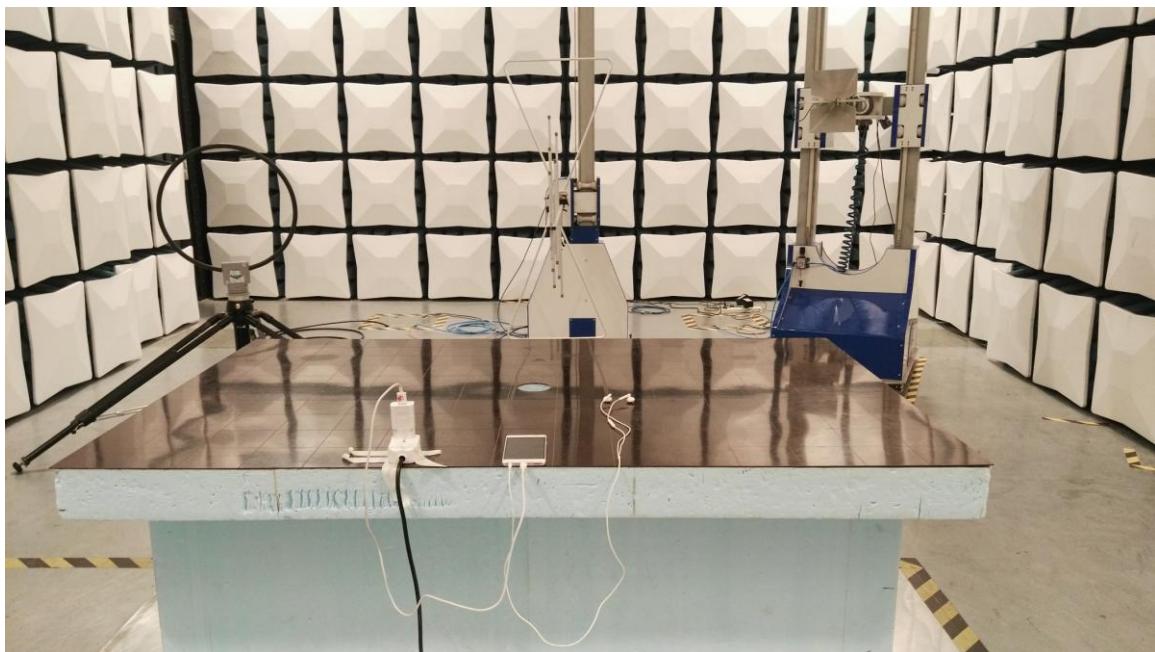

Measurement Setup 30MHz~1GHz

-----The END-----