




# Photos of Test Setup

## For GSM&WCDMA&LTE

### 1. Radiated Spurious Emissions

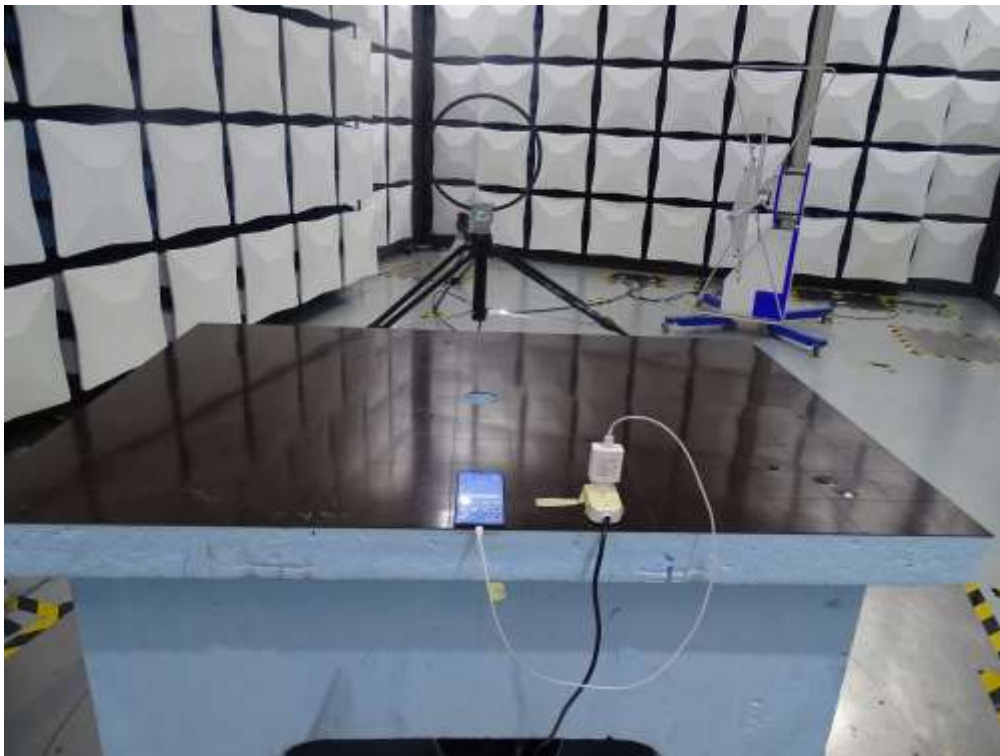

Radiated Spurious Emission (9K-30MHz)



Radiated Spurious Emission (30MHz to 3GHz)




Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)

## For Wlan/BT


### 2. Radiated Spurious Emissions

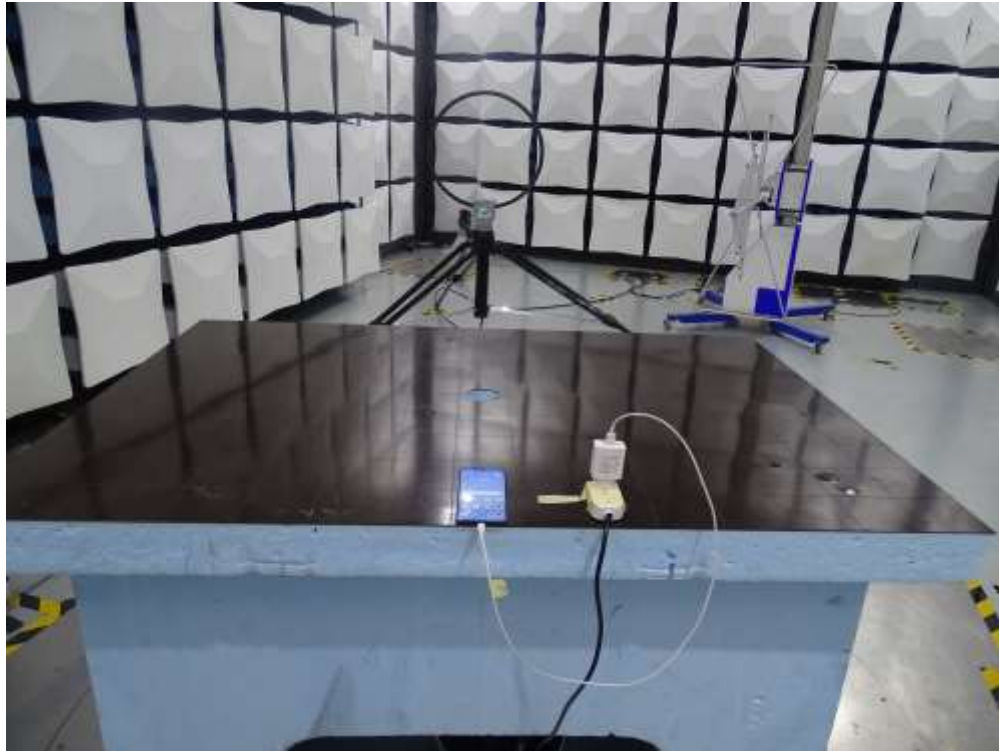

Radiated Spurious Emission (9K-30MHz)

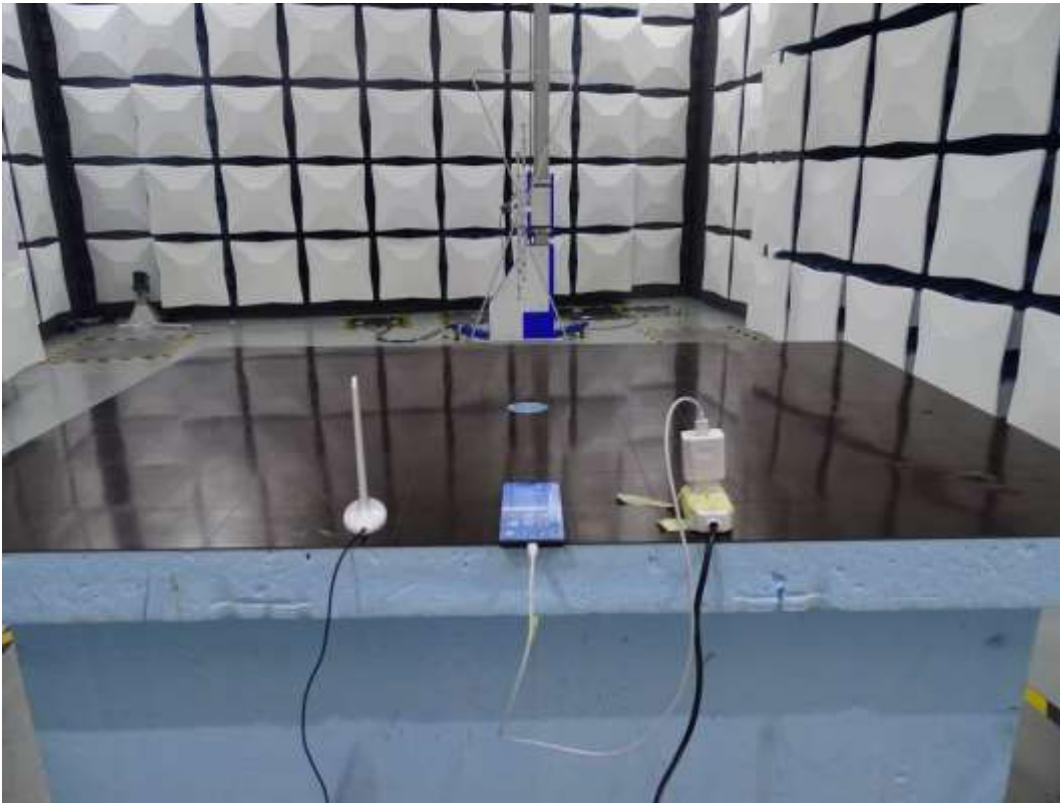


Radiated Spurious Emission (30MHz to 1GHz)

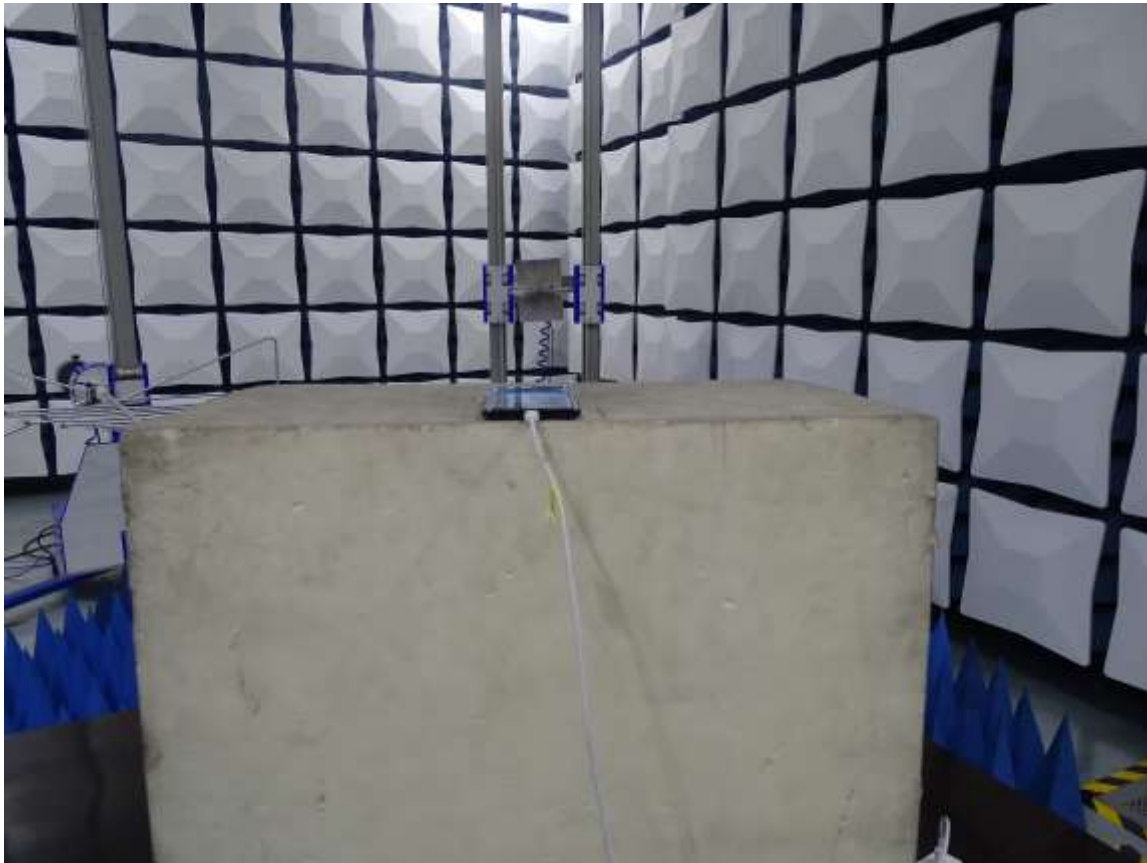

Radiated Spurious Emission (1GHz to18GHz)




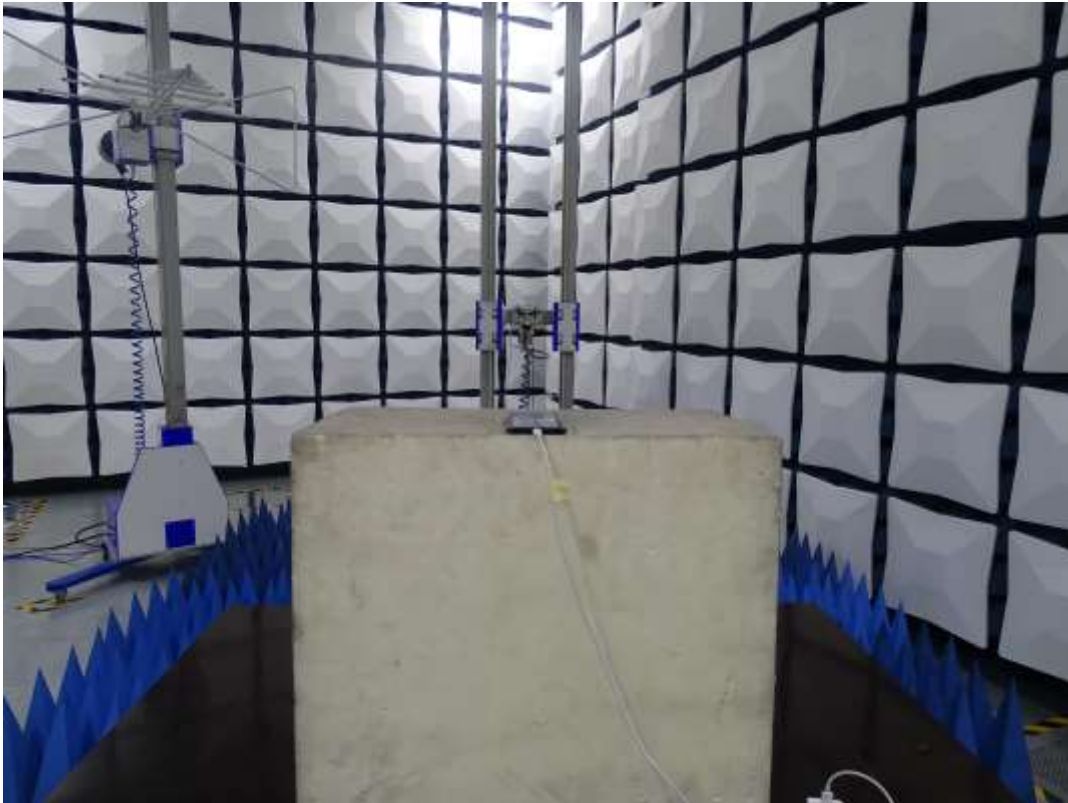


Radiated Spurious Emission (above 18GHz)

## For NFC

### 3. Radiated Spurious Emissions

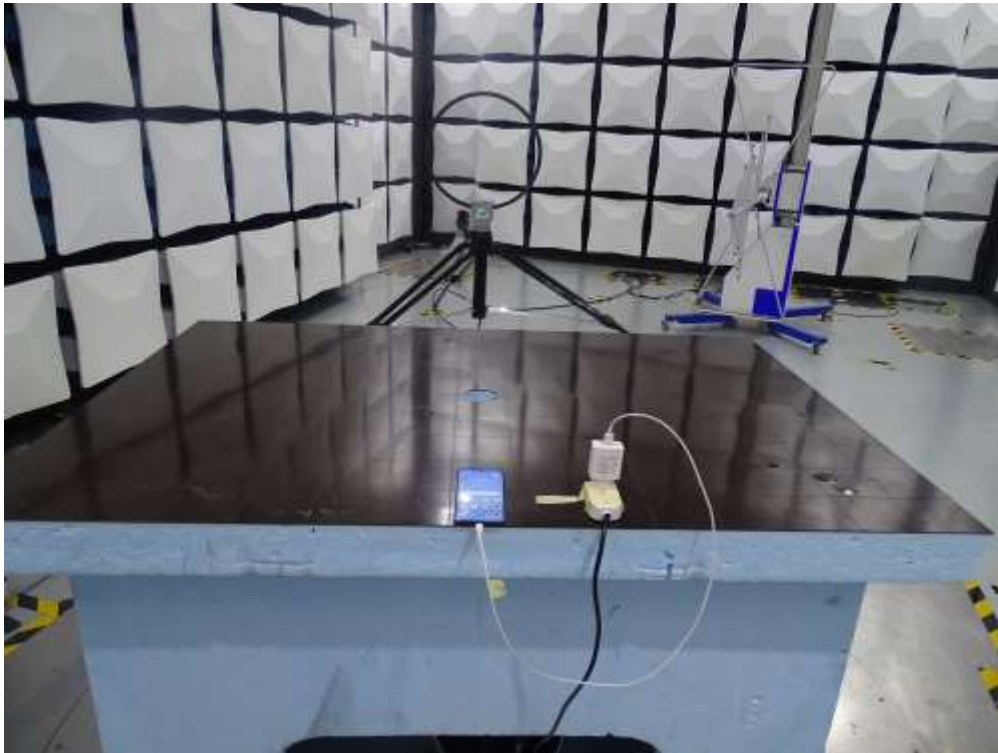


Radiated Spurious Emission (9K-30MHz)

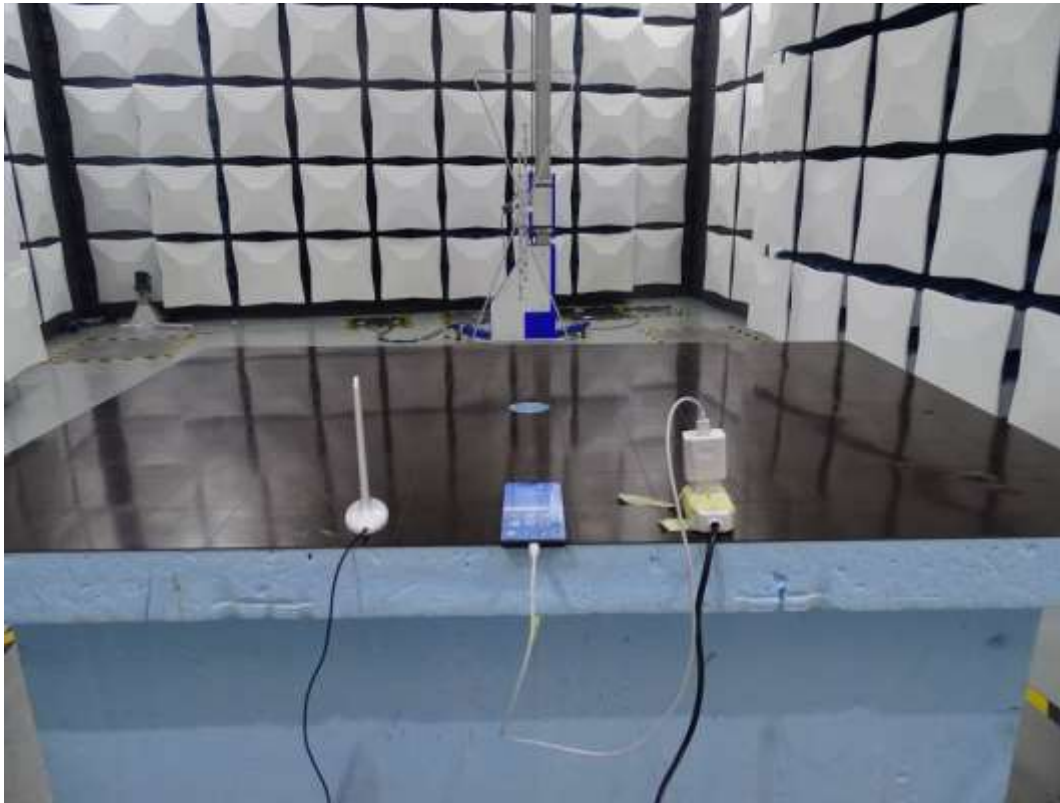

Radiated Spurious Emission (30MHz to 1GHz)

## Conducted Emissions



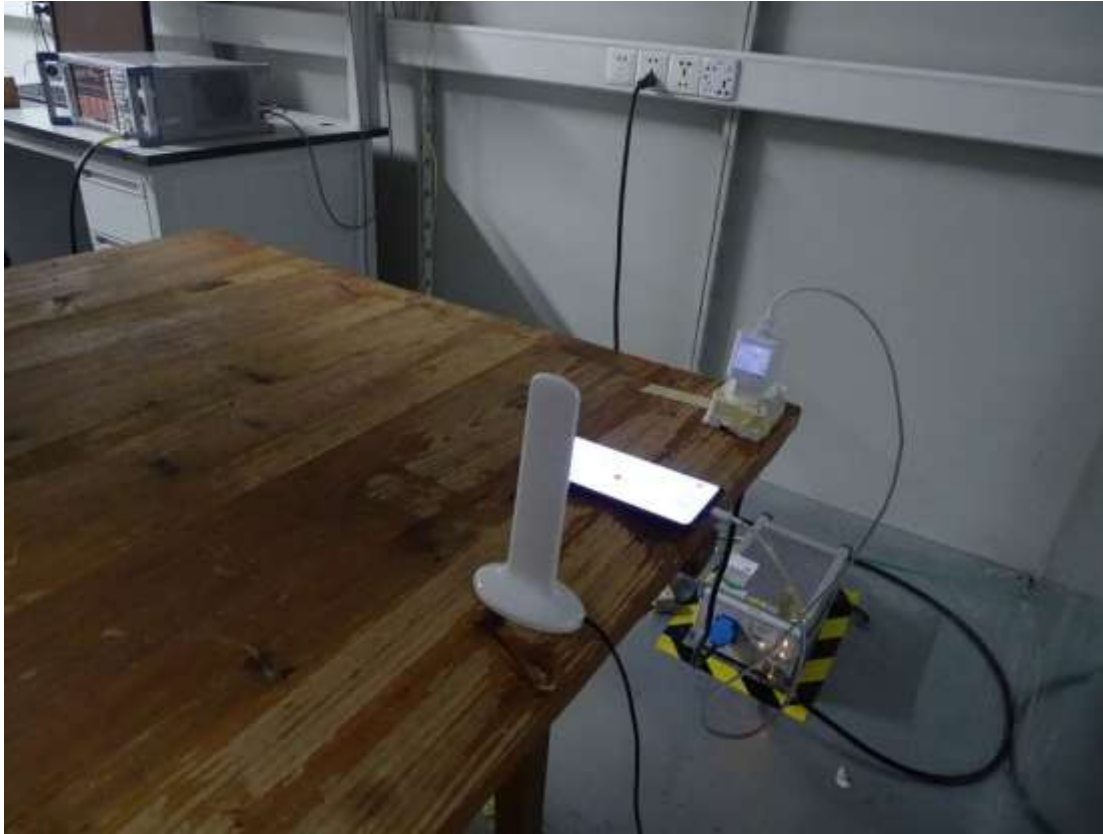

-----The END-----