

0700183




RBW 3 MHz
 *VBW 3 MHz
 SWT 100 ms

Ref -20 dBm

Att 10 dB

1 PK *
 CLRWR

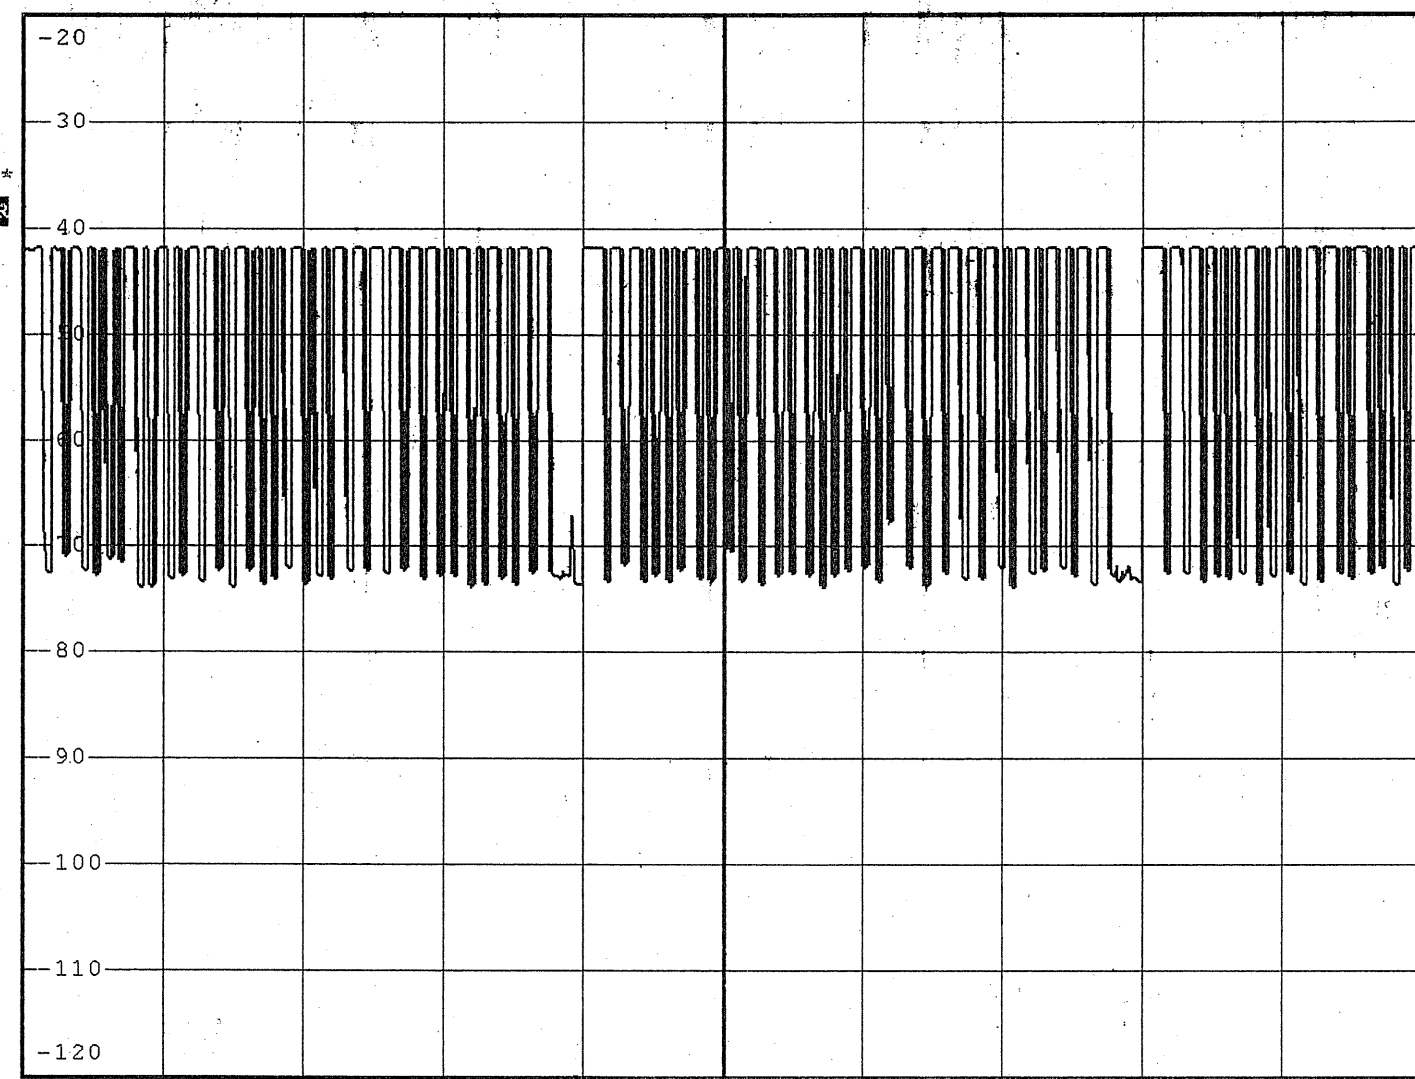

Center 314.986 MHz

10 ms/

SGL

Duty Cycle:

$$= \frac{3(1.7) + 44(1) + 37(0.5)}{100}$$

$$= \frac{5.1 + 44 + 18.5}{100}$$

$$= 0.674$$

Average Factor

$$= 20 \log 0.67$$

$$= -3.4 \text{ dB}$$

0700183



RBW 3 MHz

*VBW 3 MHz

SWT 15 ms


Ref -20 dBm

Att 10 dB

1 PK *
CLRWR



SEL

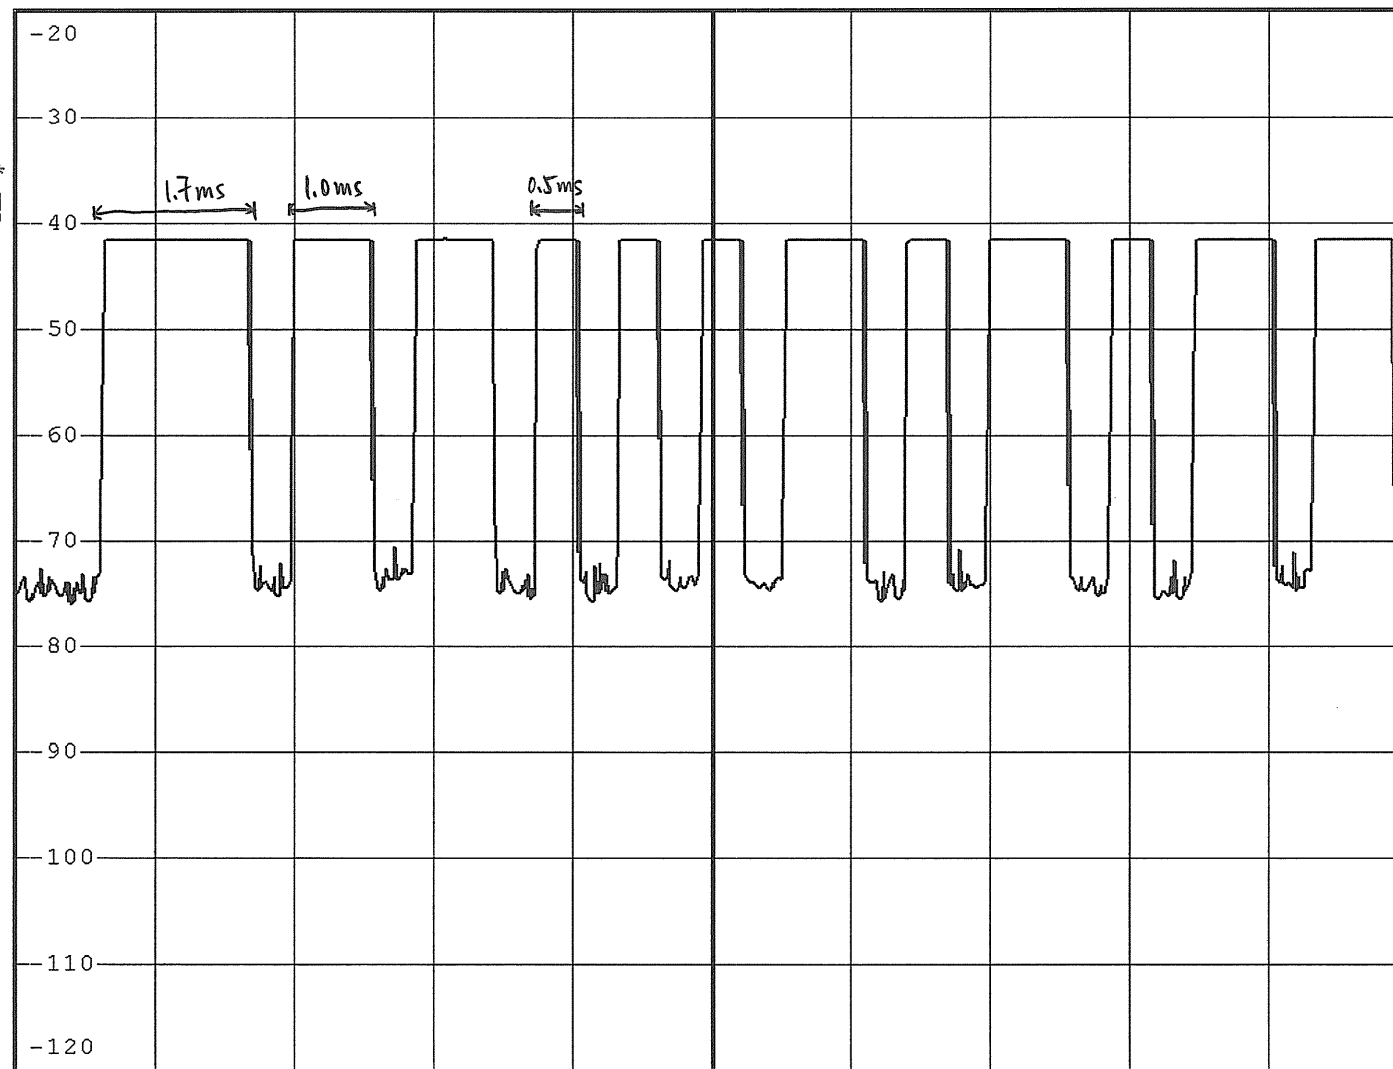

Center 314.986 MHz

1.5 ms/

0700183




RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -41.72 dBm
SWT 500 ms 172.000000 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW

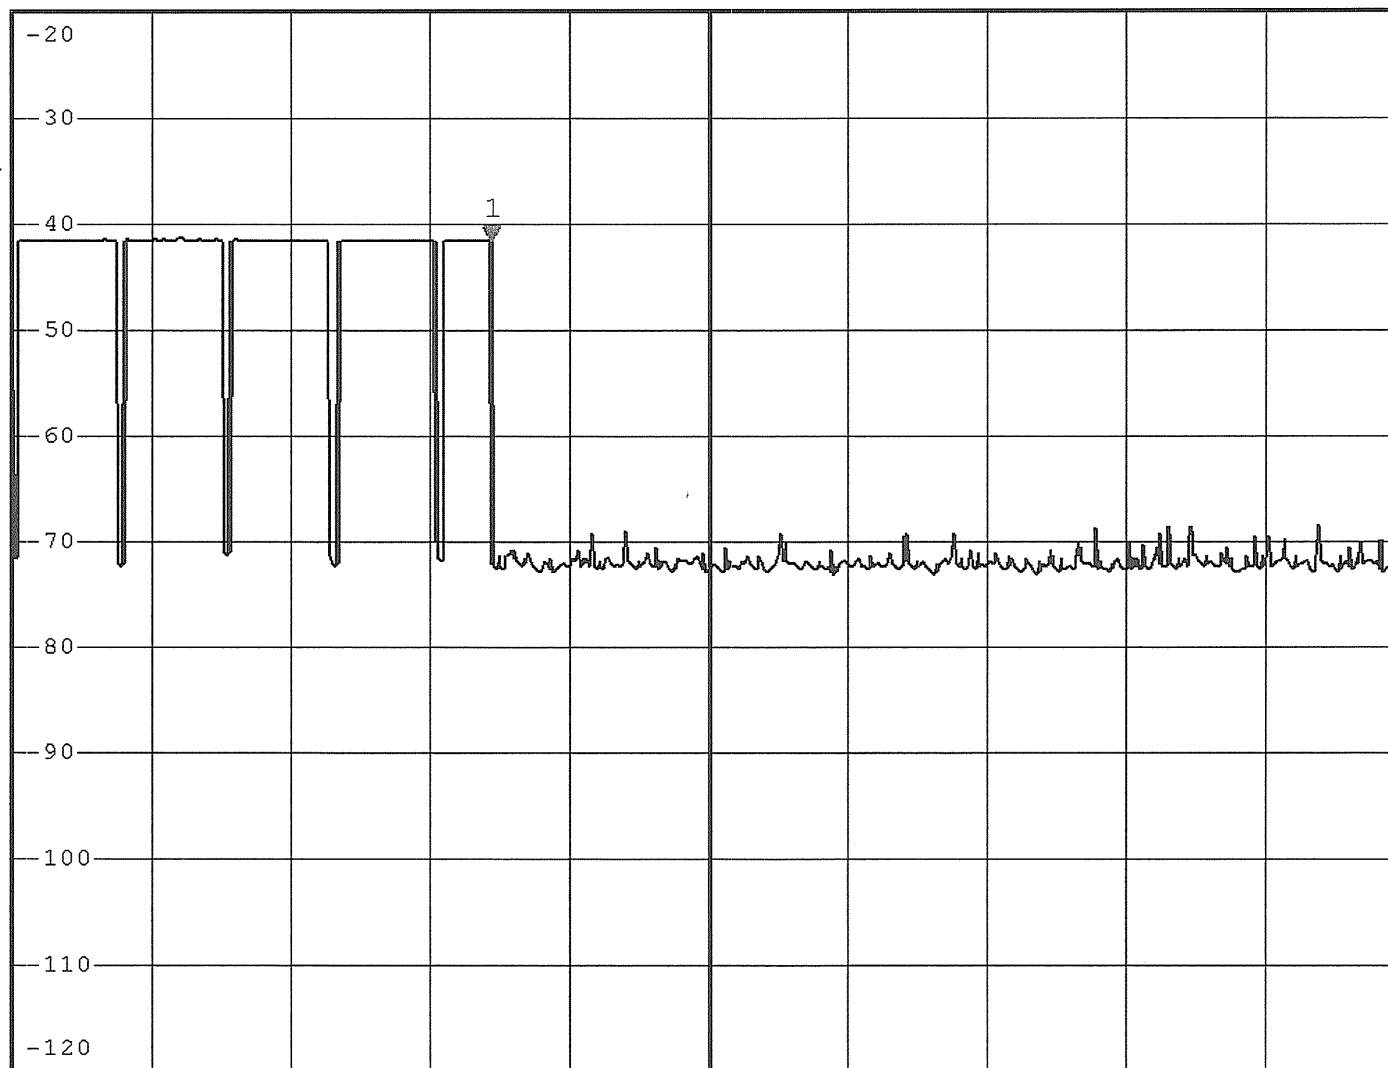

Center 314.986 MHz

50 ms/