




Ref -20 dBm Att 10 dB RBW 3 MHz Delta 1 [T1]
*VBW 3 MHz 0.05 dB
SWT 100 ms 78.000000 ms

1 PK *
CLRWR

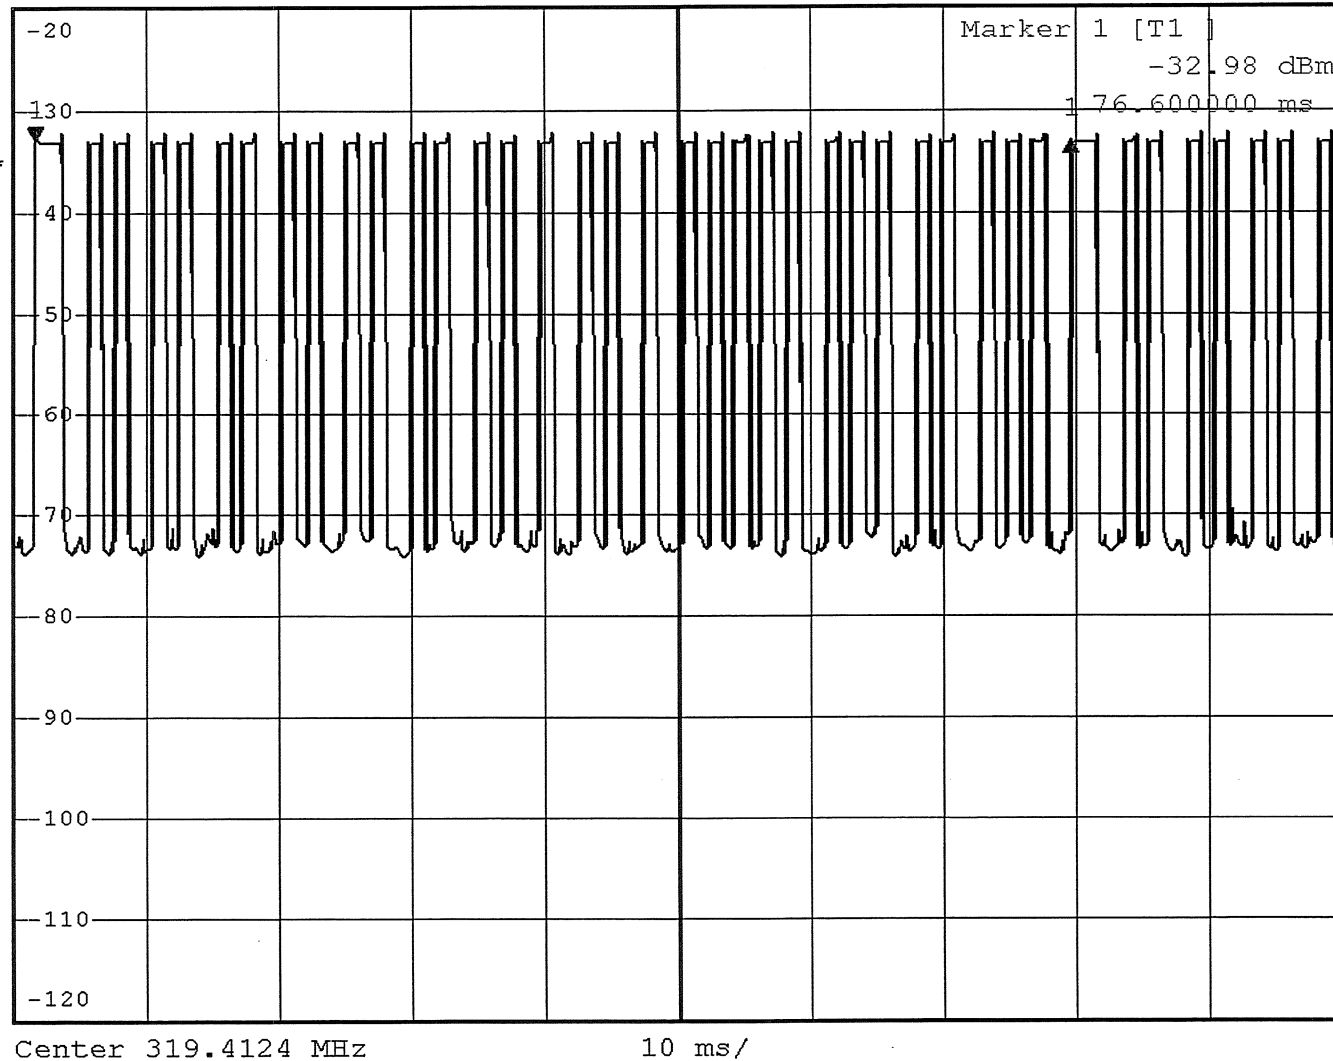

SGL

Duty Cycle

$$= \frac{1(2.16) + 31(1.16)}{78}$$
$$= \frac{38.12}{78}$$
$$= 0.49 //$$

Average Factor

$$= 20 \log 0.49$$
$$= -6.2 \text{ dB}$$




RBW 3 MHz
*VBW 3 MHz
SWT 20 ms

Ref -20 dBm

Att 10 dB

1 PK *
CLRWR

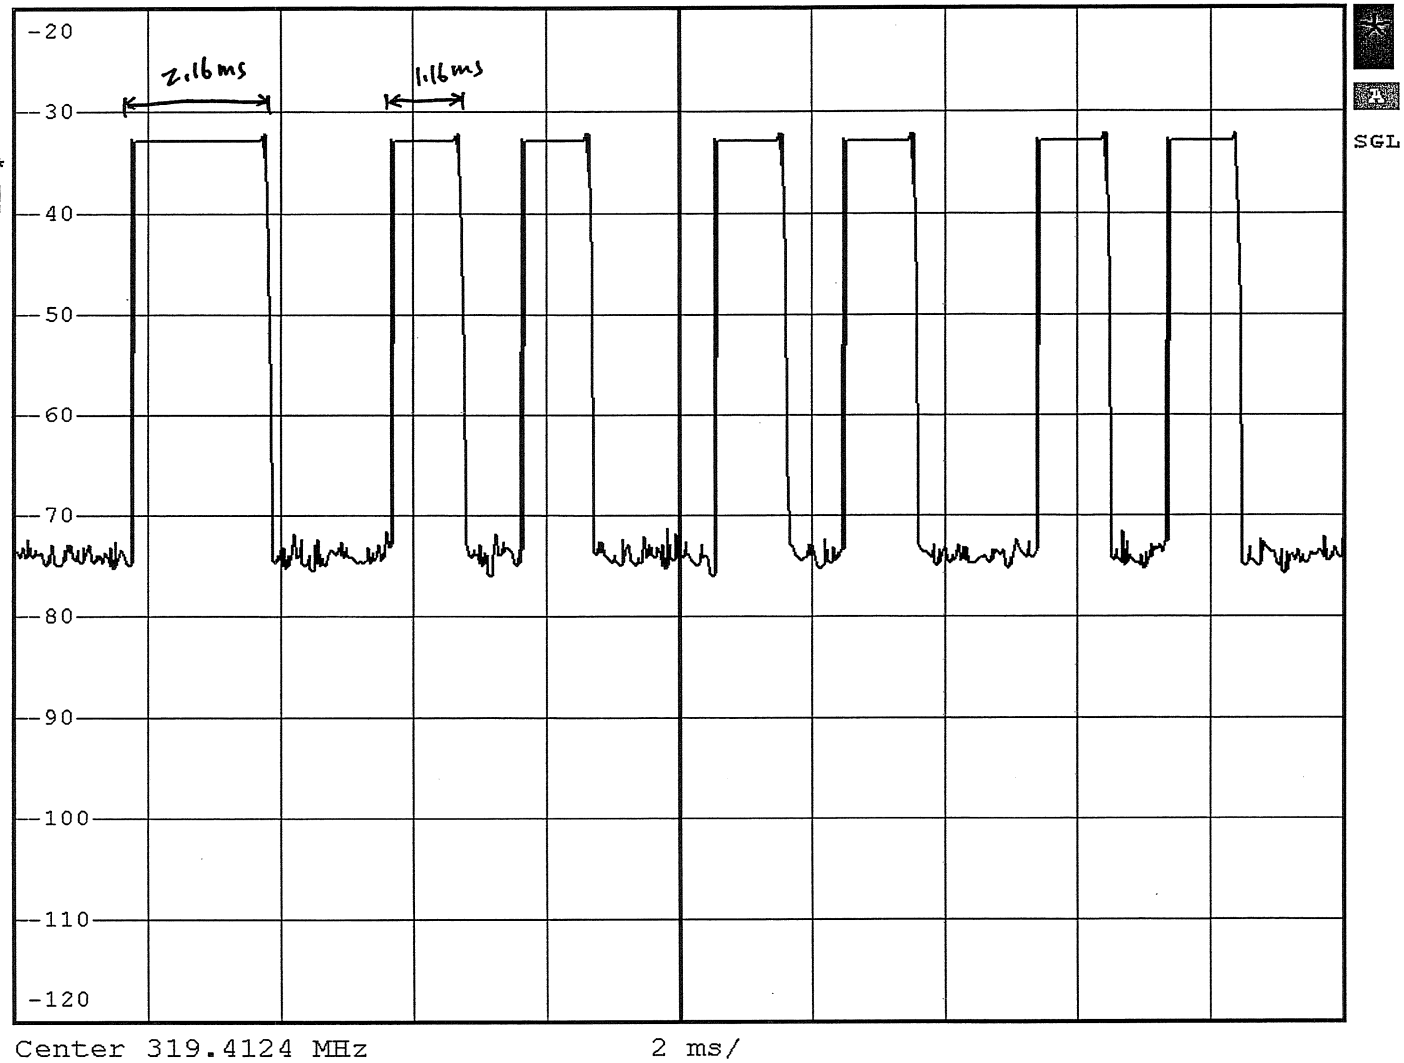




RBW 3 MHz Delta 1 [T1]
*VBW 3 MHz 0.00 dB
SWT 200 ms 78.200000 ms

Ref -20 dBm

Att 10 dB

1 PK *
CLRWR

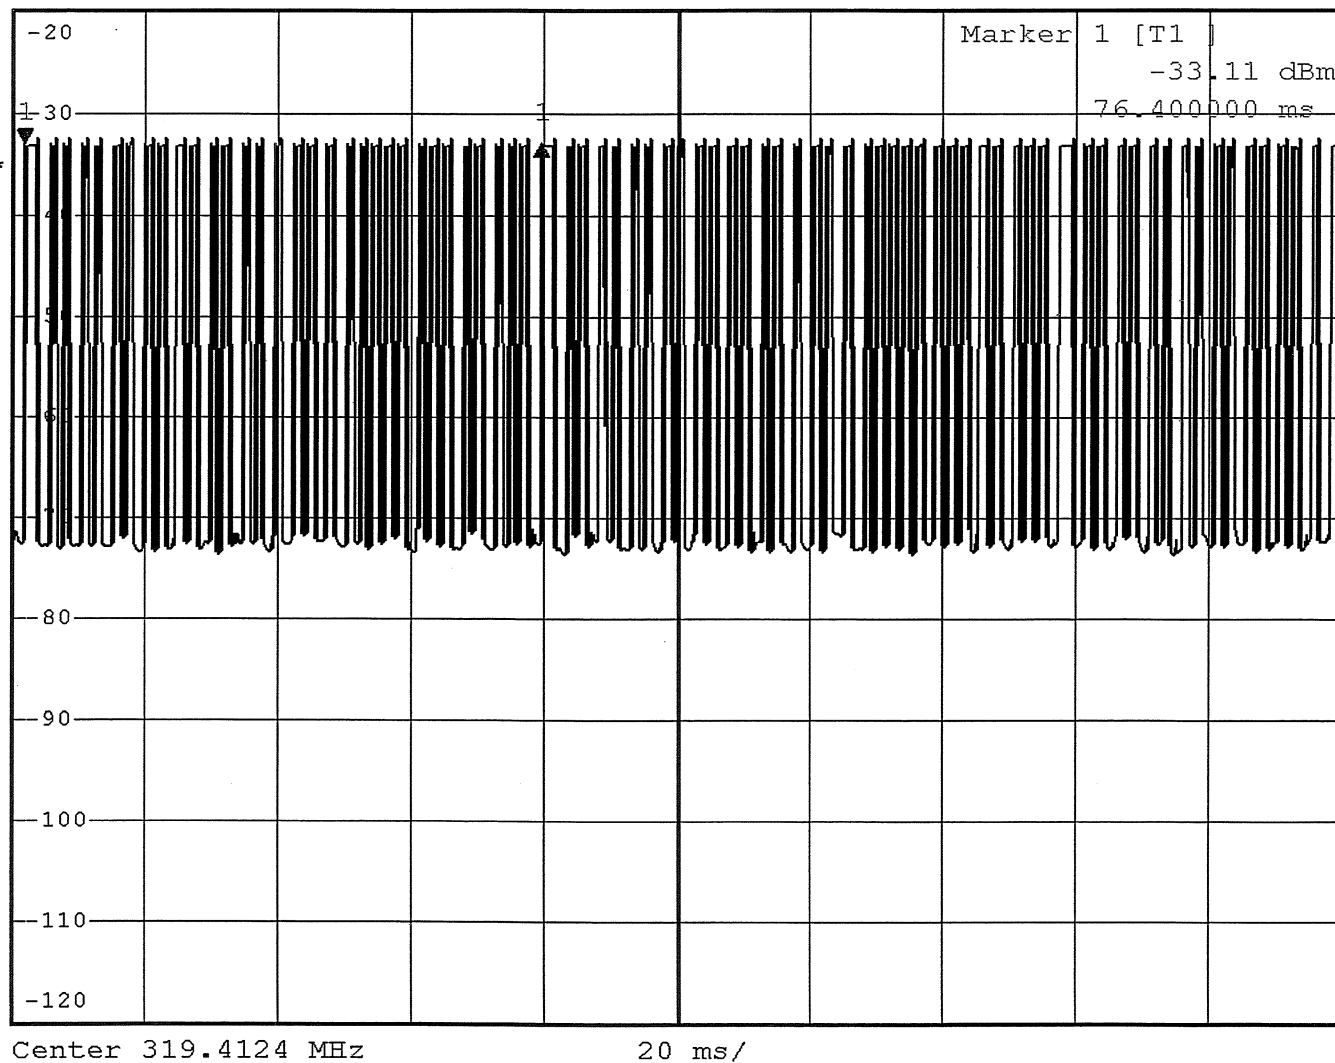

SGL




RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -28.75 dBm
SWT 1 s 388.000000 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW

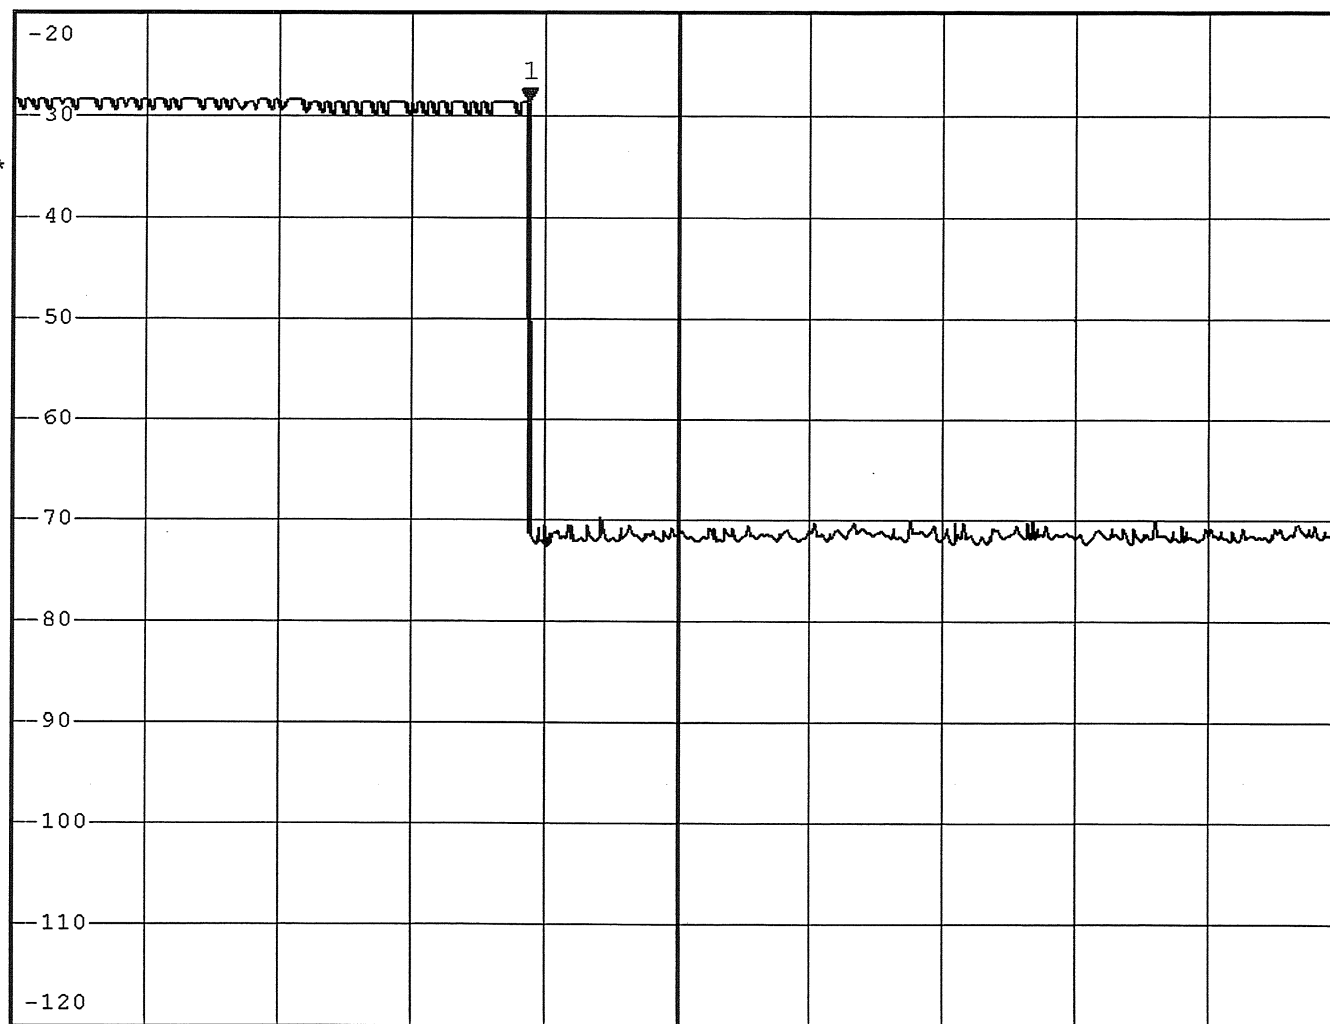

Center 319.4124 MHz

100 ms/