


Test Setup Photo	
Company:	Mobiwire SAS
Model:	VFD321

## A.2 Test Setup



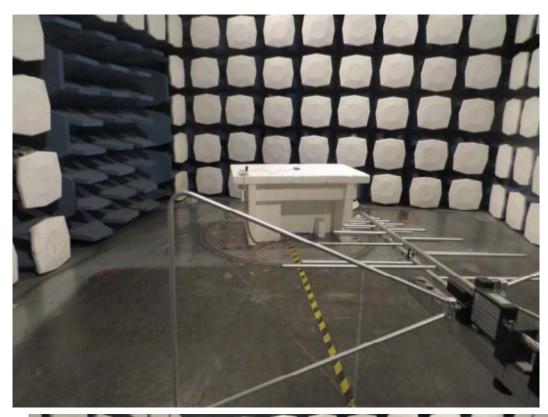

Picture 2 Radiated Spurious Emission Test Setup