



GENUINE PARTS



INSTALLATION INSTRUCTIONS

- | | |
|------------------------|---|
| 1. DESCRIPTION: | Keyless Entry Pad |
| 2. APPLICATION: | All Nissan and Infiniti vehicles with key fob.
Not applicable to vehicles with I-Key vehicles or 1999 – 2006 Sentra. |
| 3. PART NUMBER: | 999KE AR000 |

4. CAUTIONS AND NOTES

CAUTION


- Nissan and Infiniti vehicles support a maximum of 5 keyless entry products (key fobs and keypad.) When a sixth unit is programmed the first will become inactive. Refer to your owner's manual for more information.
- For proper adhesion, mounting surface should be at least 60°F (15°C.)

This device complies with part 15 of the FCC rules and with RS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. **CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.**

NOTE



- Do not attach the keypad to the vehicle until after it has been programmed.
- When pressing the controls on the keypad, press the middle of the controls to ensure a good activation.
- After five seconds of idle time, the keypad will reset itself. When programming or using the keypad, avoid delays between button presses. It may be helpful to read each section of these instructions before proceeding.
- To preserve battery life, the backlight will only turn on during low light conditions.
- Do not set a code that uses five of the same number.
- Do not use five numbers in sequential order.
- The factory set code will work even if you have set your own personal code.
- If you set a second personal code it will erase your first personal code.
- Place this sheet with the vehicle owner's manual when complete.

5. PROGRAMMING THE VEHICLE TO RECOGNIZE THE KEYPAD



1. Close all doors.
2. Insert key into and remove it from ignition key cylinder quickly and repeatedly until hazard warning lamps flash twice. Each vehicle is different, so it may take between 6 and 12 times before this will happen.
3. Insert ignition key into cylinder and turn to ACC position within five seconds of step 2.
4. Push the 7/8 and 9/0 buttons on the keypad simultaneously.  hazard warning lamps will then flash twice.
5. Open driver side door to end programming functions. Check operation of keyless entry system by pressing the 7/8 and 9/0 buttons simultaneously. If the doors do not lock, repeat section 5 starting at step 1. Remember that each programming step must be completed within five seconds of the previous step. If the problem persists, check the vehicle owner's manual for programming key fobs, and check with a Nissan dealership to confirm that the keypad is compatible with your vehicle.

INSTALLATION INSTRUCTIONS – Keyless Entry Pad

6. PROGRAMMING A PERSONAL ENTRY CODE

1. Enter the unique factory set code, as indicated to the right.
2. Within five seconds, press and hold 1/2 button.  After pressing the 1/2 button, press and hold the 5/6 button for at least 2 seconds until the 9/0 key flashes twice or the door unlocks. Release .
3. Within five seconds, enter your desired personal 5-digit code. Each number must be entered within five seconds of each other.
4. The doors will again lock then unlock to confirm that your personal code has been programmed to the module.

To remove your personal code:

1. Enter the unique factory code, then within five seconds press and hold the 1/2 button, s and hold the 7/8 button for  seconds until the 9/0 key flashes twice or the door will again lock then unlock to confirm that your personal code has been removed. Release both buttons.

7. ADHERING KEYPAD TO THE VEHICLE

CAUTION

- Do not adhere to moveable glass or windshield.
- The tape is very sticky and will stick fast once contact is made. Use care when positioning keypad. Use masking tape to mark keypad position and alignment before positioning keypad.

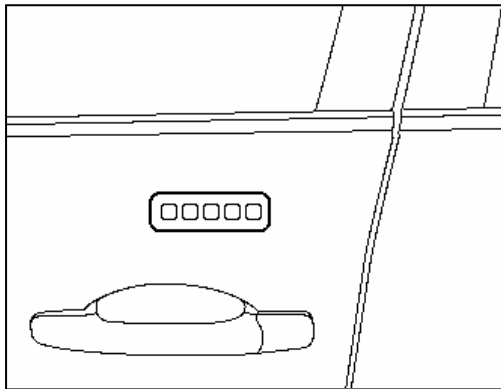




Figure 1

1. This product is designed to attach to your car door, centered between the door handle and the window sill. See **Figure 1**. Mounting surface must be relatively flat. Hold keypad up to desired mounting surface to confirm that all tape will contact mounting surface.
2. Clean the vehicle surface where the keypad is to be adhered with a 50-50 solution of alcohol and water and let dry.
3. Pull the tape tabs off the keypad, center the keypad and press onto door surface. Be sure to press firmly on all edges to ensure proper adhesion of the tape.

8. USING THE KEYPAD

1. To unlock the driver's door, enter your personal 5-digit code or the factory set code. Each number must be pressed within five seconds of each other.
2. To unlock all doors, press the 3/4 control within three seconds of entering a valid keypad code. Hold down 3/4 control to lower windows, if equipped. 
3. To unlock the trunk, press and hold the 5/6 control within three seconds of entering a valid keypad code. Use the 5/6 to open or close power lift gate if equipped. 
4. To unlock and slide the power sliding doors, press and hold the 7/8 button to open or close the passenger side door within three seconds of entering a valid keypad code. Press and hold the 9/0 button for the driver side door.
5. To lock all doors, press the 7/8 and the 9/0 keys simultaneously. If all doors are closed, the horn will chirp once; if any door is ajar, the horn will not chirp. NOTE: Horn may not chirp – see Owner's Manual. 