



INTERNAL PHOTOS

INSIDE I

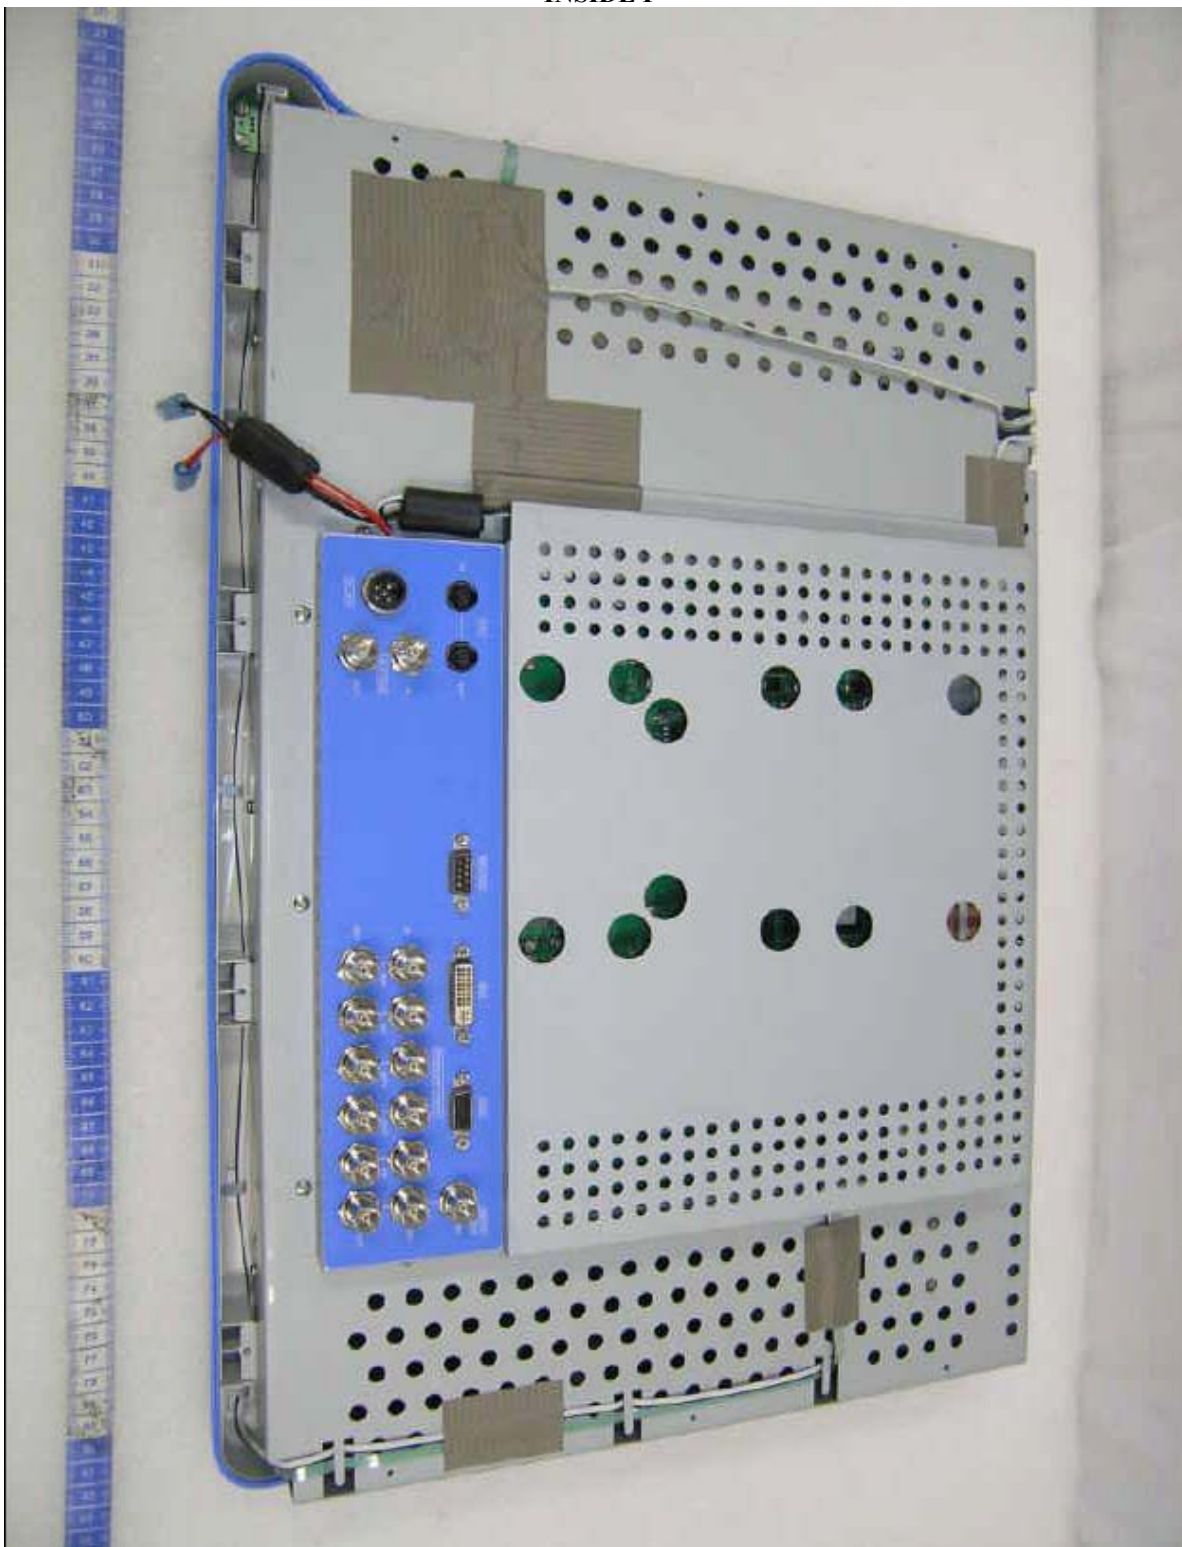

INSIDE II

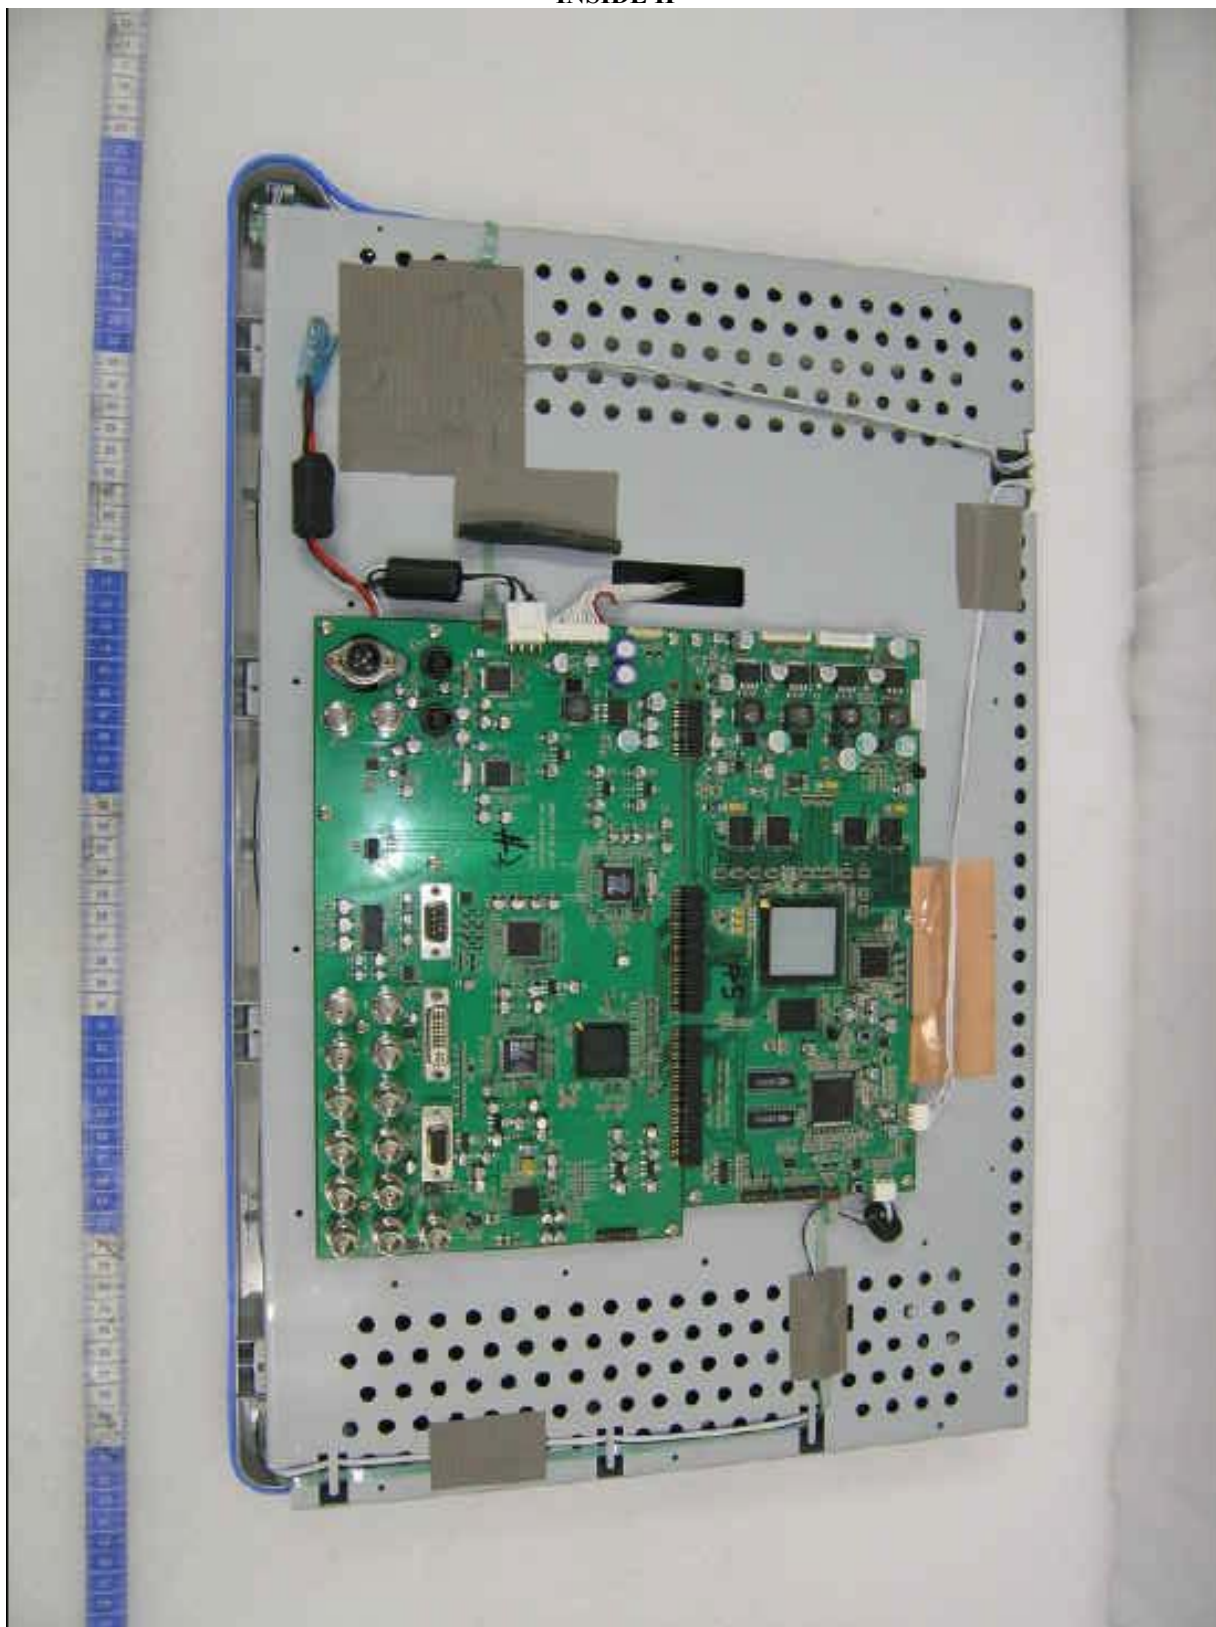

INSIDE III



MAINBOARD -FRONT



MAINBOARD - REAR



Project Number:
Model Number:

07CA44566
AMM240WTD


File Number

MC15562

Test Report No: 07CA445660-FCC

Date of Issue: November 26, 2007

I/O BOARD- FRONT

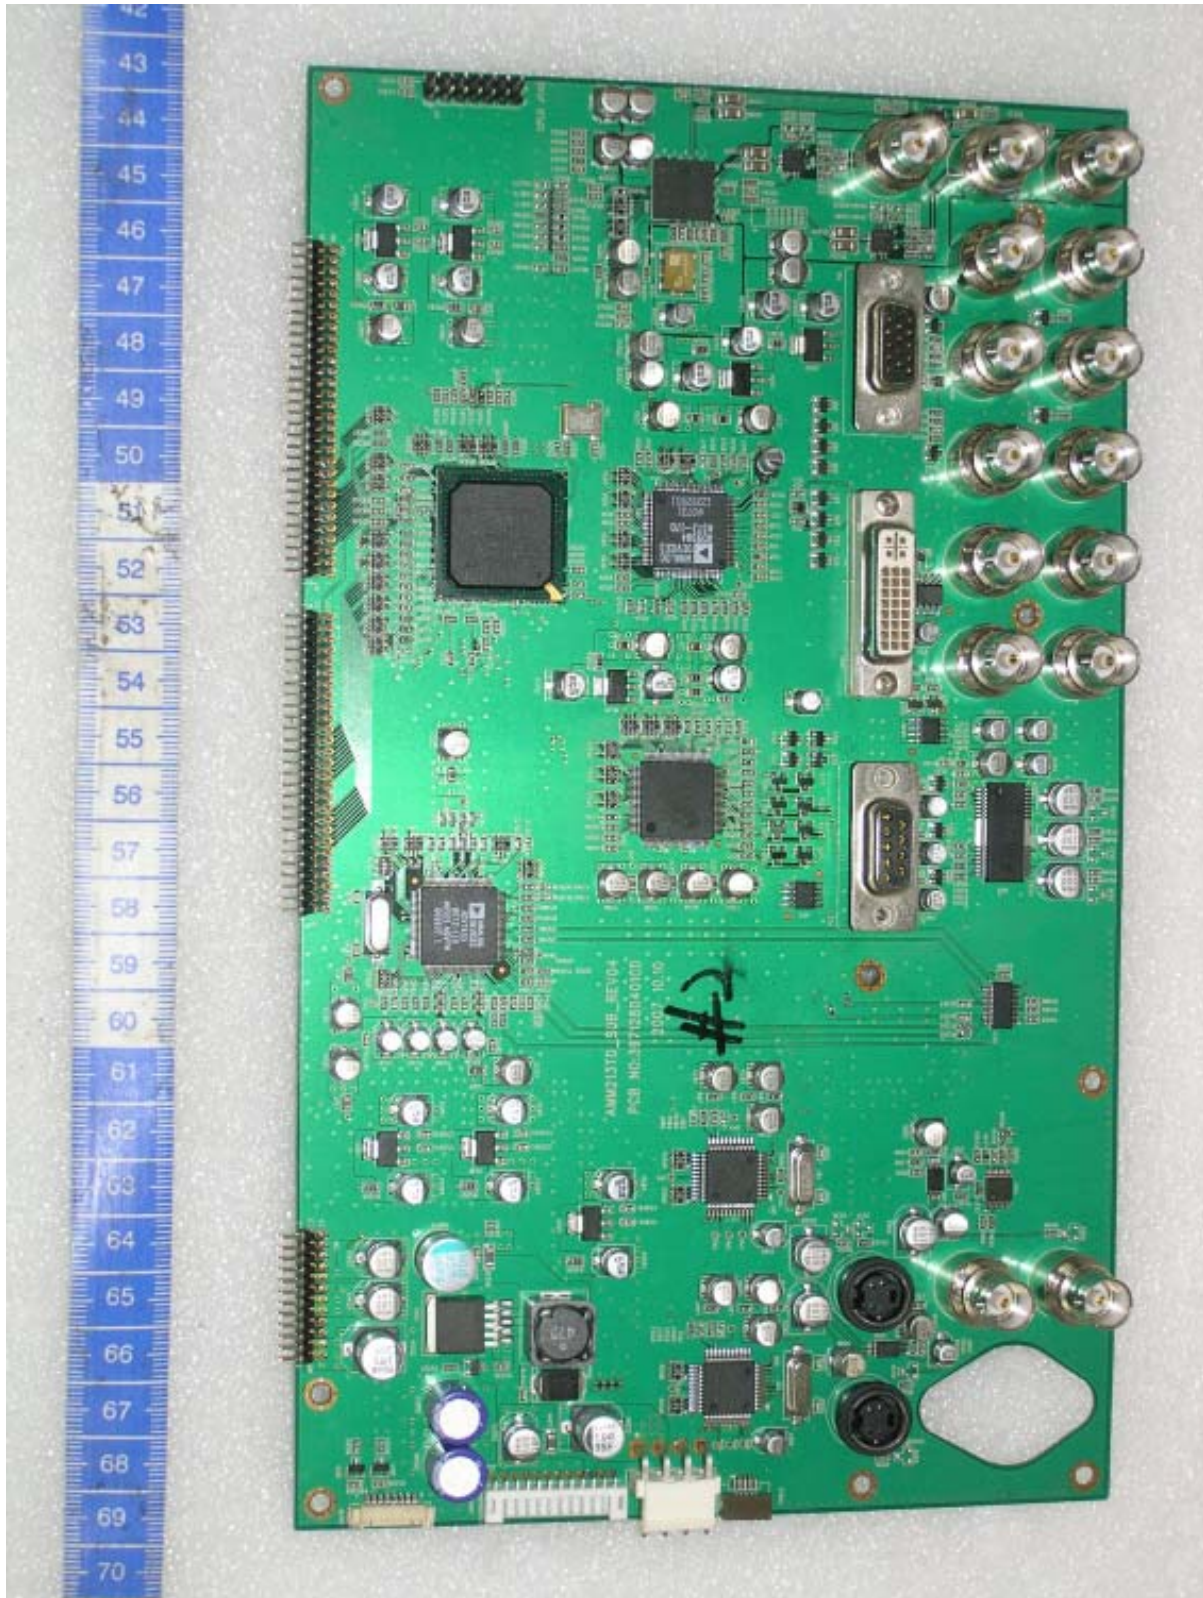

Project Number:
Model Number:


07CA44566
AMM240WTD

File Number

MC15562

Test Report No: 07CA445660-FCC
Date of Issue: November 26, 2007

I/O BOARD- REAR

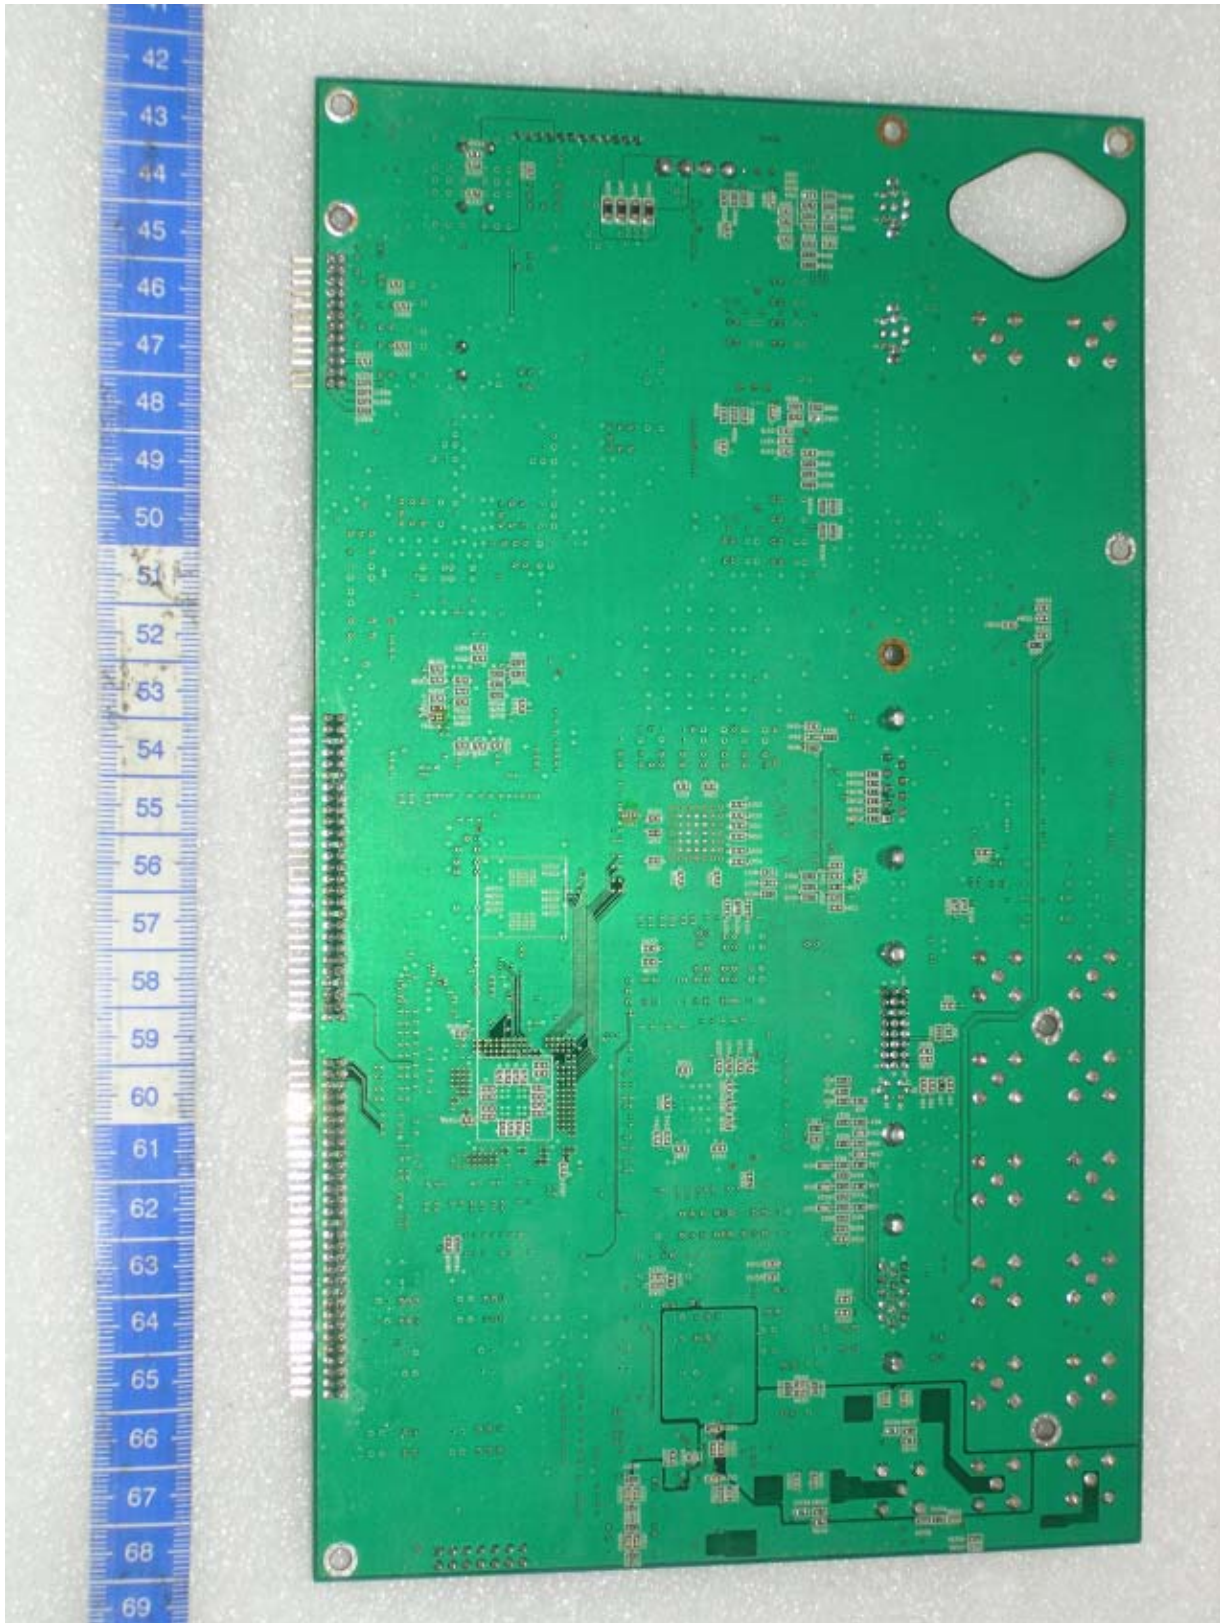

Project Number:
Model Number:

07CA44566
AMM240WTD

File Number


MC15562

Test Report No: 07CA445660-FCC
Date of Issue: November 26, 2007

OSD BOARD-FRONT



OSD BOARD-REAR

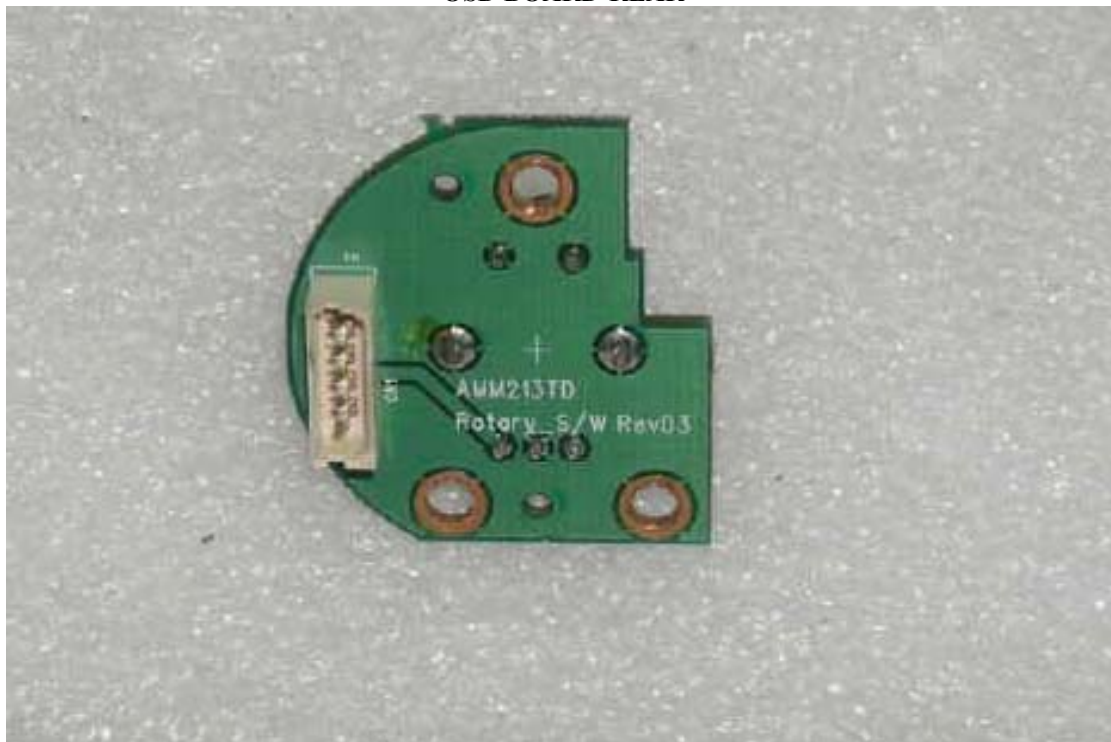

LCD PANEL-FRONT



Project Number:
Model Number:

07CA44566
AMM240WTD

File Number

MC15562

Test Report No: 07CA445660-FCC
Date of Issue: November 26, 2007

LCD PANEL-REAR



Project Number: 07CA44566 File Number MC15562 Test Report No: 07CA445660-FCC
Model Number: AMM240WTD Date of Issue: November 26, 2007



LCD PANEL LABEL



EUT Modification

EUT Modification for Radiation Disturbance

#1	Insert the ring style ferrite core (SCC Co.,Ltd. Type: SC14)to power cable.
#2	Insert the ring style ferrite core (SCC Co.,Ltd. Type: SC14)to power cable.
#3	Adhere EMI tape OSD cable to make shielding ground.
#4	Adhere EMI tape Temp Sensor cable to make shielding ground
#5	Adhere EMI tape to make more strong ground contact
#6	Adhere EMI tape LVDS Connector (JP3) to make more strong ground contact
#7	Adhere EMI tape on hole of main chassis to make shielding
#8	Adhere EMI tape on hole of main chassis to make shielding
#9	Attach the EMI form gasket (14x4x235mm) to enhance main frame and shield cover contact
#10	Attach the EMI form gasket to enhance I/O Connector and shield cover contact
#11	Attach the EMI form gasket (14x4x220mm) to enhance shield case and rear cover contact
#12	Attach the EMI form gasket (20x40x150) to make strong ground contact with main chassis
#13	Attach the EMI form gasket (20x34x150) to make strong ground contact with main chassis
#14	Insert the flat style ferrite core (SCC Co.,Ltd, type : PC2910) at this 2 point on LVDS cable
#15	Adhere EMI tape LVDS cable to make more strong contact with panel chassis
#16	Adhere EMI tape Inverter cable to make more strong contact with panel chassis
#17	Attach the EMI form gasket (20x40x150) to make strong ground contact with main chassis

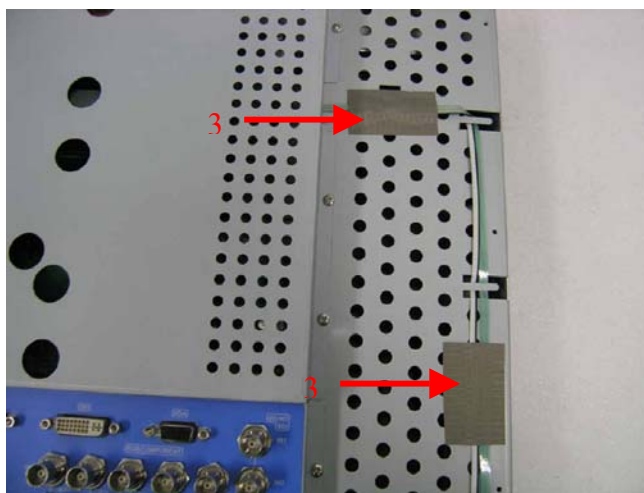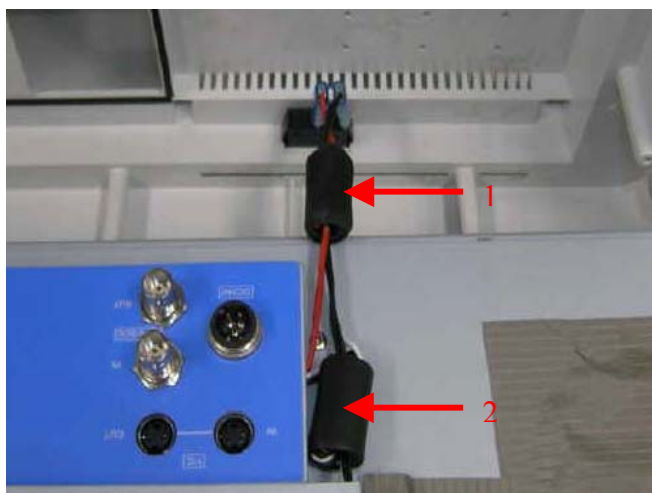







Project Number:
Model Number:

07CA44566
AMM240WTD

File Number

MC15562

Test Report No: 07CA445660-FCC
Date of Issue: November 26, 2007

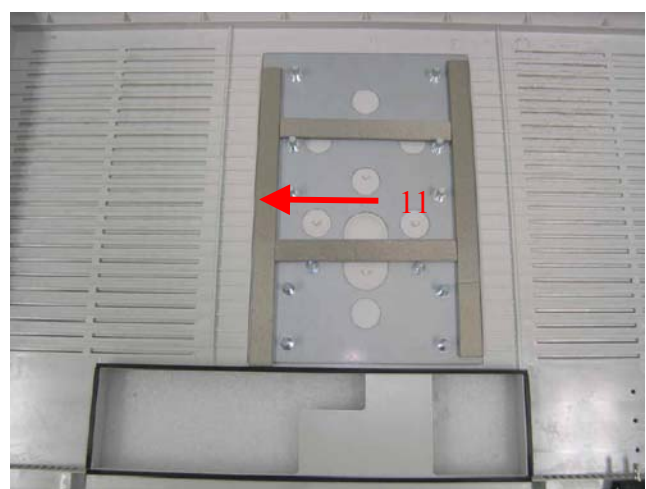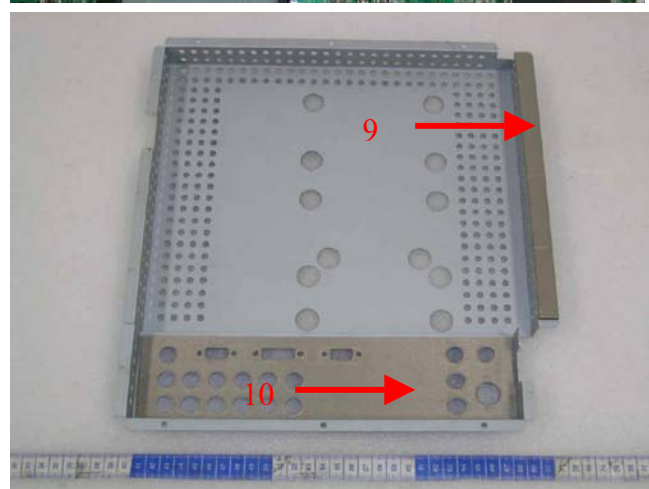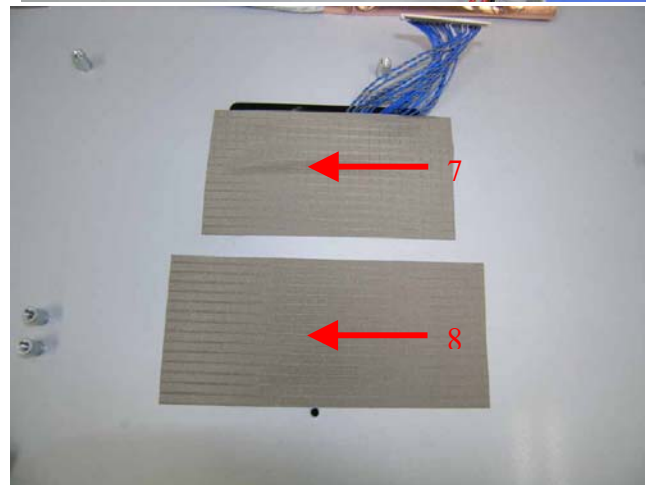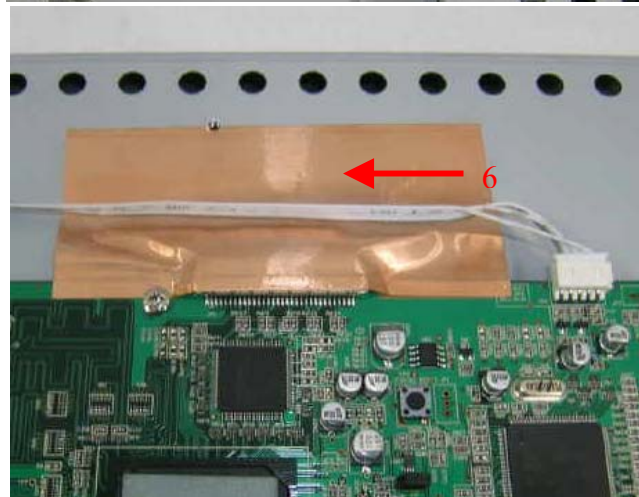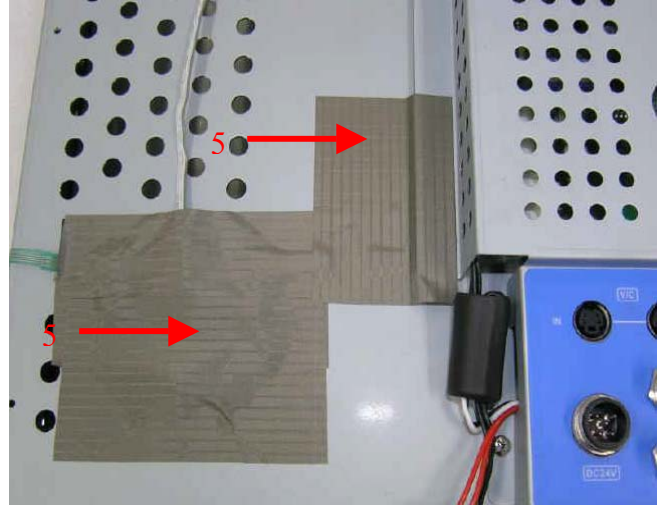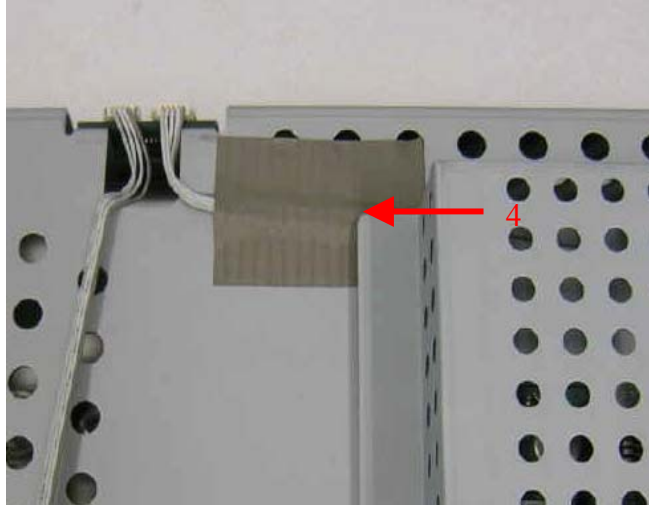

Project Number:
Model Number:

07CA44566
AMM240WTD

File Number

MC15562

Test Report No: 07CA445660-FCC
Date of Issue: November 26, 2007

