
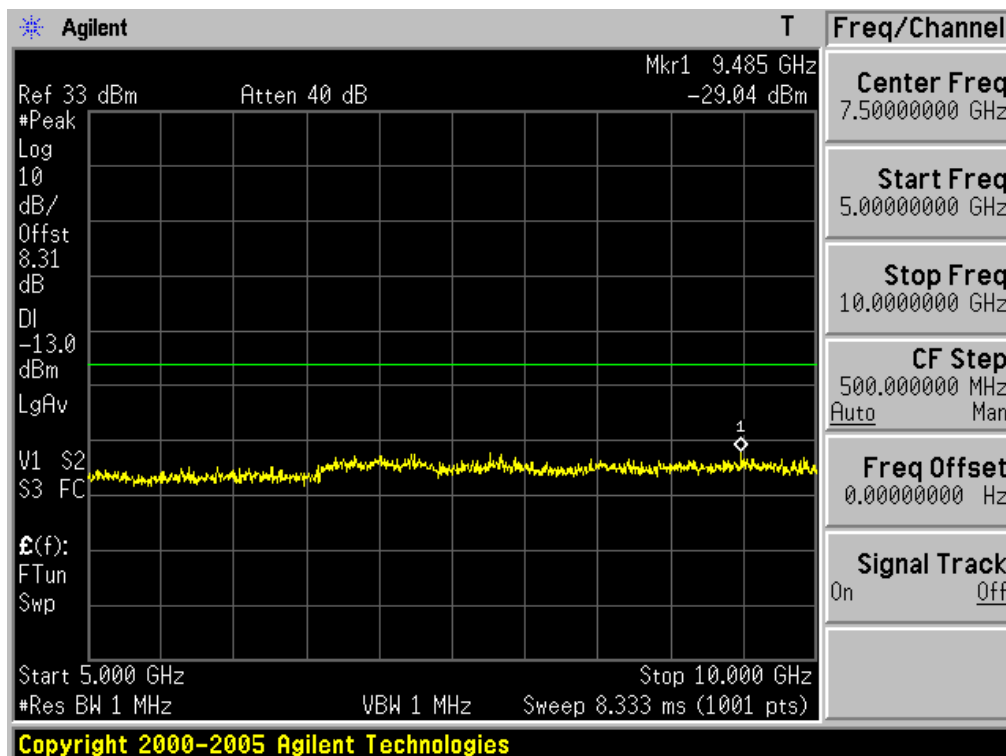


ATTACHMENT

Test Plots



Test Plots

- Conducted Spurious GSM Cellular Band Ch.128

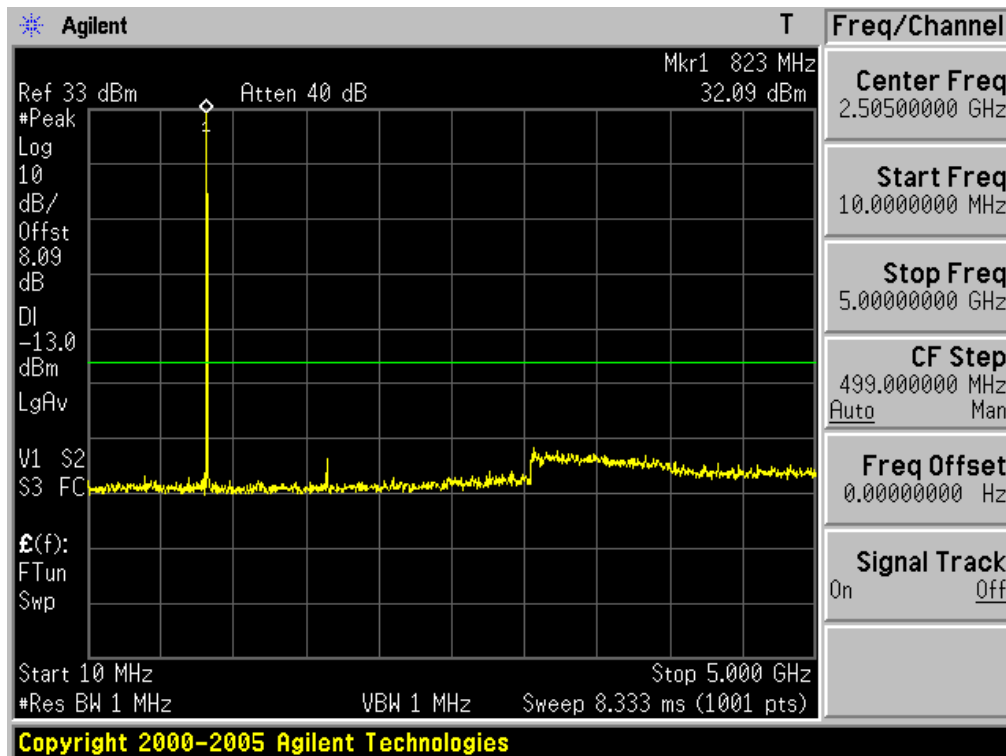



Test Plots

- Conducted Spurious GSM Cellular Band Ch.190

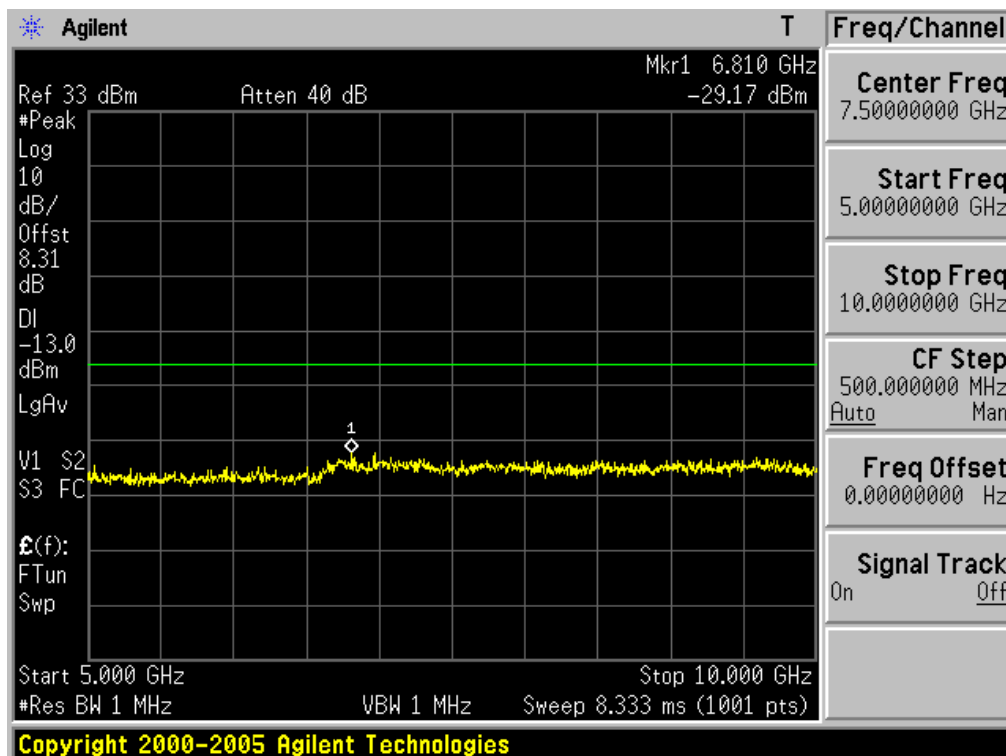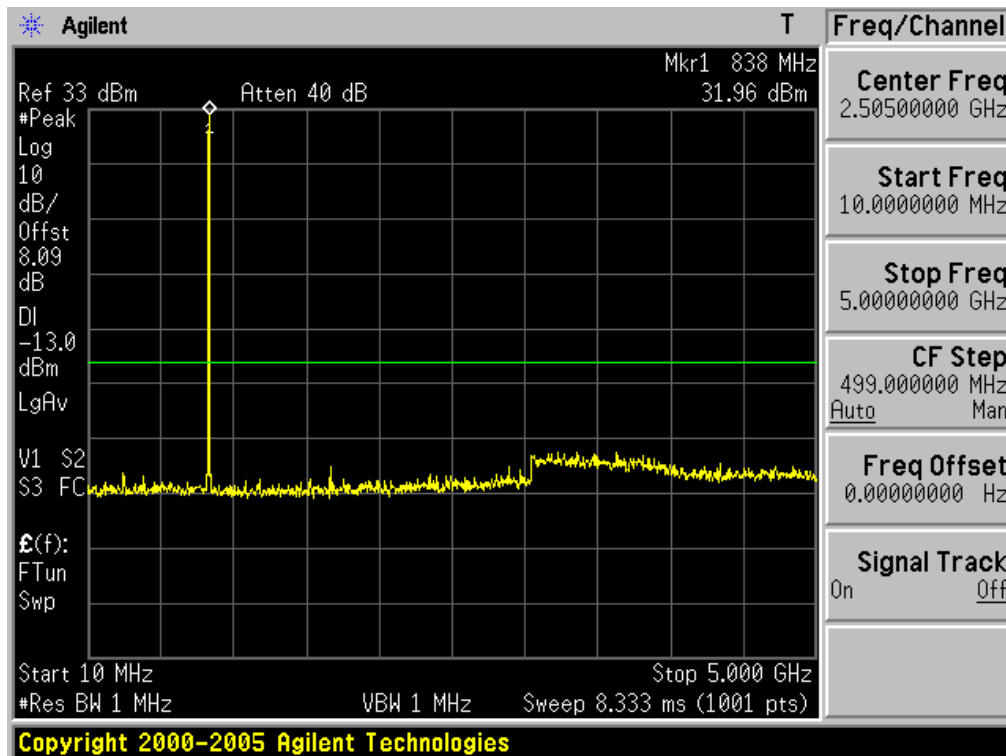


Test Plots

- Conducted Spurious GSM Cellular Band Ch.251

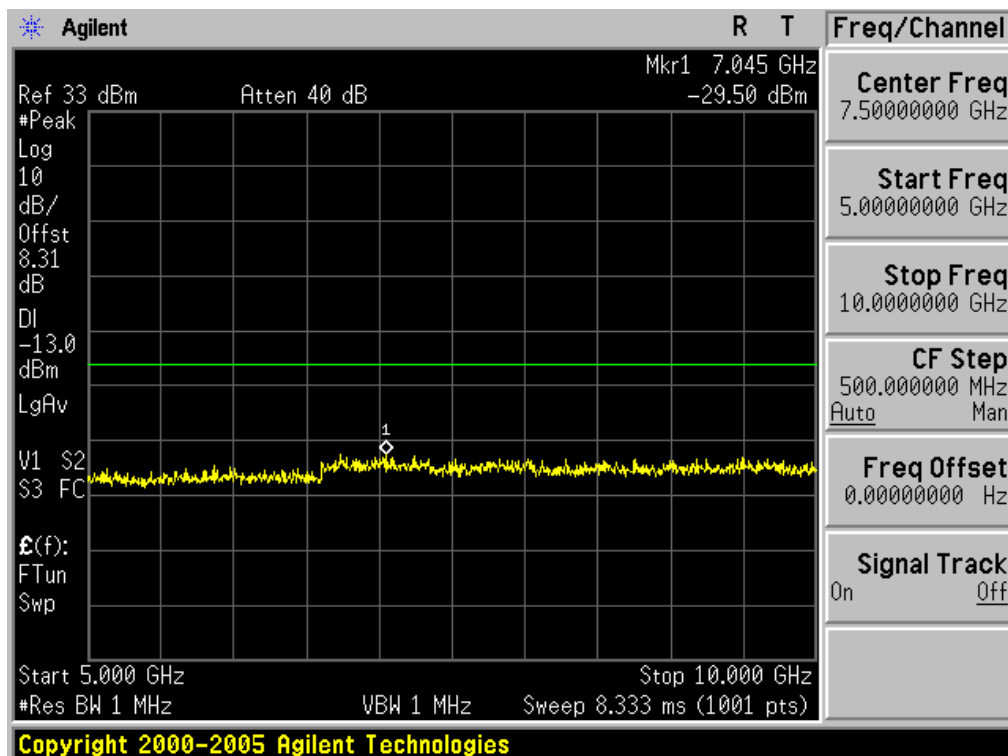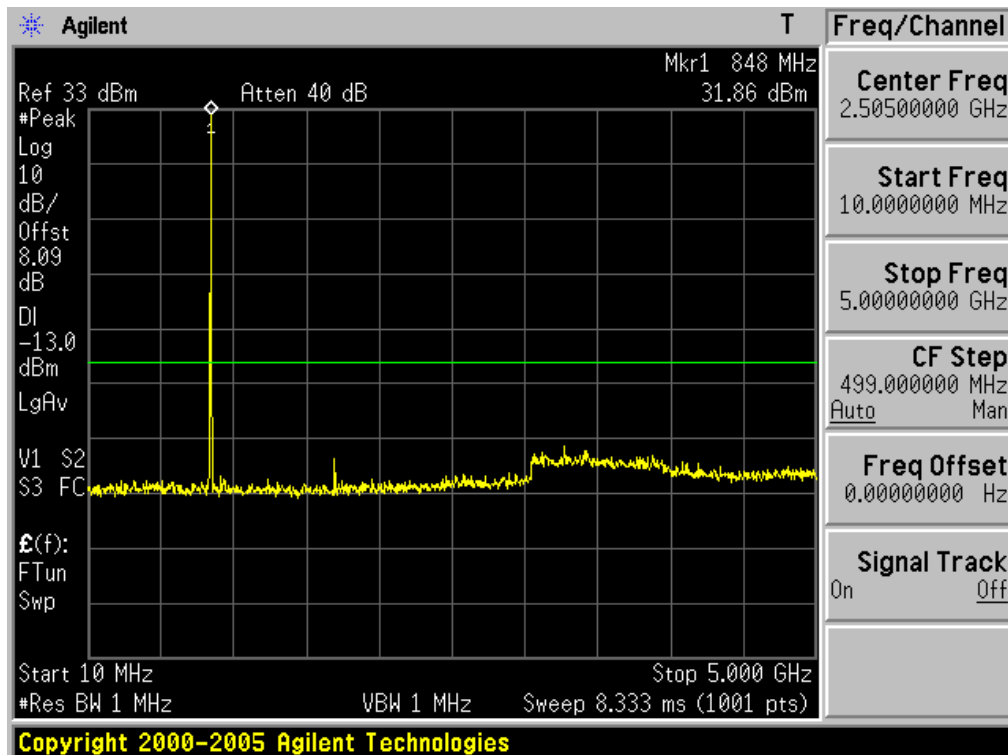


Test Plots

- Occupied Bandwidth. GSM Cellular Band Ch. 128

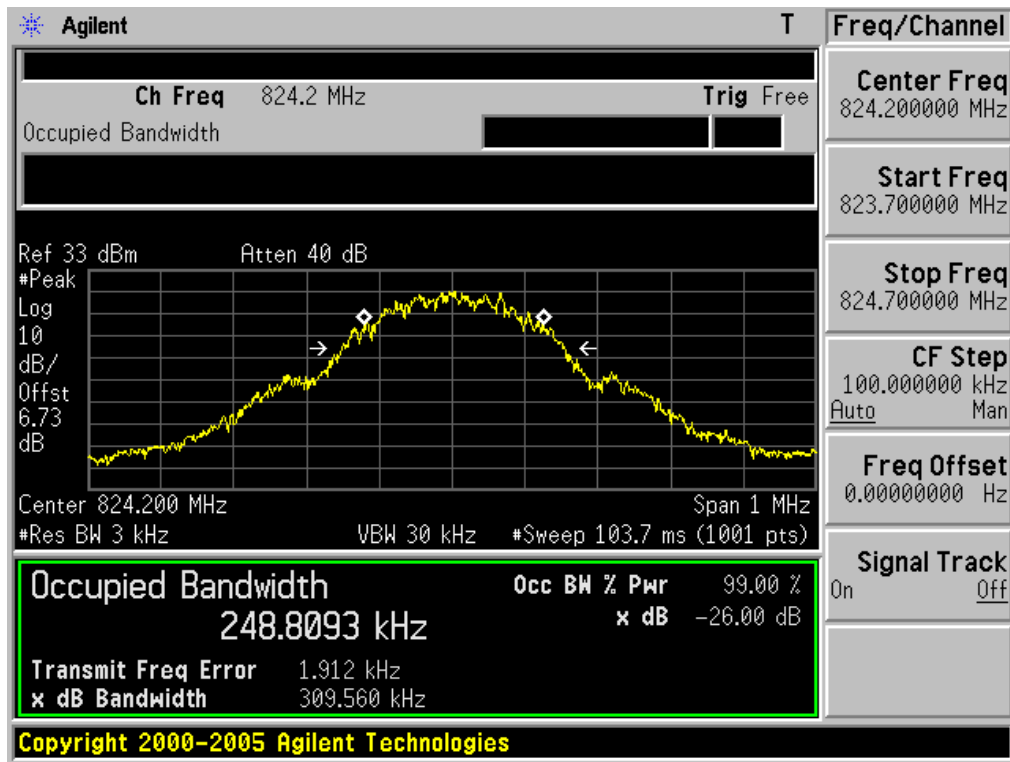


- Occupied Bandwidth. GSM Cellular Band Ch. 190

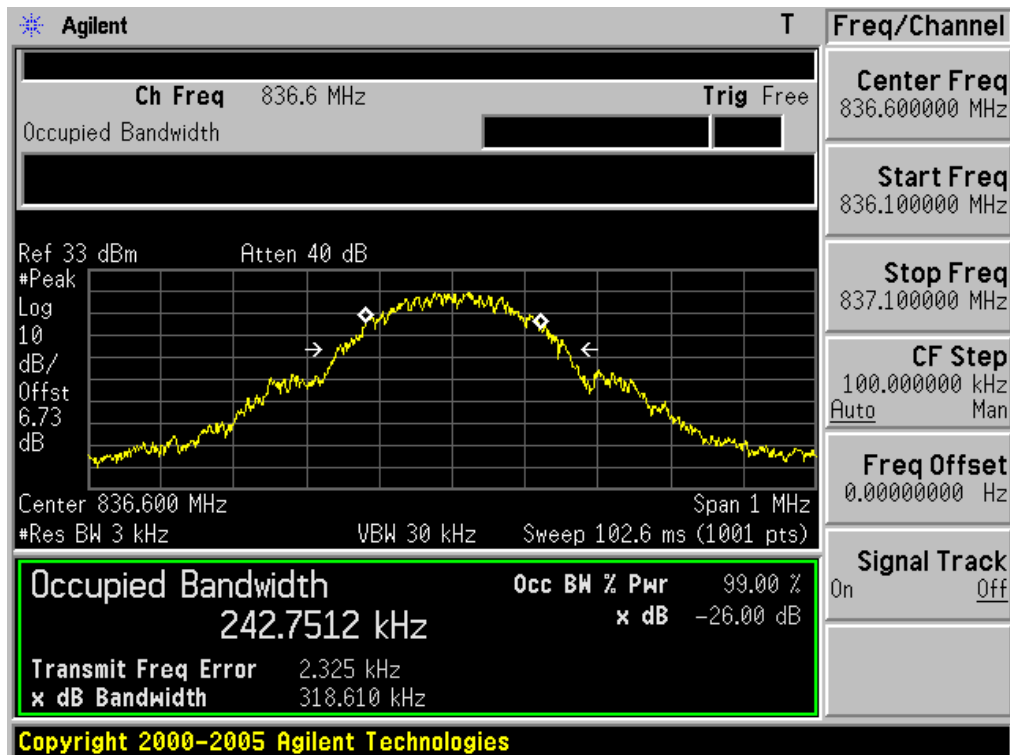


Test Plots

- Occupied Bandwidth. GSM Cellular Band Ch. 251

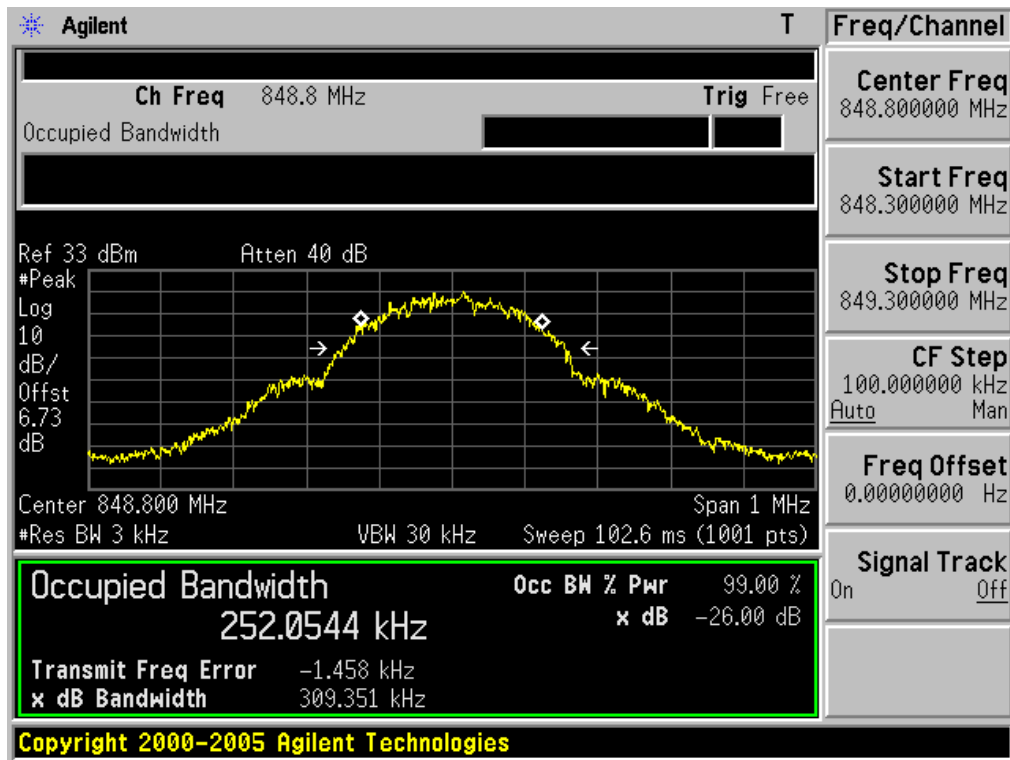


Test Plots

- Band Edge. GSM Cellular Band Ch. 128


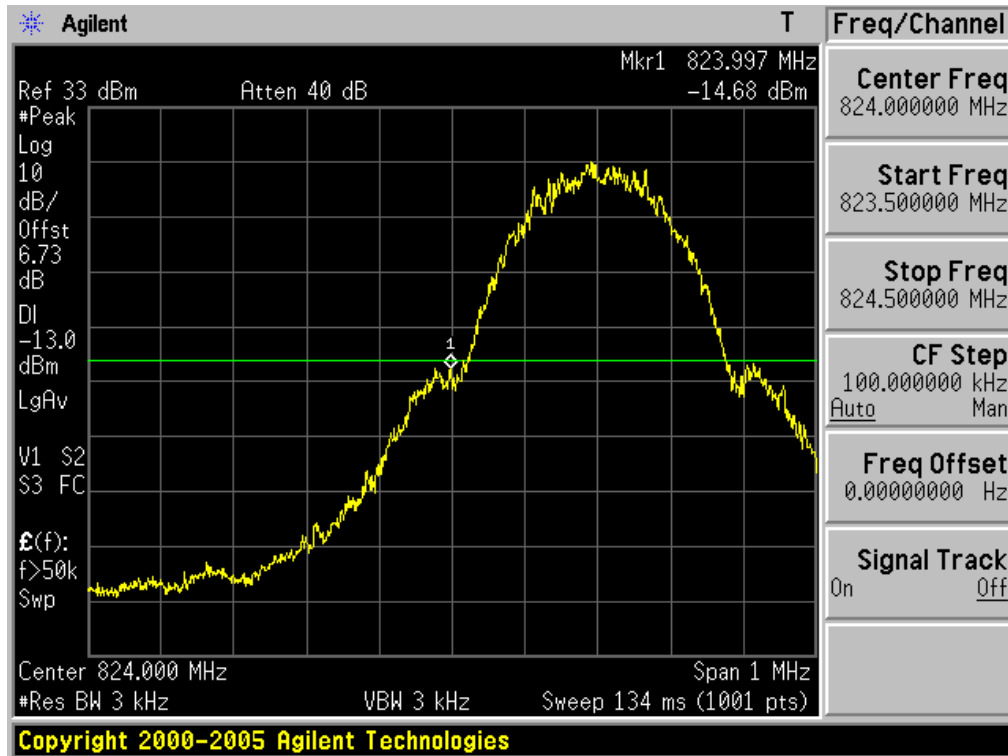


- Band Edge. GSM Cellular Band Ch. 251


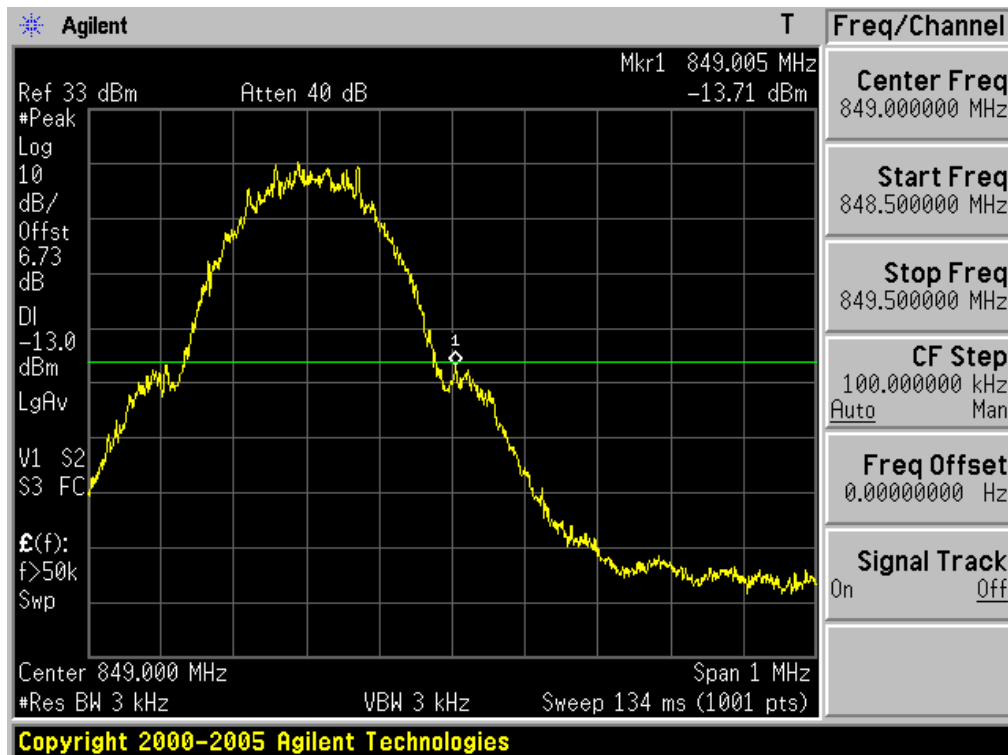


Test Plots

- Conducted Spurious GSM PCS Band Ch.512

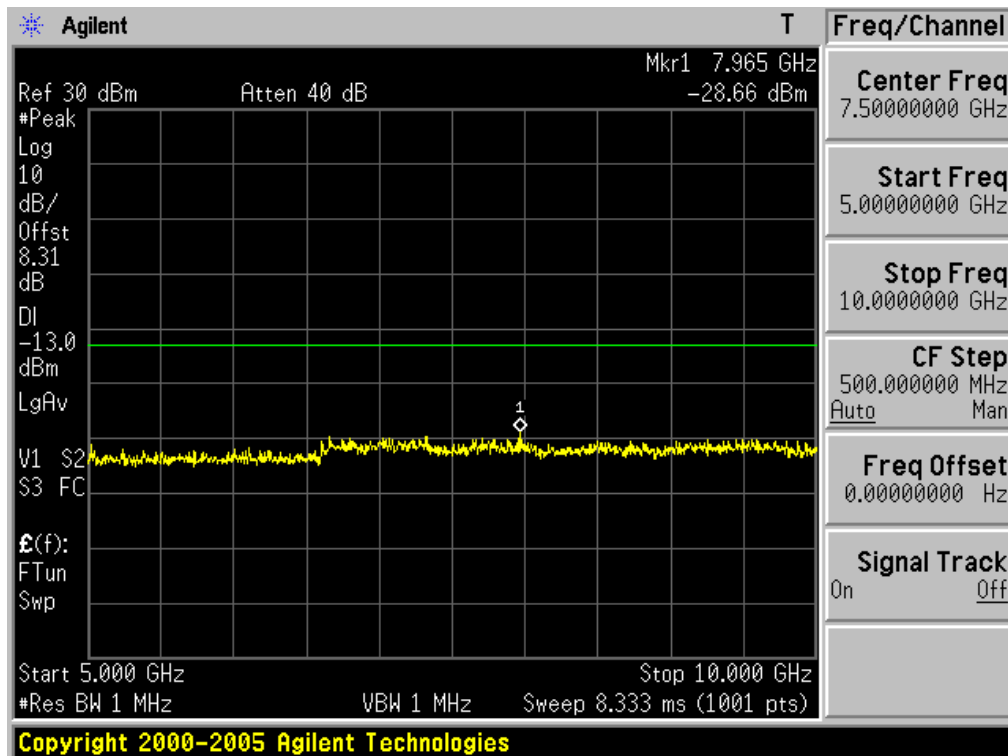
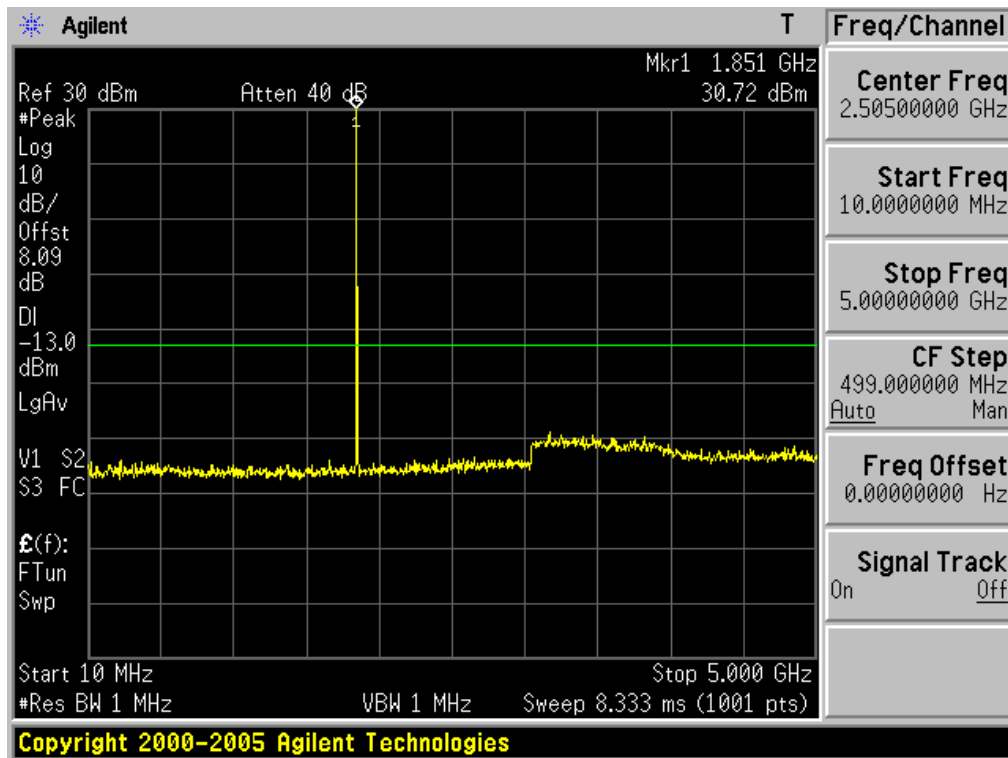


Test Plots

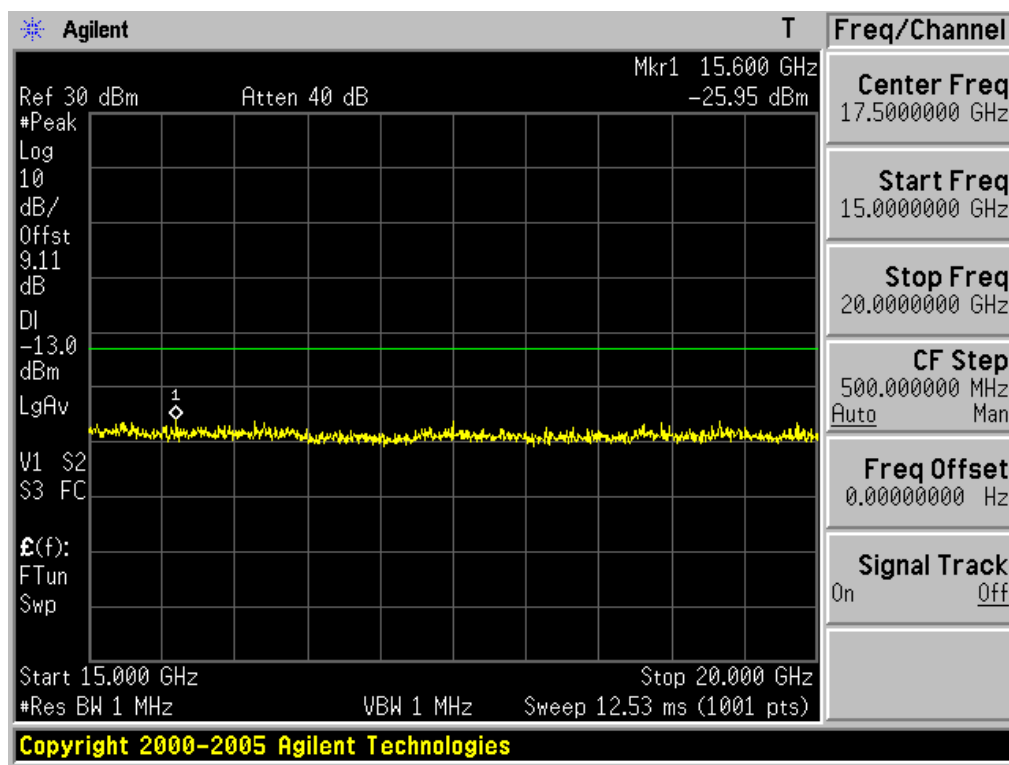
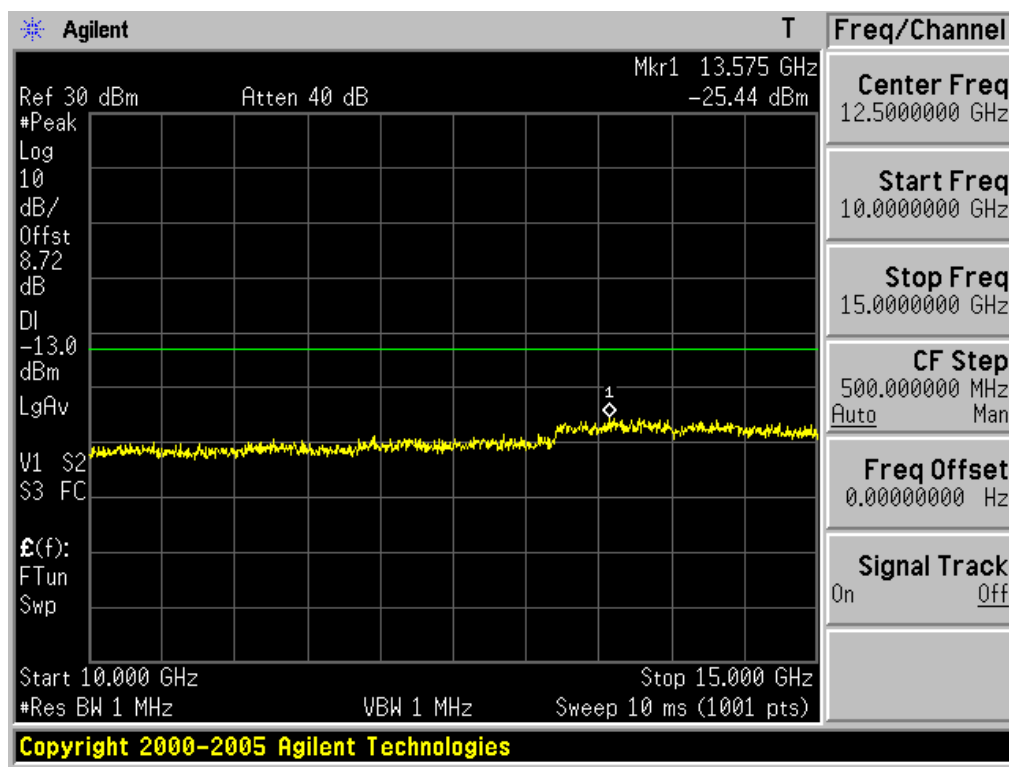


Test Plots

- Conducted Spurious GSM PCS Band Ch.661

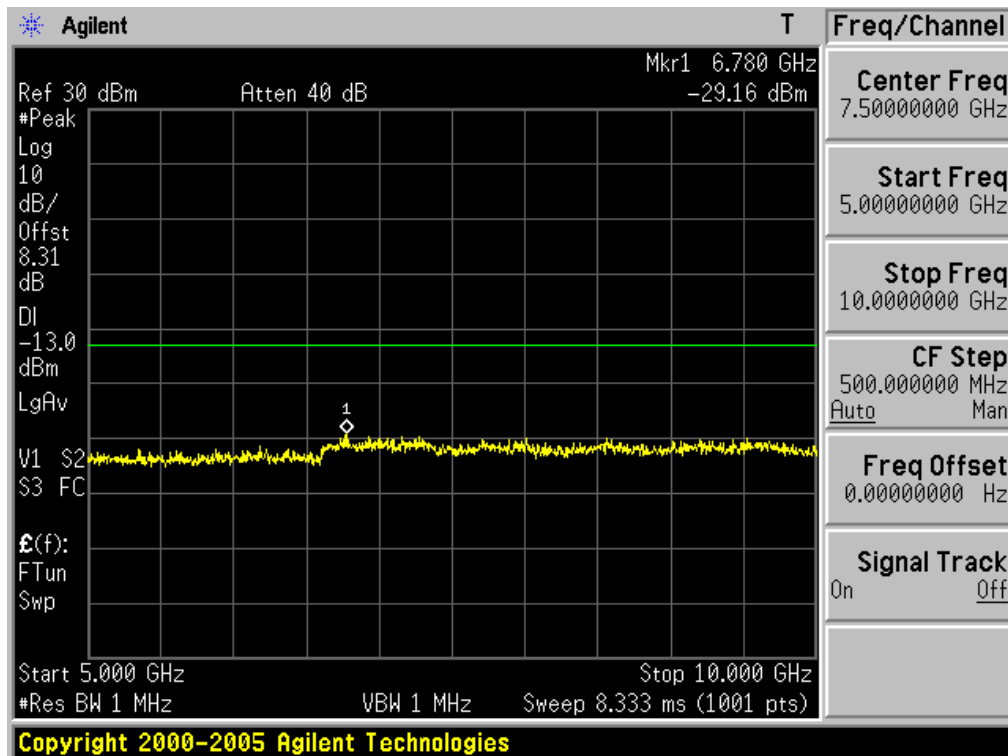
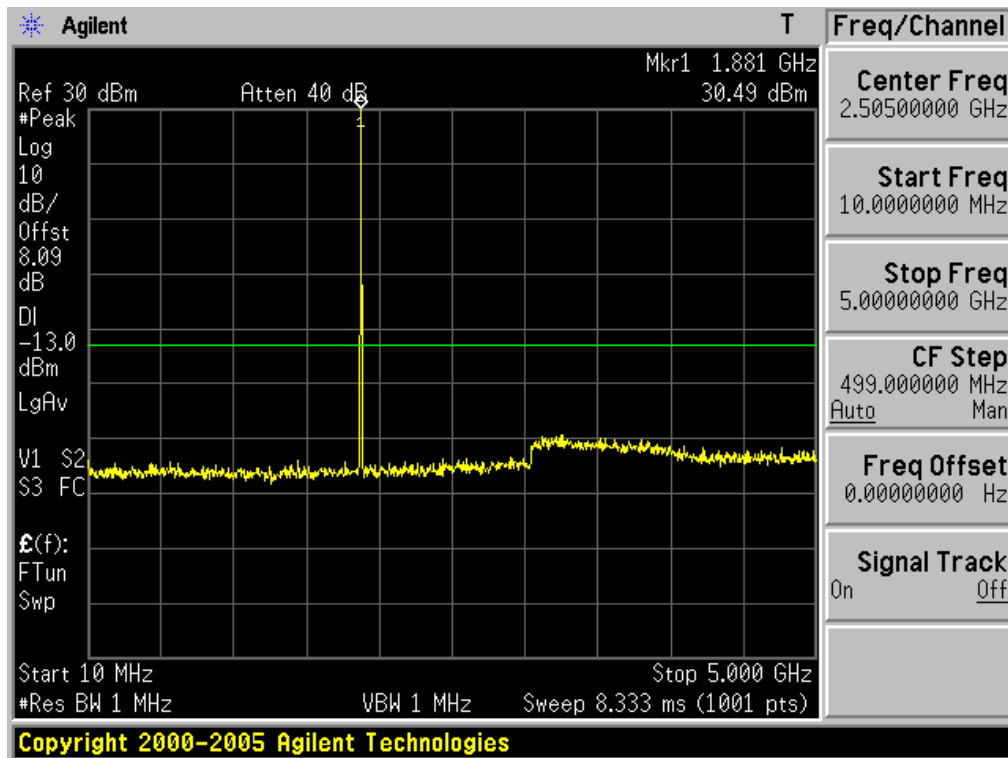


Test Plots

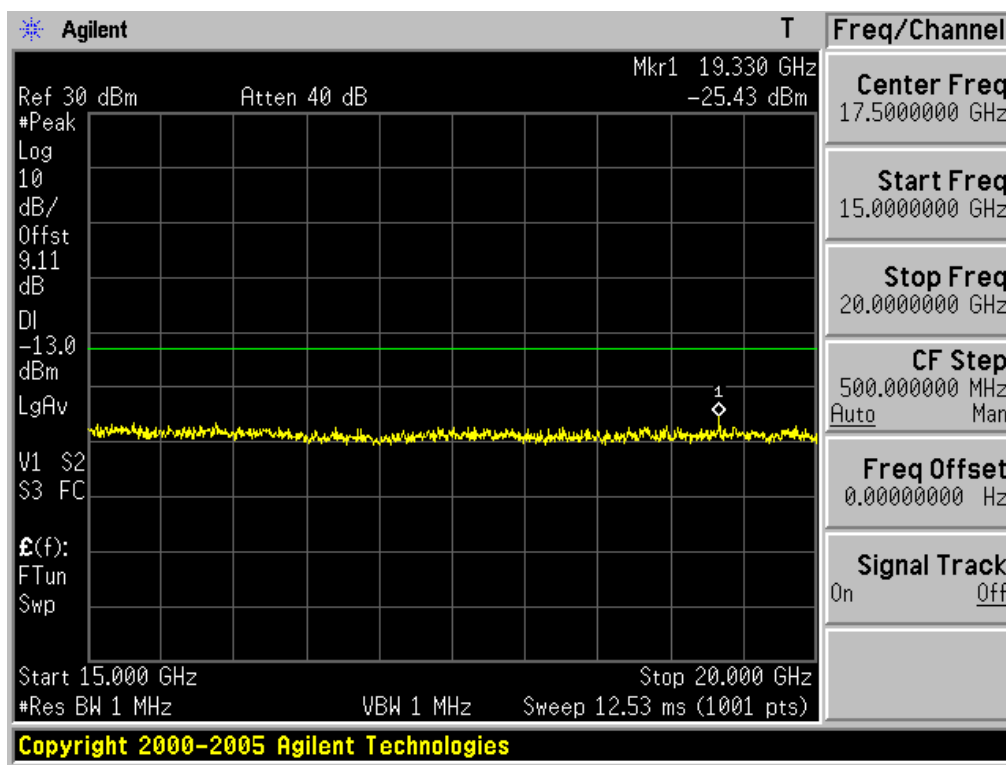
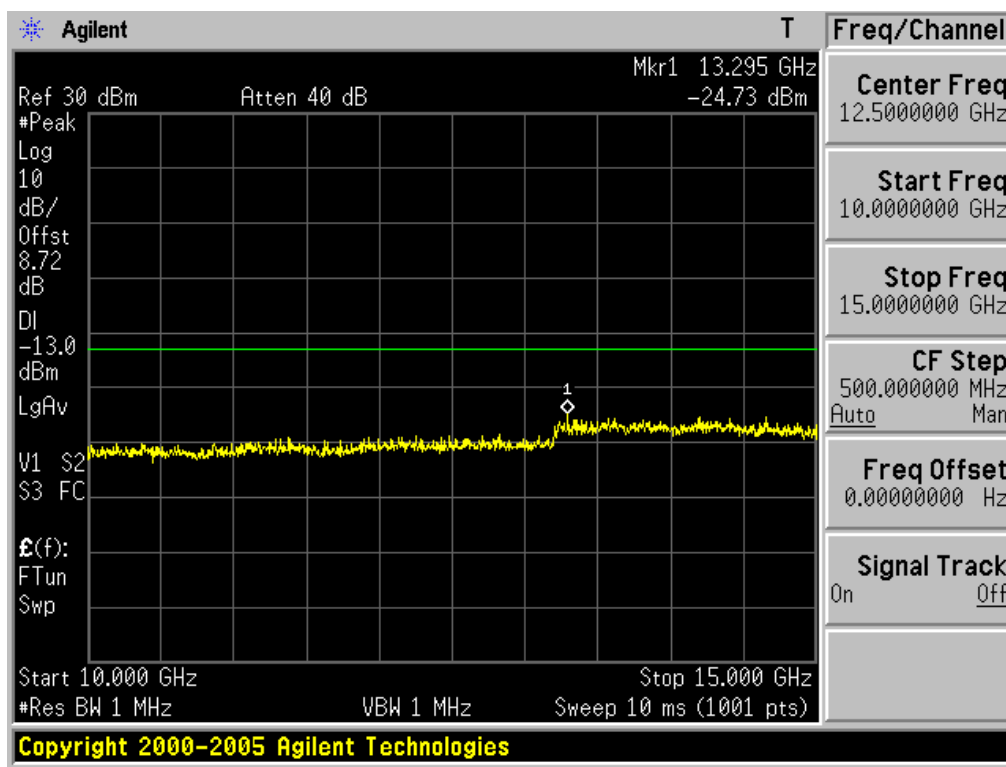


Test Plots

- Conducted Spurious GSM PCS Band Ch.810

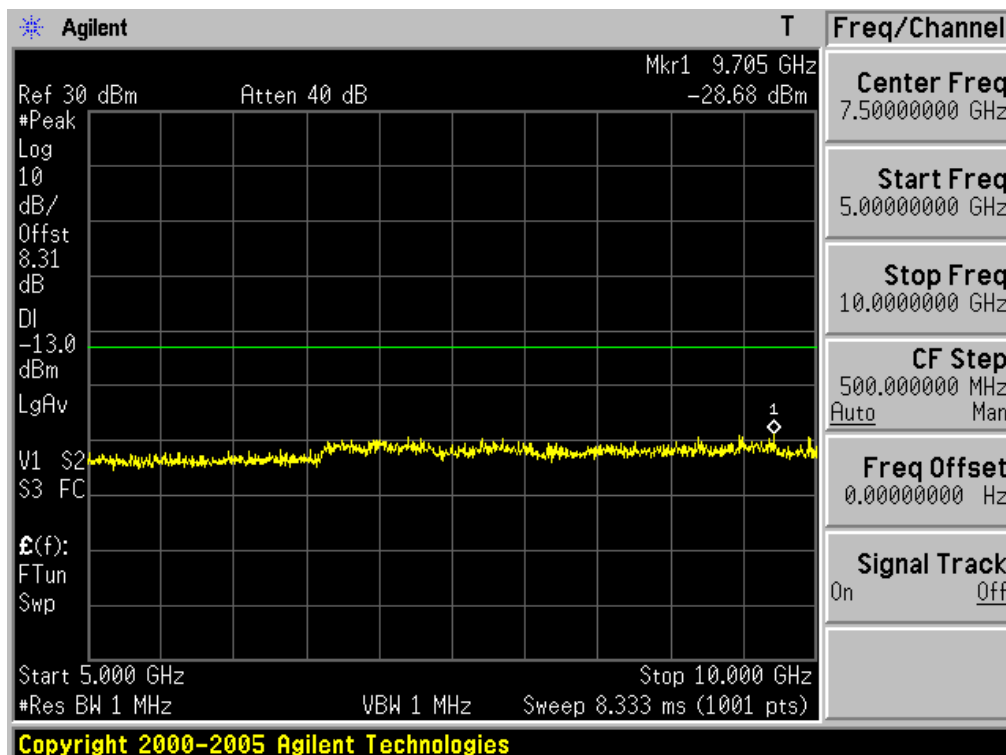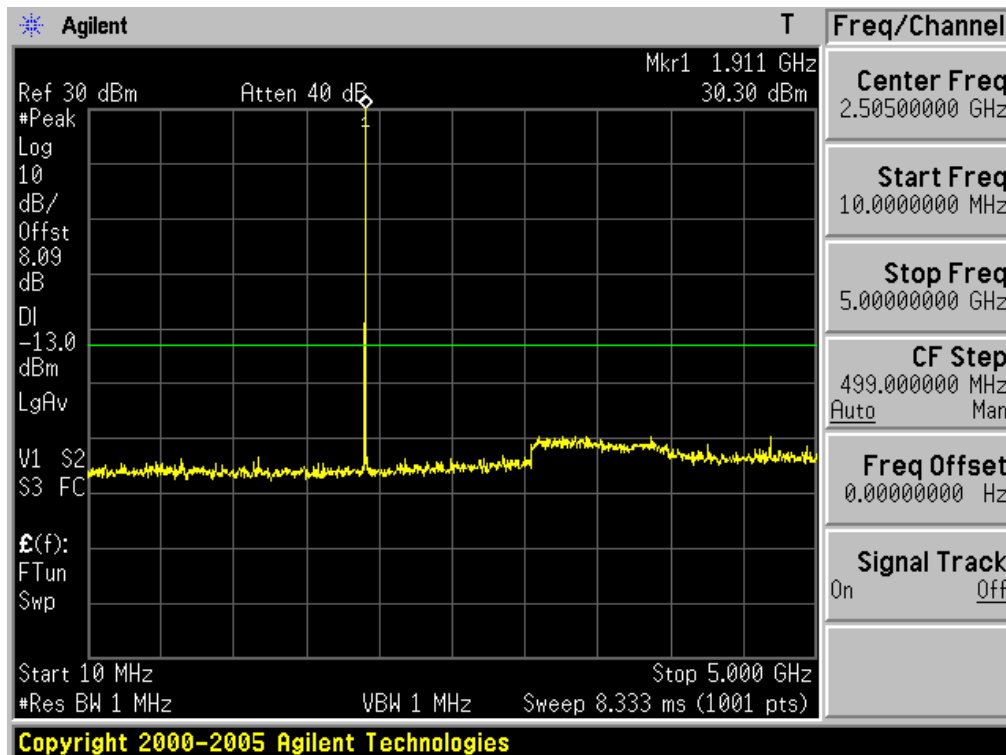


Test Plots

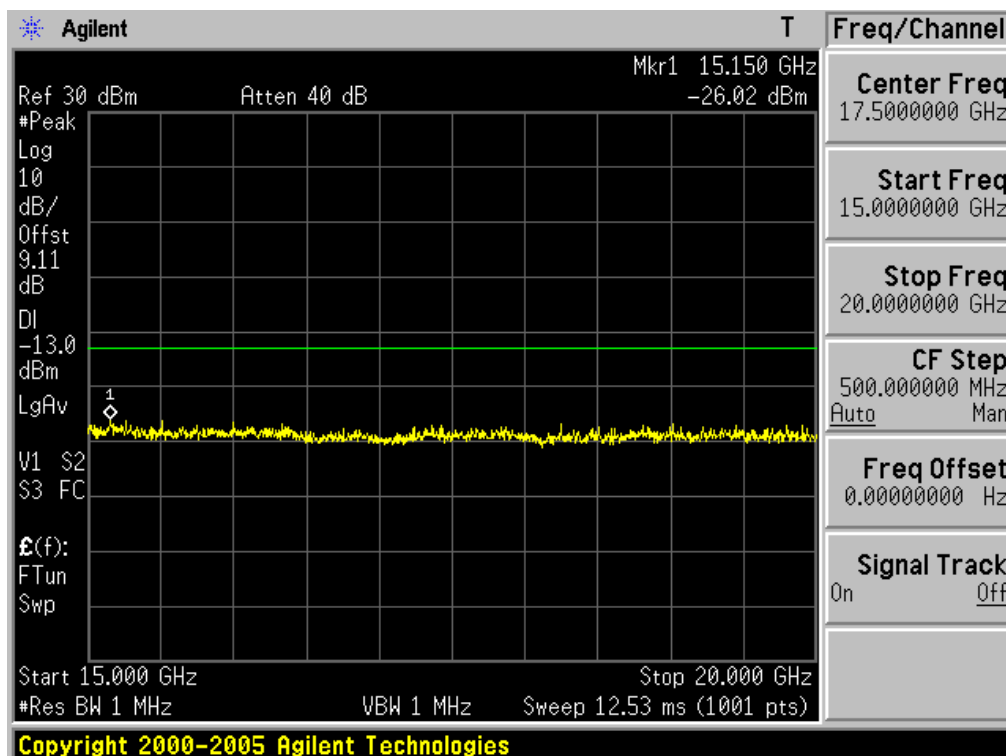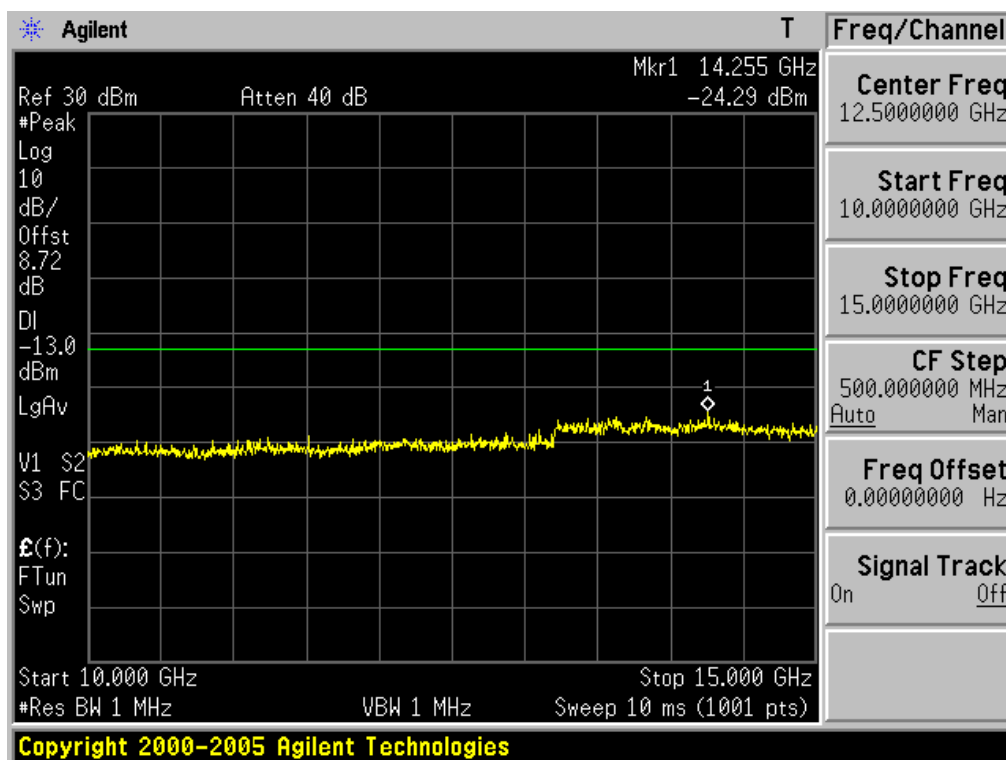


Test Plots

- Occupied Bandwidth. GSM PCS Band Ch. 512

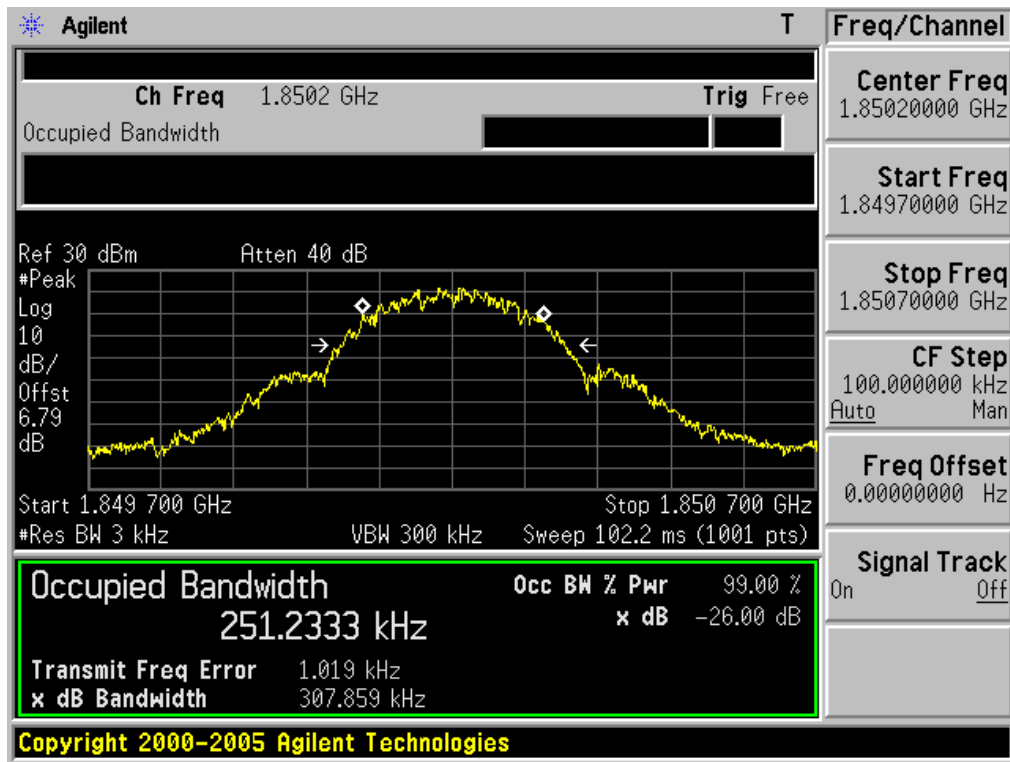


- Occupied Bandwidth. GSM PCS Band Ch. 661

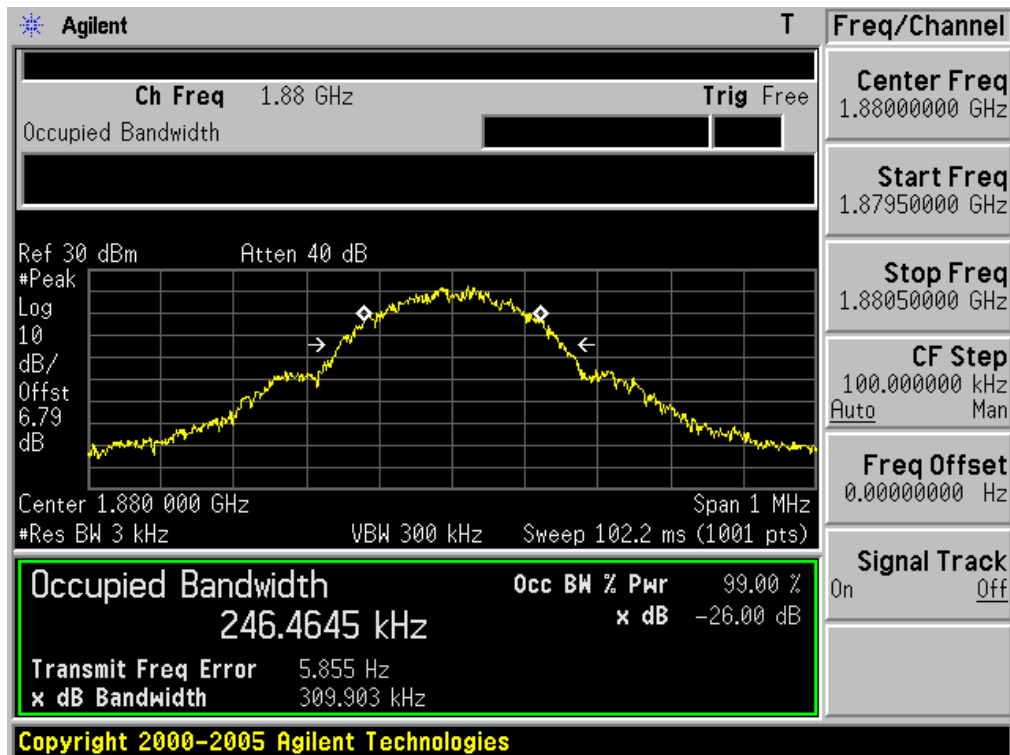


Test Plots

- Occupied Bandwidth. GSM PCS Band Ch. 810

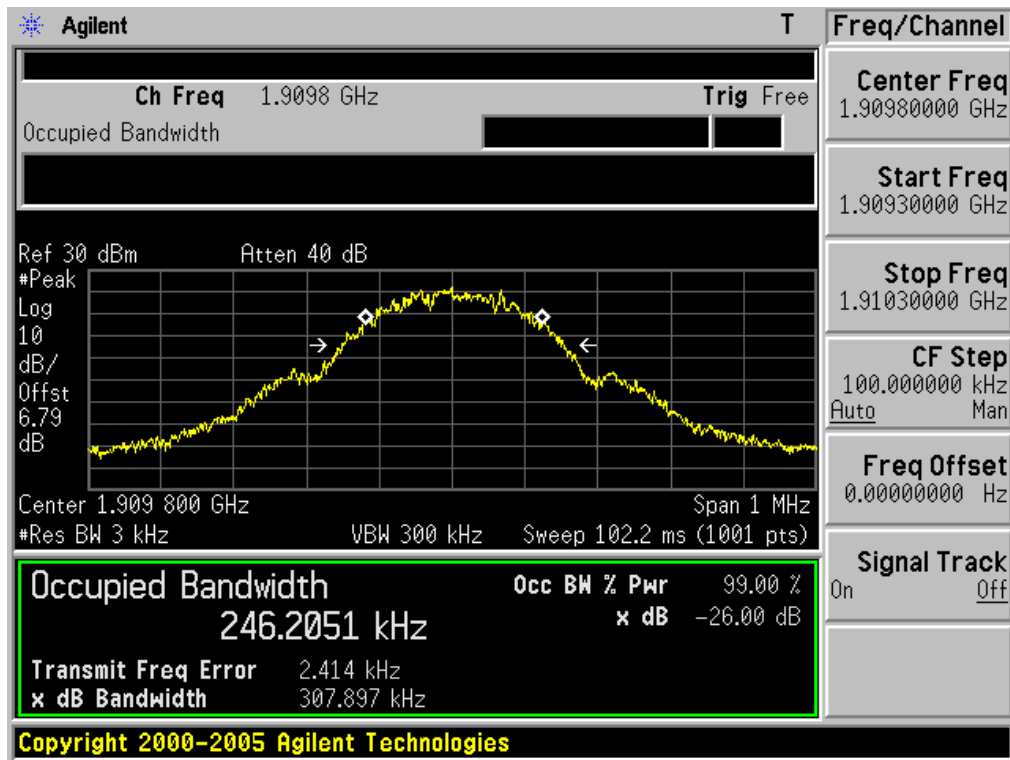


Test Plots

- Band Edge. GSM PCS Band Ch. 512


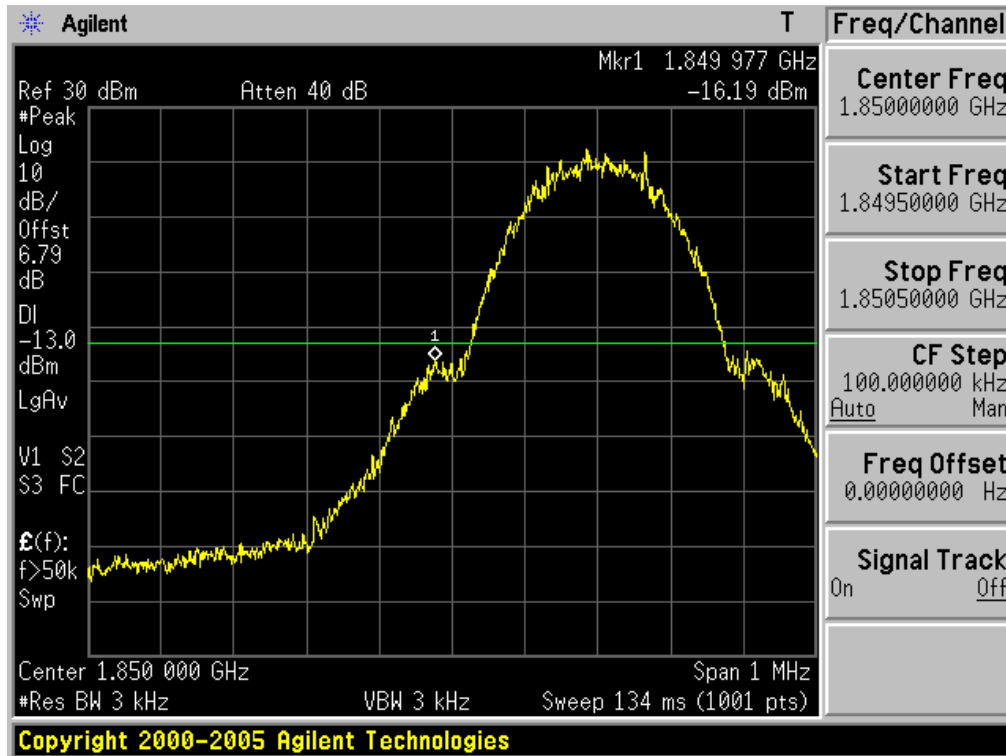


- Band Edge. GSM PCS Band Ch. 810

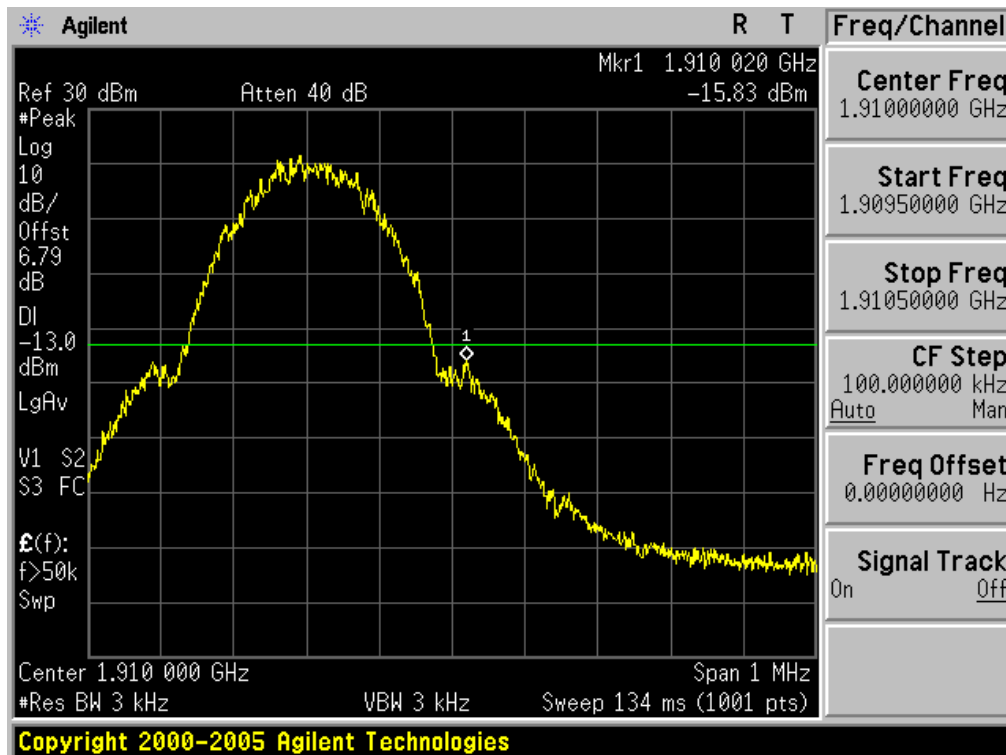



Test Plots

- Conducted Spurious WCDMA Cellular Band Ch.4132

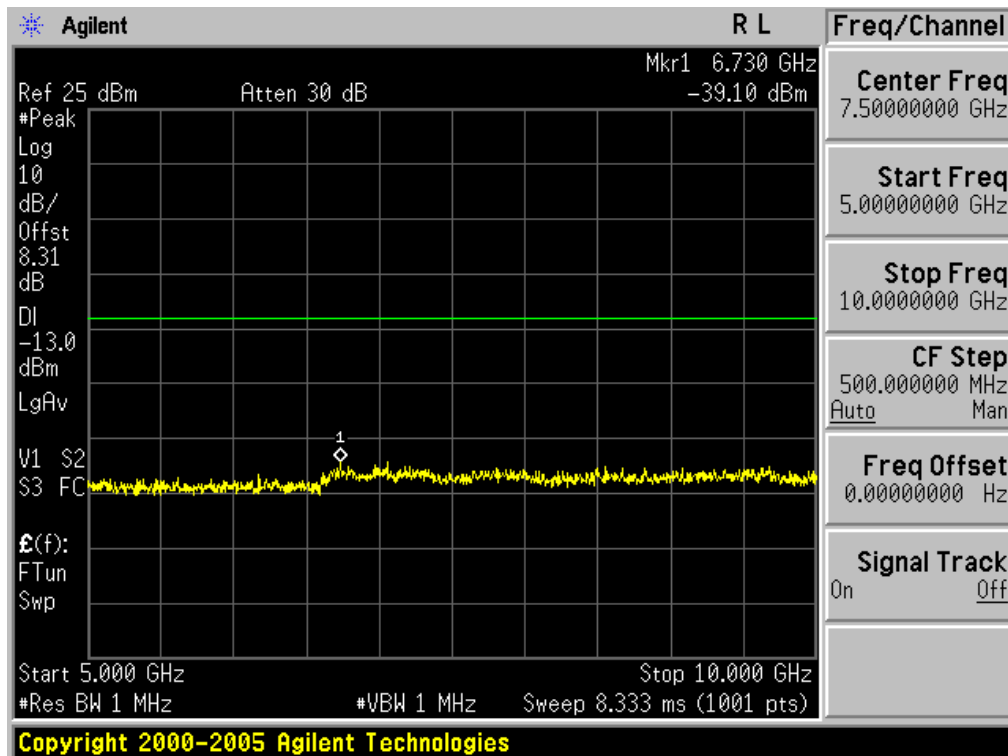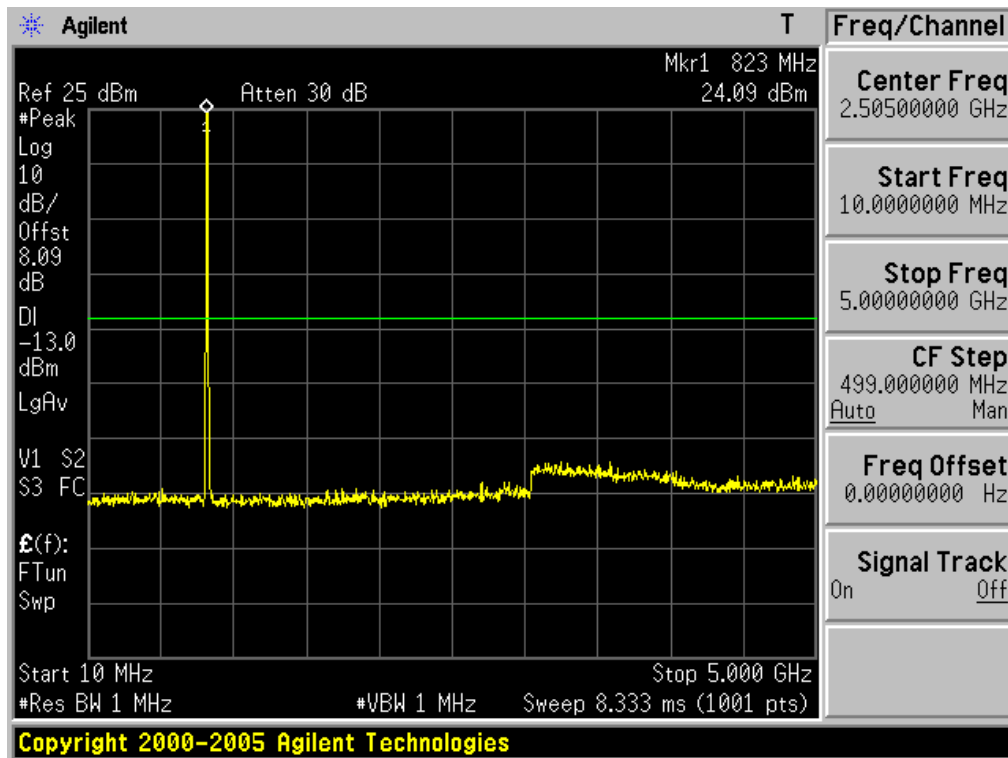



Test Plots

- Conducted Spurious WCDMA Cellular Band Ch.4182

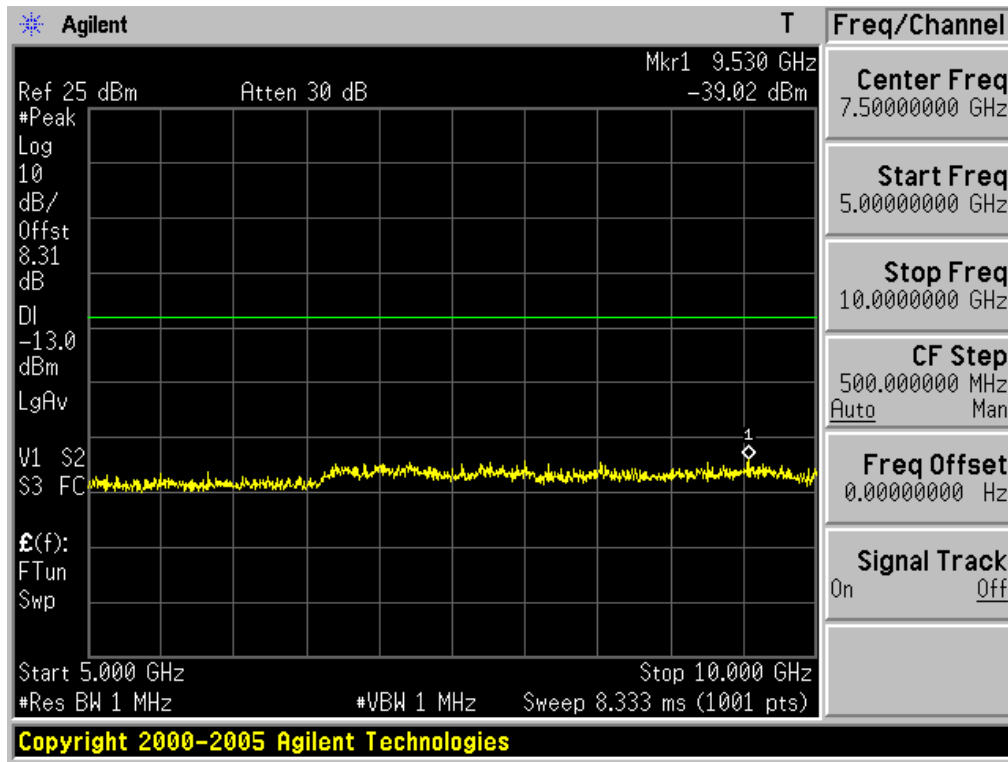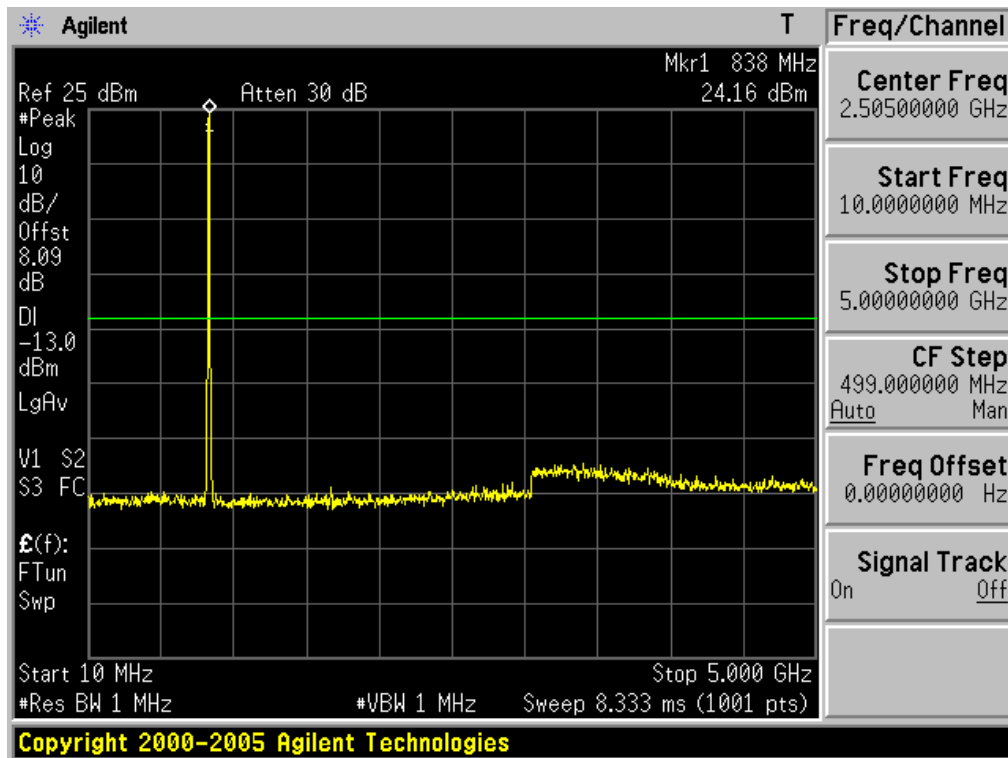


Test Plots

- Conducted Spurious WCDMA Cellular Band Ch.4233

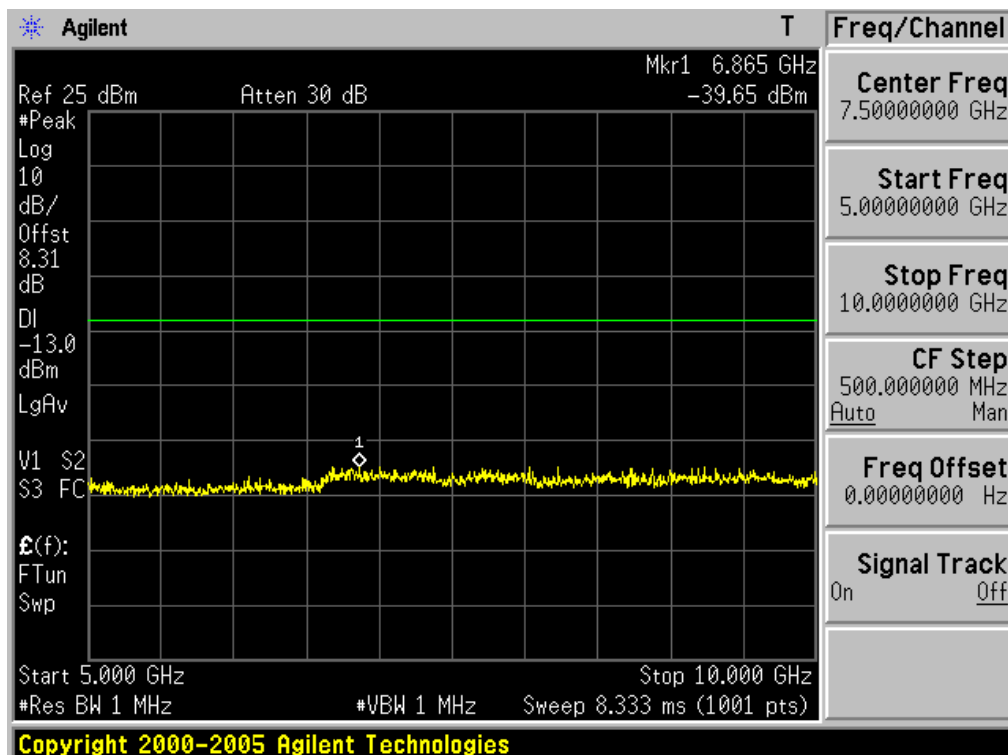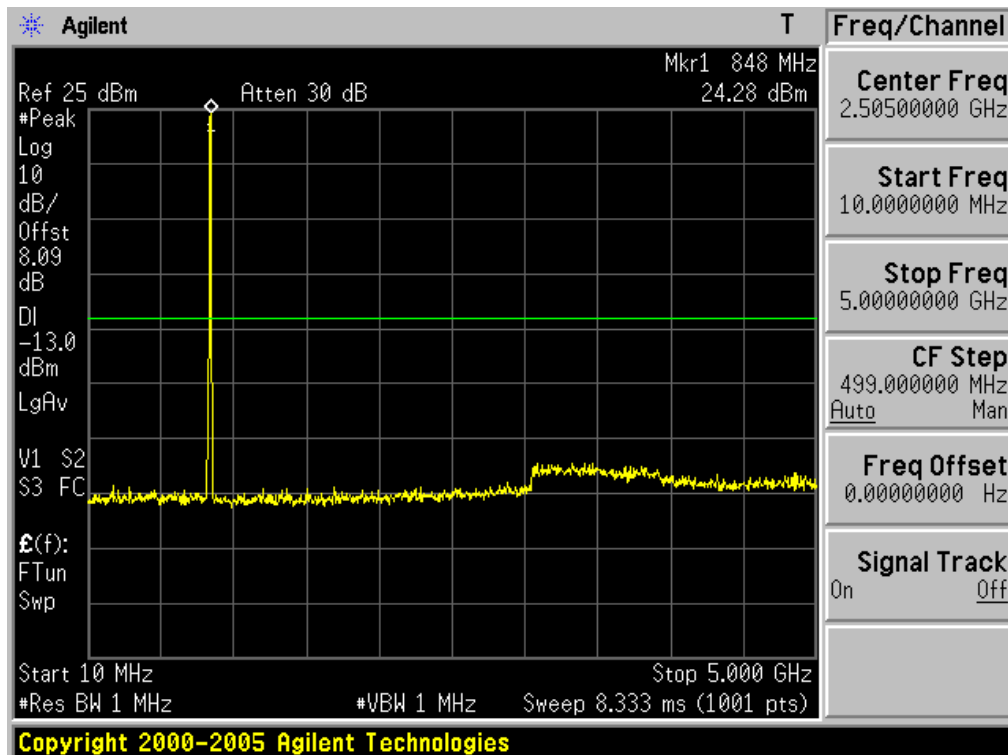


Test Plots

- Occupied Bandwidth. WCDMA Cellular Band Ch. 4132

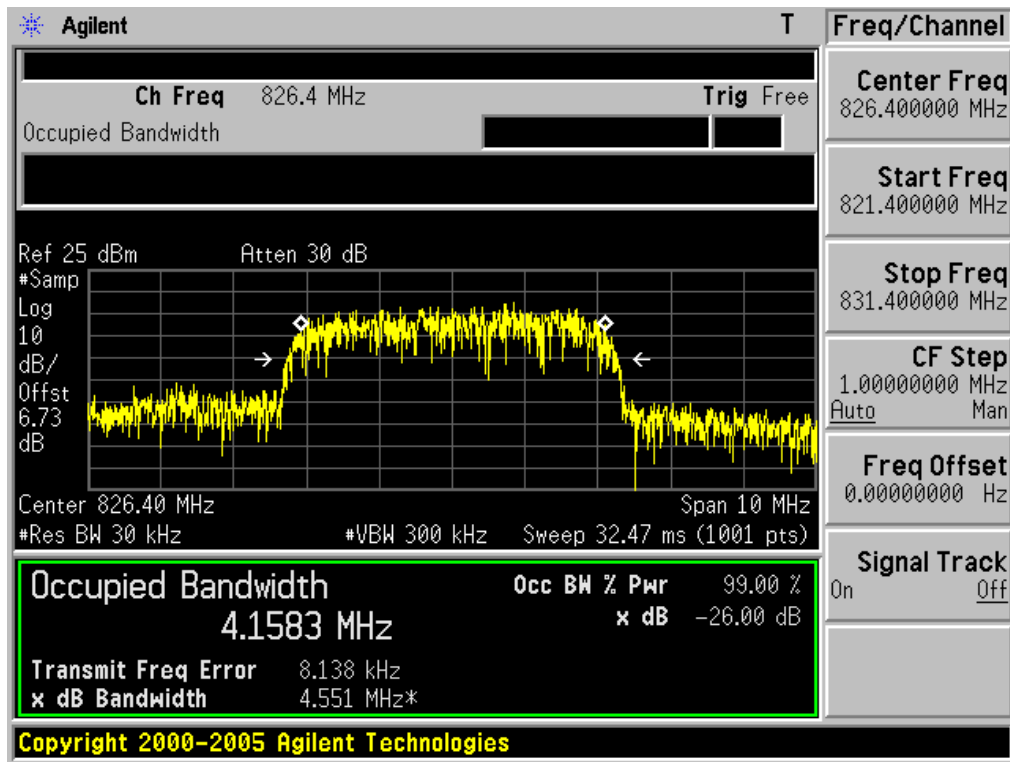


- Occupied Bandwidth. WCDMA Cellular Band Ch. 4182

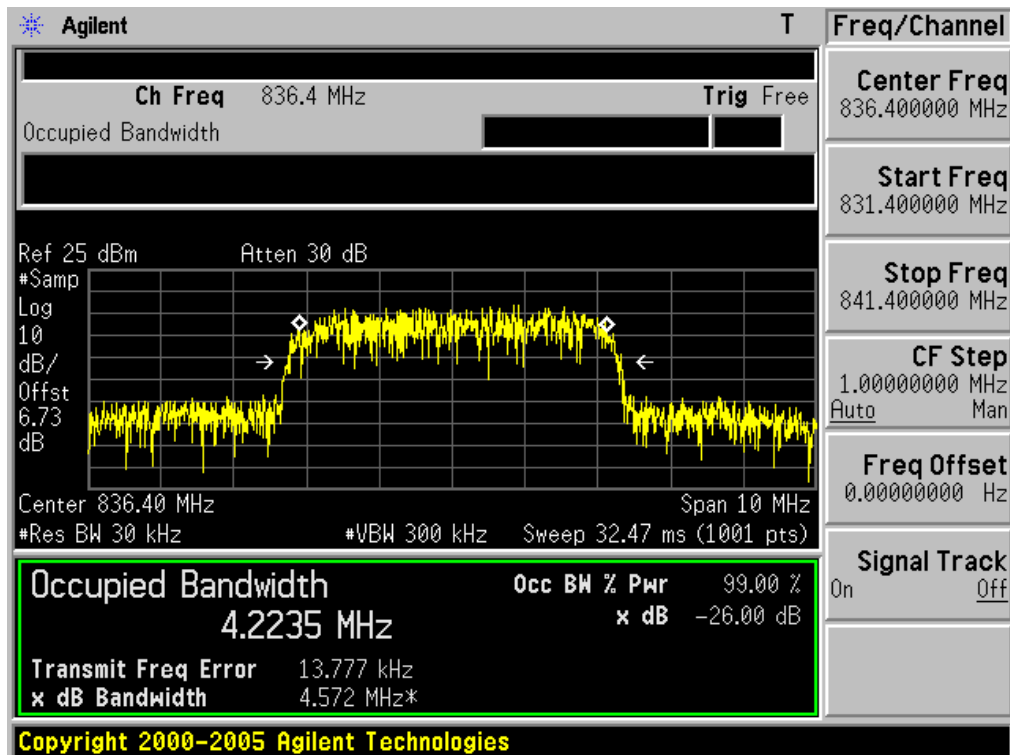



Test Plots

- Occupied Bandwidth. WCDMA Cellular Band Ch. 4233

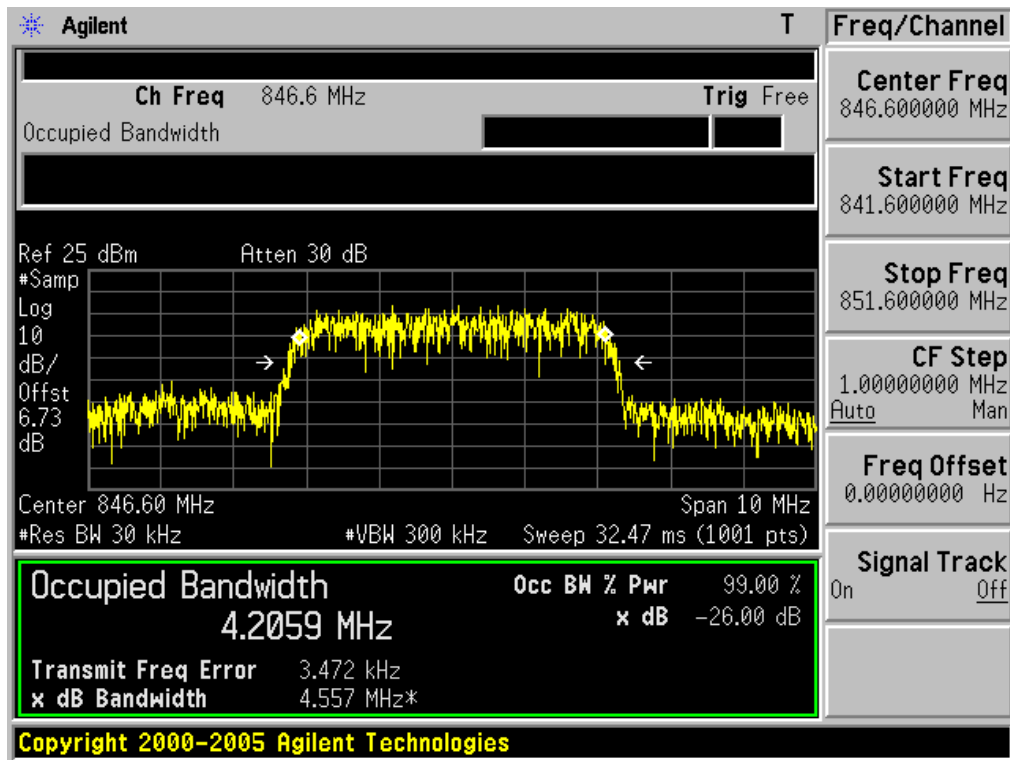



Test Plots

- Band Edge. WCDMA Cellular Band Ch. 4132

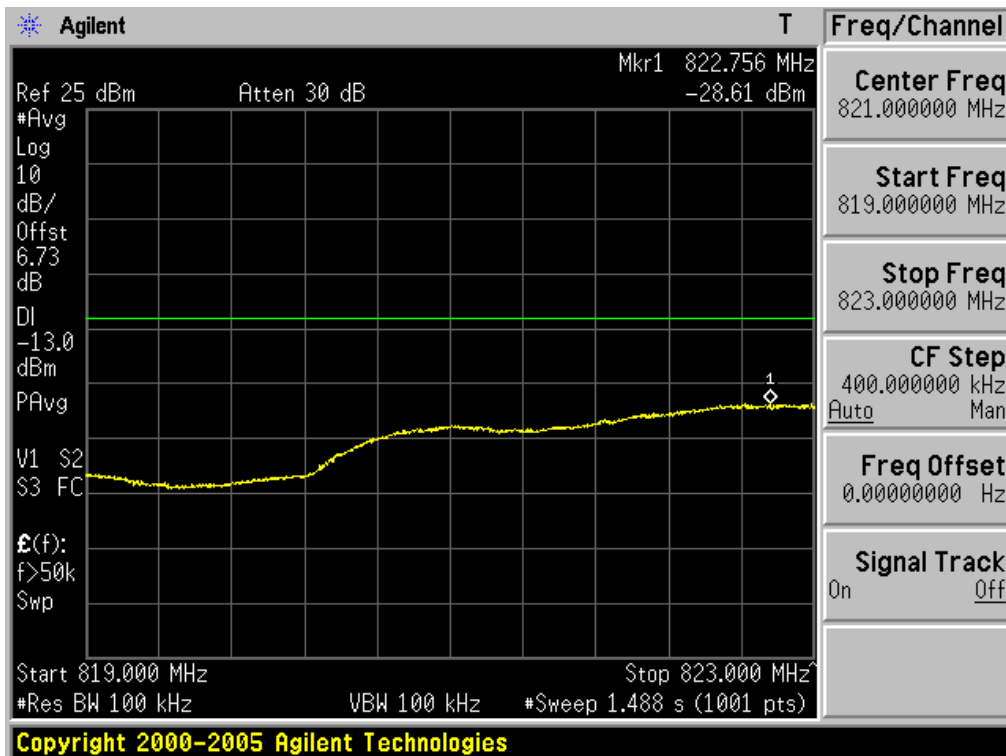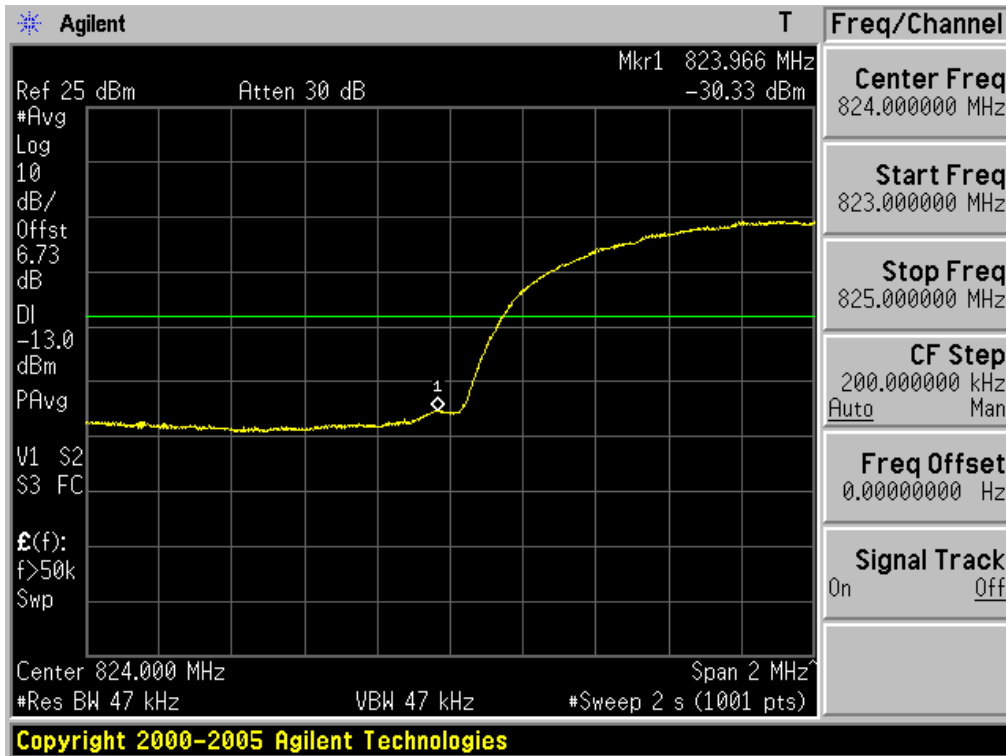



Test Plots

- Band Edge. WCDMA Cellular Band Ch. 4233

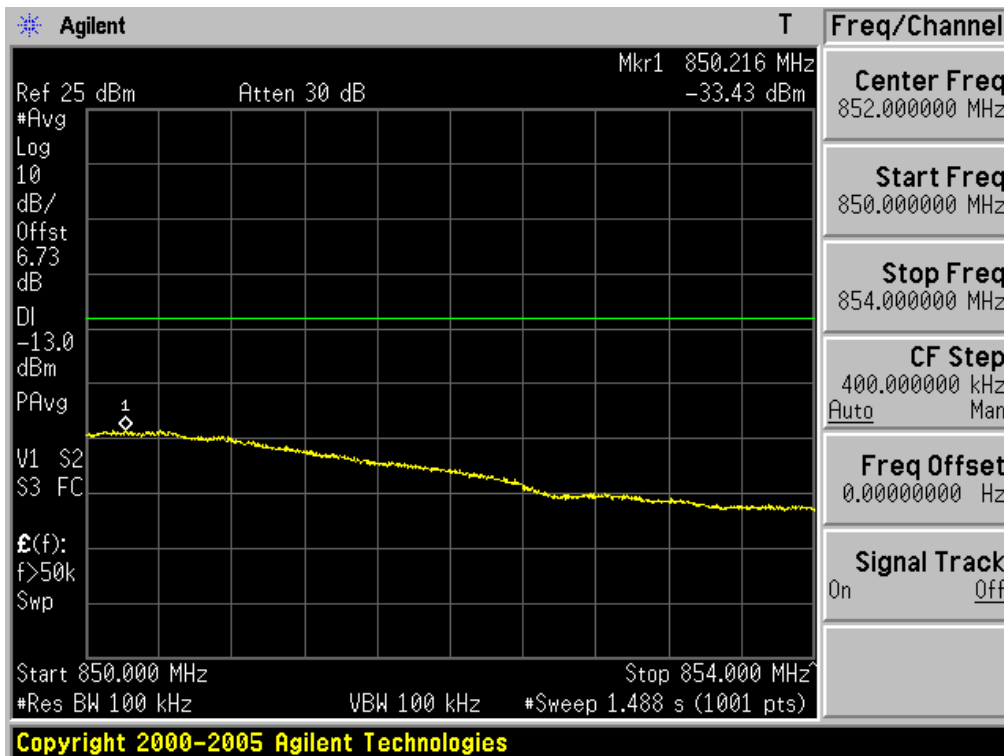
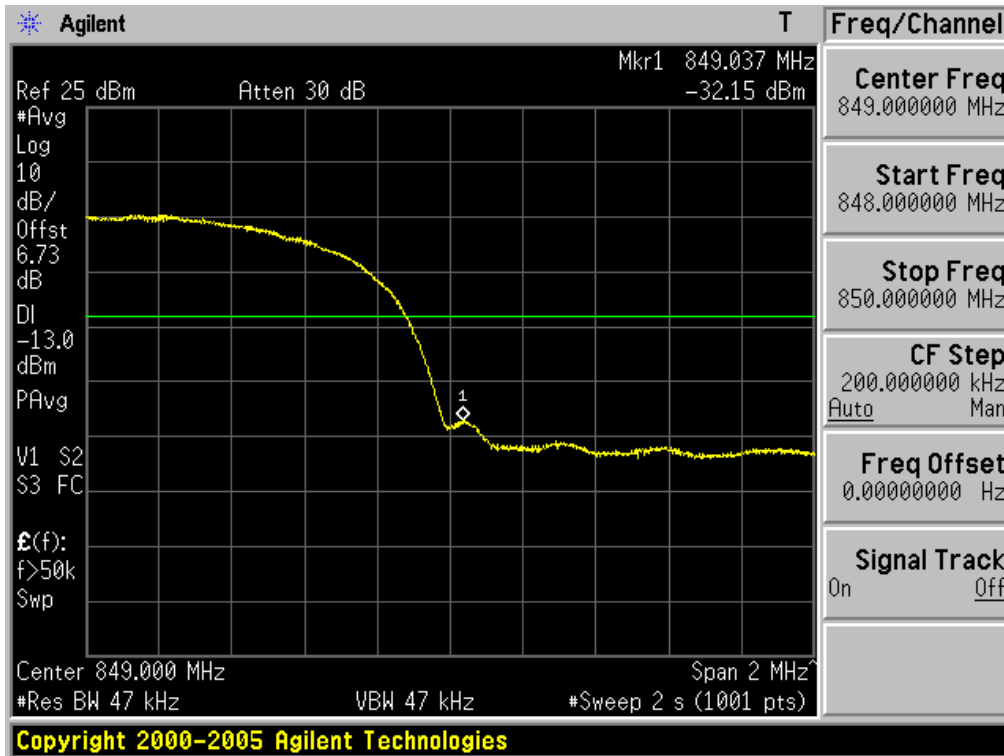


Test Plots

- Conducted Spurious WCDMA PCS Band Ch.9262

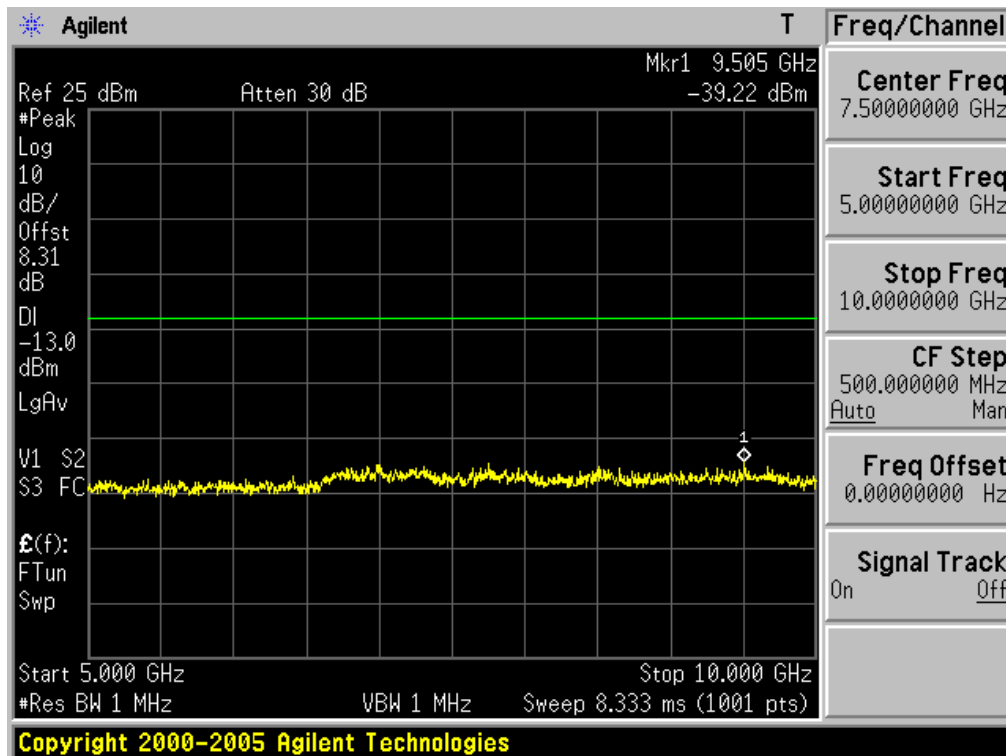
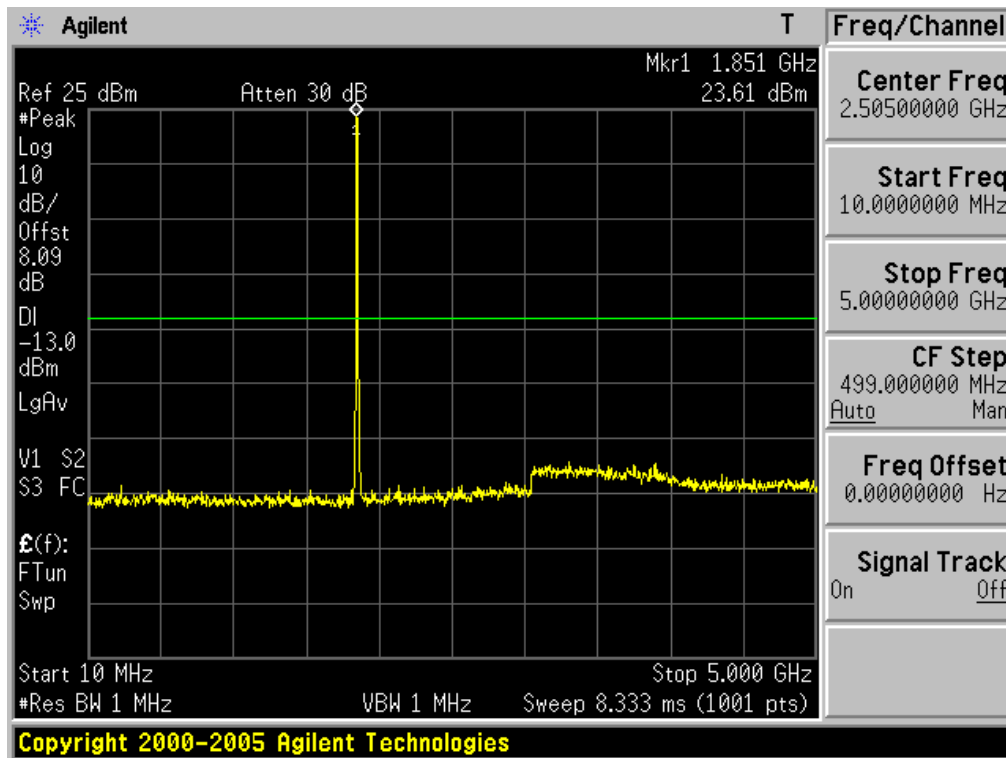


Test Plots

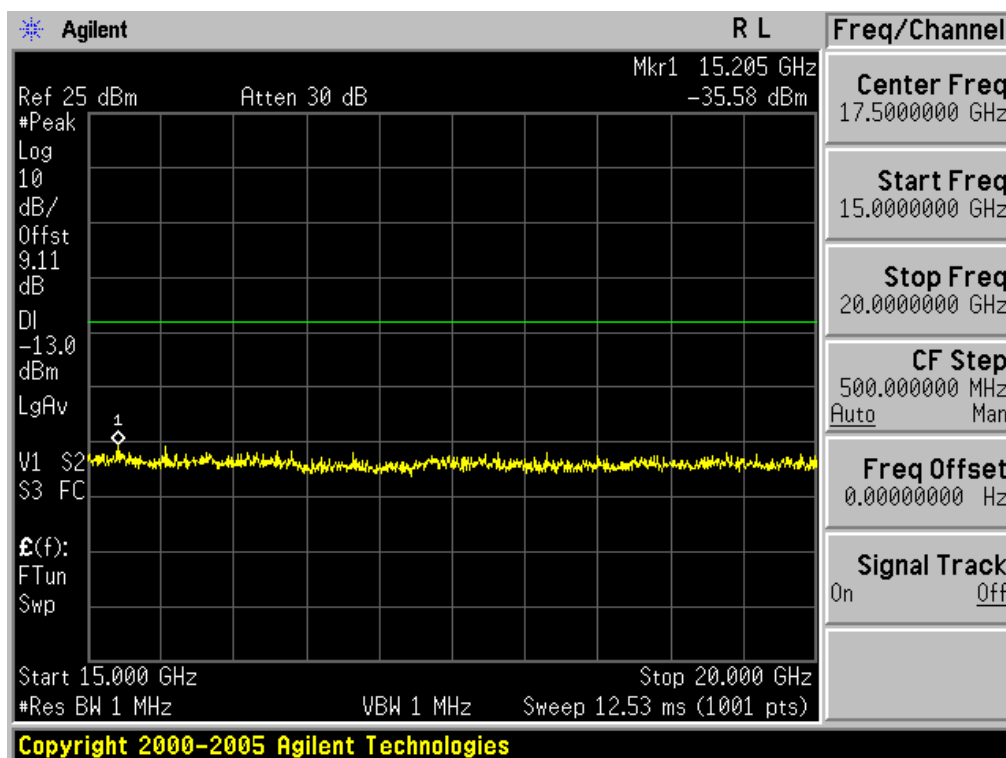
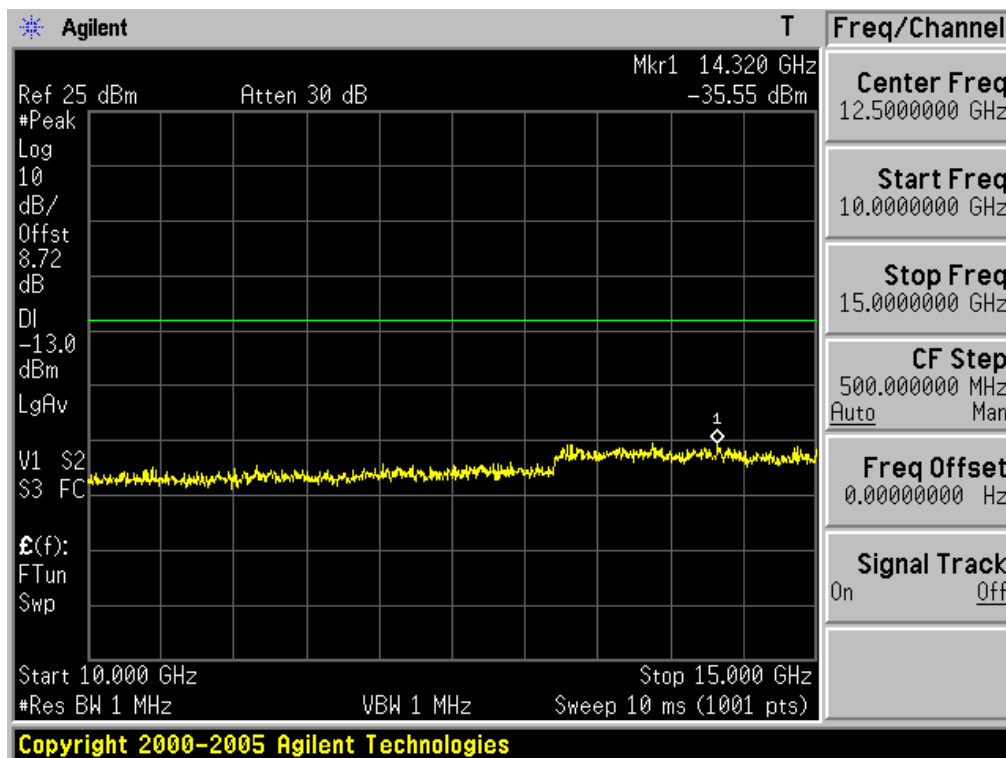


Test Plots

- Conducted Spurious WCDMA PCS Band Ch.9400

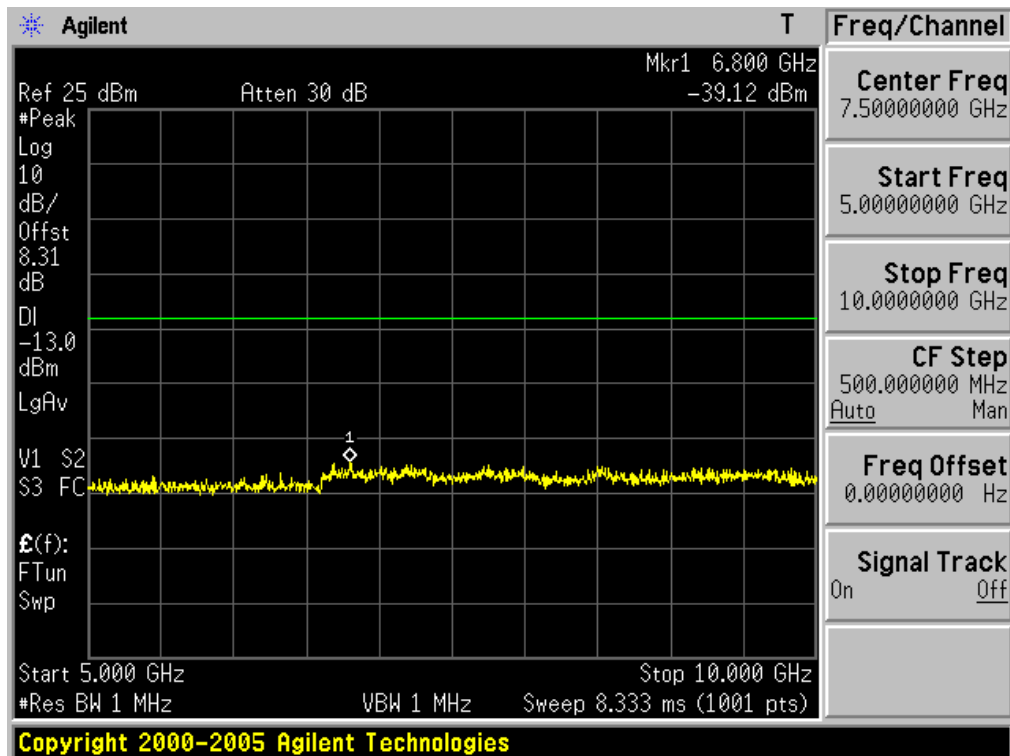
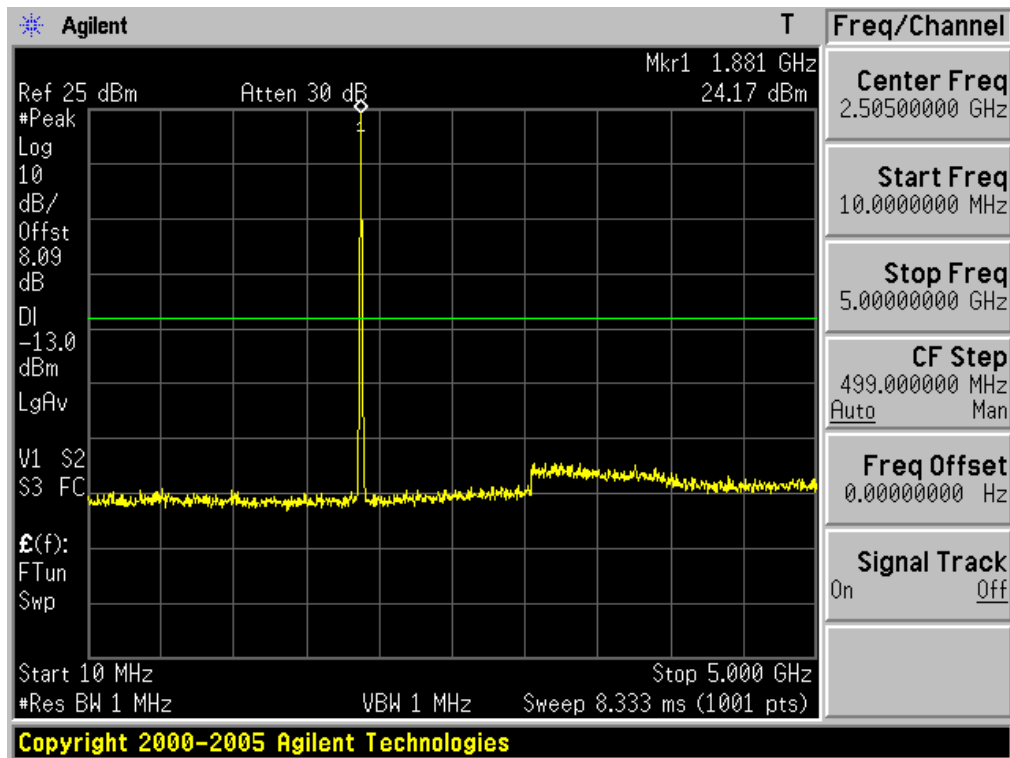


Test Plots

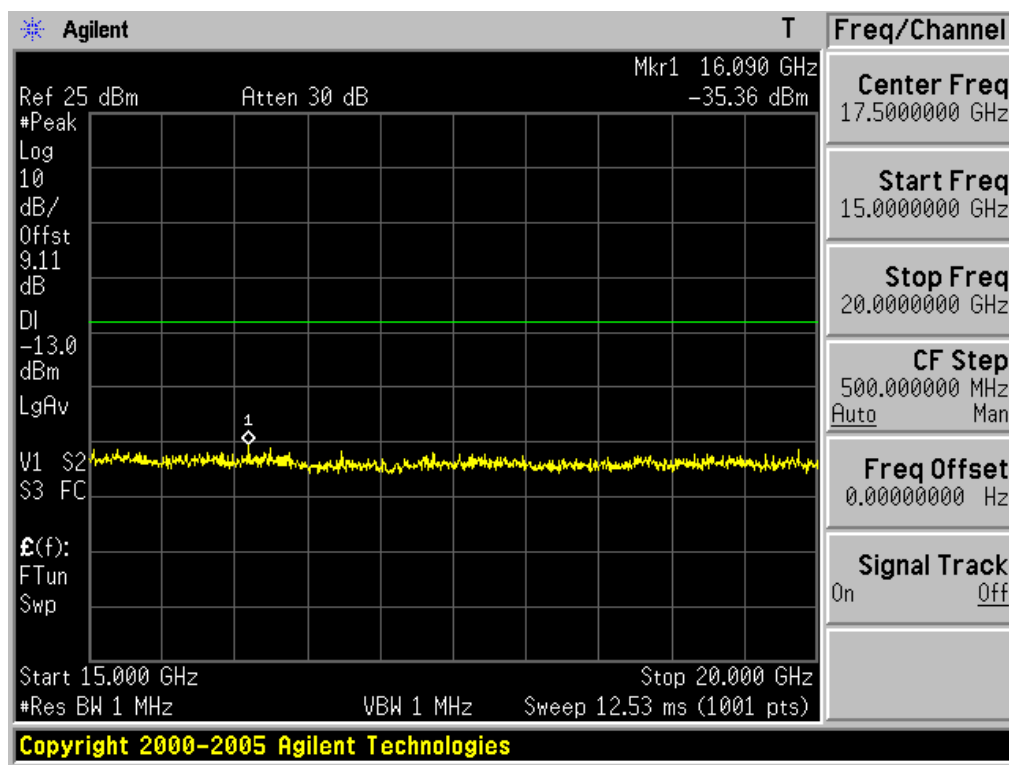
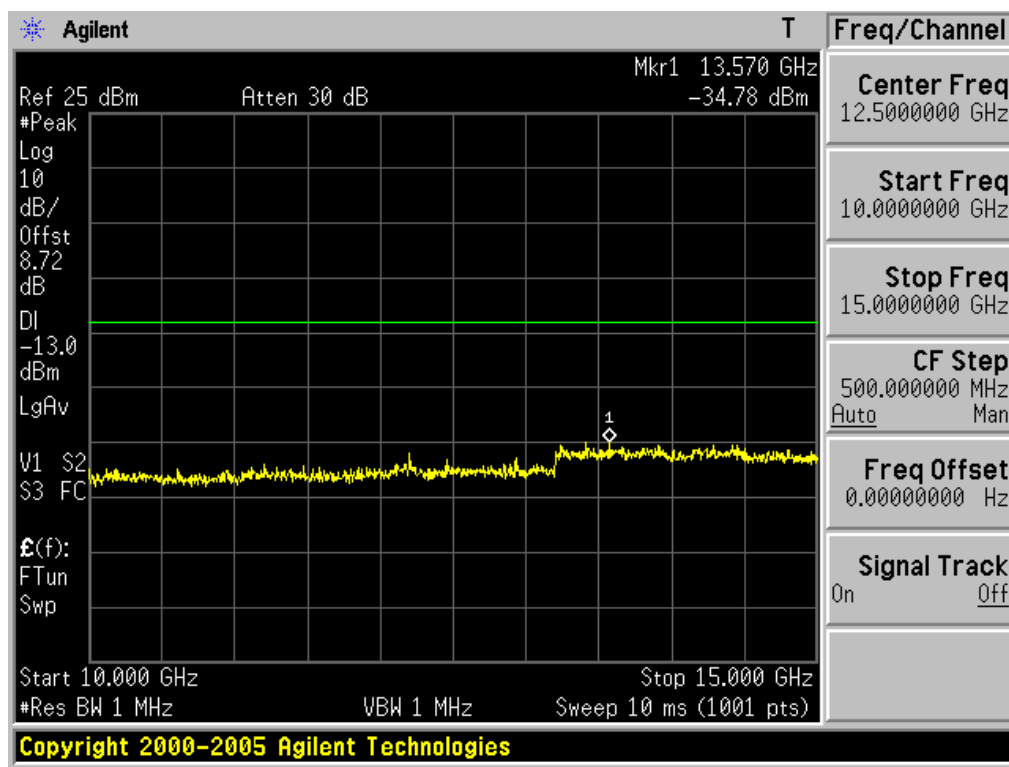


Test Plots

- Conducted Spurious WCDMA PCS Band Ch.9538

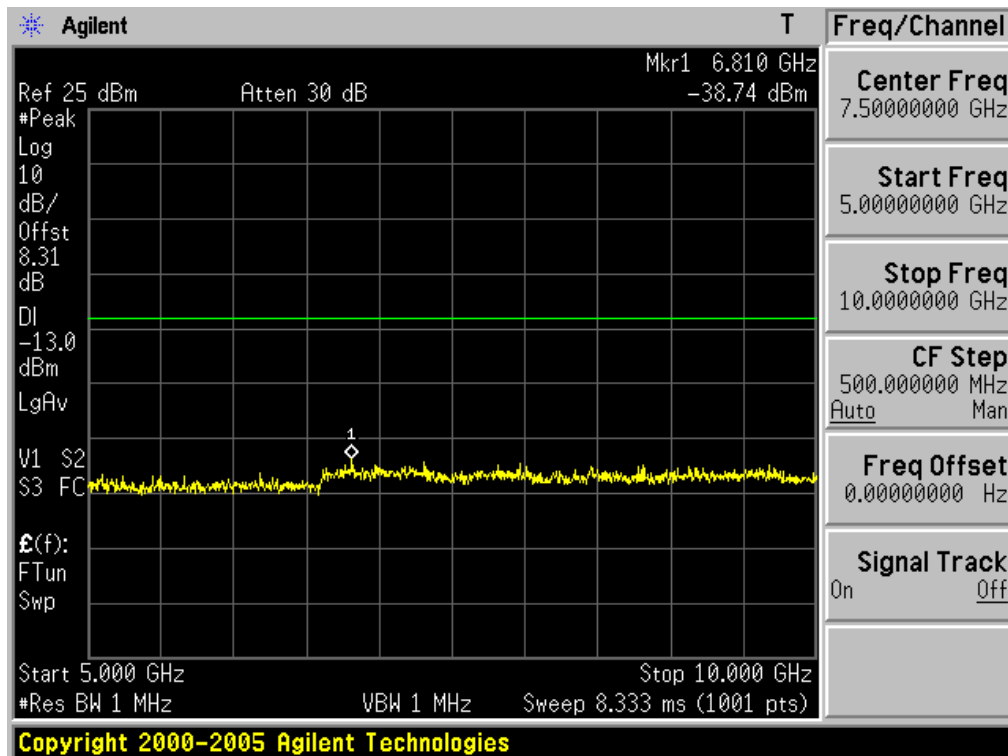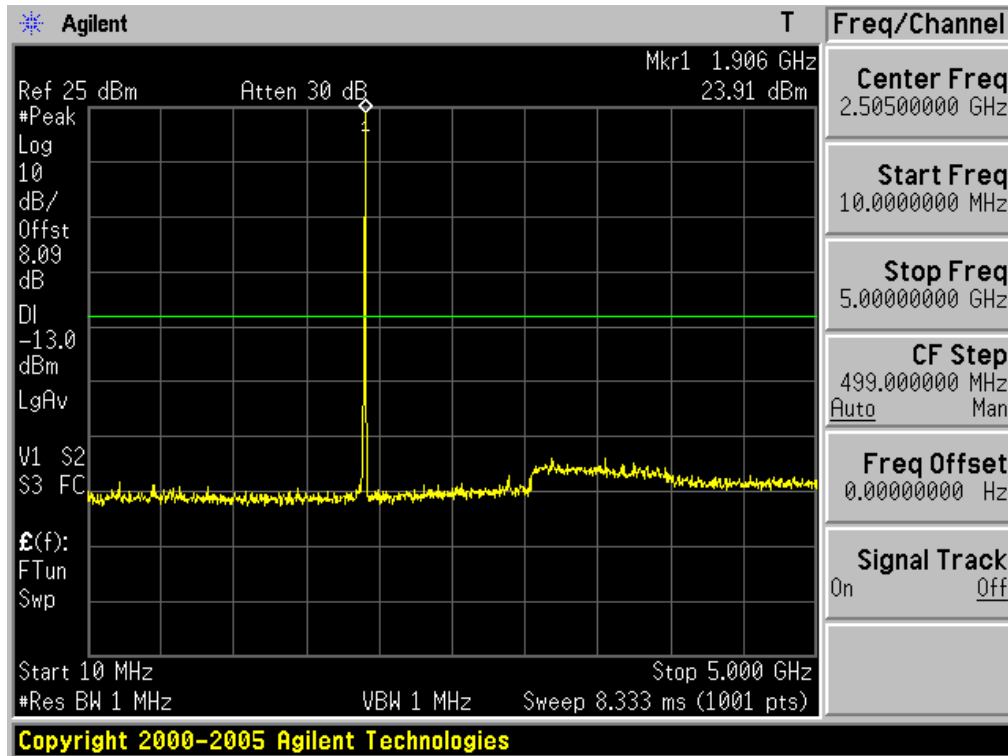


Test Plots

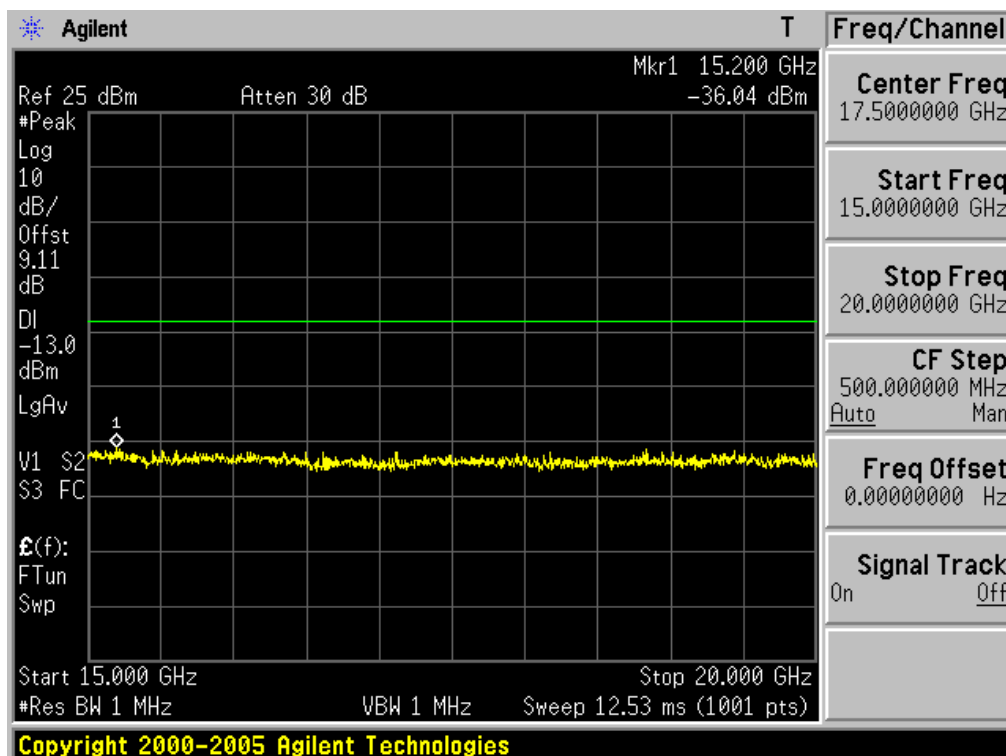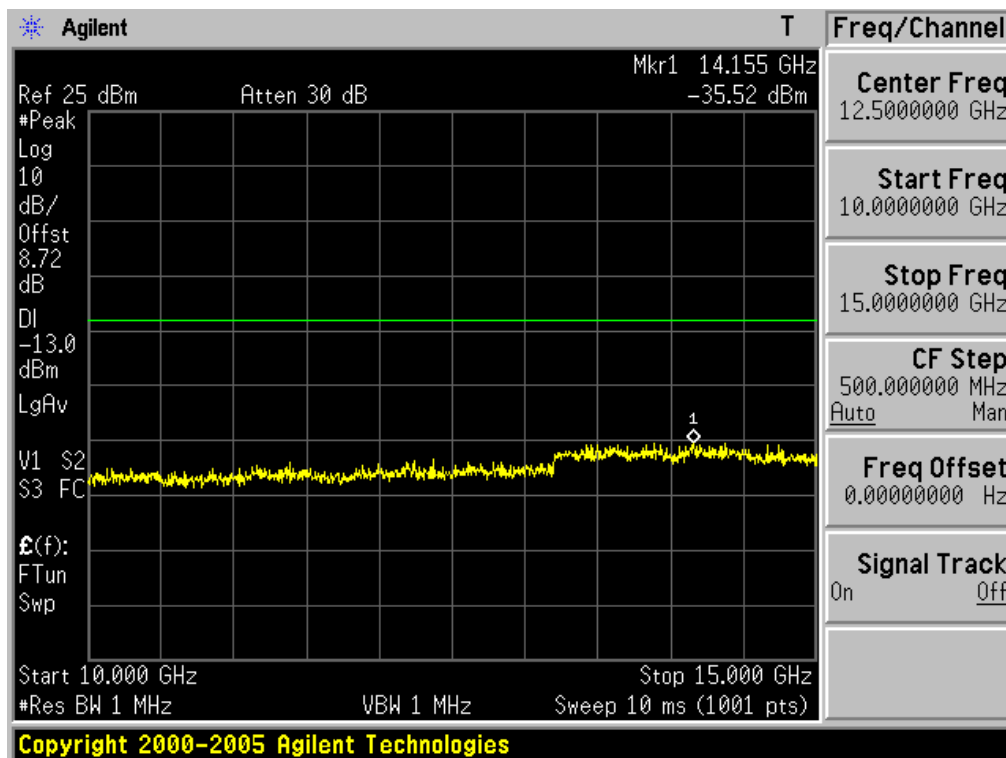


Test Plots

- Occupied Bandwidth. WCDMA PCS Band Ch. 9262

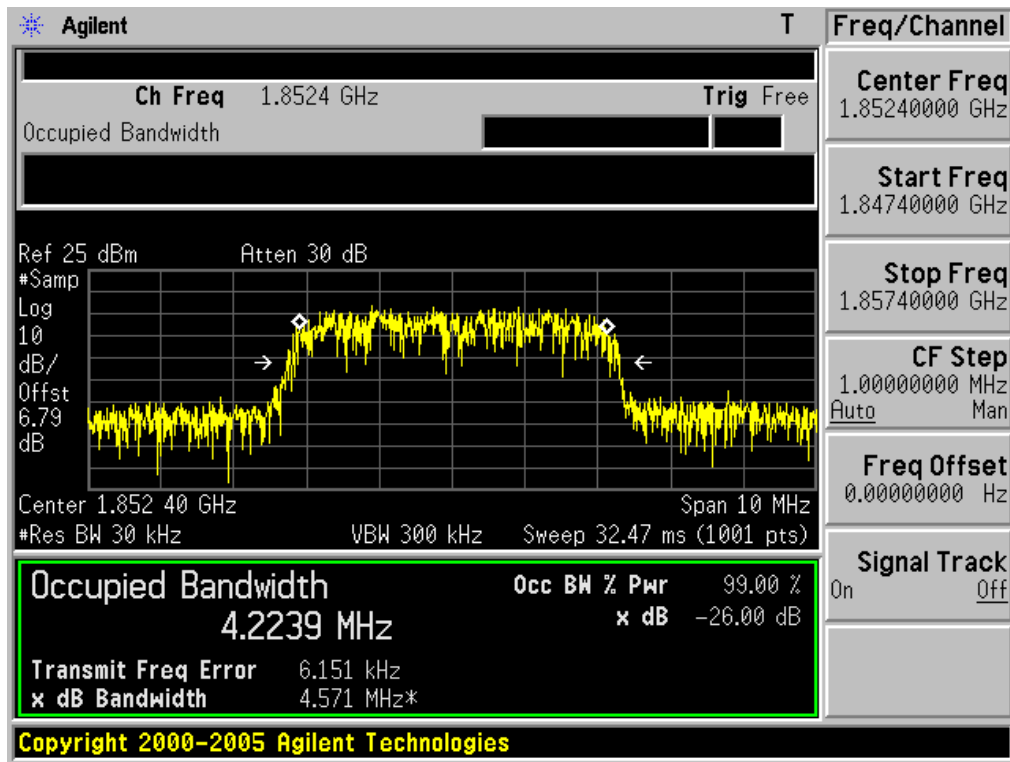


- Occupied Bandwidth. WCDMA PCS Band Ch. 9400

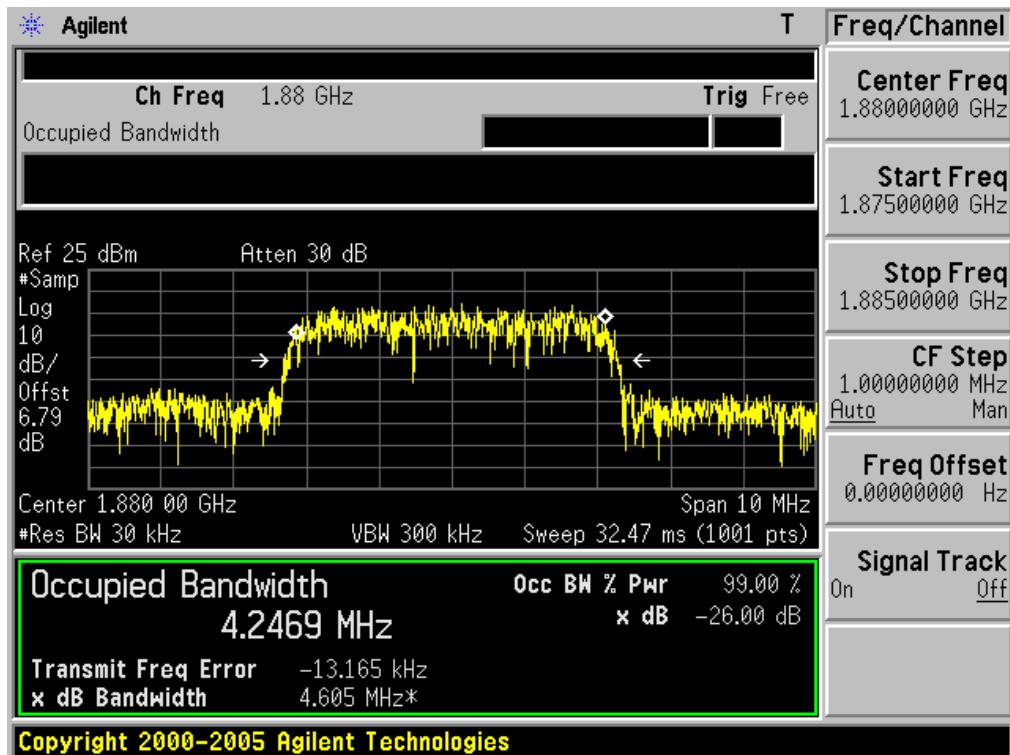



Test Plots

- Occupied Bandwidth. WCDMA PCS Band Ch. 9538

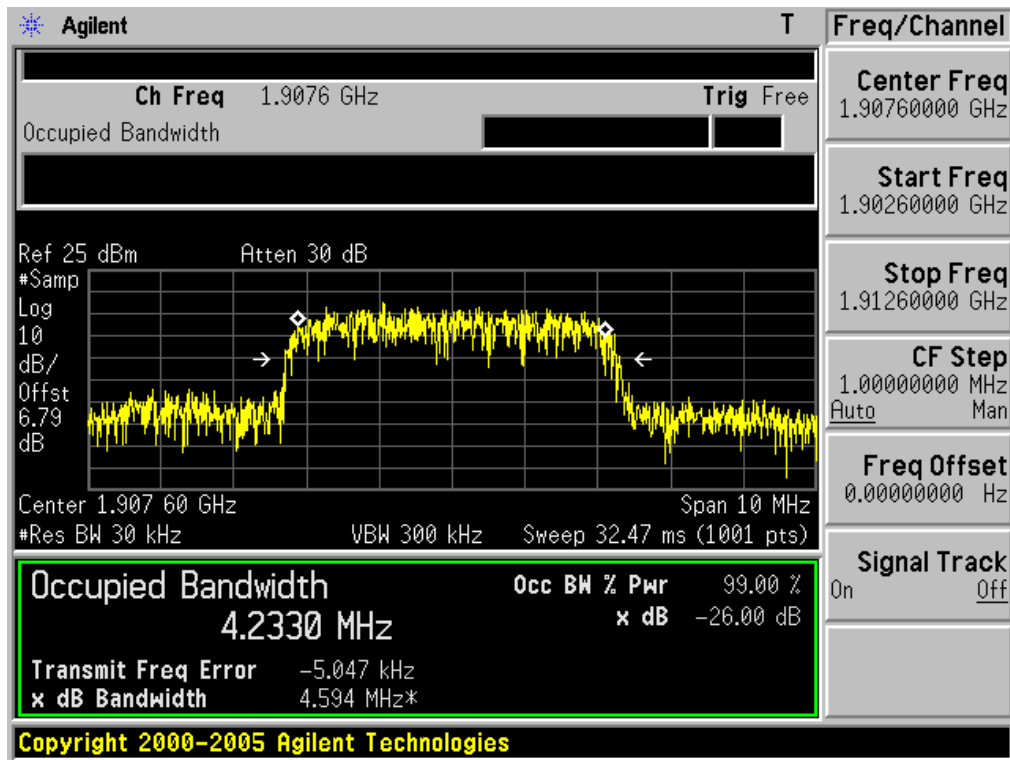

Test Plots

- Band Edge. WCDMA PCS Band Ch. 9262

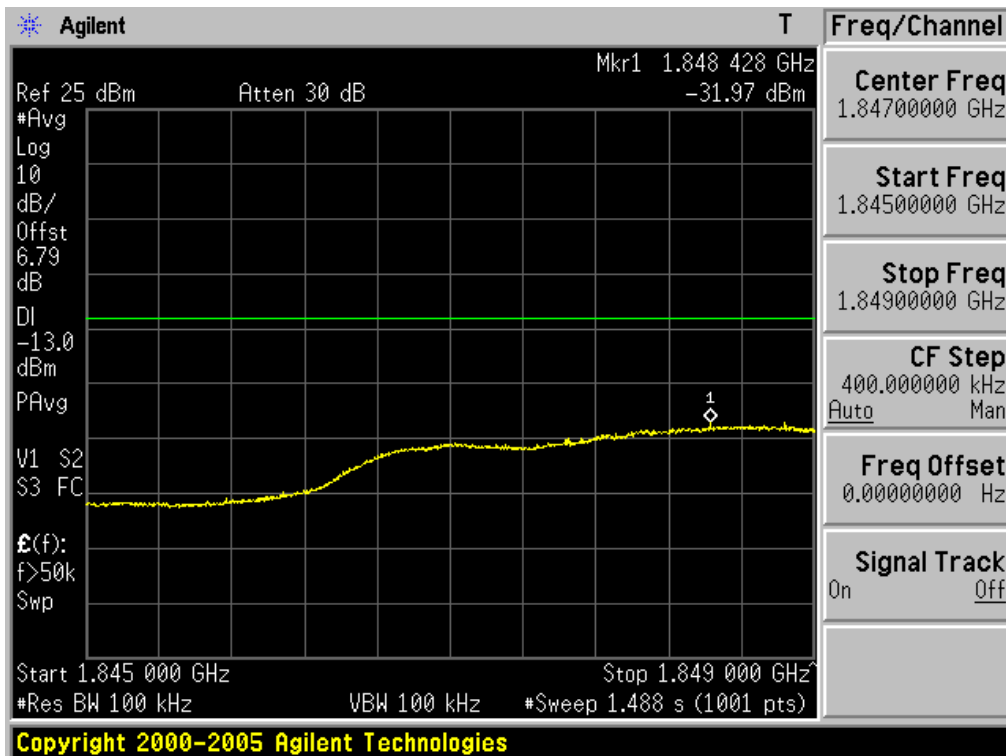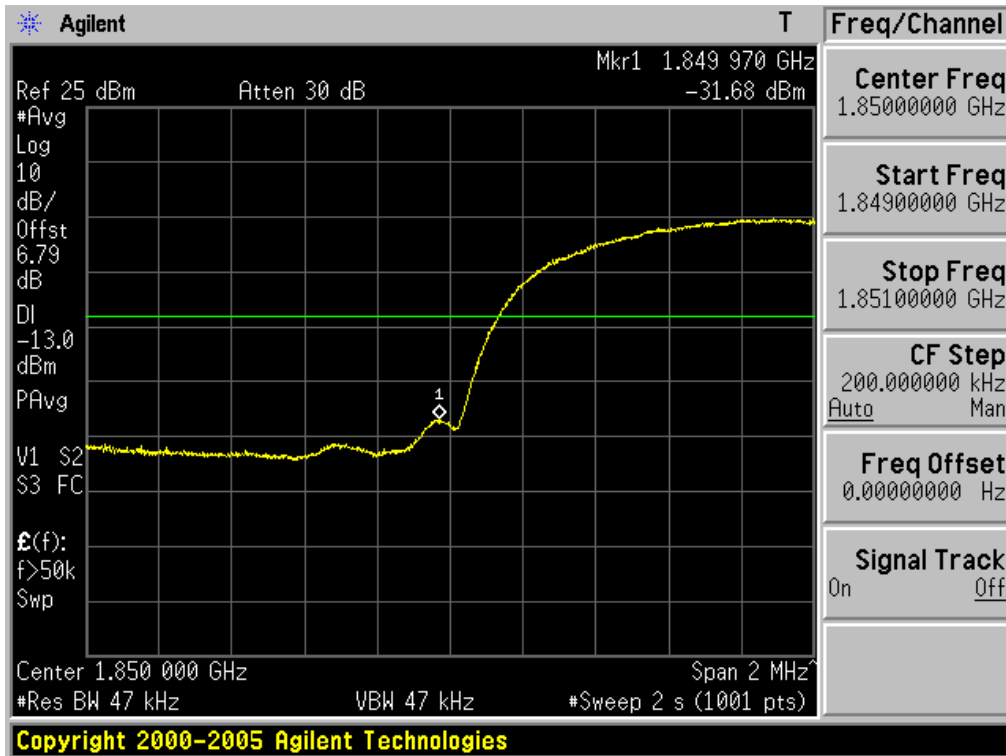

Test Plots

- Band Edge. WCDMA PCS Band Ch. 9538

