


ATTACHMENT

Test Plots


Test Plots

- Conducted Spurious CDMA Cellular Band Ch. 1013

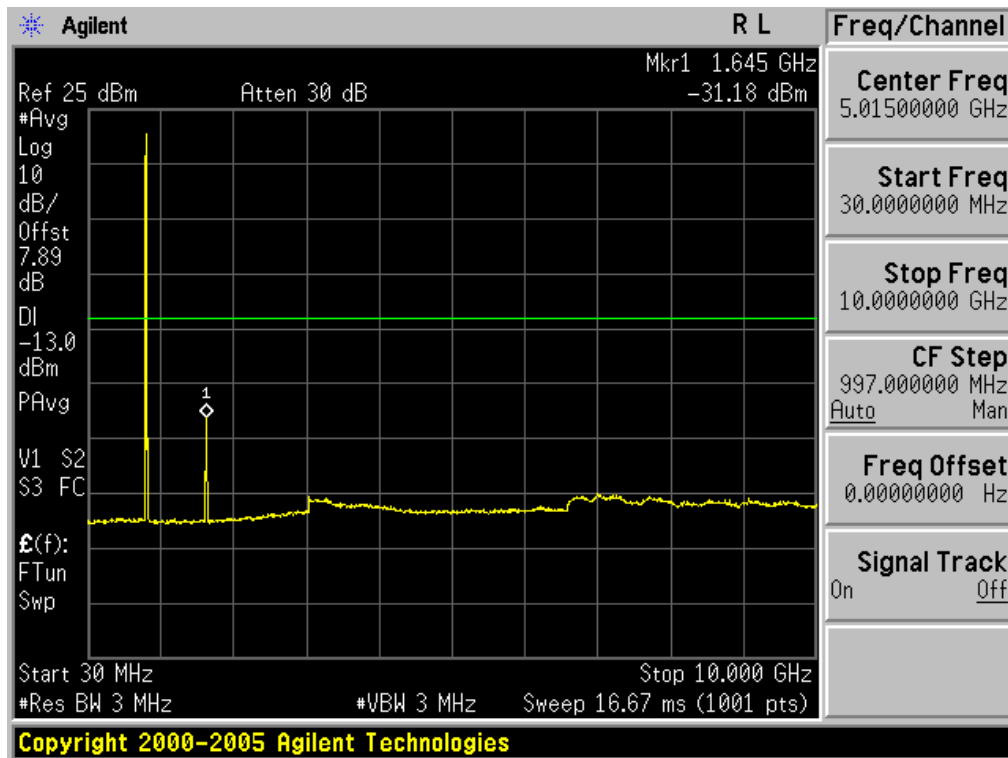


Test Plots

- Conducted Spurious CDMA Cellular Band Ch. 0384

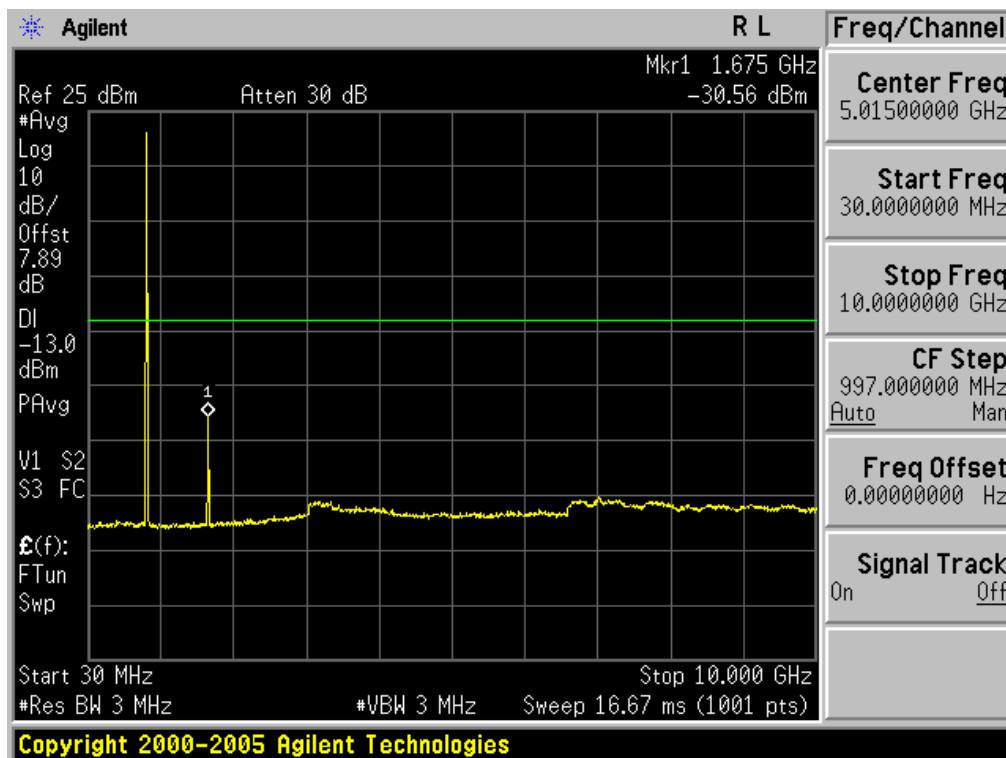


Test Plots

- Conducted Spurious CDMA Cellular Band Ch. 0777

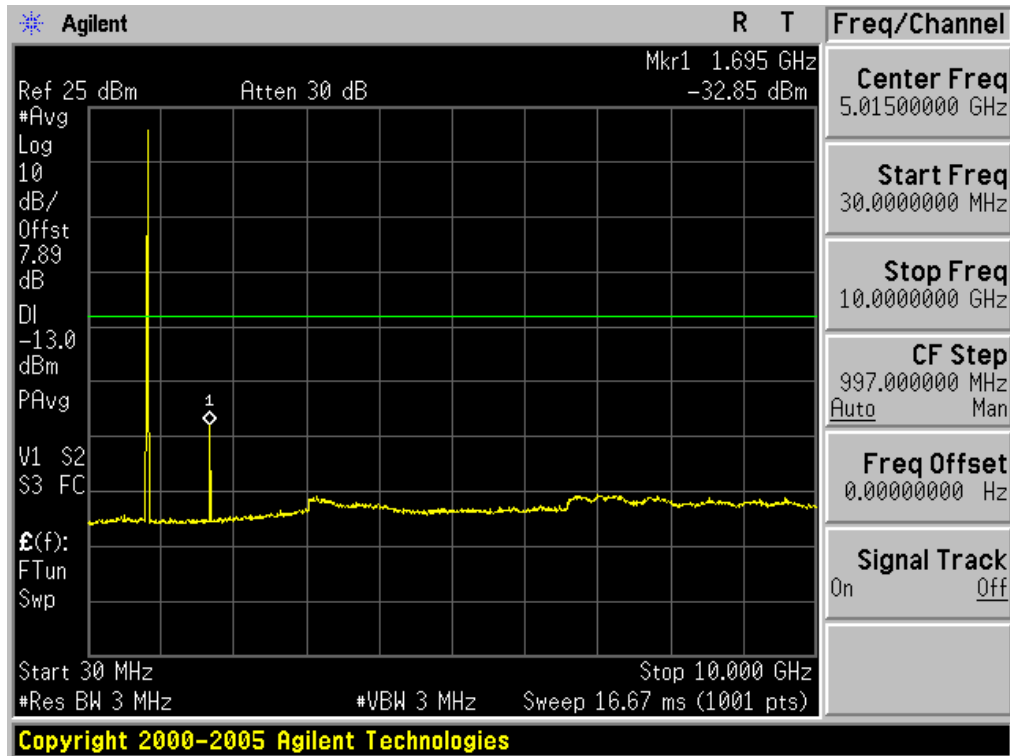


Test Plots

- Power Out. CDMA Cellular Band Ch. 1013

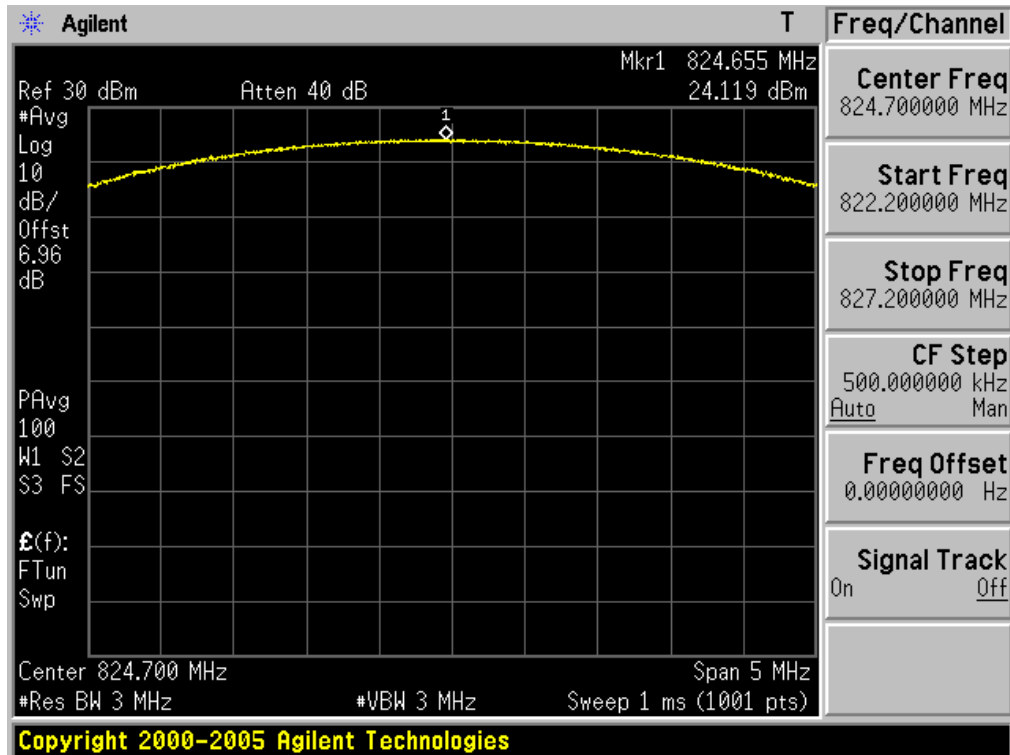


Test Plots

- Power Out. CDMA Cellular Band Ch. 0384

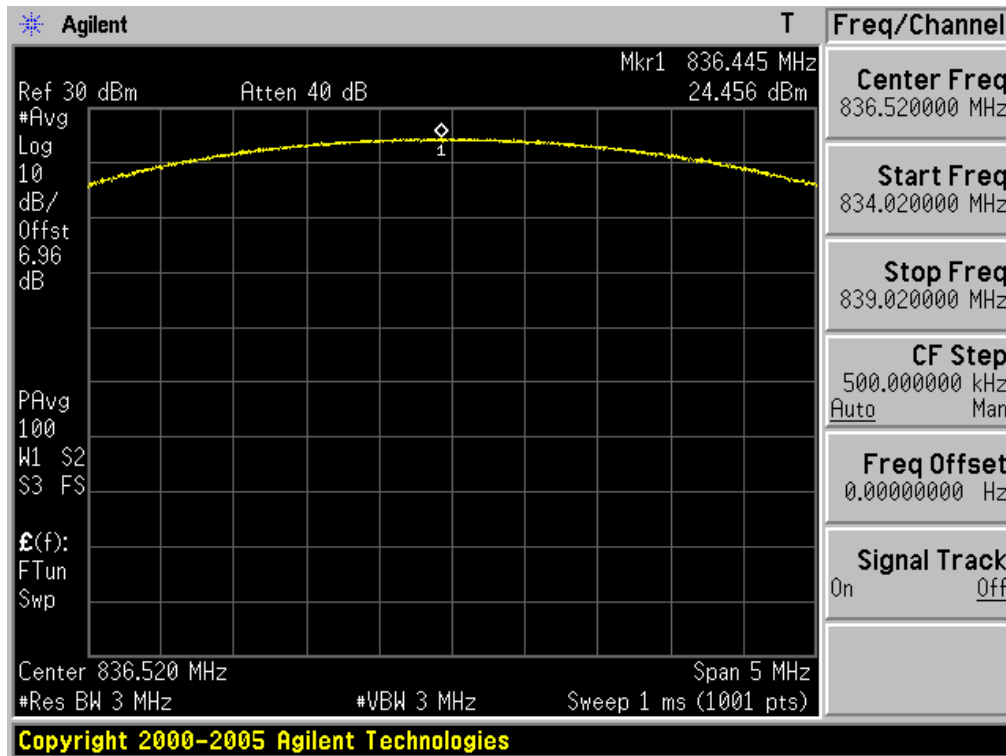


Test Plots

- Power Out. CDMA Cellular Band Ch. 0777

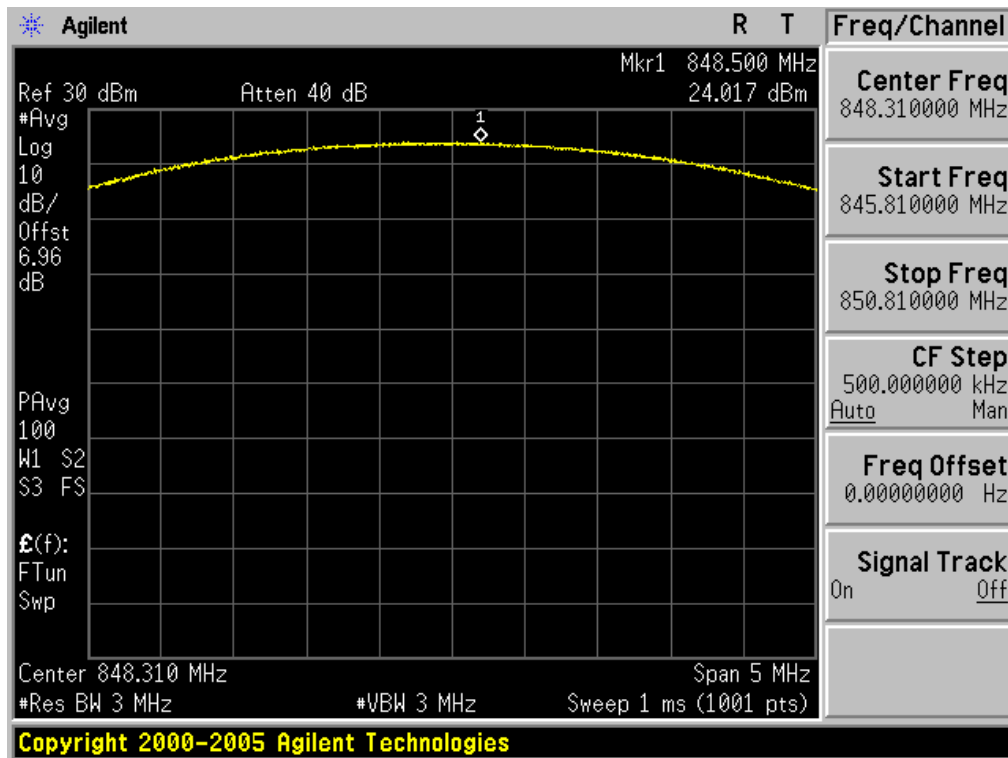


Test Plots

- Occupied Bandwidth. CDMA Cellular Band Ch. 0384

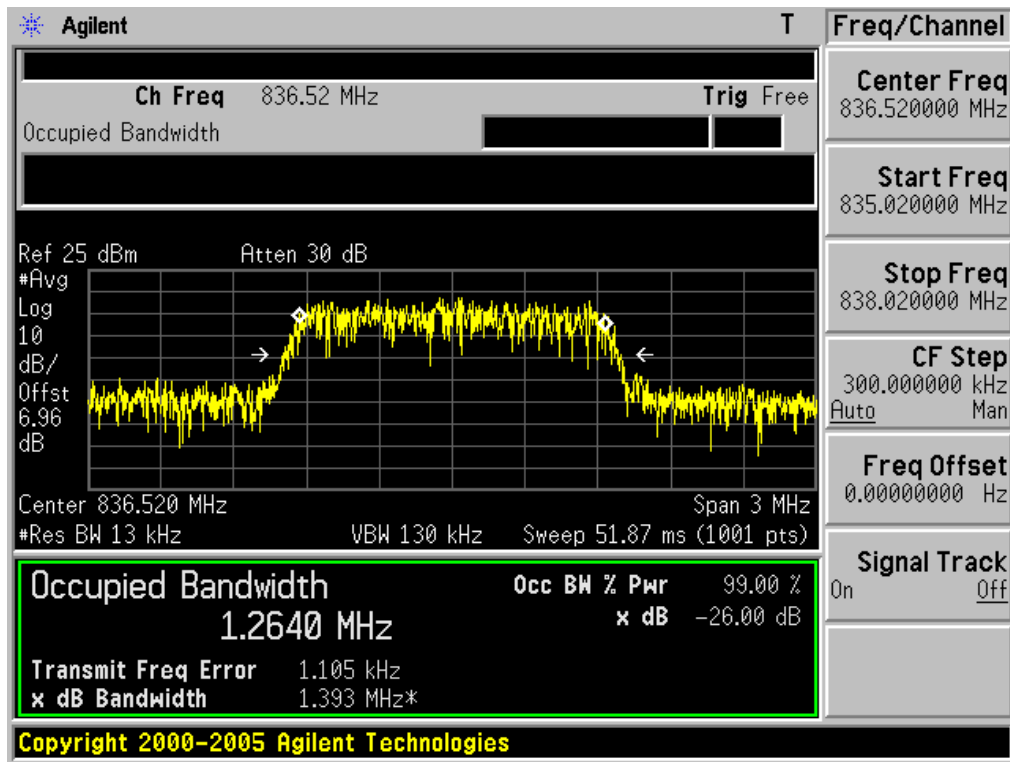


- Channel Power. CDMA Cellular Band Ch. 0384

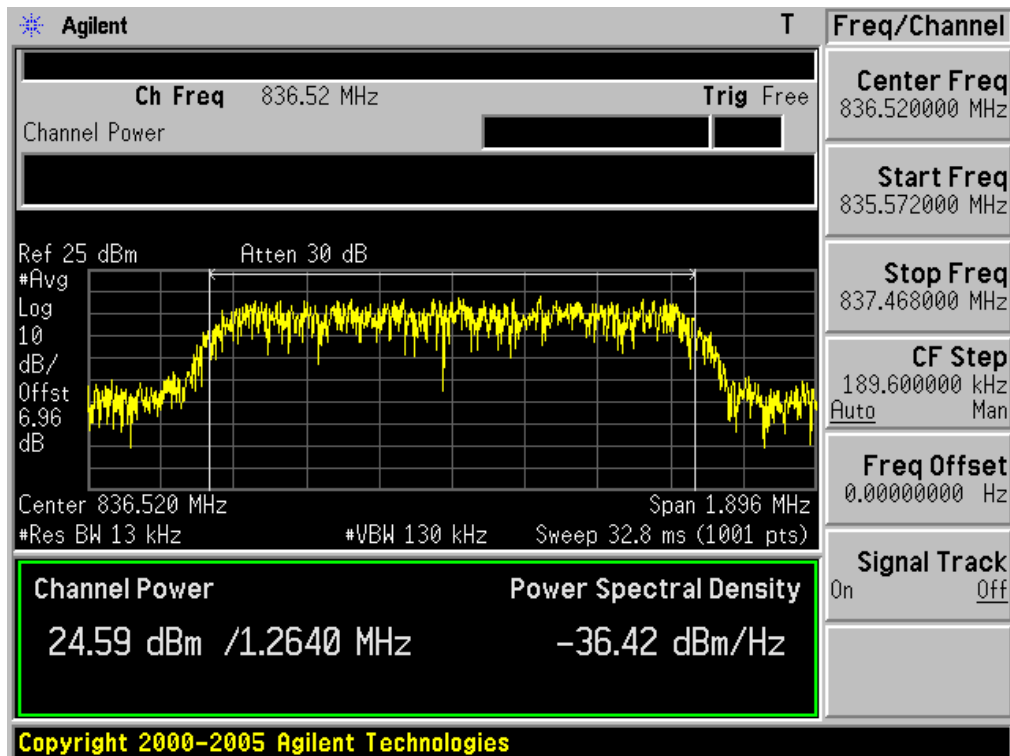


Test Plots

- Band Edge. CDMA Cellular Band Ch. 1013

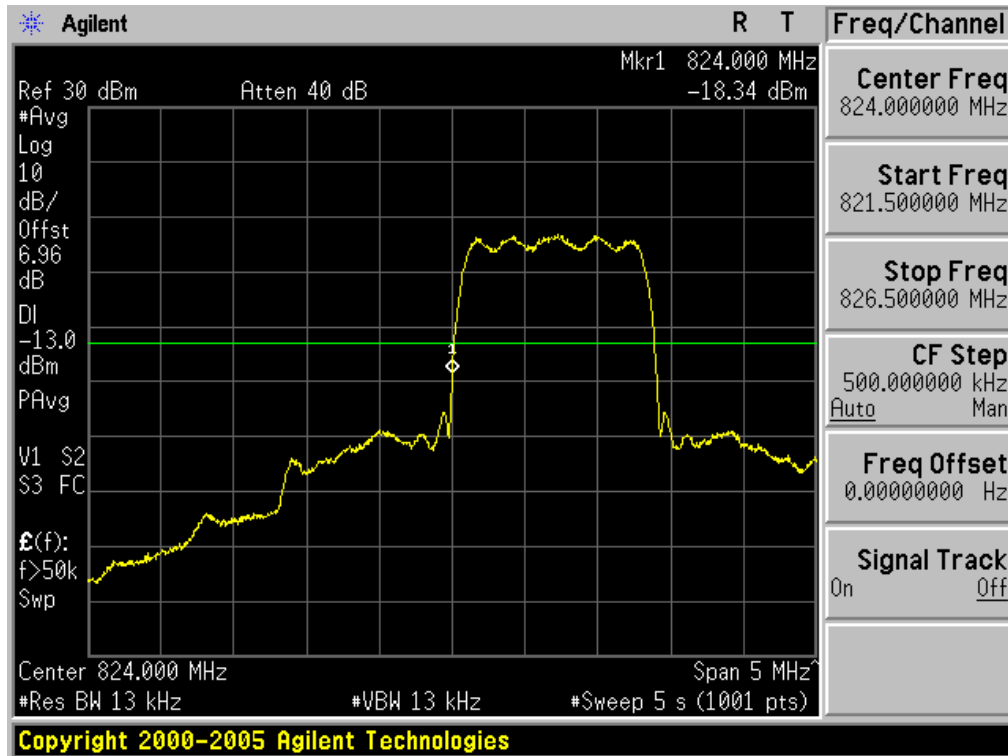


Test Plots

- Band Edge. CDMA Cellular Band Ch. 0777

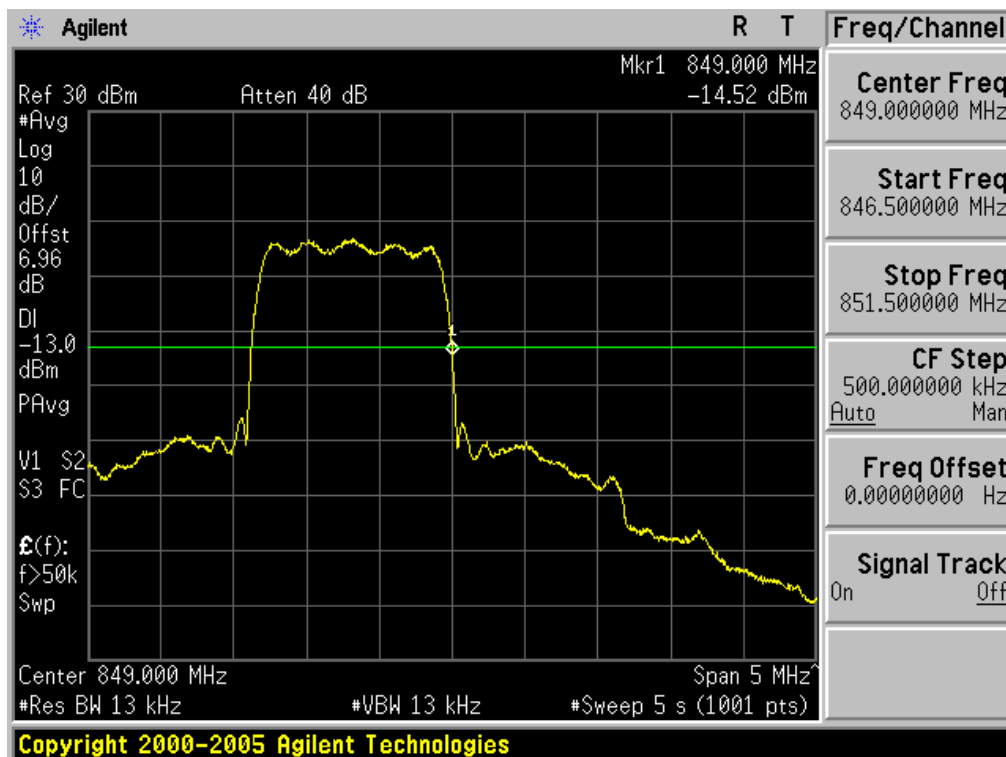


Test Plots

- Conducted Spurious CDMA PCS Band Ch. 0025

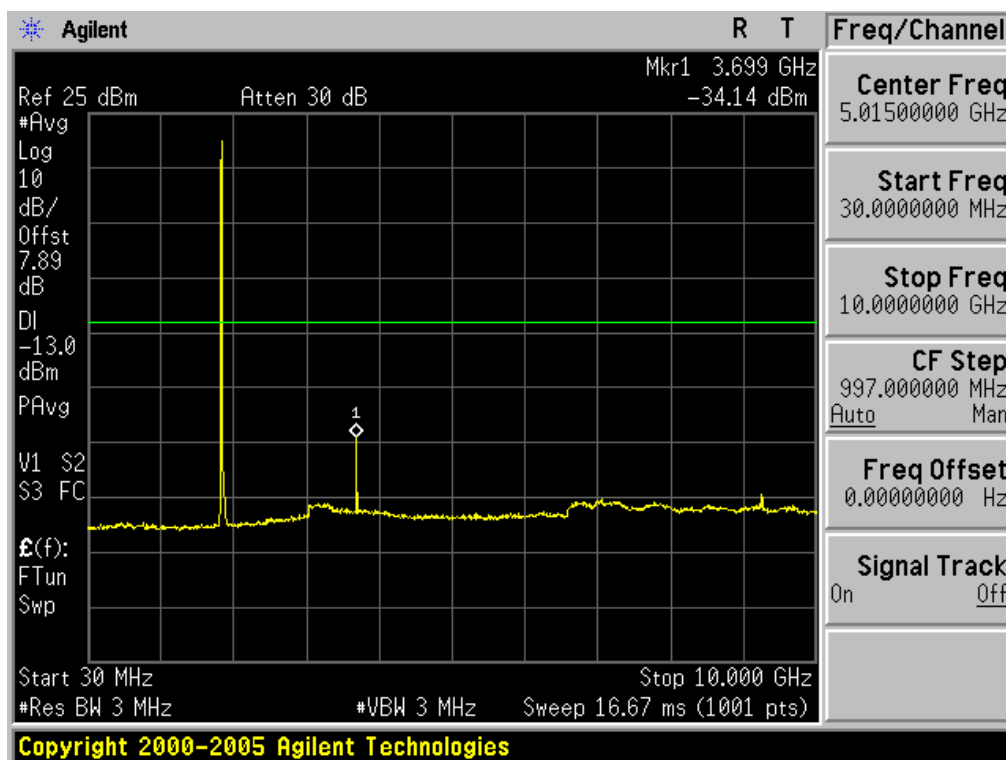


Test Plots

- Conducted Spurious CDMA PCS Band Ch. 0600

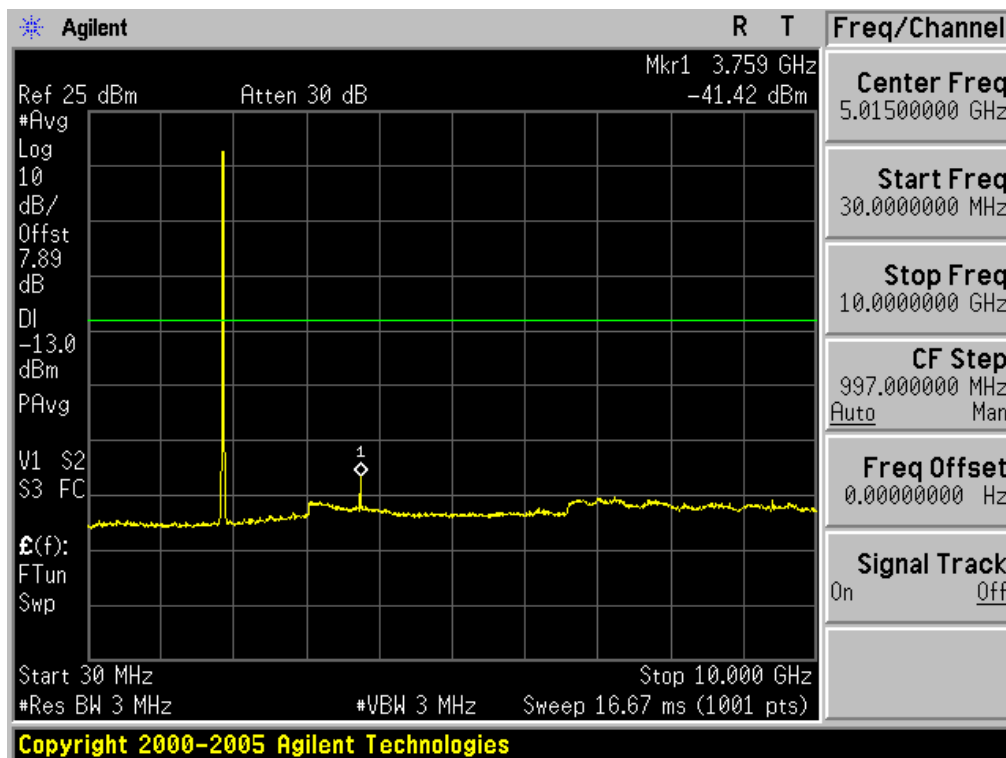


Test Plots

- Conducted Spurious CDMA PCS Band Ch. 1175

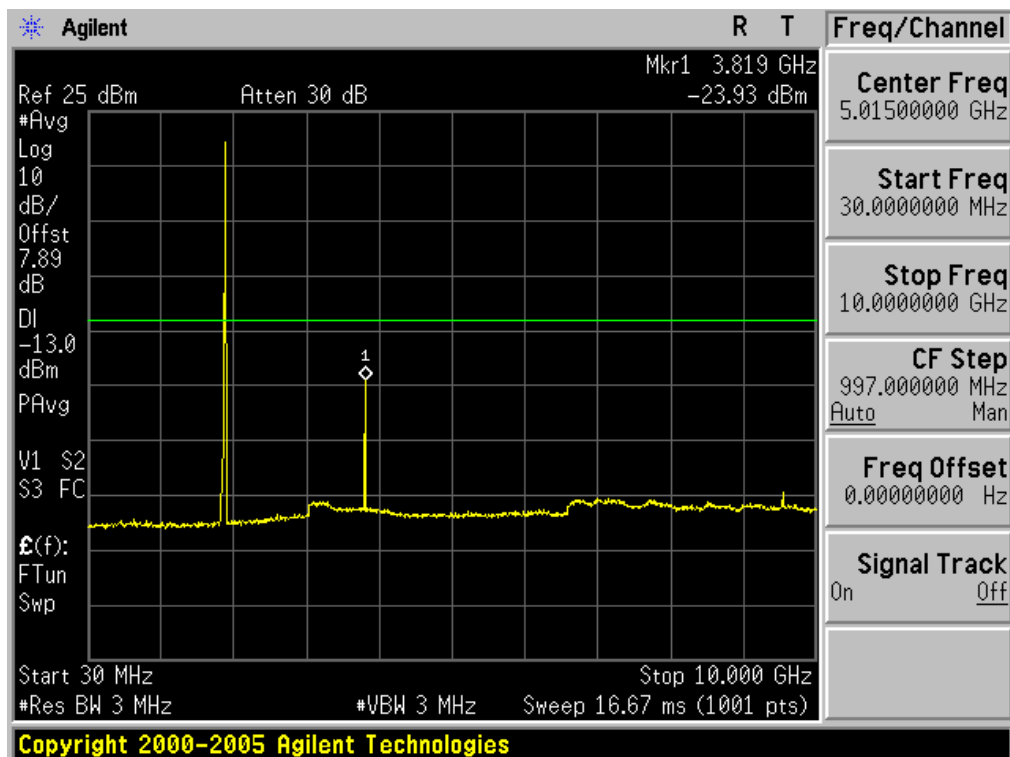


Test Plots

- Power Out. CDMA PCS Band Ch. 0025

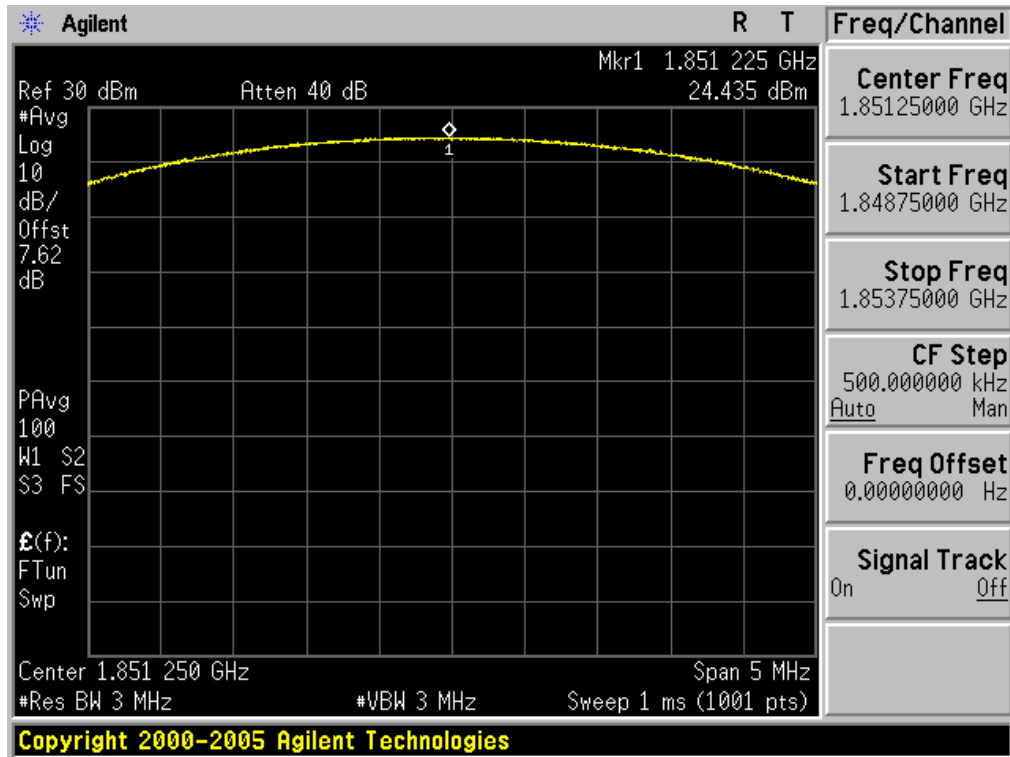


Test Plots

- Power Out. CDMA PCS Band Ch. 0600

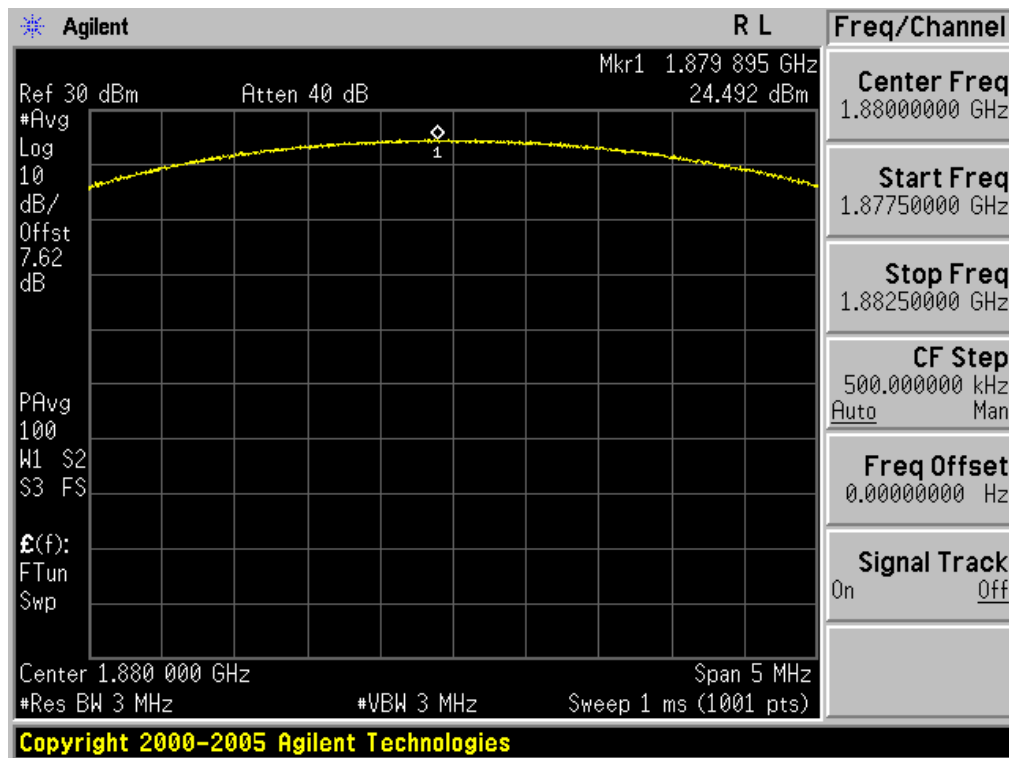


Test Plots

- Power Out. CDMA PCS Band Ch. 1175

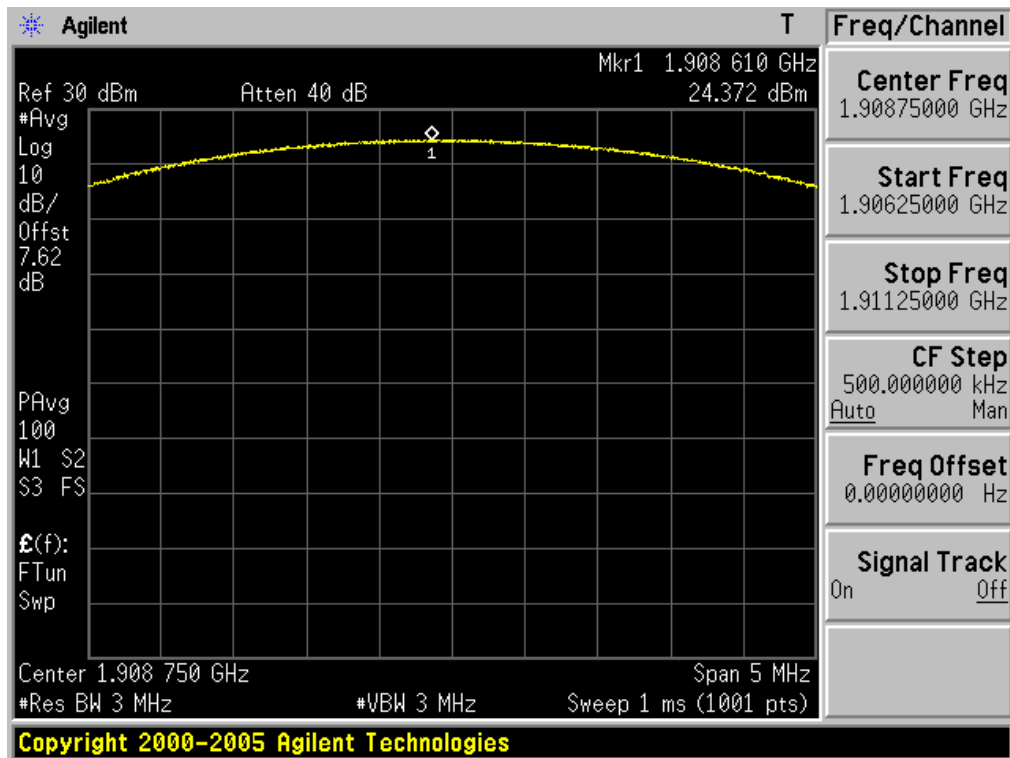


Test Plots

- Occupied Bandwidth. CDMA PCS Band Ch. 0600

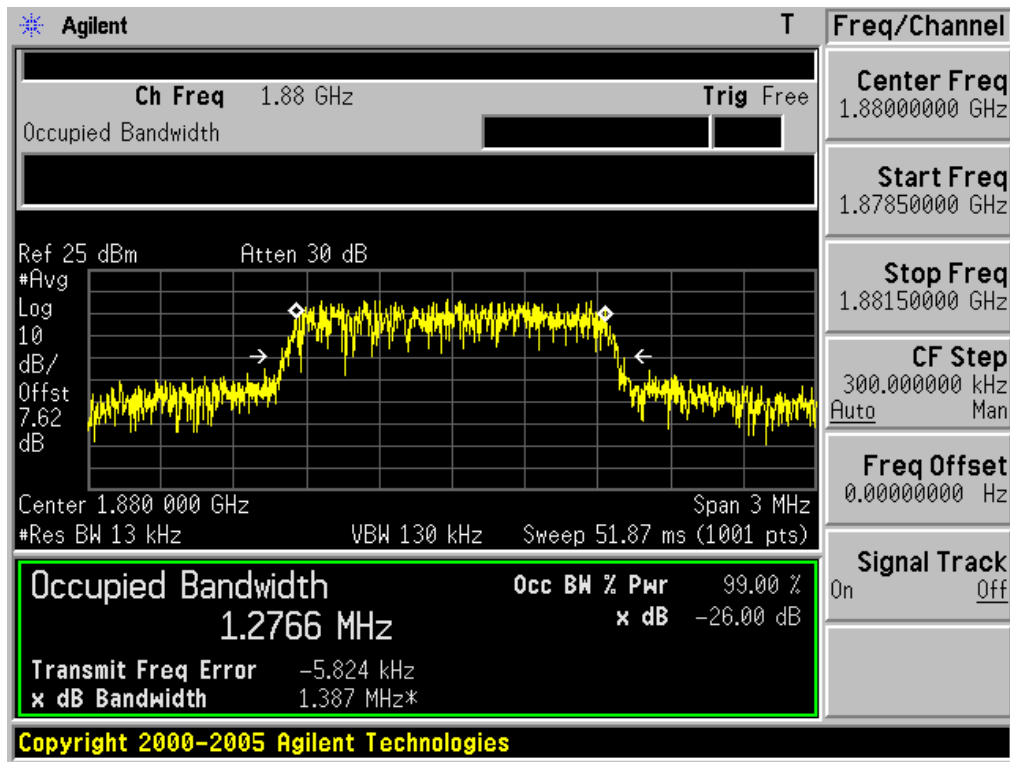


- Channel Power. CDMA PCS Band Ch. 0600

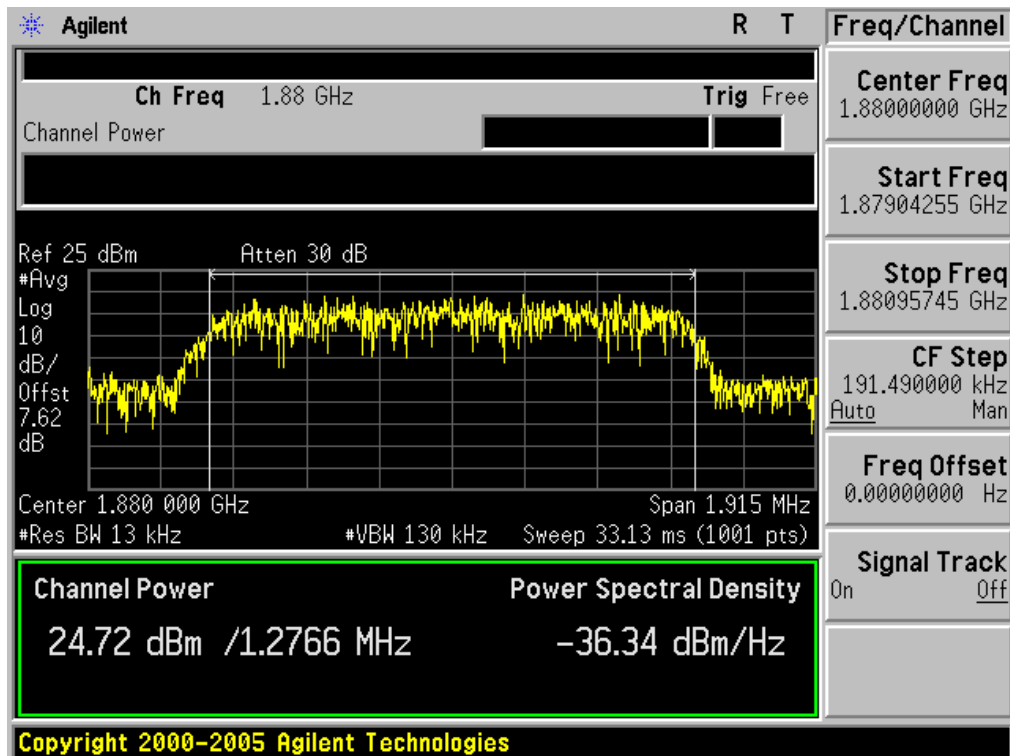

Test Plots

- Band Edge. CDMA PCS Band Ch. 0025

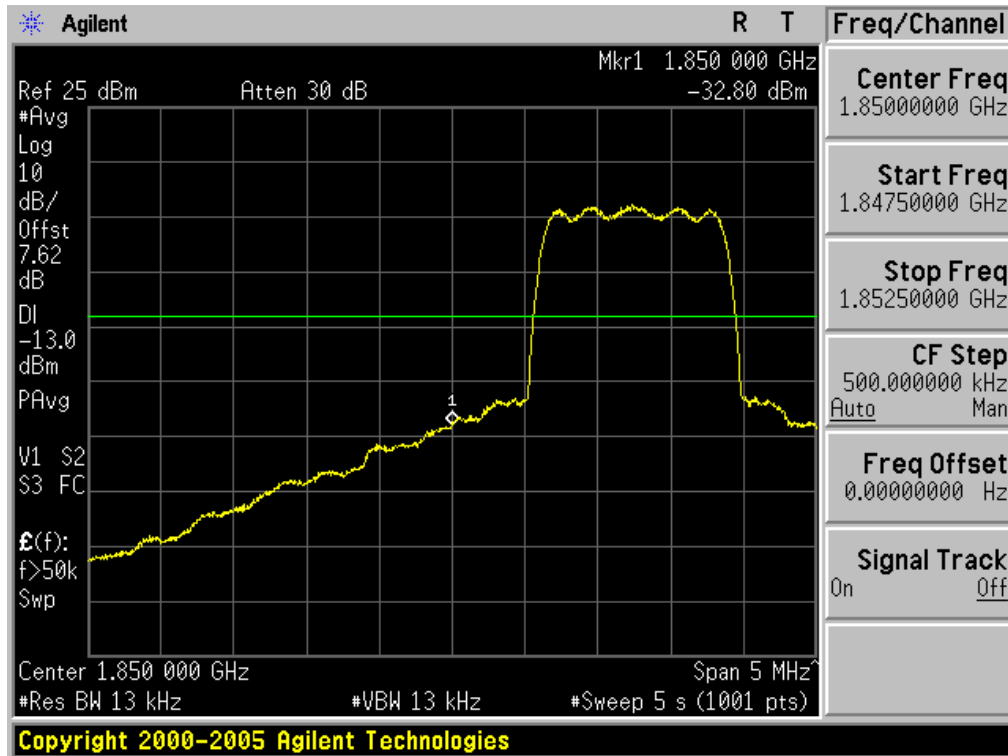

Test Plots

- Band Edge. CDMA PCS Band Ch. 1175

