



Parts List

Dish Assembly

1

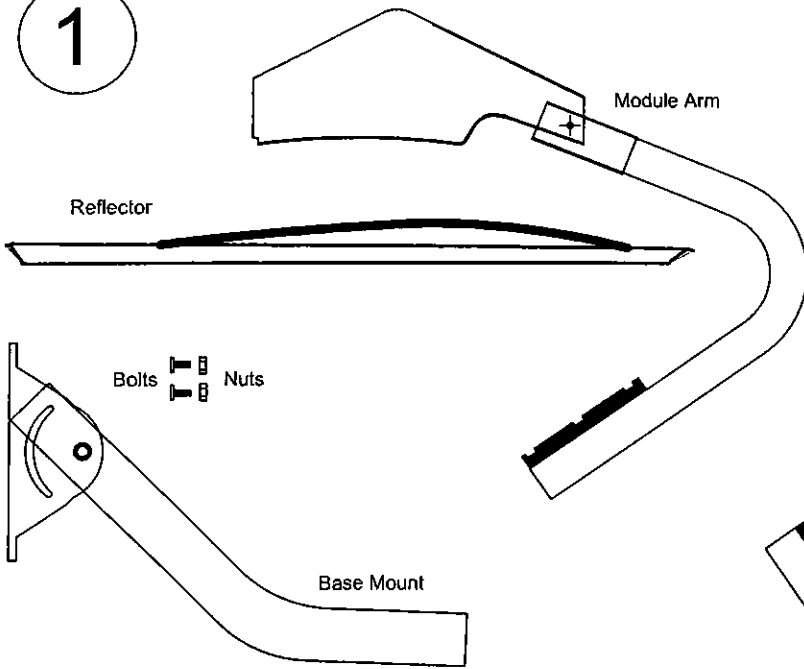

2

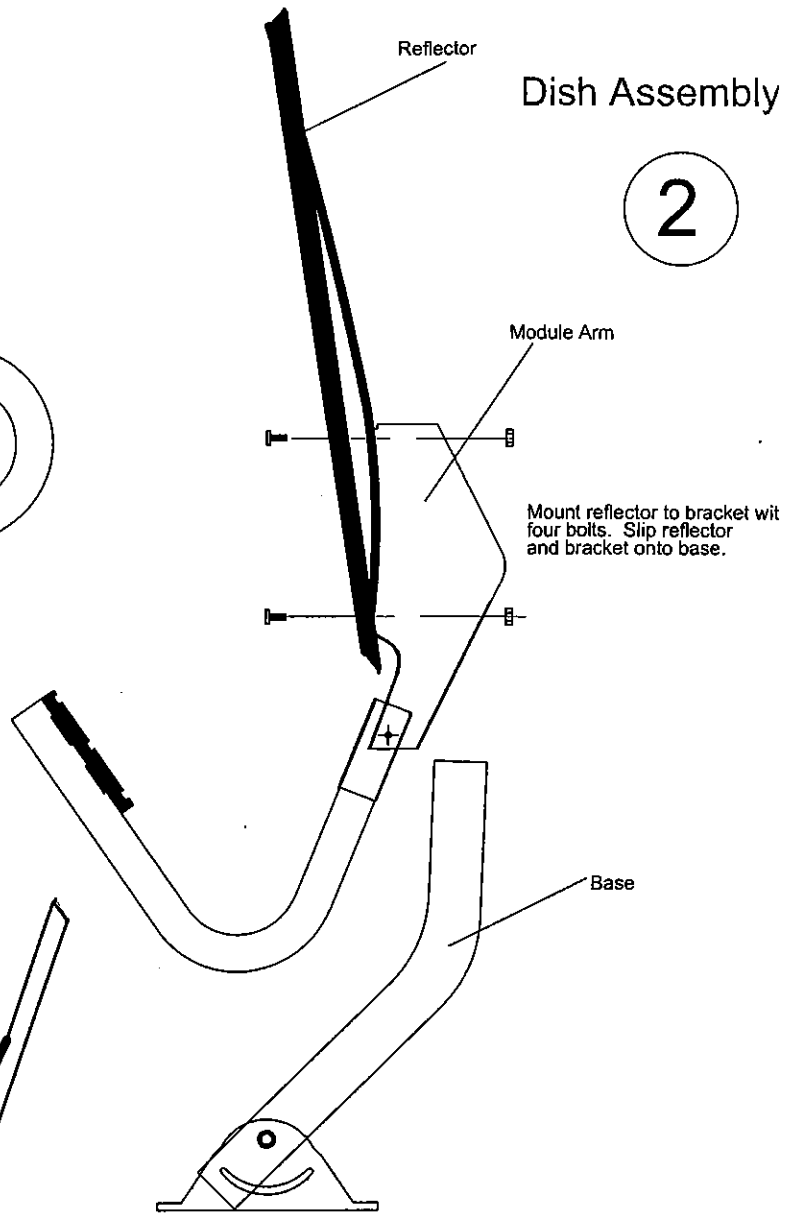


3

Dish Mounting and Aiming

Boresite line. Approximately the bottom edge of the module arm where it touches the dish to the little step features molded into the upper portion of the Canopy case.

Aim for max RSSI and lowest Jitter.
No need for the Base tube to be plumb.

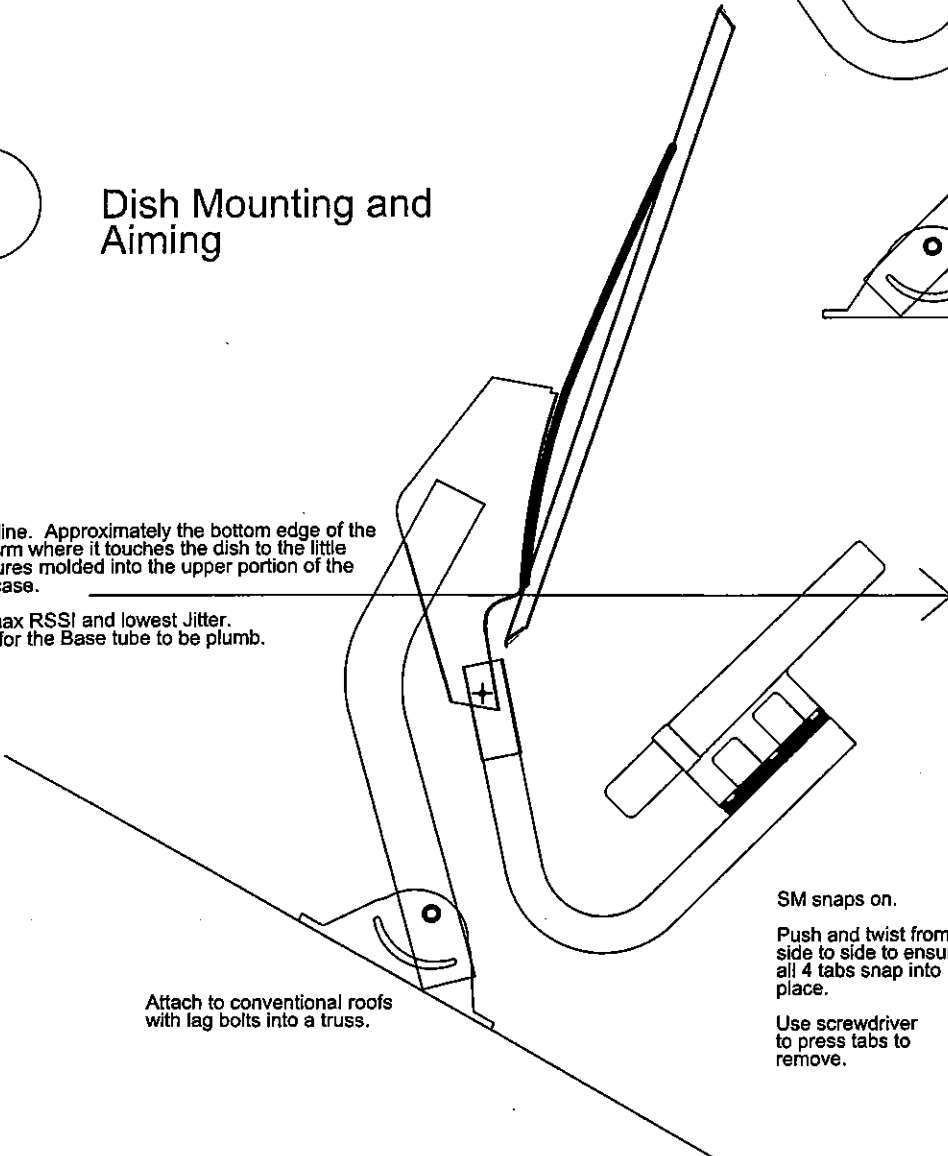

Attach to conventional roofs with lag bolts into a truss.

SM snaps on.

Push and twist from side to side to ensure all 4 tabs snap into place.

Use screwdriver to press tabs to remove.