

# Mounting Instruction


Rev Date 2005-08-18	Rev. 1.0	Document ID 105040
Prepared by Agnar Kopperud	Subject Resp. Agnar Kopperud	Approved by Ole Christian Sørli
Modem Unit Label Placement of label		

## 1. GENERAL

Placement and quantities of labels described in this document.

Label number	Label ID <sup>1</sup>	Quantity <sup>2</sup>
105041	A	1

## 2. PLACEMENT

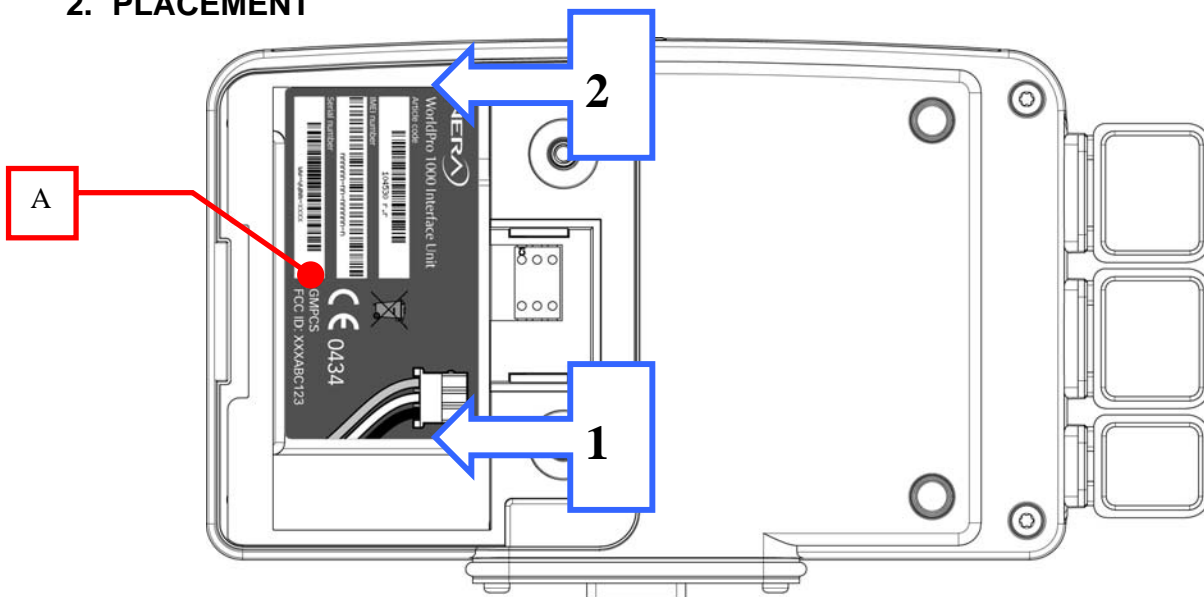

**Figure 1 - Placement of Label A**

The label A should be placed and oriented as shown in Figure 1 - Placement of Label A. Observe; Place the label with alignment of the side marked “1”. Ensure that the complete label is shown seen directly from underside of the modem. The edge of label (marked with “2”) shall be completely visible, and must NOT be hidden from the modem plastic part.

(Label text: See actual ”Marking Drawing”)

## 3. PRE TREATMENT.

Ensure that all surfaces, where labels are placed, are clean, dry and without fat. The label should be mounted without leaving “air bubbles” underneath.

<sup>1</sup> - ID used as references in this document (see figures).

<sup>2</sup> - Information only – complete BOM from PDM system