


No Key Override Option (CEX102)

Parts in kit 70-9000-0254

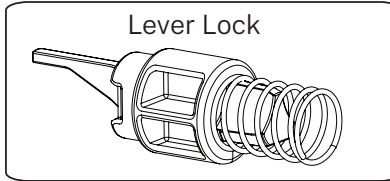


Installation:

Follow the steps in the lock installation instructions to Set Up the Exterior Escutcheon. Make sure the blue plastic 'UP' indicator piece is pointing up after you rotate the cardboard tool.

Next insert the lever lock into the shank of the exterior escutcheon, making sure the triangle shaped boss of the lever lock is facing up as pictured below.

Now insert the outside lever onto the shank until it snaps into position. Pull on the lever to ensure it is secure.

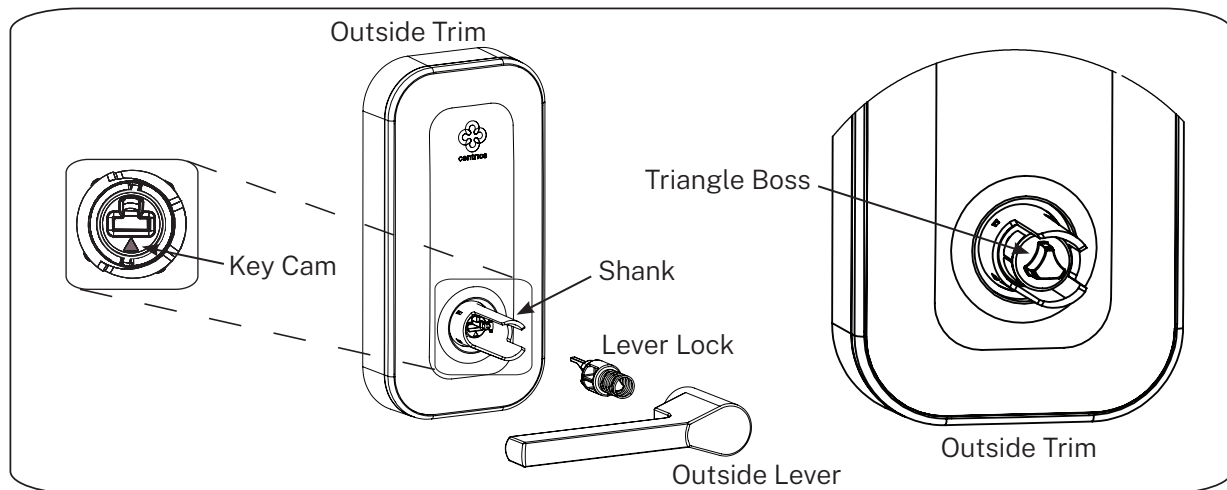

How to remove the lever if you need to re-set the lock:

Use a Phillips screwdriver to press the spindle in and then rotate it clockwise until it locks into place.

Next you need to remove the lever by pressing the lever key into the small hole on the side of the lever and then pull the lever off the shank.

Now remove the lever lock from the shank and follow the steps in the installation instructions to Re-Set the Escutcheon.

Once the escutcheon is reset, unlock the spindle by using a Phillips screwdriver to press the spindle in and then rotate it counter-clockwise until it unlocks.

