



Photograph No.1 Peak output power measurement setup

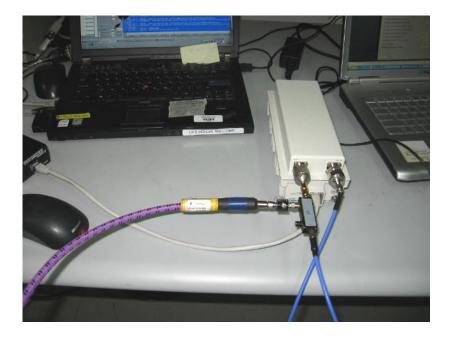


Photograph No.2 Occupied bandwidth measurement setup



Photograph No.3 Emission mask, conducted spurious emissions measurement setup

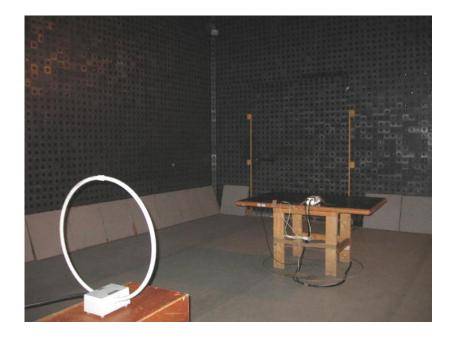

Photograph No.4 Spurious emissions measurement setup in the anechoic chamber below 30 MHz







Photograph No.6 Spurious emissions measurement setup in the anechoic chamber above 1000 MHz



Photograph No.7 Radiated spurious emissions measurement setup at the OATS above 1000 MHz



Photograph No.8 Frequency stability measurement setup



Photograph No.9 Conducted emissions measurement on AC line setup