



## Test Setup\_PTE

1. Test for Radiated Emissions with SAS-510-2, 300-1,000MHz

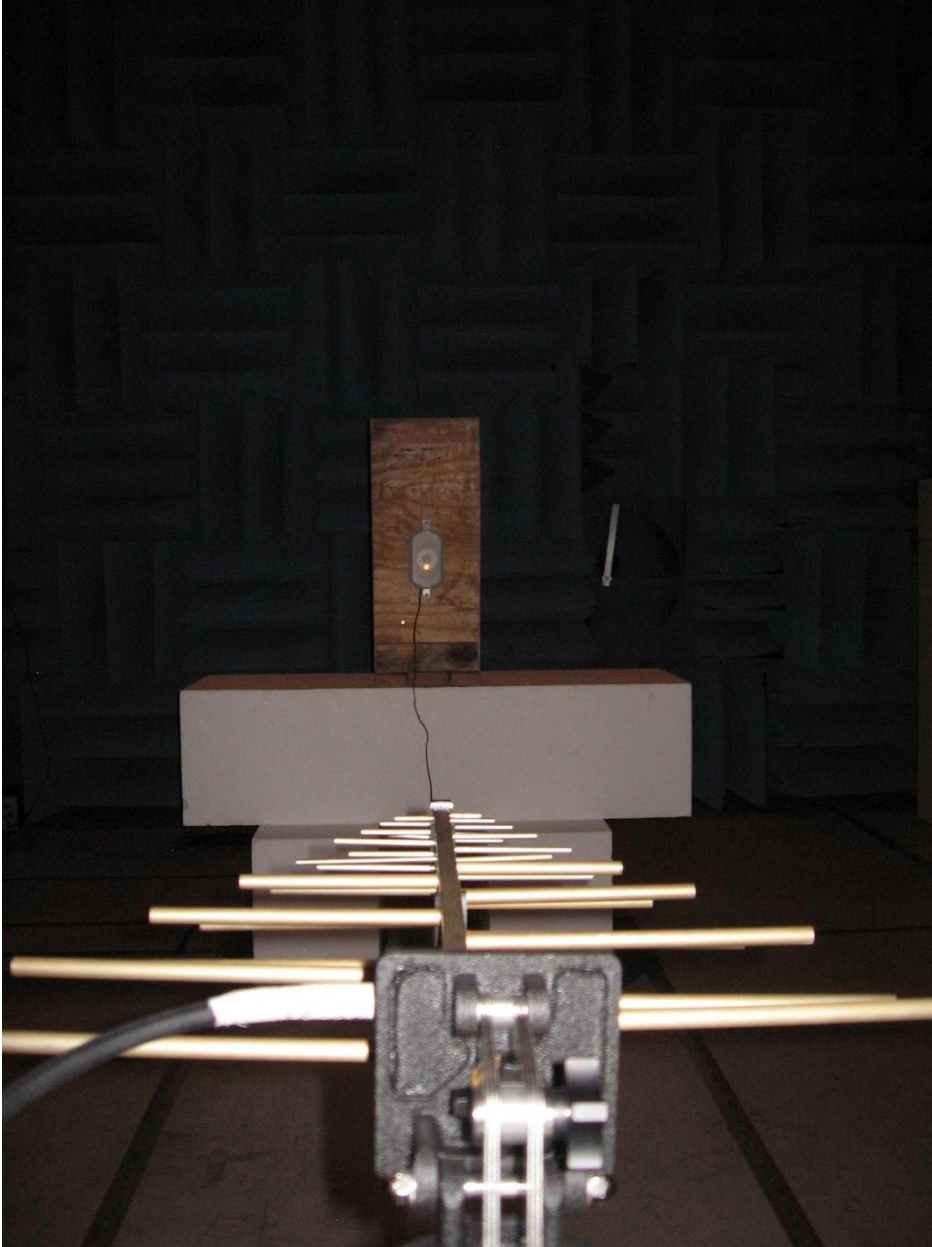


2. Test for Radiated Emissions with JB-1, 30-1,000MHz

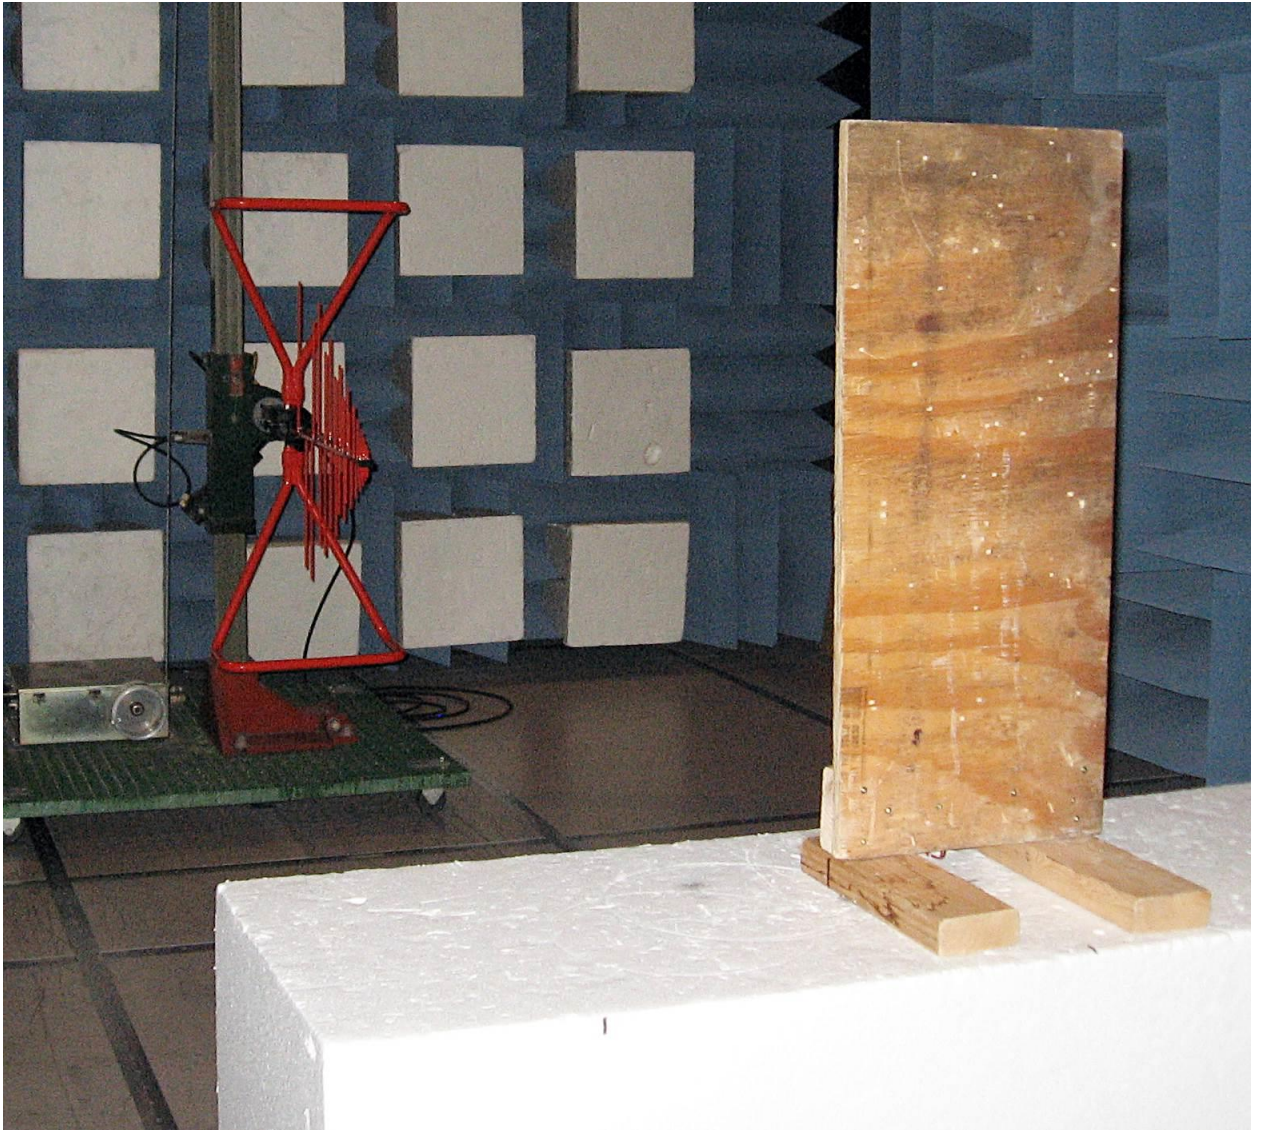

3. Test for Radiated Emissions with SAS-572, 1-6GHz



4. Test for Radiated Emissions, 10kHz to 30MHz

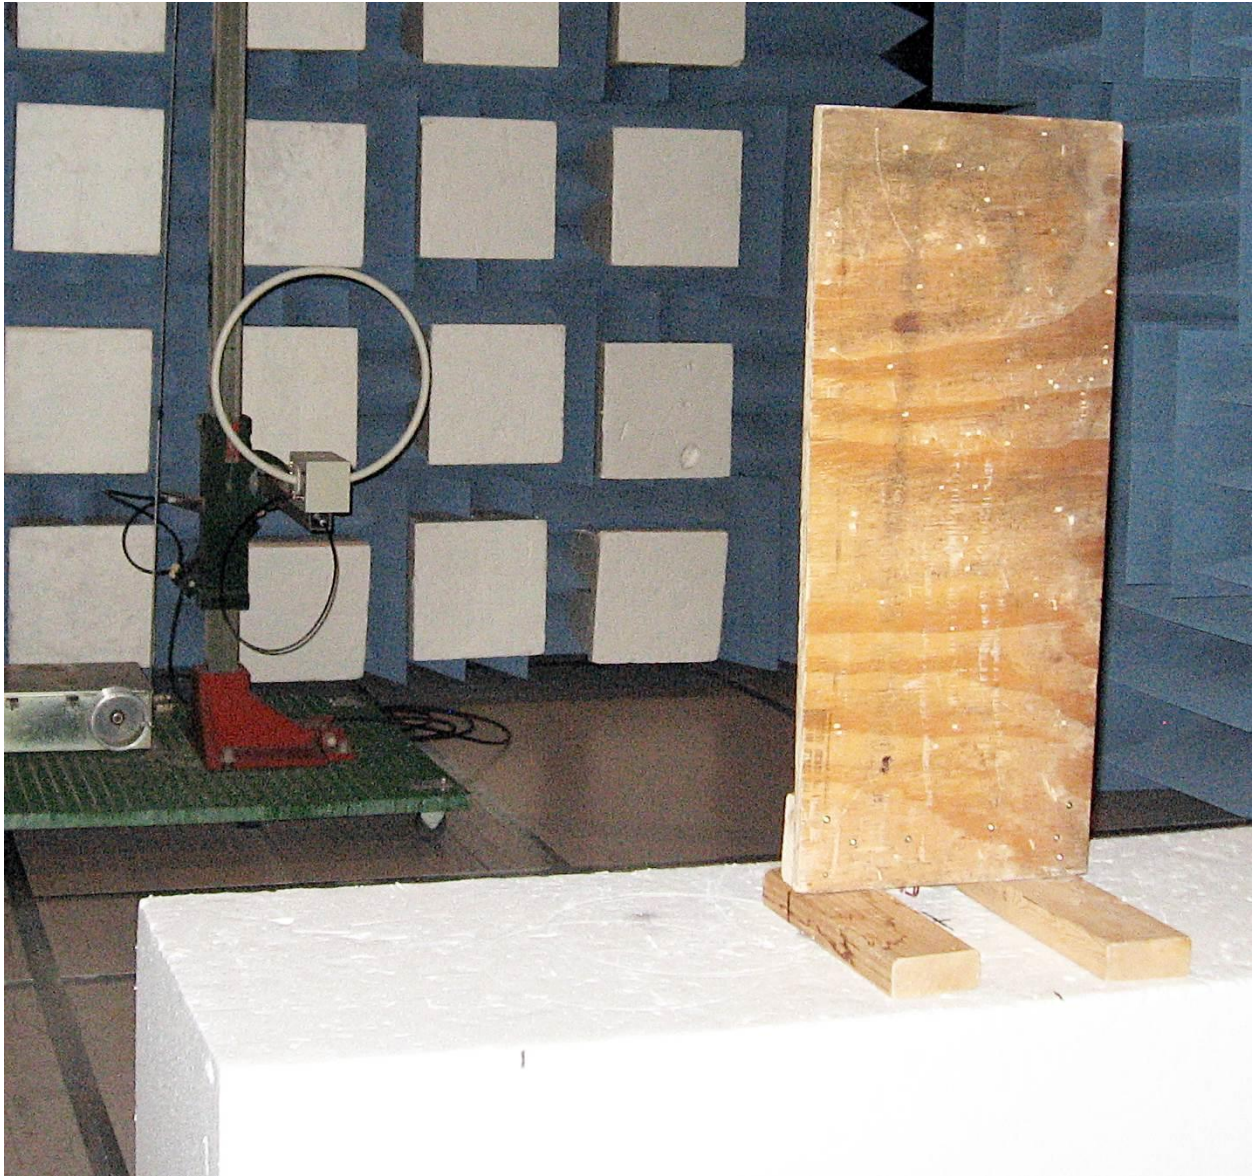

5. Test for Conducted Emissions, 150kHz to 30MHz

