



说明书尺寸：185*95mm

材质：太古纸

封面：300g 内页：180g

封面覆防刮哑膜

版本：20220727

WELCOME

Thank you for choosing FITURE

Member satisfaction is a top priority for FITURE.

If you require assistance or are experiencing technical issues with your Product, please visit www.fiture.com or send email to support@fiture.com for additional help.

Please download FITURE APP by scanning the QR code below or searching FITURE from Google Play or Apple App Store



01

说明书尺寸：185*95mm

材质：太古纸

封面：300g 内页：180g

版本：20220727

IMPORTANT REMINDERS

Please read and follow all warnings, precautions and instructions before using the product. It is the owner's responsibility to ensure that all users are aware of all warnings and precautions. Use only as described. Misuse of this equipment may result in serious injury or death. FITURE is not responsible for damage or injury caused by inappropriate use. See Terms of Service for additional details.

SAFETY WARNING

This product should be stored in a dry, ventilated environment. Water may cause short circuit and damage on the product; the product should not be used outdoors nor in harsh environments where it may be exposed to rain, thunder and lightning, sand, fog, snow, hail, gust or low temperatures.

Please unplug your FITURE device under extreme weather condition to avoid damage. If noise, smell or

any abnormal condition occurs during usage, please unplug your product and contact FITURE Customer Service.

Please only use the power cord packed with the product and connect to nationally certified power socket to avoid damage. Please avoid usage in the environment with a strong electromagnetic field. Please follow this User Manual to install the product and ensure that there are no objects that may affect the stability of the product or cause damage. Please avoid any object or any external force (including but not limited to hit, impact, press and scratch) from damaging the screen.

Please ensure that no minors or pets play, chase, run or jump around the product and do not push, touch or hit the product in any way to avoid damage of the product or cause of injury.

IMPORTANT REMINDERS

NOT SUITABLE FOR

Under any of the following circumstances, please consult your physician before using the product or practicing any exercises or training courses:

- Seniors over 65 years old.
- During pregnancy
- People who are under any medication.
- People with any chronic disease or injury, including but not limited to:
Hypertension, heart disease, cerebral infarction, cerebral blood supply insufficiency and other cardiovascular and cerebrovascular diseases.
Diabetes, hypoglycaemia, gout and other metabolic disorders. Asthma and other respiratory diseases and any other chronic diseases. Muscle injury, ligament injury, myofascial injury, joint inflammation and injury, connective tissue disease, soft tissue

injury and other orthopaedic injuries or any acute or chronic body injury (including those in the recovery period). Limb coordination disorders, central nervous system or peripheral blood vessel and nerve diseases. Other diseases and conditions that do not allow exercise.

Minors must be accompanied by a guardian when using the product. It is forbidden to use the product under the influence of alcohol, fatigue, after high-intensity work, irregular work and rest, and when suffering from physical discomfort. Do not use the product in a humid or high temperature environment to avoid heat stroke or other physical damage. When using the product, please wear an effective heart rate monitoring device to monitor heart rate changes in real time to ensure that the exercise intensity is within your tolerance range. Please control the duration, intensity, times and

IMPORTANT REMINDERS

frequency of exercise, avoid long-term, high-intensity, and high-frequency exercise that exceeds your own load capacity to avoid sports injuries. In the event of any other discomfort such as chest tightness, dizziness or significant pain in certain parts of the body during exercise, please stop exercising immediately and seek medical attention. Consult your physician before beginning a new fitness plan. Incorrect or excessive training can result in serious injury.

PRODUCT MAINTENANCE AND CARE

Do not wipe the surface of the product with chemical solutions which may cause permanent damage to its appearance. Please clean the surface gently with a clean, soft and dry cotton cloth, please turn off the device and unplug before cleaning. Keep the product away from water and heat to avoid damage of the product. Any disassembling or assembling of the product not operated by our assigned staff may cause damage to the product and cause of injury, and will void the warranty. Only our assigned staff. All parts and accessories of this product during maintenance and replacement must be authorized components by FITURE. Do not modify the product or use it for purposes other than those designed for. Do not decompile, modify or inappropriately upgrade the software of the product by any means except our official released software version.

IMPORTANT REMINDERS

PRODUCT MAINTENANCE AND CARE

Do not cover or block the heat dissipation holes on the back of the product and do not put sharp objects or metal touching signal connectors into the heat dissipation holes, to avoid overheating, short-circuit, product damage or electric shock hazard.

OTHERS

User who has a pacemaker, defibrillator or other medical equipment implanted should consult your physician before using the product or performing any exercise and training. This product contains magnets or components and radios that emit electromagnetic fields which may interfere with pacemakers, defibrillators, or other medical devices in close contact. Consult with your physician and your device manufacturer for specific guidelines and keep a safe distance between the medical device and the product during use. If the product is interfering with your cardiac pacemaker, defibrillator or any other medical device, please stop using it immediately and seek medical attention.

PRODUCT SPECIFICATION



Dimensions

Height: 63"
Width: 20.3"
Thickness: 1.6"

Display Size: 32"
Resolution: 1920*1080
Aspect ratio: 9:16

Operating environment Operating temperature: 32-113°F
Operating altitude: 0-16404ft (0-5000m)

Speaker Rated power: 20 W
Quantity: 2

Audio and video formats Supported video format: H264, H265, MPEG*1/2/4, WMV, etc.
Supported audio format: MP3, AAC, WMA, PM, FLAC, etc.

Sensor 1920*1080@30fps
wide dynamic range

Wireless Wi-Fi: 802.11a/b/g/n/ac
Bluetooth: 5.0 wireless technology


Memory 32GB eMMC

Weight Main device (without stand): 39lbs

Model FITURE S1US Lite

Input 120V AC, 60Hz

PRODUCT FEATURES

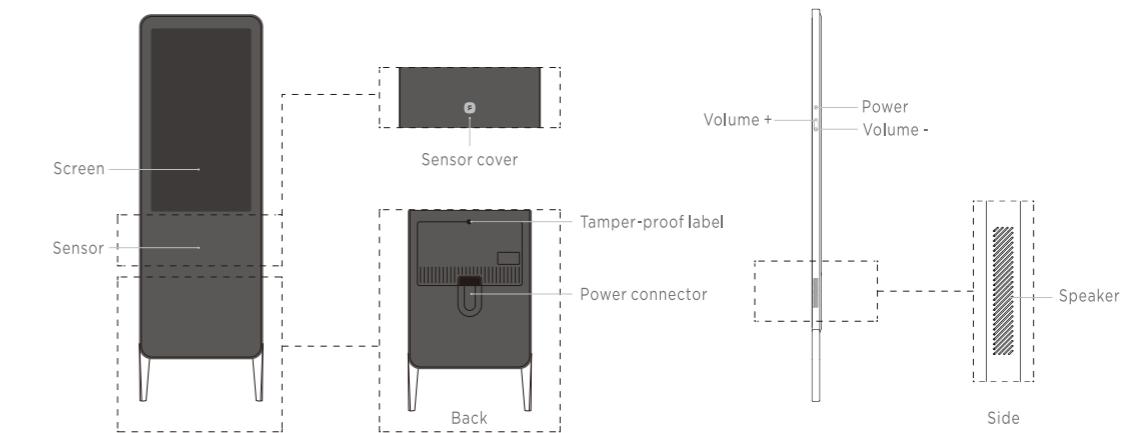

Warning: Sensor is concealed and visible under bright light. You can place the magnetic sensor cover on the sensor while the device is not in use.
Any damage on the tamper-proof label will void the warranty of this product.

PRODUCT CONTENTS



Main Device (without stand) 1 Set



Power cord *1



L-Wrench / Hex screw *4



Silicone Cover *2




Anchor and Screw *1



User manual *1



Cleaning cloth *1



Stand *2



Magnetic sensor cover *1



Bushing *1



Silicone Plug *2


INSTALLATION

WALL MOUNT INSTALLATION

For wall mount installation, a wall mount bracket must be purchased separately. Please contact FITURE Customer Service if you need it and follow the installation SOPs in the wall mount kit. FITURE assumes no responsibility for product damage or personal injury caused by improper installation.

STAND INSTALLATION

1. Gently place the FITURE facedown on blanket. Insert the left stand into the bottom left of the FITURE, and insert the right one into the bottom right as shown. Attach stands as shown using hex screws, use the accessory L-wrench to tighten the hex screws only until they are pulled firmly against the stands. Tear off the release paper of the silicone covers, then install the silicone covers into the back of FITURE as shown. Caution: There are differences between silicone cover left and right. Do not install them in a wrong direction.

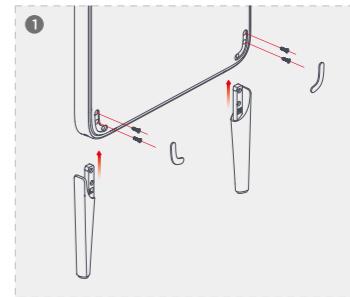


INSTALLATION

STAND INSTALLATION

2. Use a stud finder to find one stud to which you want to attach the bushing. Mark its left and right sides with a pencil, then determine the stud's center and mark vertically.

CAUTION: This step is only for the drywall and plaster with studs, if your wall is Masonry/concrete, you can ignore this step.

3. Mark with a pencil at a height of 51"(1300mm) from the floor. For drywall/plaster, drill a hole into the stud with a 5/32"(4mm) diameter drill bit. For masonry/concrete, drill a hole with a 25/64"(10mm) diameter drill bit. And make sure the depth of the hole is no less than 2 1/4"(60mm).

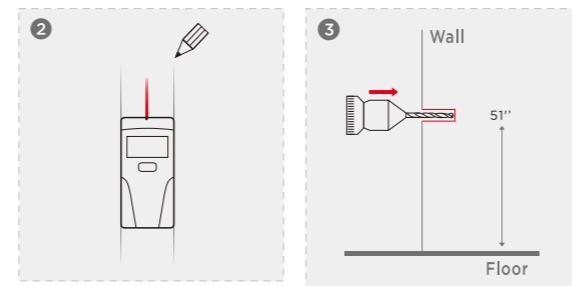

Warning: For your safety, please ensure the FITURE is placed on a flat, non-slip floor and ensure the safety buckle is fastened to the bushing. FITURE assumes no responsibility for any damage or injury caused by improper installation and use.

10


INSTALLATION

4. Hammer the wall anchor into the hole of masonry/concrete and make sure it fits tightly into the hole. Fasten the bushing B to the wall with the wall anchor screw and make sure it is tightened. Fasten the bushing A into B, and lock the safety buckles between them as shown.

CAUTION: DO NOT use wall anchor for drywall/plaster.

5. Connect the power cord into the FITURE and secure it with the cable holder.


6. Place the FITURE against the wall and ensure that the distance between the stand and the wall is 9"(225mm),
7. Connect the power cord to the wall socket. Only remove the protection film once the FITURE is properly installed.

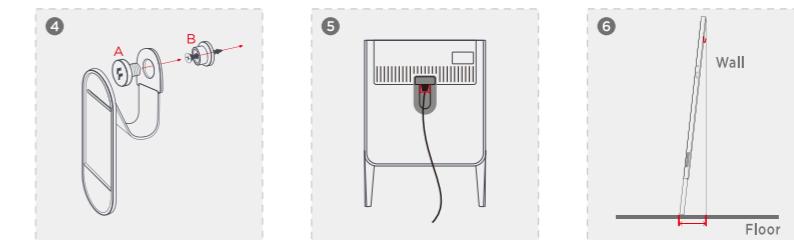

Warning: For your safety, please ensure the FITURE is placed on a flat, non-slip floor and ensure the safety buckle is fastened to the bushing. FITURE assumes no responsibility for any damage or injury caused by improper installation and use.

11

GETTING STARTED

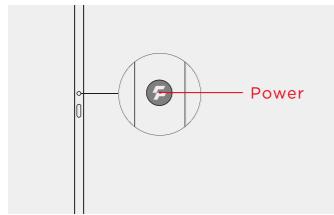

1. Power on




Connect the power supply, and press "Power" to turn it on.

2. Connect and initialize the device

Select "Add" on FITURE App and follow the instruction to setup the product. Please make sure your Wi-Fi connection is stable and able to connect to the internet.

*Please update your FITURE App to the latest version for the best experience.

GETTING STARTED

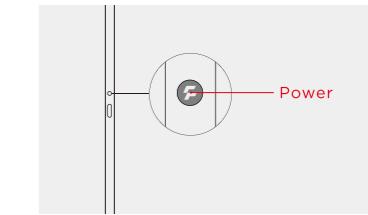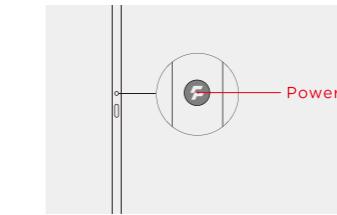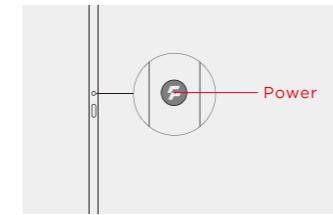

4. Standby mode

FITURE will automatically enter standby mode if it is idle for a set time. You can also enter the standby mode by short press 'Power'.


5. Wake up the FITURE

When FITURE is in standby mode, you can wake it up by either connecting it to the FITURE App or pressing 'Power'.

6. Power off


Press and hold 'Power' to turn it off.

RESET

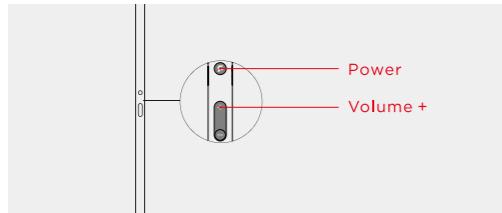

1. Network reset

Press and hold 'Power' and 'Volume +' simultaneously to reset its network.

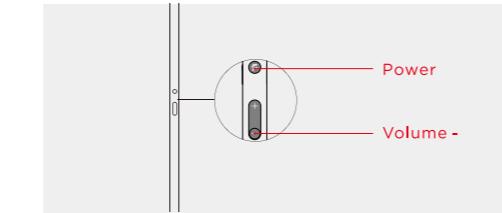

2. System reset

Press and hold 'Power' and 'Volume-' simultaneously to reset its system.

DISCLAIMER

In order to protect users' legal rights and interests, please read through the User Manual and the disclaimer before use, and follow this User Manual to operate the product. By using the product, you have read, understood, acknowledged and accepted all the terms and conditions of the User Manual and the disclaimer. The user is responsible for their own behaviors and all consequences arising therefrom. The user shall use the product only for legitimate purposes and agree to any current or future policies or guidelines developed by FITURE. When using the product, make sure to follow and implement, including but not limited to, the requirements in the User Manual. FITURE assumes no responsibility for any personal injuries, accidents, property damages, legal disputes, or any other adverse event resulting in a conflict of interest that may arise from the use of the product in violation of the User Manual and the disclaimer or from force majeure. FITURE assumes no responsibility for any direct or indirect violation of the laws by the user when using the product.

NOTICE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference, and (2) this device must not accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the clearance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit other than those to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

1. FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

2. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

LIMITED WARRANTY

Fiture Holding LLC, ("FITURE," the "Company," "we," or "us") provides the following Limited Warranty (the "Limited Warranty") to you, a consumer who has purchased our FITURE product (the "FITURE fitness mirror" as defined below). This Limited Warranty covers only you and applies only to your non-commercial, in-home, indoor use of the FITURE fitness mirror ("Designated Purposes"), subject to the exclusions and limitations below. Any other use of the FITURE fitness mirror beyond the Designated Purposes will void this Limited Warranty. FITURE does not provide any warranties to the use of any FITURE fitness mirror beyond the Designated Purposes.

If you are a commercial buyer, your Limited Warranty would be specified in your Commercial Sales Agreement or any other agreements that the Company has entered with you.

Capitalized terms used but not defined in this Limited Warranty will have the meanings given to them in FITURE's Terms of Service (the "Terms of Service").

The Limited Warranty applies, subject to the exclusions and limitations below, only for valid warranty claims made during the applicable Limited Warranty Period described below and only so long as the applicable covered FITURE fitness mirror remains in the possession of the original purchaser, or, for gifted FITURE fitness mirror, the owner of the original membership linked to that FITURE fitness mirror.

SCREEN, FRAME AND HARDWARE COMPONENTS 12 MONTHS

FITURE warrants that the screen, frame, and all originally incorporated hardware components of FITURE fitness mirror will be free from defects in workmanship and materials for a period of 12 months from the date of initial delivery.

LABOR: 12 MONTHS

For a FITURE fitness mirror originally delivered and installed (if applicable) by FITURE or FITURE's Authorized Third-Party Partners, FITURE will cover the labor cost for an Authorized Third-Party Partner to make the repair under this Limited Warranty for a period of 12 months from the date of initial delivery pursuant to a valid warranty claim made in accordance with this Limited Warranty.

Except where applicable law requires otherwise, repair labor is not covered for locations where FITURE did not initially deliver and install the FITURE fitness mirror or the FITURE fitness mirror is moved to a location that is outside of FITURE's service area.

EXCLUSIONS AND LIMITATIONS

Who is covered:

This Limited Warranty covers only the original purchaser of the FITURE fitness mirror. The FITURE fitness mirror must remain in the possession of the original purchaser, or, for a gifted FITURE fitness mirror, the owner of the original membership linked to that FITURE fitness mirror. This Limited Warranty is not transferable.

What is covered?

For the purposes of this Limited Warranty, a FITURE fitness mirror is:

- The interactive FITURE fitness mirror, including the screen, frame, and all incorporated hardware elements.
- FITURE fitness mirror does not include any accessories sold.

If a defect arises in the FITURE fitness mirror or a warranted component within the applicable Limited Warranty Period, the purchaser's sole and exclusive remedy is for FITURE to, at FITURE's discretion to the extent permitted by law, (1) replace or repair the defective or malfunctioning FITURE fitness mirror or component with the same or a comparable model, or (2) provide a full refund at the original purchase price of the FITURE fitness mirror.

Any replacement or repaired component shall be warranted for the remainder of the original Limited Warranty Period or 3 months, whichever is longer.

What is NOT covered?

FITURE does not provide any warranties for:

- Any gifts (such as heart rate monitor or any other accessories) that are provided to you as a present, or as a promotional product free of charge (if applicable). Such free gifts do not constitute part of the sale;
- Any other FITURE products or services, non-FITURE products or services, units that is, or that FITURE reasonably believes to be, stolen, counterfeit, or purchased from an unauthorized distributor or reseller or outside the U.S., without product serial numbers;
- Any Labor not performed by Fiture's Authorized Third-Party Partner;
- Software, even if sold with or embedded in the FITURE fitness mirror, or Internet connectivity;
- Damage or loss of access as a result of FITURE's termination or suspension of your Fiture Account;
- Data loss and any costs associated with data recovery (if applicable);

EXCLUSIONS AND LIMITATIONS

- Defects, damage or equipment failure arising from (i) normal wear and tear; (ii) improper or negligent assembly, maintenance, or use (including but not limited to, using or storing the FITURE fitness mirror outside (or otherwise exposed to the elements) or in temperatures out of the recommended range); (iii) installation, repair (other than work provided by FITURE's Authorized Third-Party Partner), relocation or removal of the FITURE fitness mirror; (iv) use of the FITURE Product with parts or accessories from unauthorized third-parties, or with parts or accessories not originally intended for or compatible with the FITURE fitness mirror; (v) use not in conformity with FITURE guide, user manual or technical specifications; or (vi) any use contrary to or in breach of the FITURE Terms of Service or other instructions provided with the FITURE fitness mirror or by FITURE;
- Damage or equipment failure due to accident, abuse, improper or abnormal use, neglect, corrosion and discoloration of paint or plastic (or any other change in cosmetic appearance that does not affect performance), theft, vandalism, fire, flood, wind, lightning, freezing or other natural disasters or acts of God of any kind, electrical wiring, power reduction, power fluctuation or power failure from whatever cause, unusual atmospheric conditions, collision, introduction of foreign objects, or modifications that are unauthorized or not recommended by FITURE;

- Any attempt to modify or replace any component and/or software of the FITURE fitness mirror or add or install software not provided with the FITURE fitness mirror by FITURE;
- Any use beyond the Designated Purpose; or
- If you are a commercial buyer, FITURE fitness mirror used in connection with a violation of your Commercial Sales Agreement.

INCIDENTAL OR CONSEQUENTIAL DAMAGES

FITURE is not responsible or liable for indirect, special, incidental or consequential damages, economic loss, loss of property or profits, loss of enjoyment or use, or other consequential damages of any nature whatsoever in connection with the purchase, use, repair or maintenance of the FITURE fitness mirror or components. For defective FITURE fitness mirrors or components within the Limited Warranty Period, except for the remedies provided in this Limited Warranty, FITURE does not provide additional monetary or other compensation for any such repairs or replacement, including but not limited to gym membership fees, work time lost, cost of substitute equipment, diagnostic visits, maintenance visits, or transportation.

Any attempt to install, move or repair the FITURE fitness mirror creates a risk of injury and property damage. FITURE is not responsible or liable for any damage or injury incurred during, or as a result of, any installation, movement, repair or attempted repair of FITURE fitness mirror by anyone other than a FITURE Authorized Third-Party Partner. All movements or repairs attempted by you or your agents are undertaken AT YOUR OWN RISK and FITURE shall have no liability for any injury to person or property arising from such attempted movements or repairs.

FITURE does not warrant that the operation of the FITURE fitness mirror will be uninterrupted or error-free.

FITURE's mission is to promote sustainability and reduce waste to our environment. Where permitted by law, replacement units, parts and electronic components reconditioned to as-new condition by FITURE or its vendors may sometimes be supplied as warranty replacement and constitute FITURE's fulfillment of warranty terms.

HOW TO OBTAIN WARRANTY SERVICE

To be eligible for service under this Limited Warranty you must contact the FITURE Member Support Team at support@fiture.com, and provide FITURE with the serial number of your FITURE fitness mirror and the dated receipt, or other proof of purchase indicating the date purchased, upon discovering any nonconformity or defect.

Claims must be made within the specified Limited Warranty Period.

All returned FITURE fitness mirrors must be packaged to afford individual mechanical protection and proper electrostatic discharge protection, so damage does not occur while the FITURE fitness mirror is in transit to FITURE.

If a successful claim is made for a FITURE fitness mirror that is covered by this Limited Warranty within the Limited Warranty Period, any shipping costs to return the relevant FITURE fitness mirror to FITURE will be at FITURE's cost.

Any disputes between you and FITURE related to this Limited Warranty or the FITURE fitness mirror will be governed by the then-current dispute resolution procedures in FITURE's Terms of Service, available at www.fiture.com/terms-of-service.

HOW TO OBTAIN WARRANTY SERVICE

** THIS LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY GIVEN BY FITURE AND SUPERSEDES ANY PRIOR, CONTRARY, OR ADDITIONAL REPRESENTATIONS OR WARRANTIES. IN NO EVENT SHALL FITURE'S LIABILITY, FOR ANY CLAIM ARISING OUT OF OR RELATING TO THE FITURE FITNESS MIRROR OR USE OF FITURE FITNESS MIRROR BY YOU, EXCEED THE PURCHASE PRICE OF THE FITURE FITNESS MIRROR, REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, LOST REVENUE, LOST PROFIT, LOST DATA, OR PRIVACY, OR ANY OTHER CAUSE OF ACTION OR LEGAL OR EQUITABLE THEORY.*

ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE EXTENT PERMITTED BY LAW.

THIS EXCLUSION APPLIES EVEN IF THIS LIMITED WARRANTY FAILS OF ITS ESSENTIAL PURPOSES AND REGARDLESS OF WHETHER DAMAGES ARE SOUGHT FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY IN TORT, OR UNDER ANY OTHER LEGAL THEORY. SOME JURISDICTIONS DO NOT ALLOW FOR THE DISCLAIMER OF CERTAIN WARRANTIES, SO SOME OR ALL OF THE ABOVE DISCLAIMERS MAY NOT APPLY TO YOU.

