


Traslation Pen

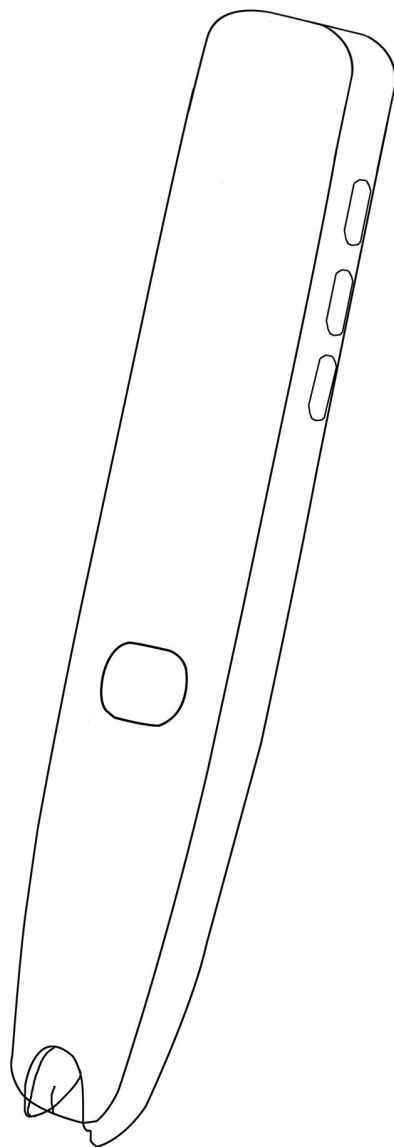


user manual

Product description


This is a portable multi-functional translation dictionary pen that can be used to scan translation, voice intercom translation and find words. Scanning translation function can scan, translate and pronounce different languages; Voice translation can be used for real-time voice intercom translation in different languages.




Hold the translation pen so that the head of the pen and the book are 60 ° Angle, the translation effect will be better.

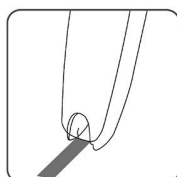


Point the pen to the beginning of the text.

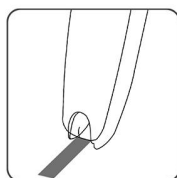

Press the pen gently.

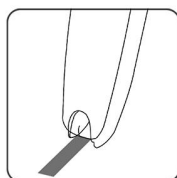

Parallel backward sliding scanning at uniform speed.

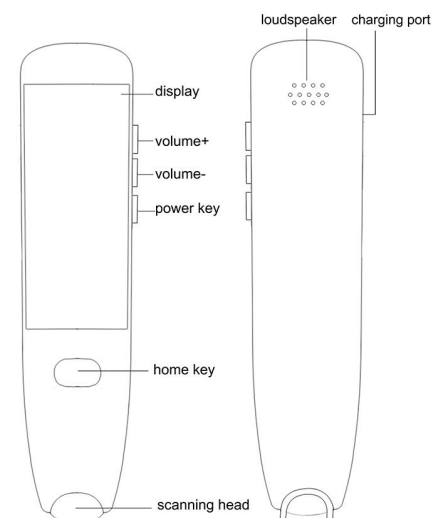

Power on / off

Power on: in the off state, long press the power key for about 3 seconds to start the device.

Power off: in the power on state, long press the power button for about 3 seconds, and "restart / shut down" will appear. Click the power off icon to shut down the device.

Connect WiFi

After power on, you can connect with WiFi in the setting interface to get more learning materials. You can also use this product offline.

Scan translation

After power on, hold the translation pen, gently press the scanning pen to align with the text, then scan and translate different languages, and click on a single text to enhance understanding and learning.

Voice translation

Click the "Voice translation" in the main interface, set the two languages to be translated at the top first, and then press and hold the blue (or red) button on the right side to carry out voice intercom to the translation pen device to realize the voice translation of the two selected languages. There are more than 100 kinds of languages, which can be freely selected according to your needs.

Photo translation (optional)

500W pixel photo taking function, one click photo, real-time translation, adjustable translation area, automatic translation of different languages, applicable to the translation of shopping labels, user manual, menu, road signs, etc.

Text excerpt

Click "Text excerpt" in the main interface to scan the text content to be extracted. After scanning, click "Finish" to save it to the machine and view it from the history; Or click upload to email address, then download and save from email. You can extract the text you need in real time.

Smart record

Click "Smart record" in the main interface, then click build record in the upper right corner, click the recording button to start recording. After recording, save the recorded content in the device to make notes of important information.

Favorites

Click "Favorites" in the main interface to view the historical collection records, including the corresponding collection contents of scanning translation, voice translation, dictionary and word book, and view and consolidate the collection contents.

Dictionary

Click "Dictionary" in the main interface to select a dictionary for quick word search and interpretation. There are several different dictionaries to choose from.

Vocabulary

Click "Vocabulary" in the main interface, there are several kinds of thesaurus for learning and using.

Restart

When the machine can not be used normally, long press the power button for about 3 seconds, and "Power off / Restart" will appear. Click "Restart" to restart the machine.

Security information

Please use the adapter with standard voltage of 5V and current of 1a to charge.

Please use the machine at the temperature of 2 ° C~35 ° C, place the machine at the temperature of - 20 ° C ~ + 40 ° C. When the temperature is too high or too low, it may cause machine failure.

Do not expose the machine to high temperature or around heating machine, such as sunshine, heater, microwave oven, oven or water heater.

When charging is finished, please disconnect the charger from the machine and unplug the charger from the power socket.

Do not use the machine during charging.

The battery of the machine is built-in and can't be removed. Please don't replace the battery by yourself to avoid damaging the machine.

Please dispose of the machine, batteries and related accessories according to local regulations, and do not treat them as domestic waste.

Federal Communications Commission Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.