Important Safety Notice

Please read below safety instructions carefully before installation and operation:

- 1. Please pay attention to all the warnings and hints on this device.
- 2. Do not expose this unit to rain, moisture and liquid.
- 3. Do not put any stuff into the device.
- 4. Do not repaire the device or open the enclosure without professional person guidence to avoid electronic shock.
- 5. Make sure good ventilation openings to avoid product overheating damage
- 6. Shut off power and make sure environment is safe before installation.
- 7. Do not plug-in/out the network cables and IR cables when it is in using to avoid cables damage.
- 8. Use DC5V only. Make sure the specification matched if using 3rd party DC adapters.

Introduction

This HDMI wireless extender includes transmitter unit and receiver unit. allows to transmit and extend HDMI signal up to 50 meters long away wirelessly, it has strong anti-interference ability by running at 5GHz operation frequency. This wireless extender not only supports point to point configuration, but also supports one to many (1 to 2) and many to many (2 to 2, 2 to 1) configuration. This extender supports wide range IR passback frequency 20-60KHz to realize remote control of source devices from receiver side. With both button control and IR controller, makes channel setting easily. It is really a very good solution for transmitting one or more HDMI source signal to one or more screens in long distance without running wires simultaneously, perfect for application of conference, home entertainment and education etc.

- 1) Transmission distance will be different due to the environment.
- 2) Wall, brick or glass will shorten the signal cover range or cause big signal loss.


3) It is recommended that the distance between each unit should be more than 5 meters

Features

- 1. Smart portable design, wonderful performance.
- 2. Highest resolution up to 1080p full HD.
- 3. Strong anti-interference ability by running at 5GHz operation frequency.
- 4. Support point to point configuration, one to many (1 to 2) configuration and many to many (2 to 2, 2 to 1) configuration.
- 5. Support IR passback with 20-60KHz frequency.
- 6. Supports button control to set channels and IR contoller to switch and choose input sources from receiver side.
- 7. 50m long range transmission distance.

• Package Contents

cable x1pcs

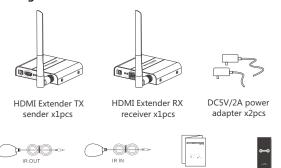


Remote controller

Installation Requirement

- 1. HDMI source device (DVD, PS3, Set top box, PC etc)
- 2. HDMI display device like SDTV, HDTV, and projector with HDMI port.

Panel Description

1. HDMI Extender TX sender

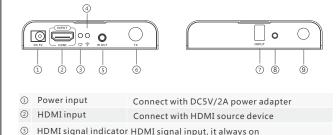

It's on when the transmitter and the receiver Wireless connections connect well with each other, other wise, it's off Connect with IR blaster extension cable. Please

IR blaster extension put the IR blaster close to source device to cable interface better transmit the IR signal from receiver

Launch wireless signal Antenna


Indicate the input CHANNEL as a number, and when the CHANNEL of transmitter as same as Input CHANNEL the CHANNEL of receiver, wireless transmission indicator connected

® Digital control button Display CHANNEL channel parameters

IR remote control Receive IR remote control signal

2.HDMI Extender RX receiver


window




1	Power input	Connect with DC5V/2A power adapter
2	Wireless connections indicator	It's on when the transmitter and the receiver connect well with each other, other wise, it's off
3	Data transmission indicator	Led blinks slowly when it is building connection. Led blinks fast when it is successfully connected and transmitting data
4	HDMI output	Connect with HDMI display device
(5)	IR receiver extension cable interface	Connect with IR receiver extension cable. Please make sure the remote control is within the required range of IR receiver
6	Antenna	Receive wireless signal
7	Output CHANNEL indicator	Indicate the output CHANNEL as a number, and when the CHANNEL of transmitter as same as the CHANNEL of receiver, wireless transmission connected
8	Digital control button	Display CHANNEL channel parameters
9	IR remote control	Receive IR remote control signal

Receive IR remote control signal


1. Point to Point connection:

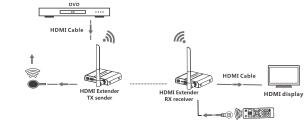

2. One to two connection:

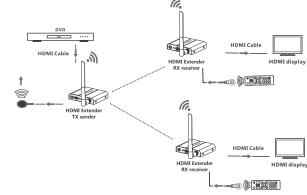

3. Matrix connections

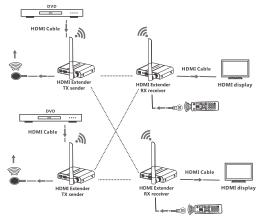

Connection instruction:

- Connect HDMI input with HDMI source device and connect IR blaster extension cable with IR OUT interface of the sender (TX).
- Connect HDMI output with HDMI display device and connect IR receiver extension cable with IR IN interface.
- 3) Power on the device (power led lights) and it works.

Note:

- When the wireless signal transmits through wall, glass or other obstacles, it will cause signal loss. Please install this device in good environment with few obstacles.
- This wireless matrix can support up to 2 transmitter work with 2 receivers simultaneously, please make sure each device keep 5 meters away from others at least.
- The environment wireless signal will affect transmission, such as microware, wireless mouse and keyboard etc.

• FAQ

- O: Transmitter and receiver can't be connected with each other?
- A: 1) Please check and make sure both receiver and transmitter have been powered on $\,$
- Please check and make sure the input channel of the transmitter and the output channel of the receiver are the same.
- Q: The wifi LED indicator of the transmitter keeps on, but no signal output on display/monitor?
- A: 1) please check if there is an HDMI signal input of sender TX
- Try to connect the signal source directly to display device to see if there is signal output from source device or change the signal source, HDMI cables and try again.
- Q: Display not fluent and stable
- A: 1) Please move the position of sender (TX) and receiver (RX) and make sure the device is within the signal coverage.
- 2) Press "reset" button on the TX/RX panel, reset and reconnect.
- Remove other wireless signal disturbance and reduce the obstacle on the way.

Disclaimer

The product name and brand name may be registered trademark of related manufacturers.TM and ® may be omitted on the user manual. The pictures on the user manual are just for reference, and there may be some slight difference with the real products.

We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.

Specification

Ite	ms	Specification
Power	Voltage/Current	DC5V/2A
supply	Power consumption	TX < 7W Rx < 5W
	HDMI compliance	HDMI1.3
	HDCP compliance	HDCP1.2
	HDMI resolution supported	480i@60Hz, 480p@60Hz, 576i@50Hz, 576p@50Hz, 720p@50/60Hz, 1080i@50/60Hz, 1080p@50/60Hz
HDMI performance and interface	Supports audio formats	L/R stereo audio
	Maximum transfer rate	10.2Gbps
	Audio signal transmission format	L/R stereo audio
	Input and output TMDS signal	0.5~1.5Vp-p(TMDS)
	Input and output DDC signal	5Vp-p(TTL)
	Input cable length supported	≤5m(AWG26 HDMI1.3cable standar
	Output cable length supported	≤5m(AWG26 HDMI1.3cable standar
IR performance and interface	IR remote control	Support IR passback with 20-60KHz frequency
Wireless	Transmission method	5.8G Wireless transmission
performance	Transmission distance	50 Meters
and interface	Latency	≤200 ms
Protection	Electrostatic protection	1a Contact discharge level 3
level	of the whole machine	1b Air discharge level 3
		Standard: IEC61000-4-2
	Working temperature	0~50℃
Operating environment	Storage temperature	-10∼70°C
environment	Humidity (no condensation)	0~90%

	Dimension	95(W) x 120.58(D) x 20.1(H)mm
	Material	Iron alloy material + crystal panel
Body	Processing technology	Sandblasting
properties	Colour	black
	Weight	TX: 200g, RX: 200g
Reliability	Mean time between failures (MTBF)	>30000 Hours

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Reorient or relocate the receiving antenna.
- Reorient or relocate the receiving antenna.
- Consult the dealer or an experienced radio/TV technician for help important announcemen

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

WiFi 5G indoor use only

Operations in the 5.15-5.25GHz band are restricted to indoor usage only. The device fix to P to MP.

This device is not subject to professional installation

The product can only use manufacture original antenna which is dipole antenna.

HDMI Wireless Matrix Extender

User manual



