





Restrict Band NVNT n20 5825MHz Peak

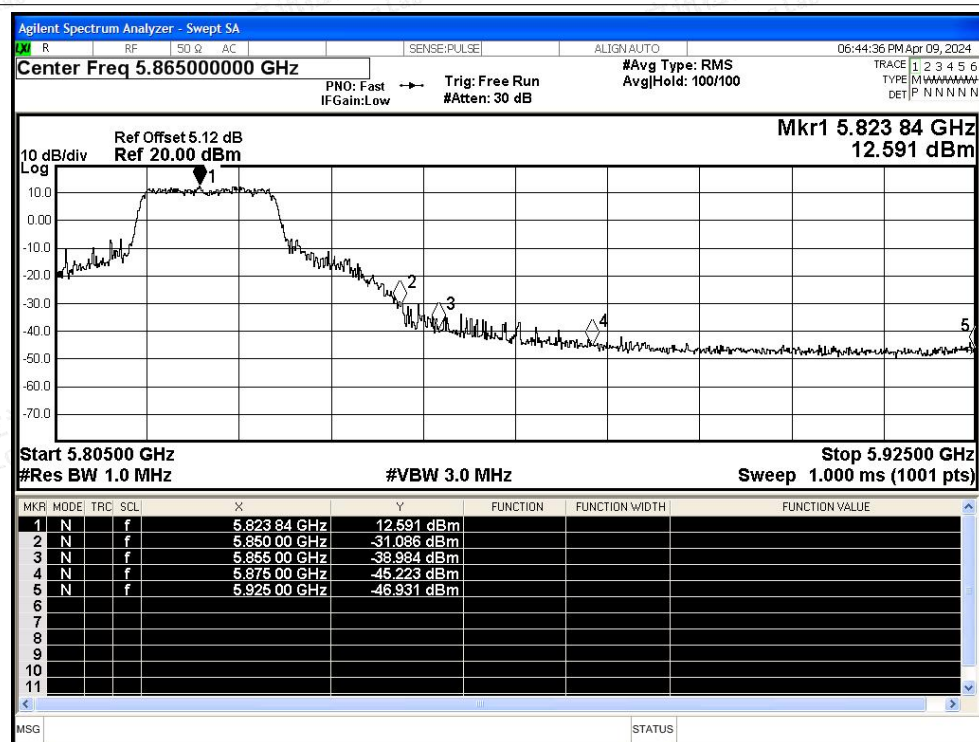

Restrict Band NVNT n20 5825MHz Average

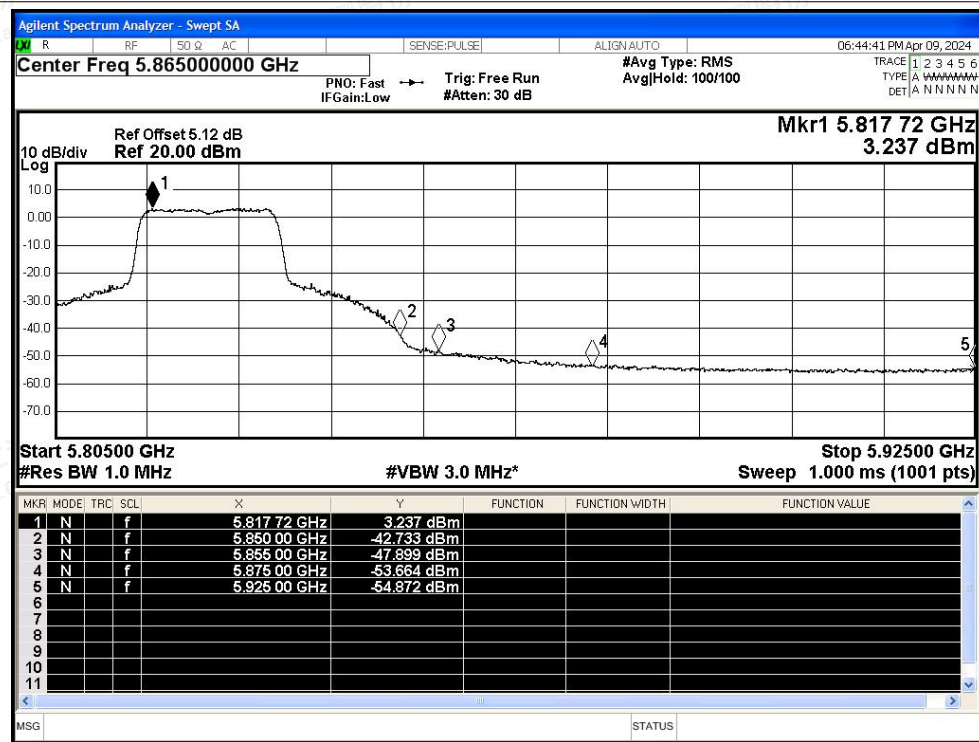

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



Restrict Band NVNT n40 5755MHz Peak

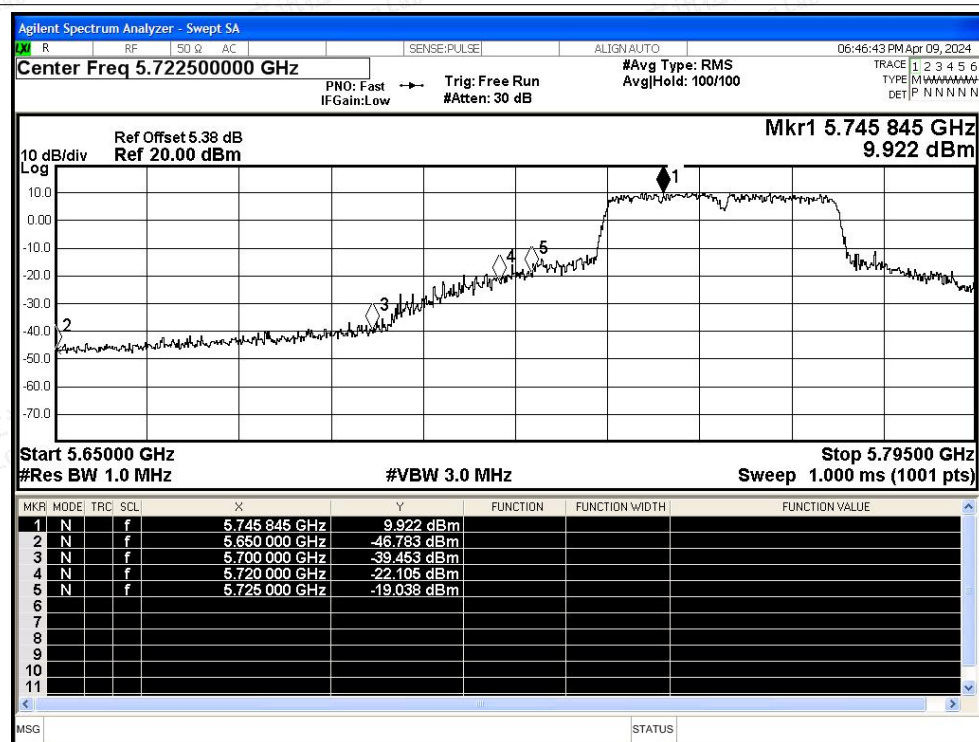

Restrict Band NVNT n40 5755MHz Average

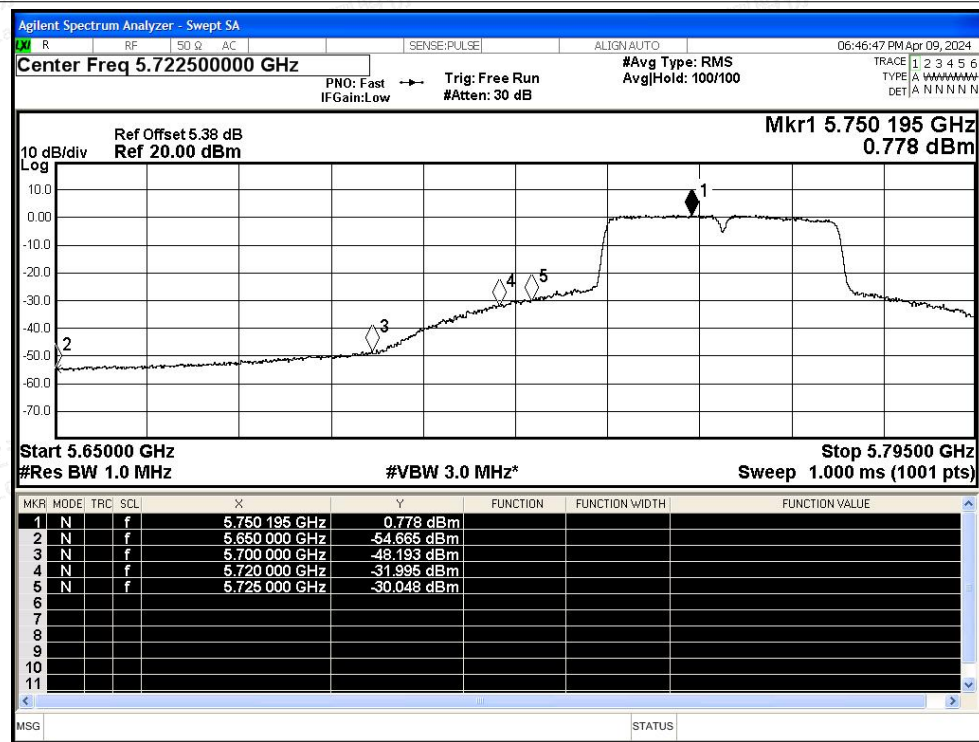

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



Restrict Band NVNT n40 5795MHz Peak

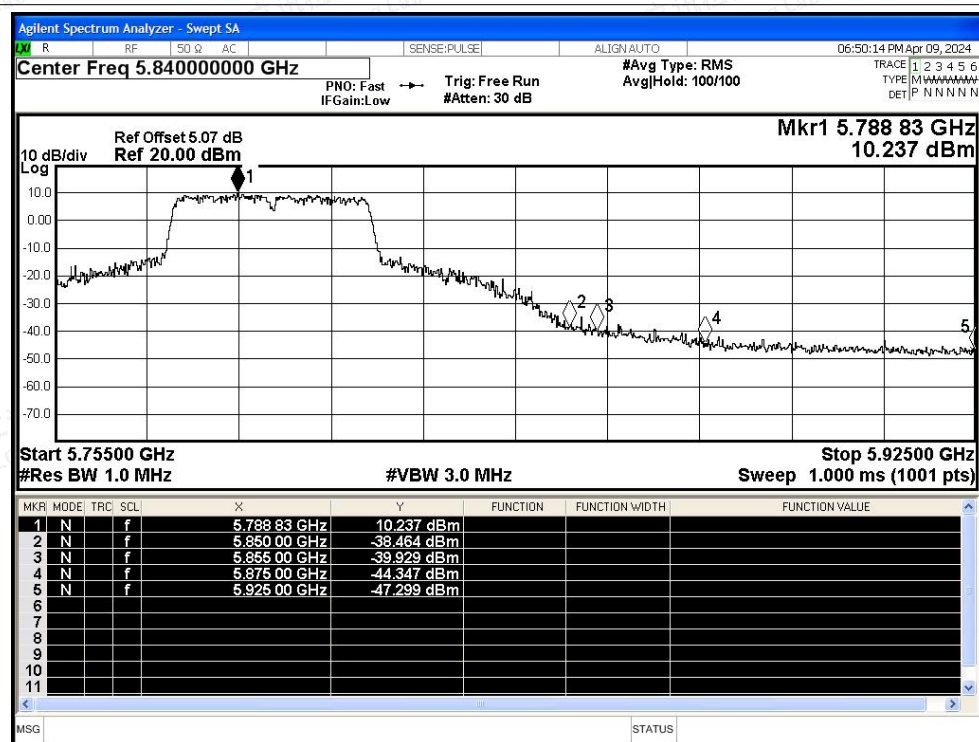

Restrict Band NVNT n40 5795MHz Average

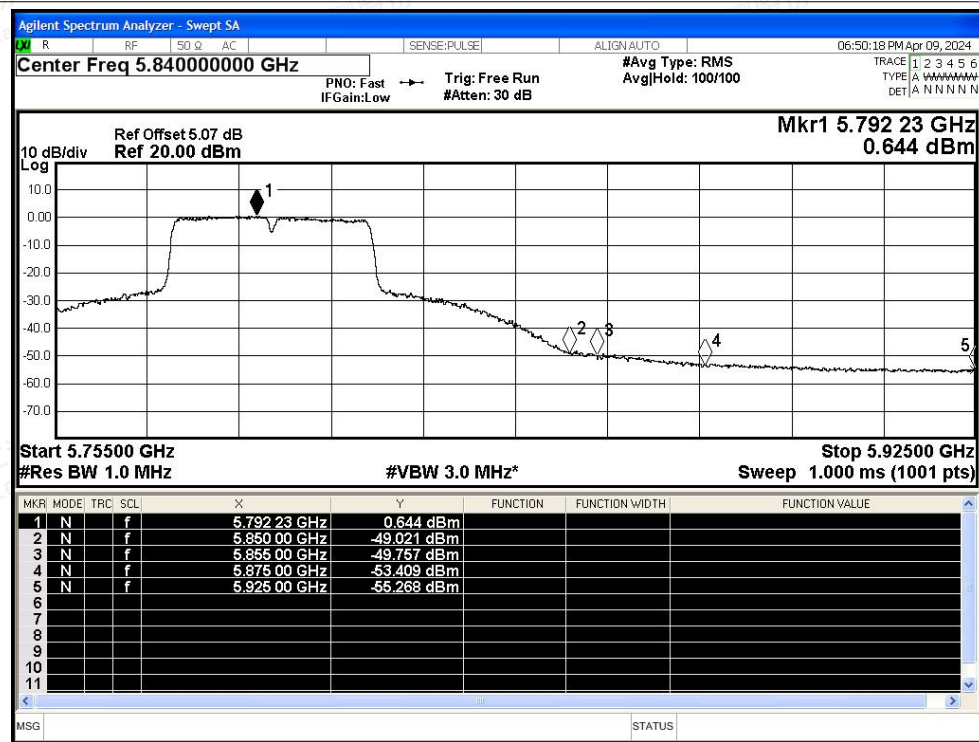

Shenzhen LCS Compliance Testing Laboratory Ltd.

Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com

Scan code to check authenticity



C.5 Frequency Stability


Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	n20	5745	Ant0	5744.96	-40000	-6.96	25	Pass
NVNT	n20	5785	Ant0	5784.96	-40000	-6.91	25	Pass
NVNT	n20	5825	Ant0	5824.98	-20000	-3.43	25	Pass
NVNT	n40	5755	Ant0	5754.96	-40000	-6.95	25	Pass
NVNT	n40	5795	Ant0	5795	0	0	25	Pass






Test Graphs

Freq. Stability NVNT n20 5745MHz Ant0

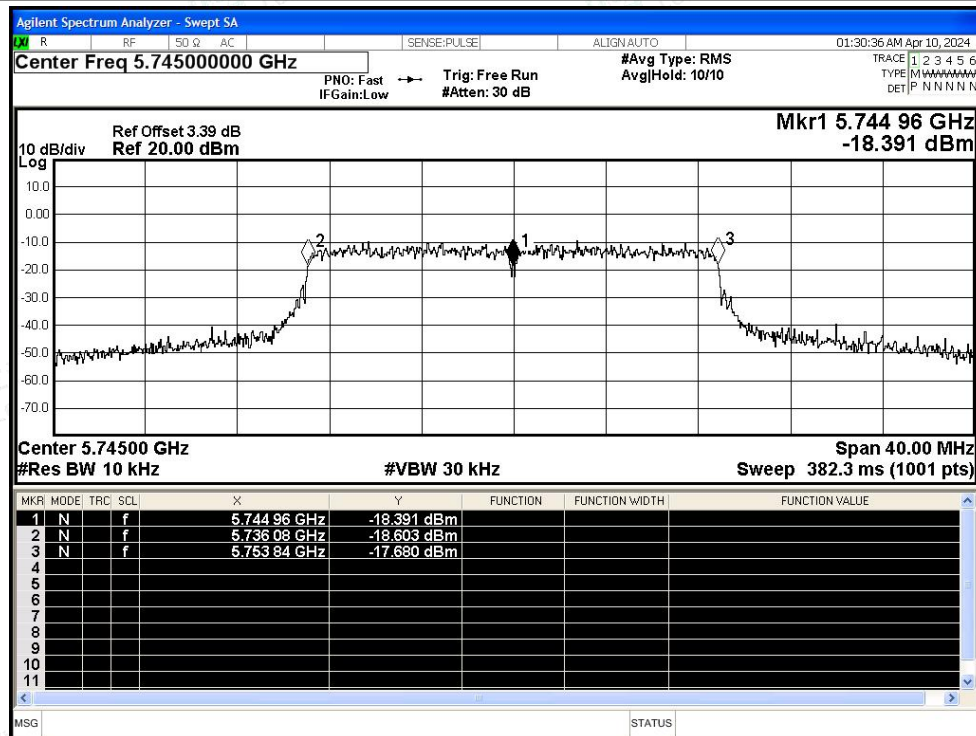

Freq. Stability NVNT n20 5785MHz Ant0

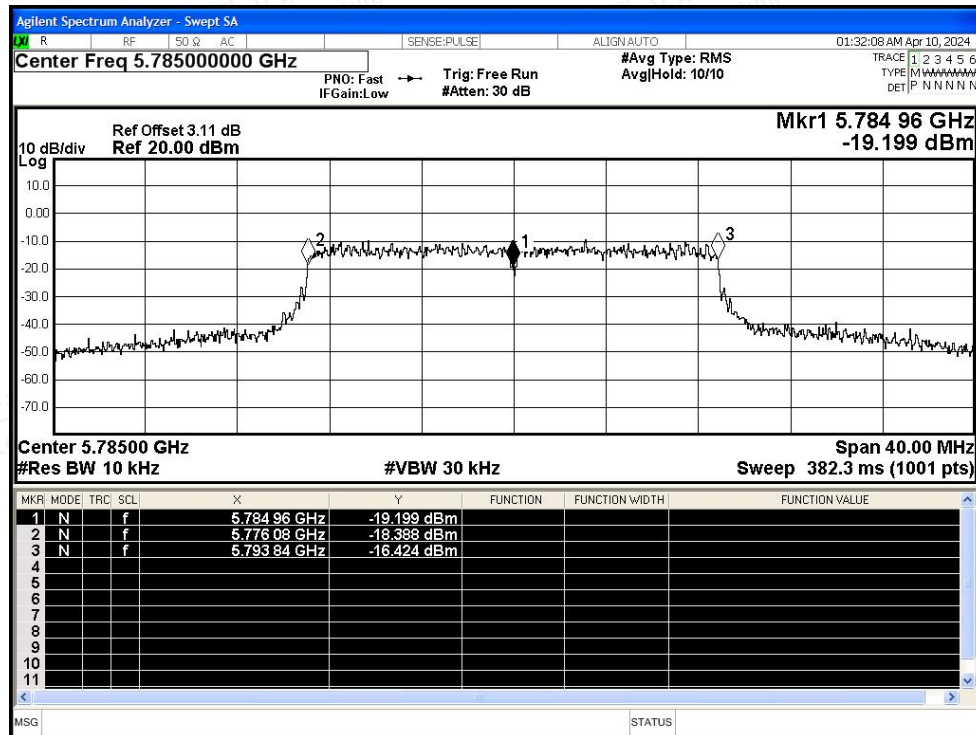

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity




Freq. Stability NVNT n20 5825MHz Ant0

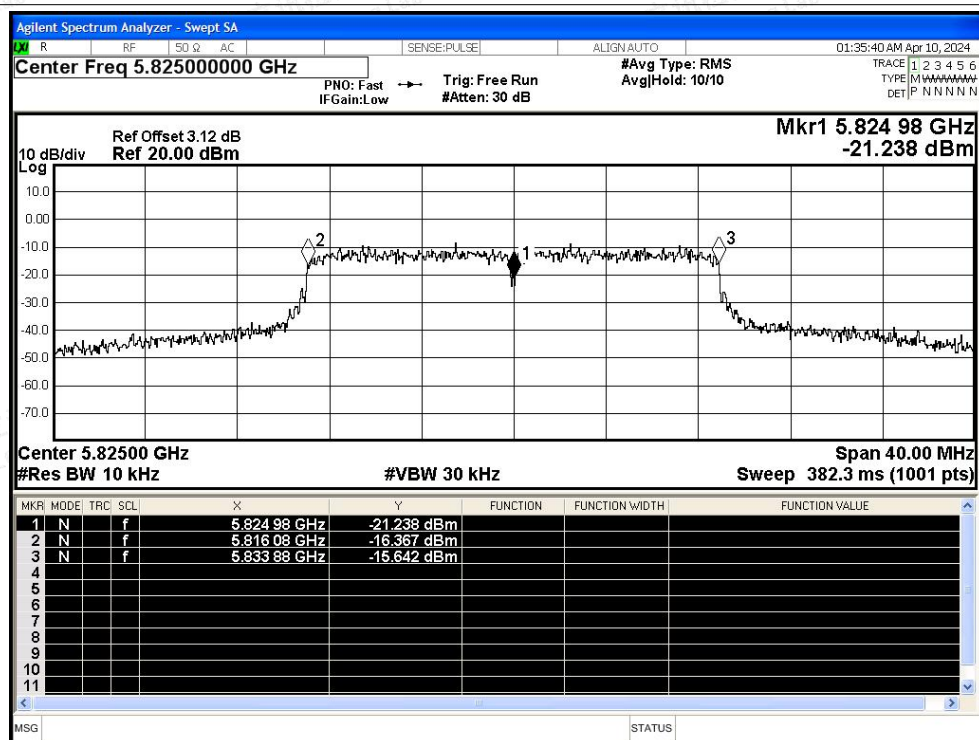

Freq. Stability NVNT n40 5755MHz Ant0

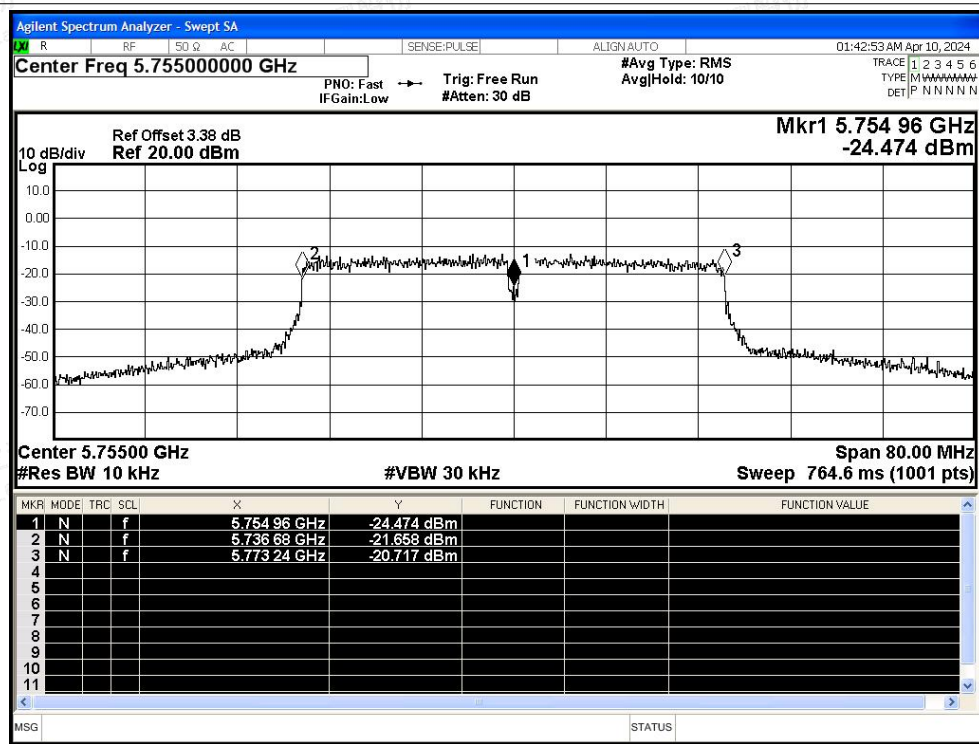

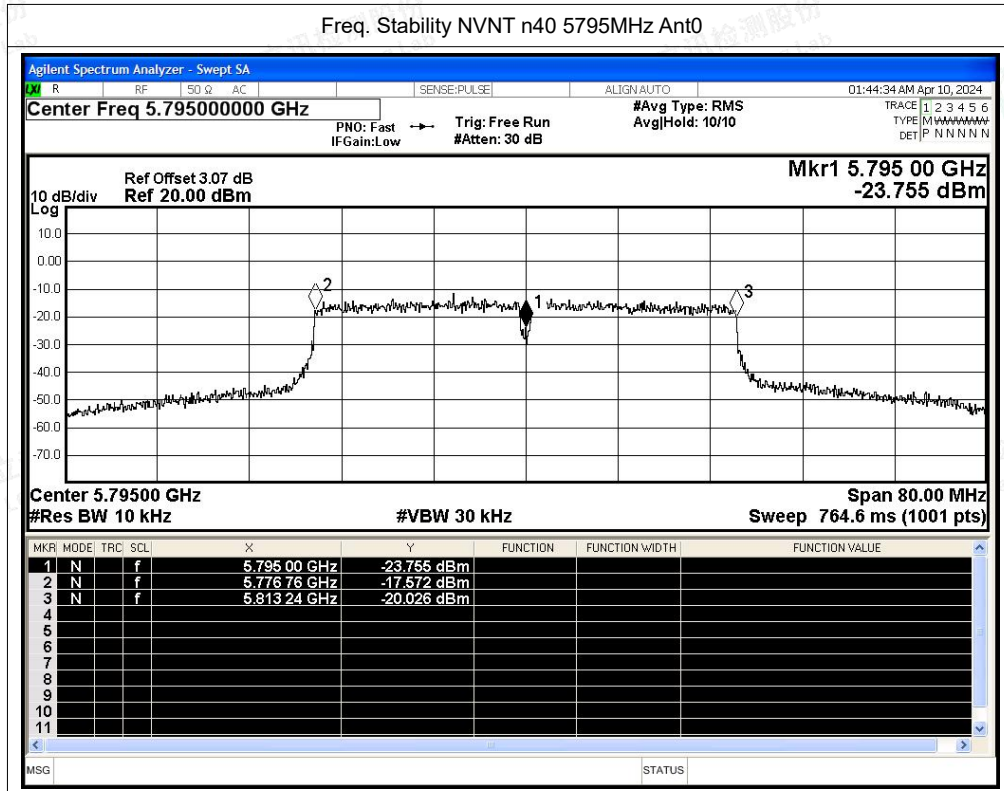



Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	n20	5745	Ant1	5745	0	0	25	Pass
NVNT	n20	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	n20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n40	5755	Ant1	5755	0	0	25	Pass
NVNT	n40	5795	Ant1	5794.96	-40000	-6.9	25	Pass




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen,
518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Freq. Stability NVNT n20 5745MHz Ant1

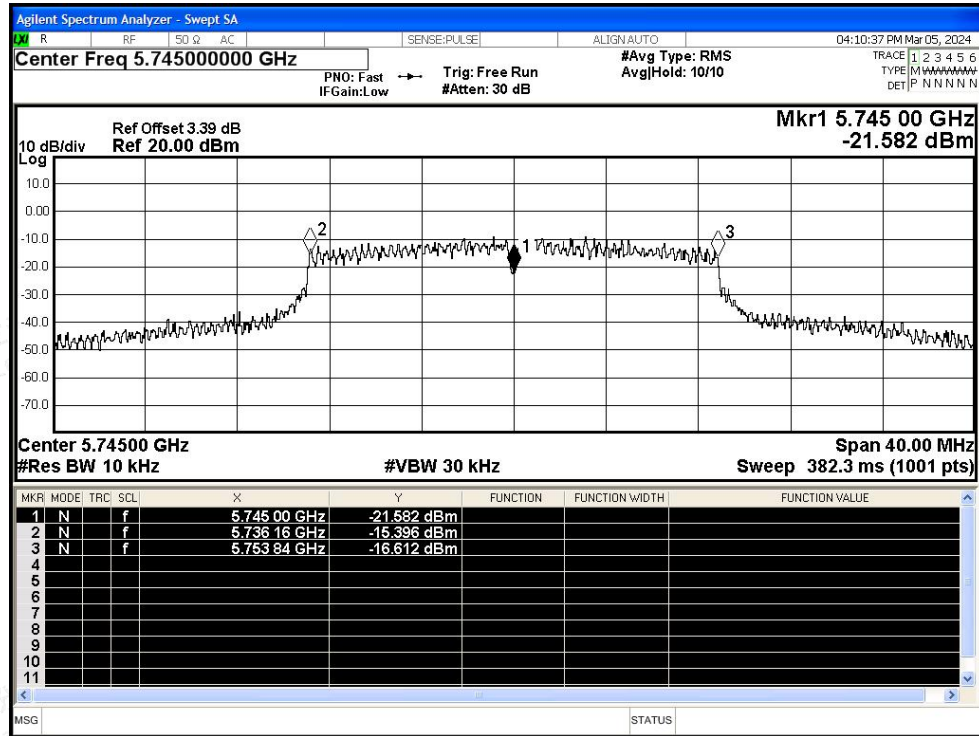

Freq. Stability NVNT n20 5785MHz Ant1

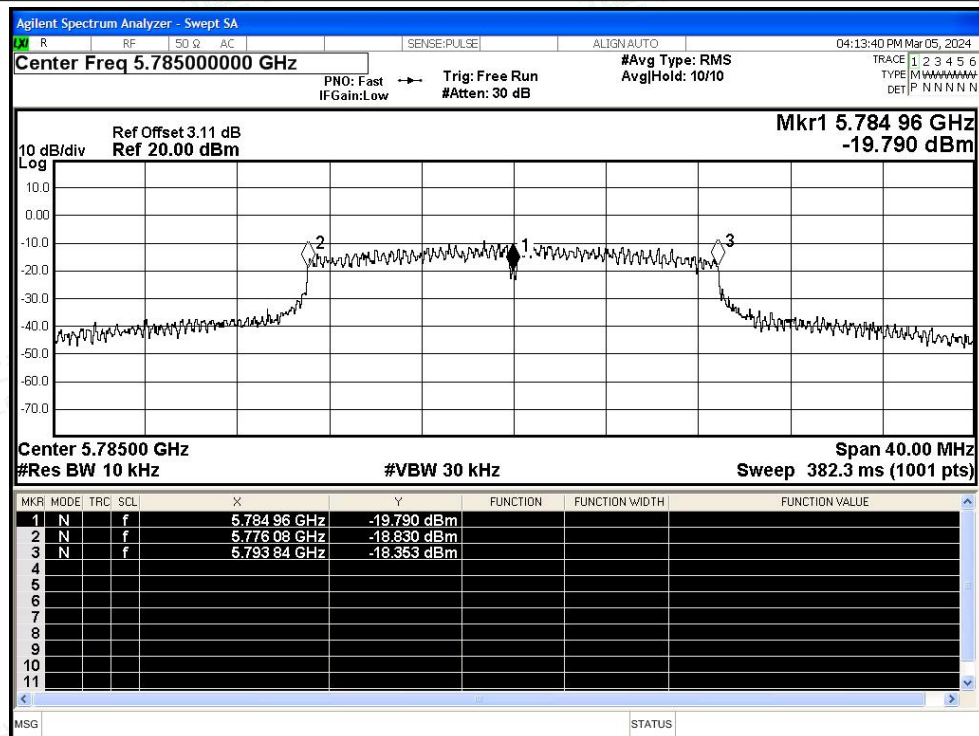

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity




Freq. Stability NVNT n20 5825MHz Ant1

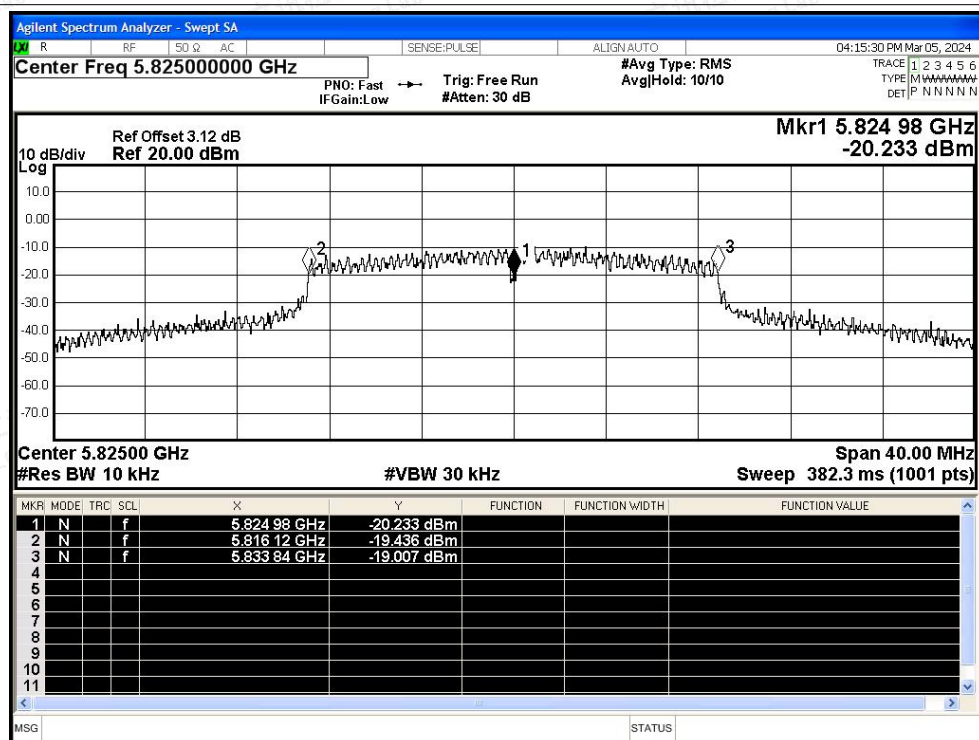

Freq. Stability NVNT n40 5755MHz Ant1

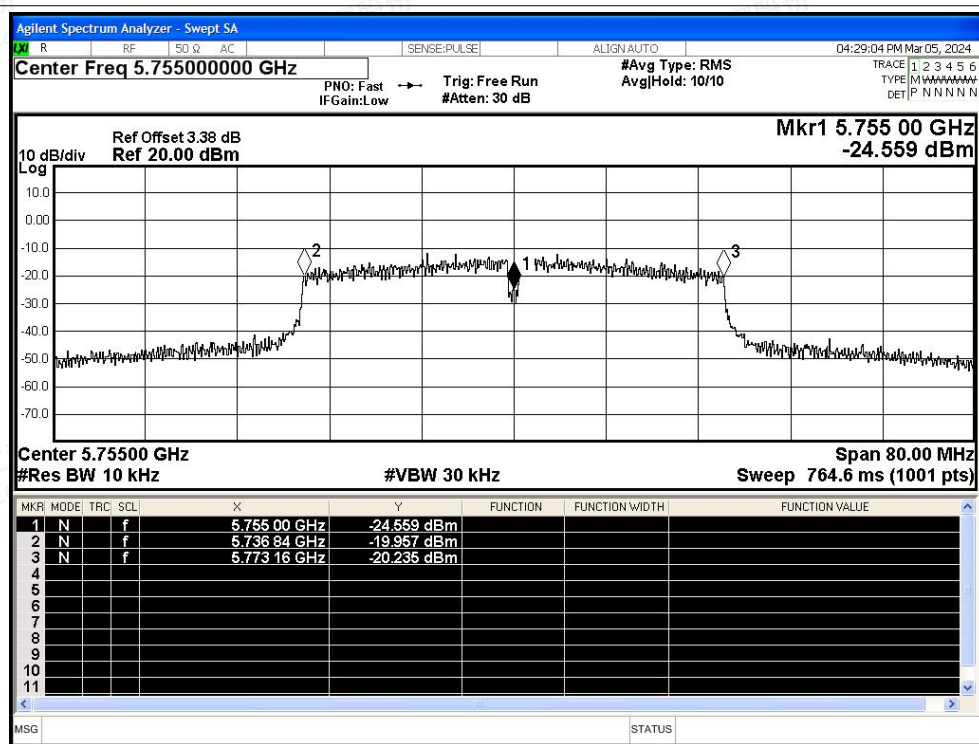

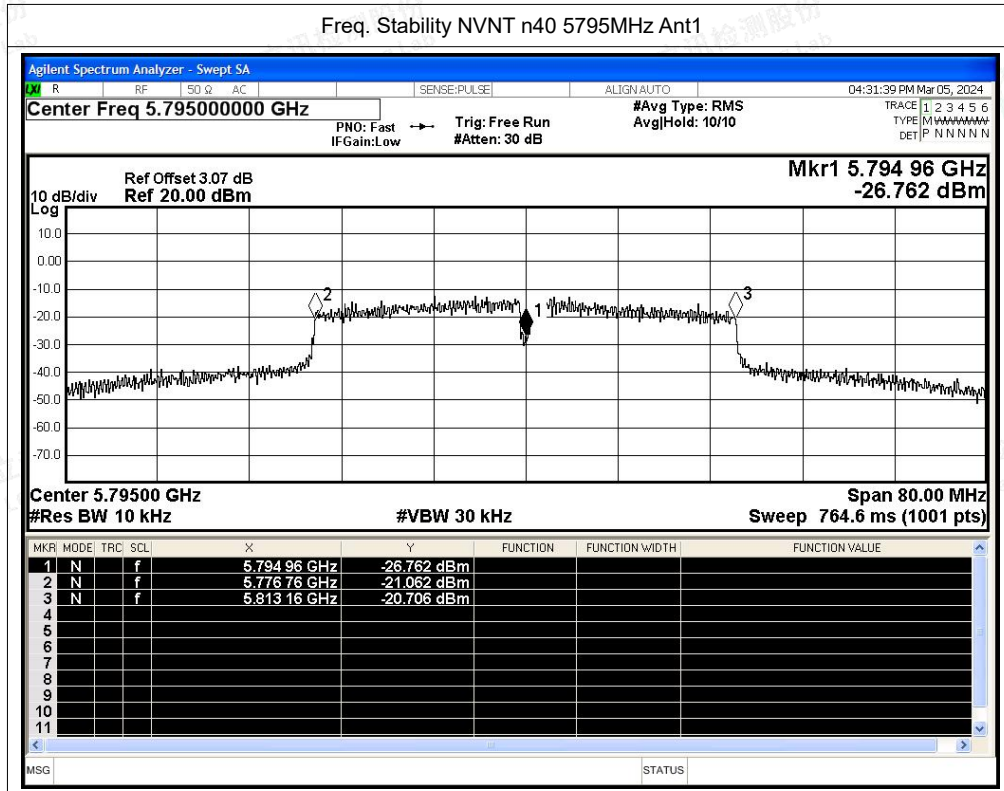



C.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant0	83.68	0.77	1.45
NVNT	a	5785	Ant0	84.6	0.73	1.45
NVNT	a	5825	Ant0	83.8	0.77	1.44
NVNT	n20	5745	Ant0	82.64	0.83	1.68
NVNT	n20	5785	Ant0	82.5	0.84	1.68
NVNT	n20	5825	Ant0	79.52	1	1.68
NVNT	n40	5755	Ant0	79.31	1.01	1.27
NVNT	n40	5795	Ant0	79.31	1.01	1.27






Test Graphs

Duty Cycle NVNT a 5745MHz Ant0

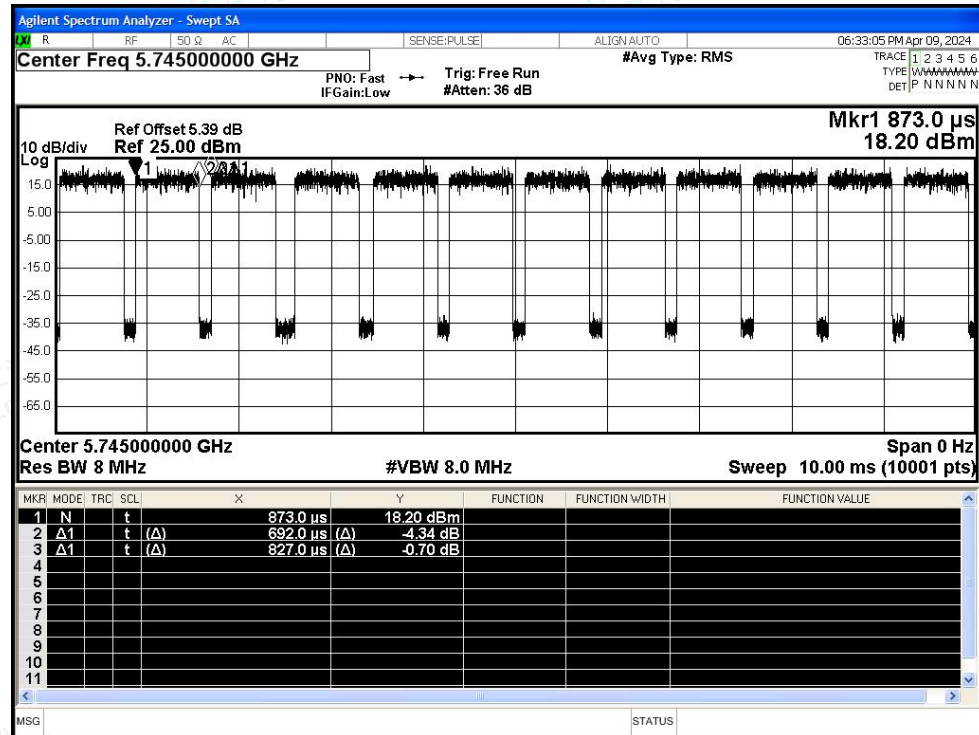


Duty Cycle NVNT a 5785MHz Ant0

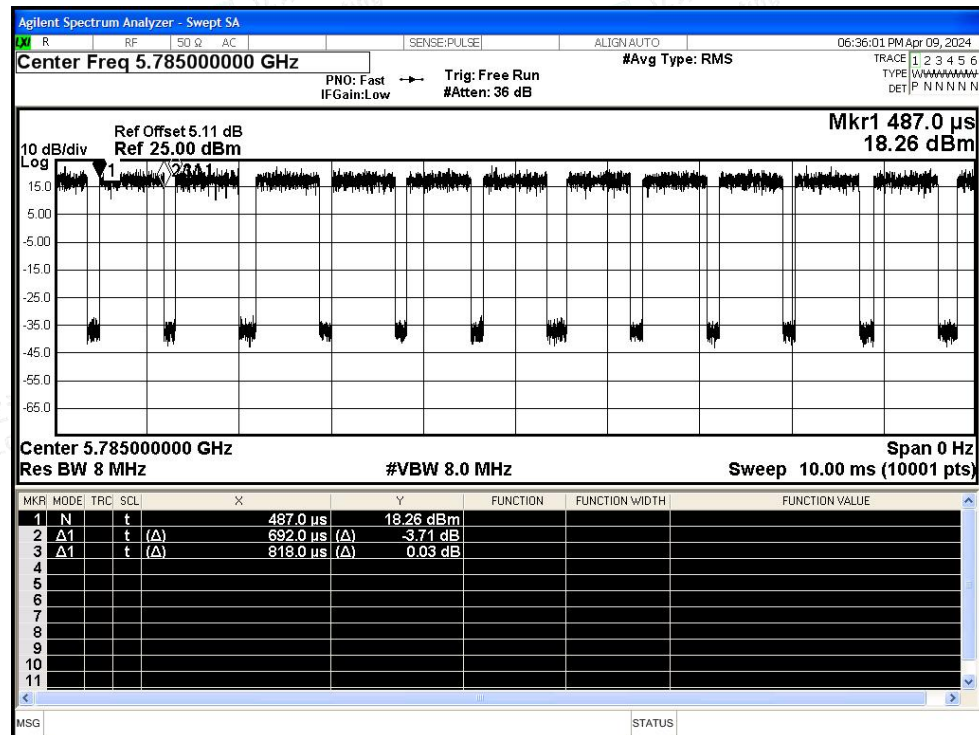




Duty Cycle NVNT a 5825MHz Ant0

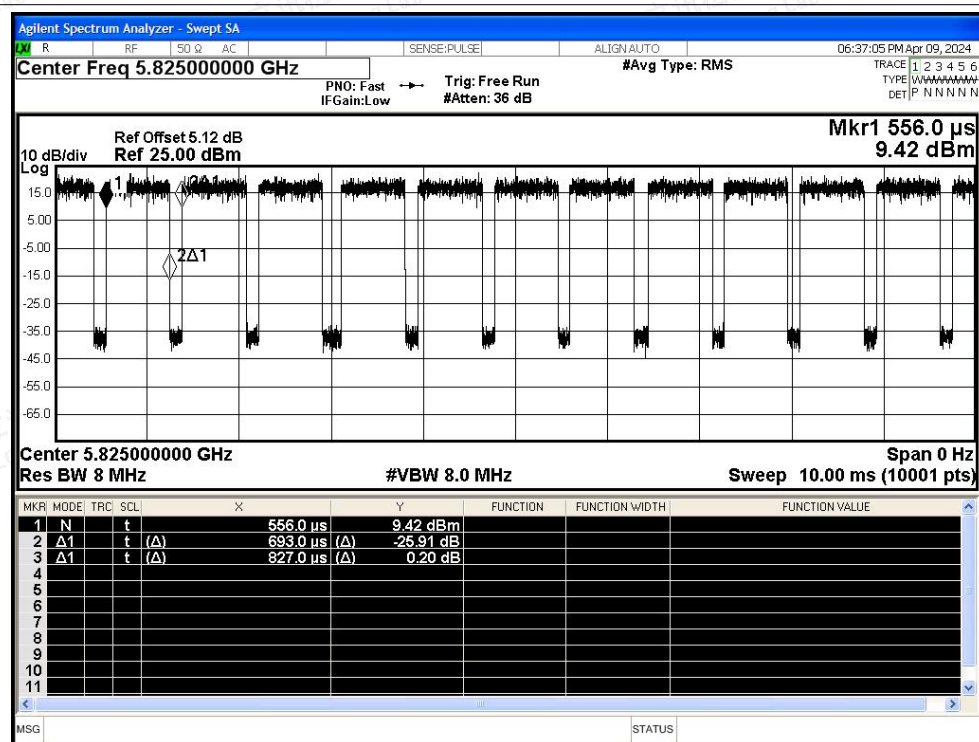


Duty Cycle NVNT n20 5745MHz Ant0

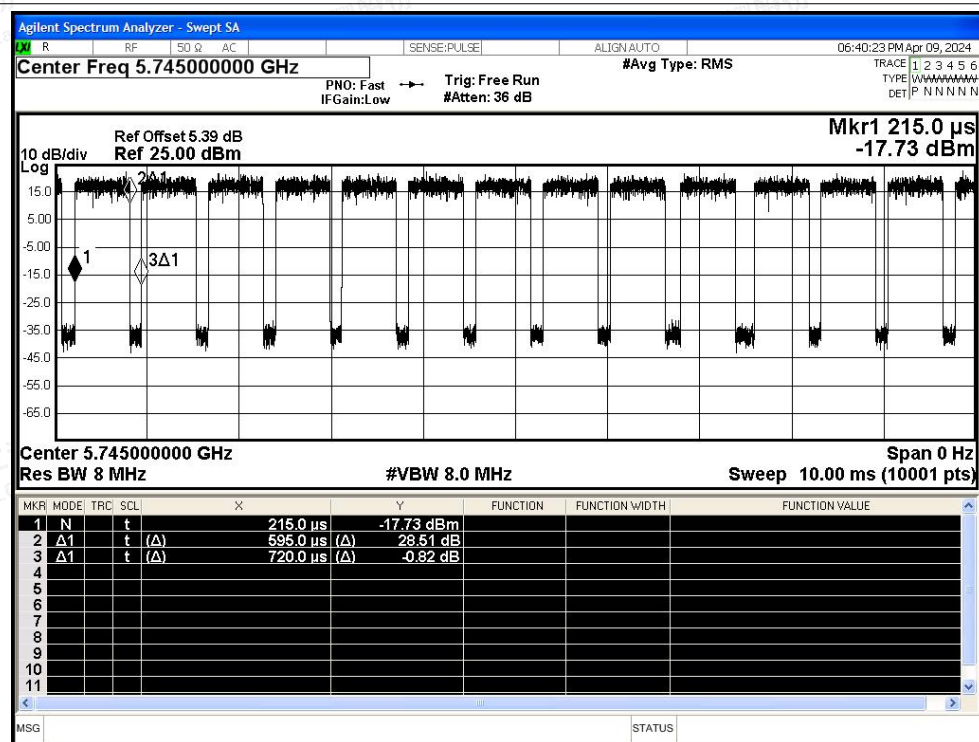




Duty Cycle NVNT n20 5785MHz Ant0

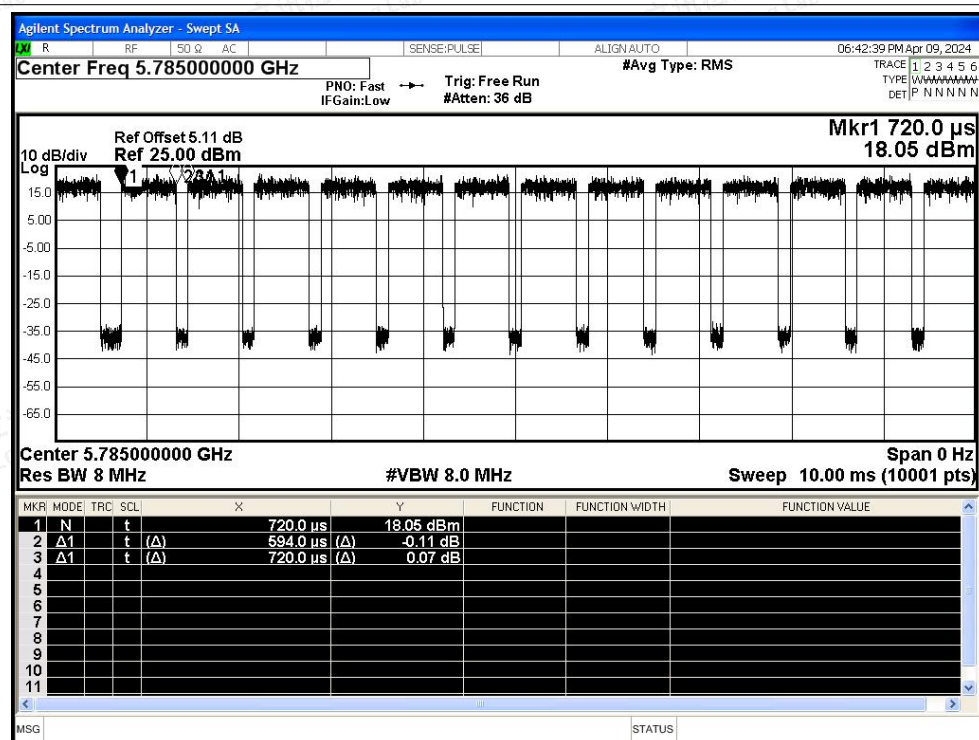


Duty Cycle NVNT n20 5825MHz Ant0

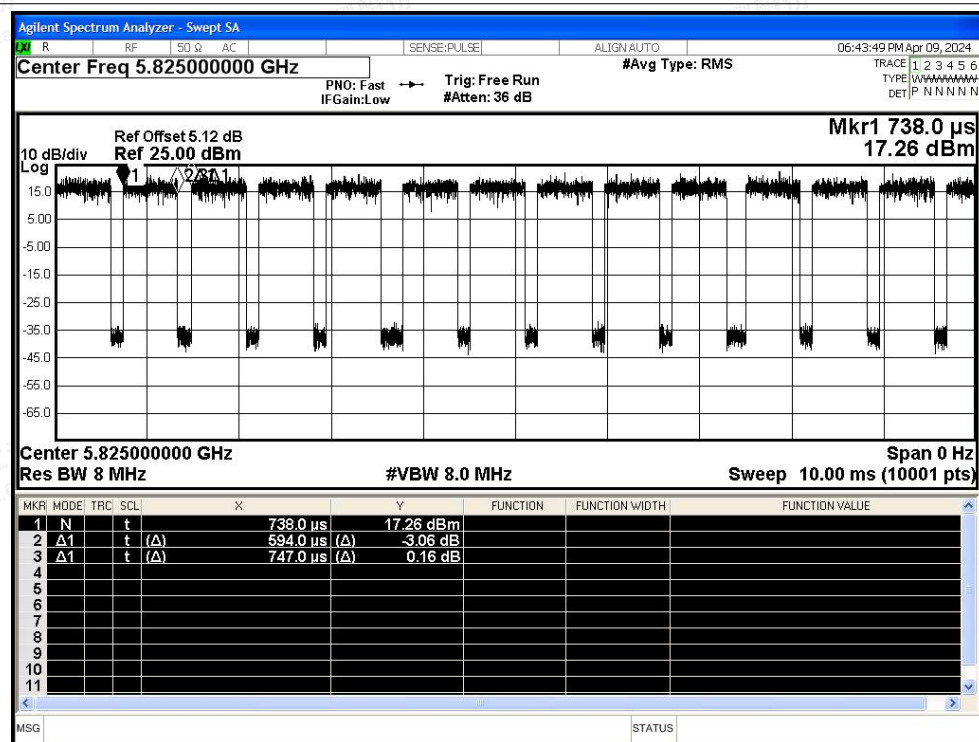




Duty Cycle NVNT n40 5755MHz Ant0

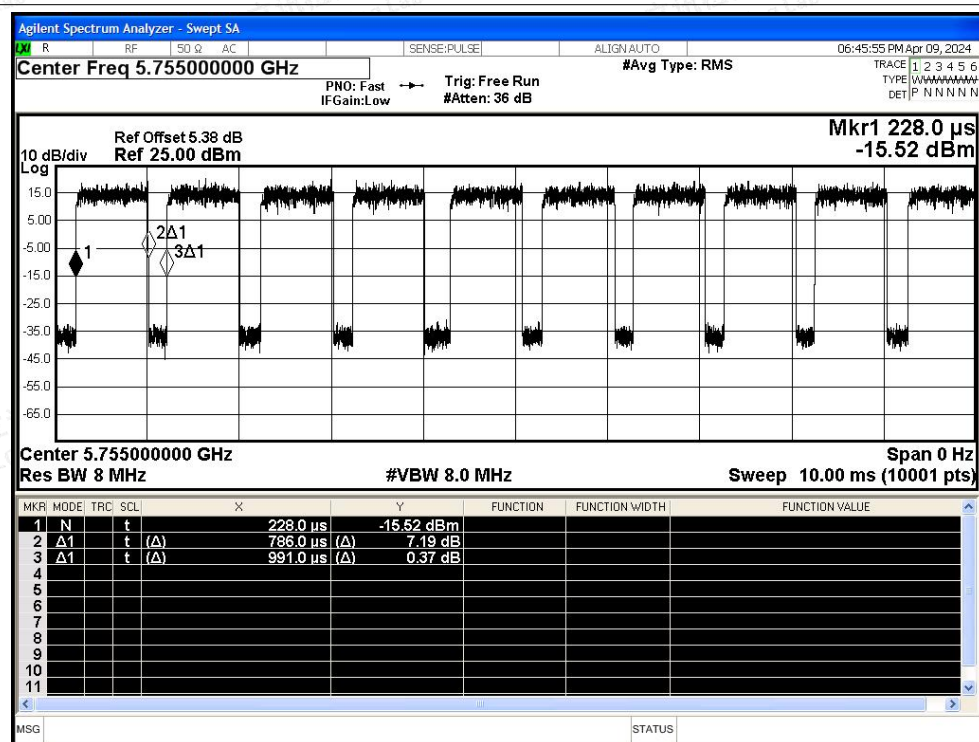

Duty Cycle NVNT n40 5795MHz Ant0

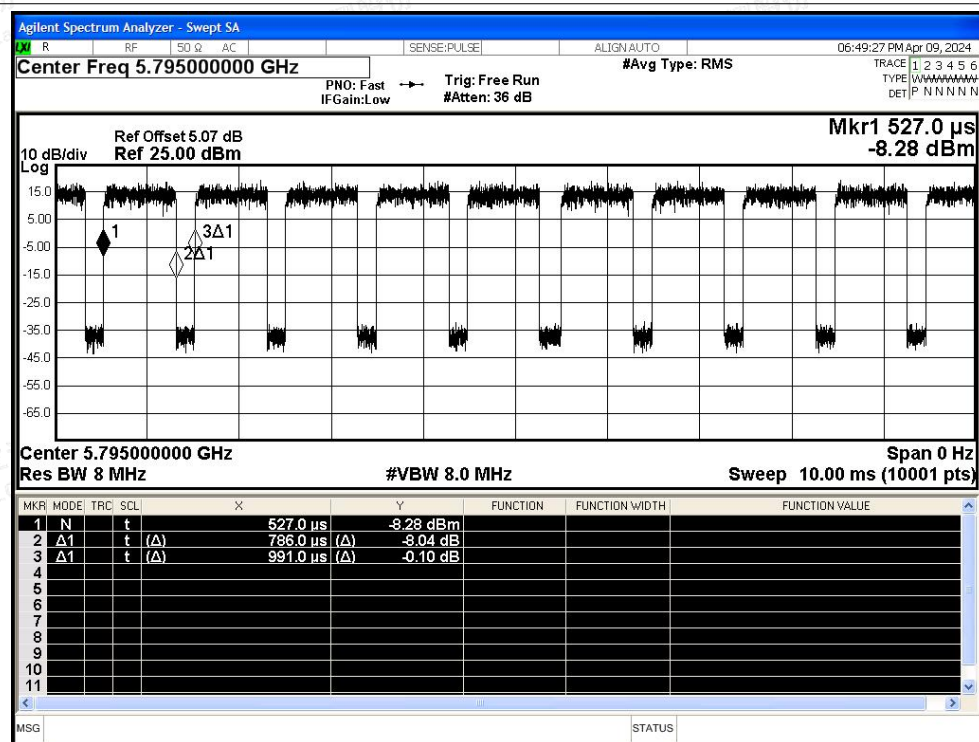




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	83.68	0.77	1.45
NVNT	a	5785	Ant1	83.68	0.77	1.45
NVNT	a	5825	Ant1	84.72	0.72	1.44
NVNT	n20	5745	Ant1	81.62	0.88	1.68
NVNT	n20	5785	Ant1	80.62	0.94	1.68
NVNT	n20	5825	Ant1	81.62	0.88	1.68
NVNT	n40	5755	Ant1	76.44	1.17	1.27
NVNT	n40	5795	Ant1	79.31	1.01	1.27






Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

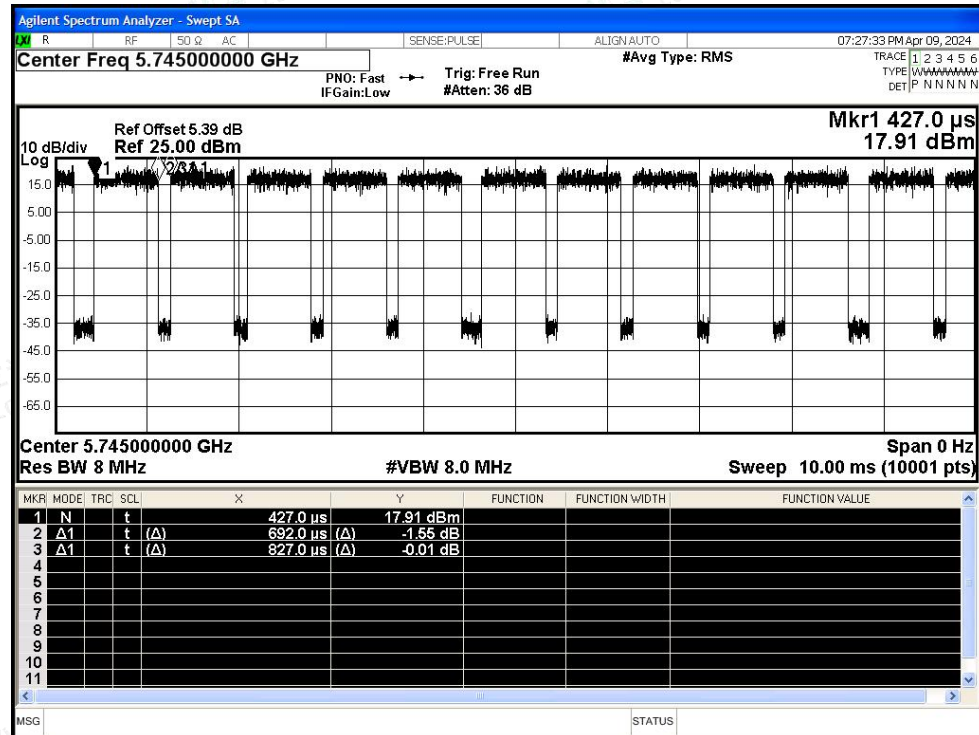


Duty Cycle NVNT a 5785MHz Ant1

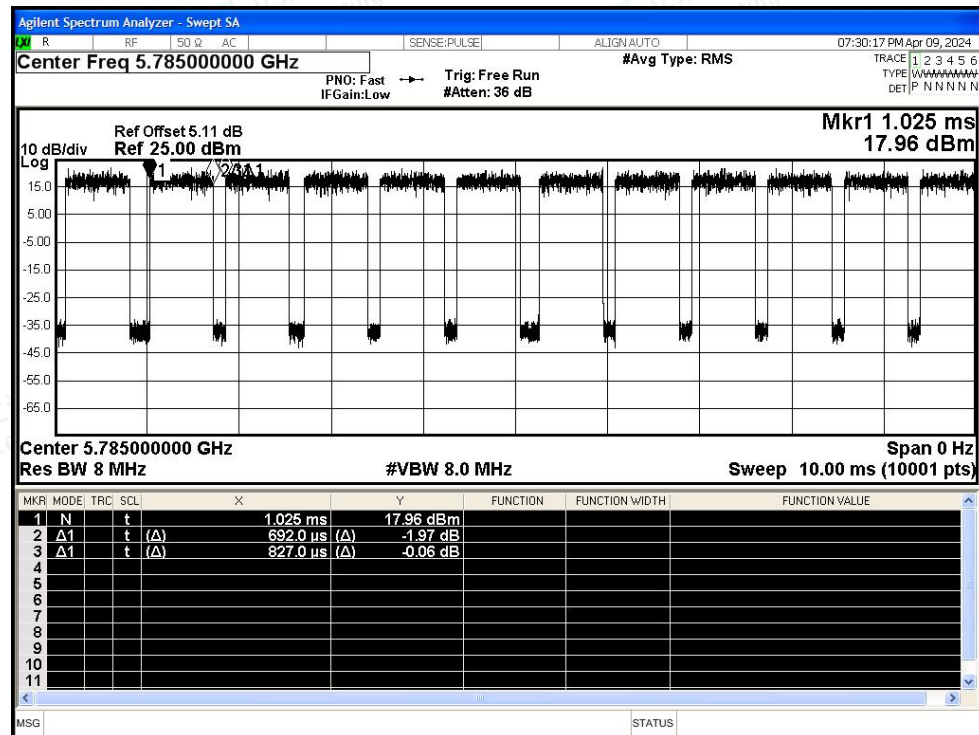




Duty Cycle NVNT a 5825MHz Ant1

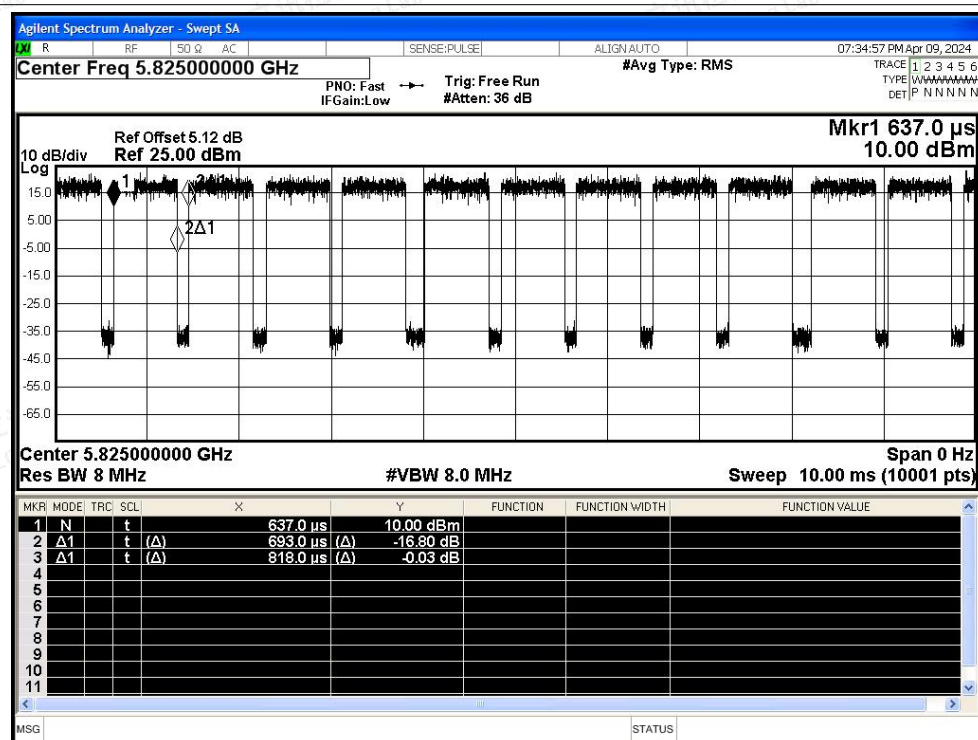


Duty Cycle NVNT n20 5745MHz Ant1

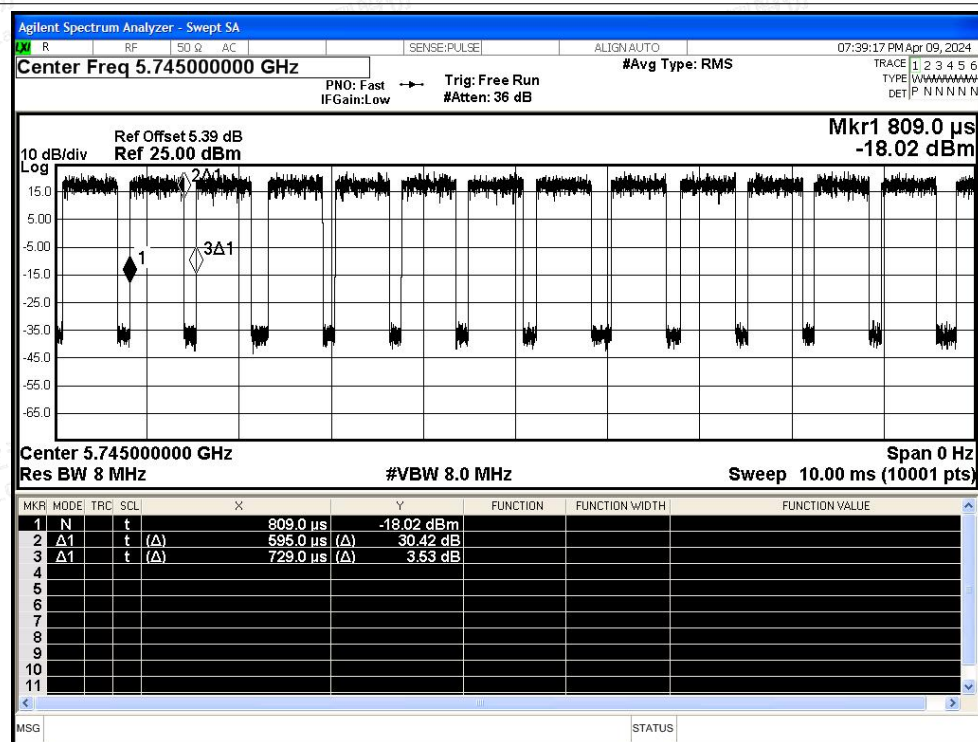




Duty Cycle NVNT n20 5785MHz Ant1

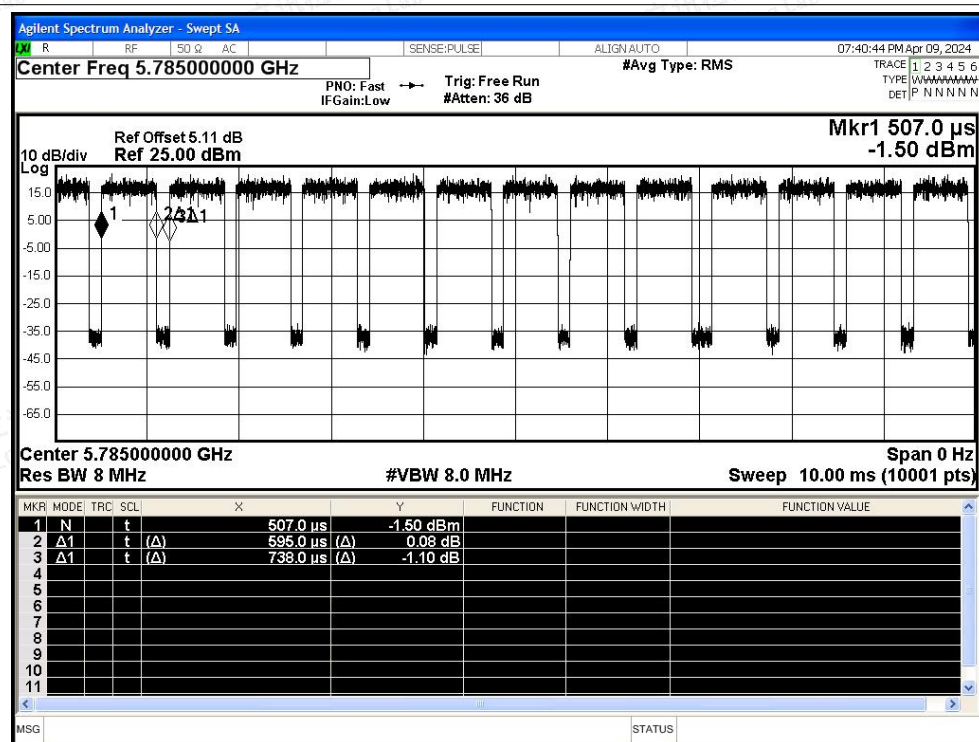


Duty Cycle NVNT n20 5825MHz Ant1

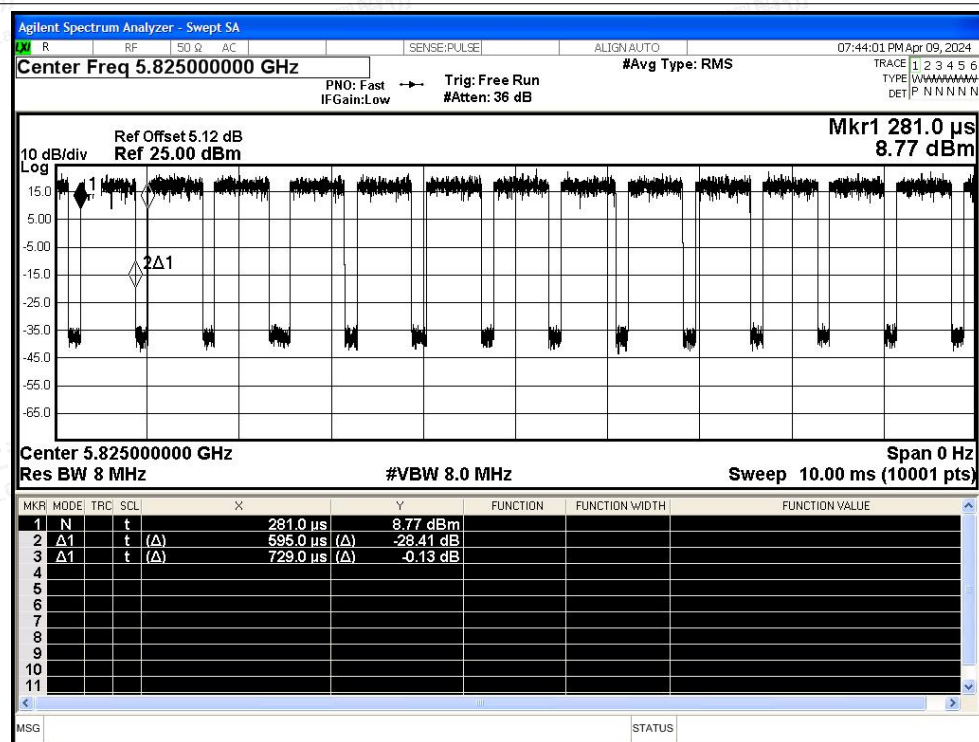



Duty Cycle NVNT n40 5755MHz Ant1

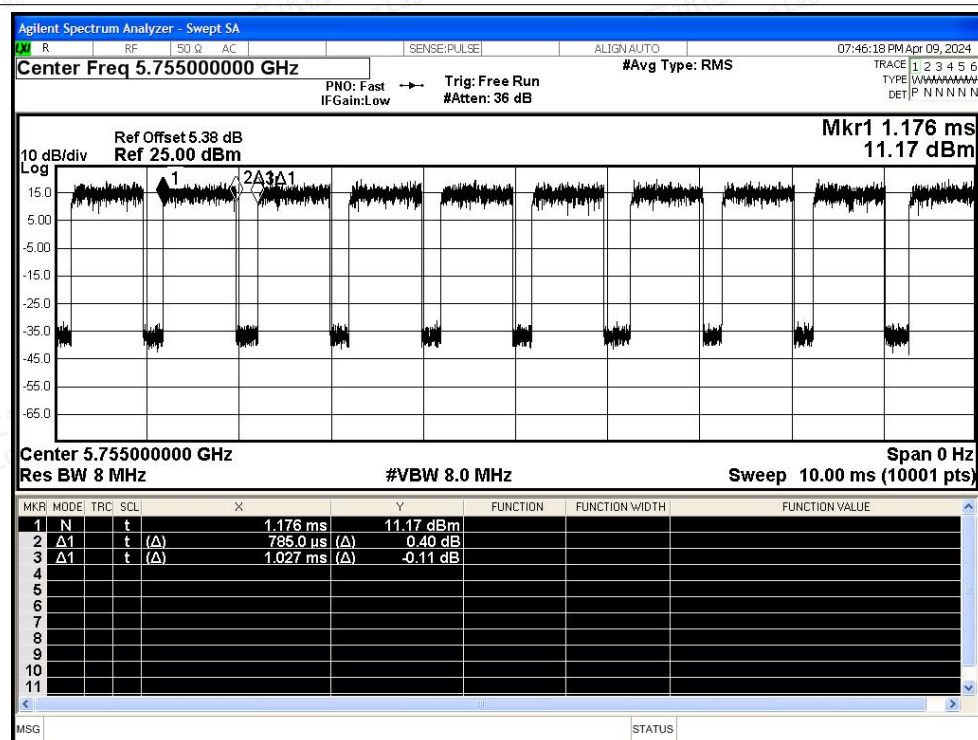

Duty Cycle NVNT n40 5795MHz Ant1

