



A DIVISION OF ROLLEASE ACMEDA

## Pulse 2 Hub | Set up Instructions for iOS

The Pulse 2 connects to home networks to unlock the luxury of automated shade control. Experience customization with scene and timer options as well as voice control via Google Assistant, Amazon Alexa, and Apple HomeKit.

### THE APP ALLOWS FOR:

1. Individual and group control – Group Automate shades by room and conveniently control them accordingly.
2. Remote connectivity - Control shades remotely, whether home or away on a local network or an internet connection.
3. Scene control - Personalize shade control and organize how your shades operate by specific daily events.
4. Timer functionality - Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.
5. Sunrise and Sunset - Utilizing time zone and location, the Pulse 2 can automatically raise or lower Automate shades according to the position of the sun.
6. Compatible IoT Integrations:
  - Amazon Alexa
  - Google Home
  - IFTTT
  - Smart Things
  - Apple HomeKit

### GETTING STARTED:

In order to experience automated shade control through the Automate Pulse 2 app, you will need to have:

- Downloaded the free app Automate Pulse 2 App via the Apple App Store (available under iPhone apps) or iPad apps for iPad devices.
- Purchased one or more Hub's depending on the size of the area you would like to cover.
- Familiarized yourself with the app navigation guide below.
- Created a Location then pair hub to that location. Our step by step guide will explain in more detail.

### WI-FI HUB TECHNICAL SPECIFICATIONS:

- Radio Frequency range: ~ 60 feet (no obstructions)
- Radio Frequency: 433 MHz
- Wi-Fi 2.4 GHz or Ethernet Connectivity (CAT 5)
- Power: 5V DC
- For Indoor Use Only

### BEST PRACTICES FOR PAIRING THE HUB WITH YOUR WI-FI NETWORK:

- Only pair your hub via 2.4GHZ Wi-Fi (Lan Pairing is not supported) Do not connect ethernet to the hub.
- The Hub must be within signal range of both the automated shades and 2.4GHZ Wi-Fi.
- Ensure 5Ghz are disabled on your Wi-Fi router or disconnected from your mobile device.
- Check your phone and confirm if the Home App has been installed.
- Environments with multiple WAPs (wireless access points) may need all but the main router temporarily disabled.
- Security settings on your router and on phone may need to be temporarily disabled.
- Place the Hub in a horizontal position. (avoid metal enclosures / ceiling or any other locations that may affect the range.
- Before starting the Hub installation, make sure that all your shades are functional and charged. You can test the shade using a remote control or pressing a "P1" Button on the motor head.
- In case of range issues, it is recommended you deploy the antenna or reposition the hub in your installation.
- Add additional repeaters if is required (Only two per Hub).

### CAPABILITIES:

- Motors per Hub: 30
- Locations per account: 5
- Hub's per location: 5
- Rooms per Location: 30 per Hub
- Scenes per Hub: 20 (100 per location)
- Timers per Hub: 20 (100 per location)

**WHAT'S IN THE BOX?**



**A.**  
Automate Pulse 2  
Hub



**B.**  
USB Power  
Supply



**C.**  
32" (80cm) USB  
Power Cord



**D.**  
Ethernet cable




**E.**  
Quick Start Guide

**UNPACKING THE HUB 2.0:**



**1.** Unpack the Pulse 2.

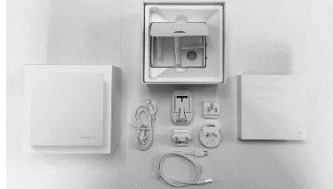

**2.** Check the Box Contents.



**3.** Plug the USB Cord  
into the Power Supply




**4.** Connect the Micro  
USB end into the back  
of the Pulse 2



**5.** Plug the Power Supply  
into the outlet and place  
the Hub in a central  
location in your home.




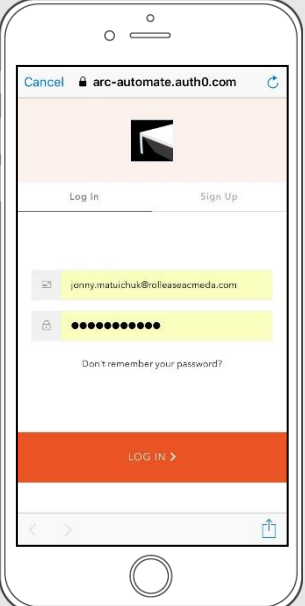
**APP NAVIGATION:**

Home Page

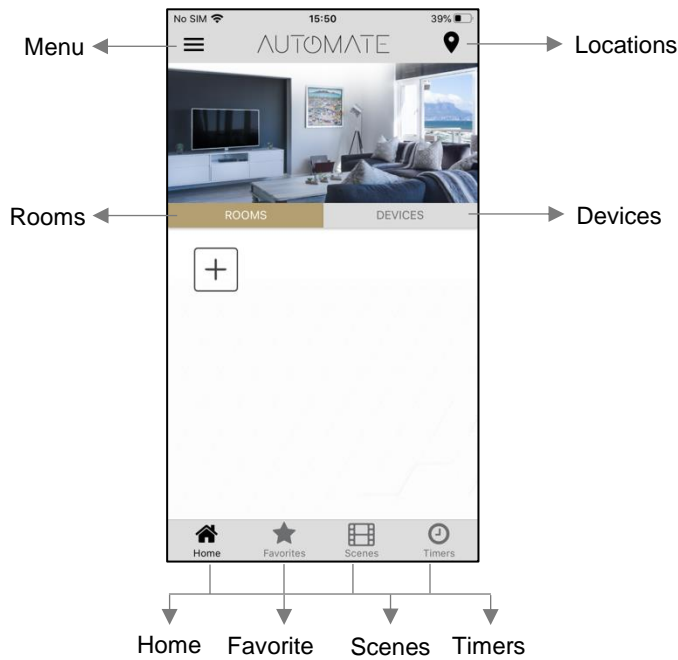





- Home:** Shows the main control screen with rooms and devices tabs
- Favorites:** Allows you to create a list of your favorite Devices or Scenes
- Scenes:** Show a list of scenes created
- Timers:** Show a list of scene timers
- App Version:** 2.0.(13)

## ACCOUNT SETUP:
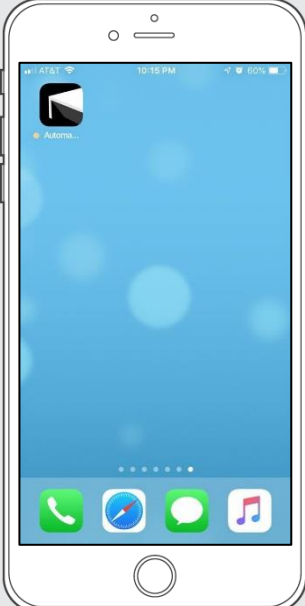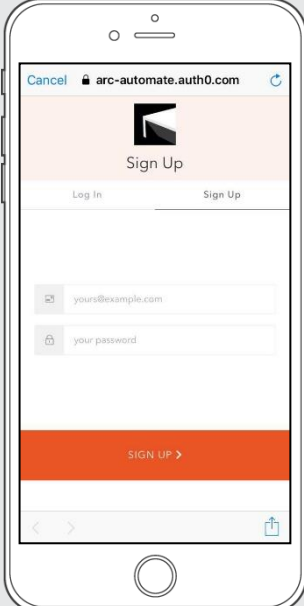
| STEP 1 – Open the App   | STEP 2 – Sign Up  | STEP 3 – Sign Up   | STEP 4 – Sign In  |
|---|---|--|---|
|  |                |  |  |
| <p>Open the Automate Pulse 2 mobile App.</p>                                      | <p>If required, create a new account. Select Sign Up on the Top Right corner of the screen.</p> | <p>Creating an account will require an email address and password</p>              | <p>If you already have an account Log in with your account information.</p>         |

## QUICK START SETUP:

NOTE: You cannot pair the hub via the Ethernet cable connection, Wi-Fi only via a 2.4GHZ connection. Refer to troubleshooting for more information.

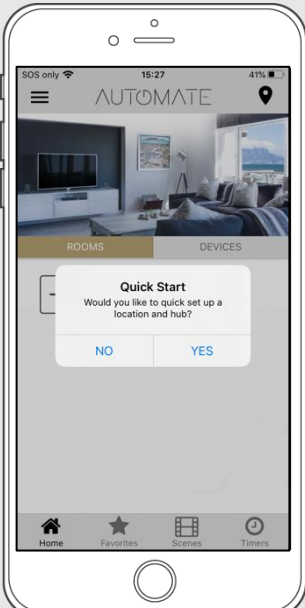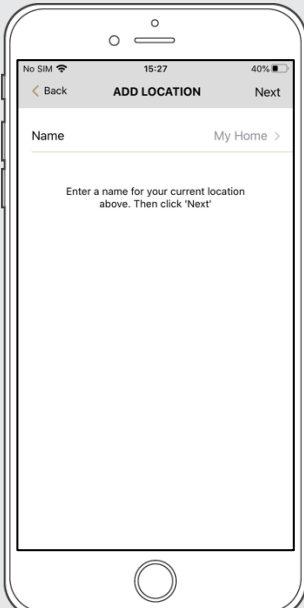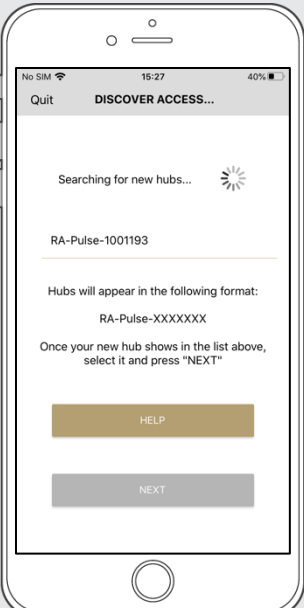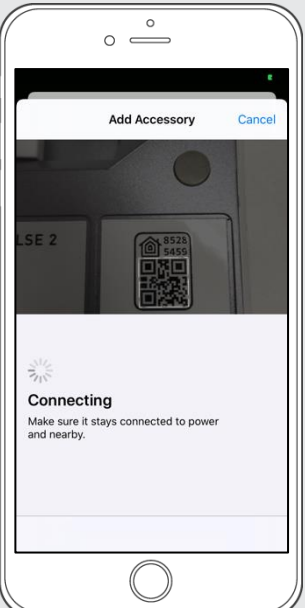
| STEP 1 – Quick Start  | STEP 2 – Add Location  | STEP 3 – Discover Hub  | STEP 4 – Scan Hub   |
|---|--|--|---|
|  |             |  |  |
| <p>Please power up the Hub then follow the Quick Start guide. Select "YES".</p>     | <p>You can create a name for your location or select "Next" to use the Default "My House".</p> | <p>Select the Hub you wish to connect too and then press "Next".</p>                 | <p>Scan the QR Code on the bottom of the hub to sync with HomeKit.</p>                |

### STEP 5 – HomeKit Success




The Hub has successfully connected to HomeKit. Press "Done" to continue.

### STEP 6 – Time Zone

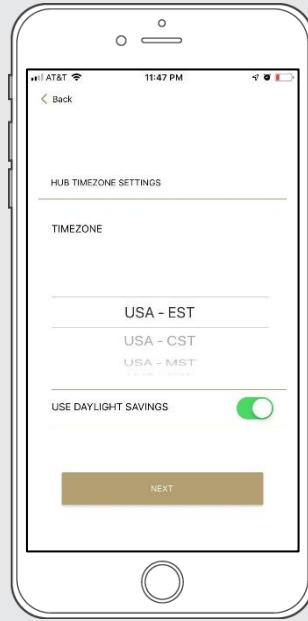

Select your Time Zone. This is important for timers to operate correctly. Ensure daylight savings is enabled.

### STEP 7 – Finalizing

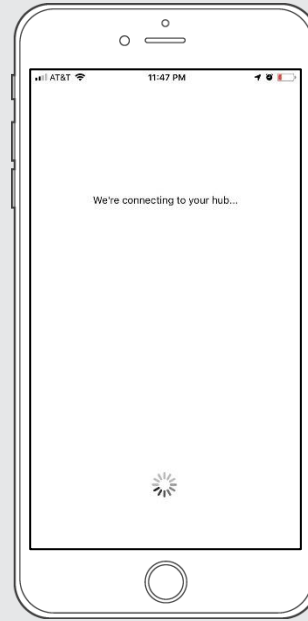

Wait as the hub finalizes the setup.


### STEP 8 – Pairing Completed



The Hub is ready to be used! Press 'DONE' to start the Application.


### ADDING ADDITIONAL HUB TO EXSITING LOCATION:

#### STEP 1 - Configure a Hub

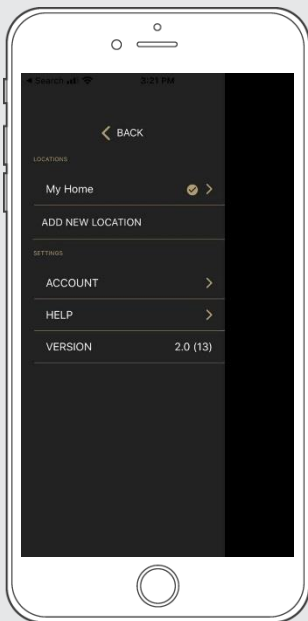

Select the location desired to add a new hub to.

#### STEP 2 - Configure a Hub

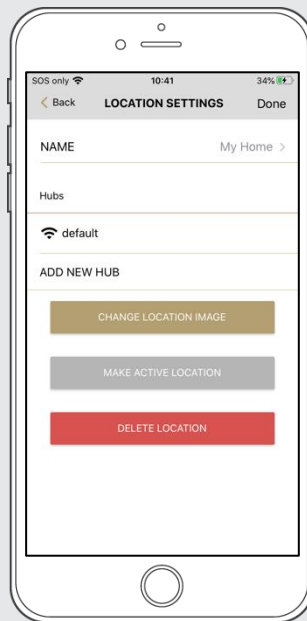


Click on "ADD NEW HUB" to start the process to setting up your HUB on the App.

#### STEP 3 - Configure a Hub



Follow on the screen instructions and click on the button to connect to NEW HUB.

#### STEP 4 - Configure a Hub

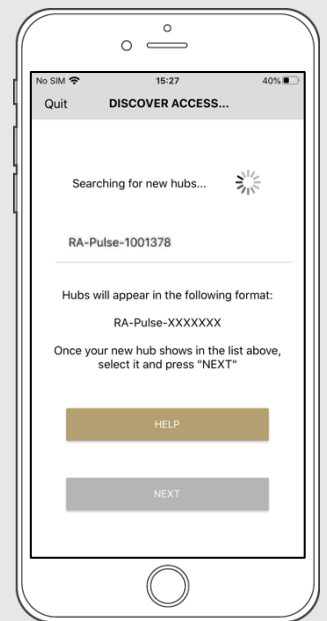


From the list select the hub you wish to pair to. Select 'NEXT'

### STEP 5 - Configure a Hub




Scan the QR Code on the bottom of the hub to sync with Homekit

### STEP 6 - Configure a Hub

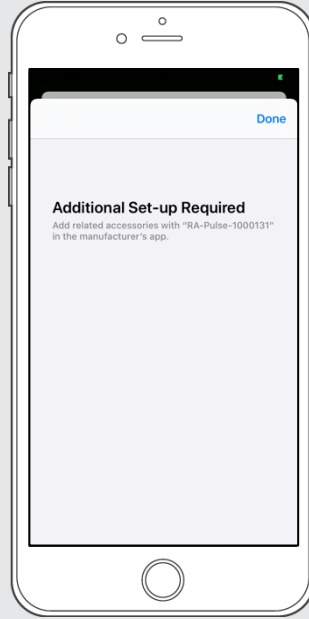


The hub was successfully added to Homekit!

### STEP 7 - Configure a Hub

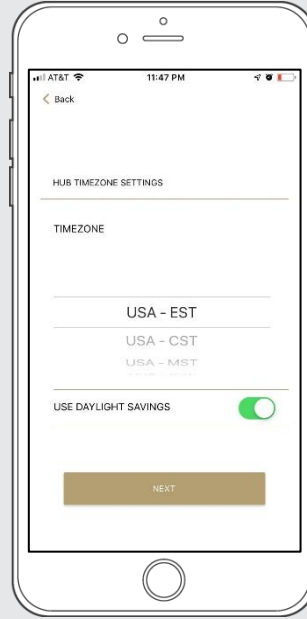


Select your Time Zone. This is important for timers to operate correctly.

### STEP 8 - Configure a Hub

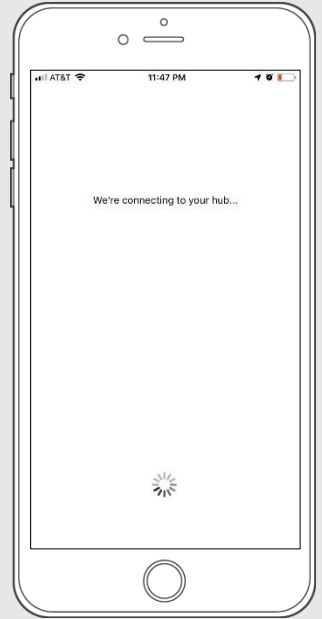

Wait while the hub connects to your Wi-Fi Network


### STEP 9 - Configure a Hub

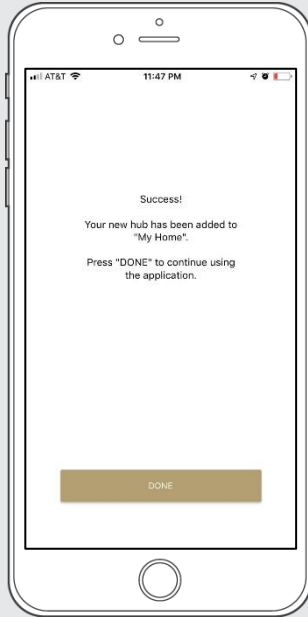

The Hub is ready to be used! Press 'DONE' to start the Application.

## MANUAL HUB CONFIGURATION IN APPLE HOMEKIT:

### STEP 1 - Configure a Hub

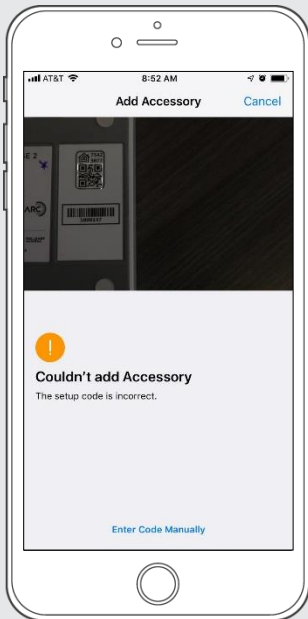


If the App does not recognize the QR Code, you should enter code manually.

### STEP 2 - Configure a Hub



Select 'Enter Code' to enter the Homekit code manually

### STEP 3 - Configure a Hub

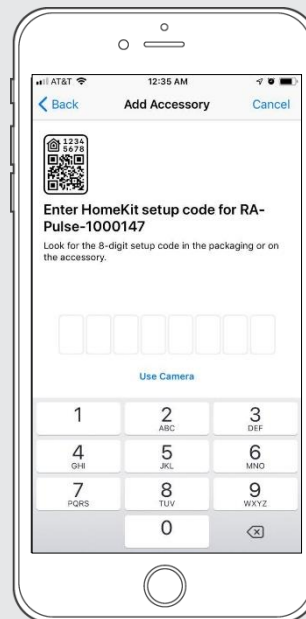

Type the code on the label.


### STEP 4 - Configure a Hub



Wait while the hub syncs with Homekit.


## CREATING A LOCATION:

### STEP 1 – Add Location

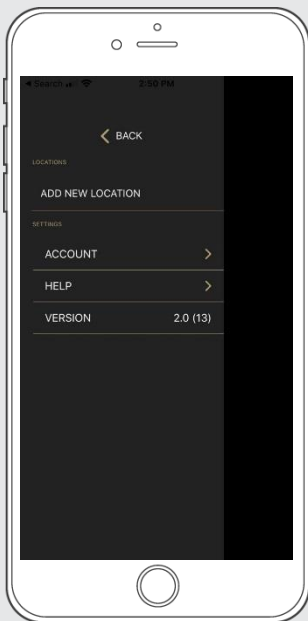


Open the App from the home screen and select the menu button, click "ADD NEW LOCATION".

### STEP 2 – Add Location

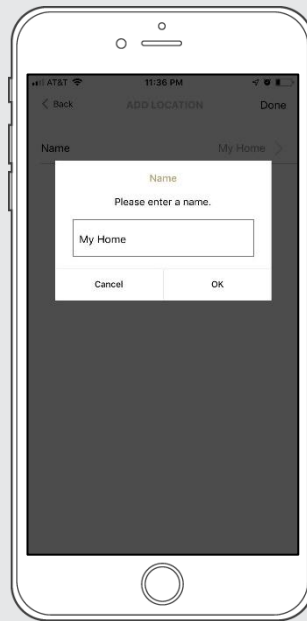

Select the default location and update the location name if desired. Select Ok then Done.


### STEP 3 – Toggle Location

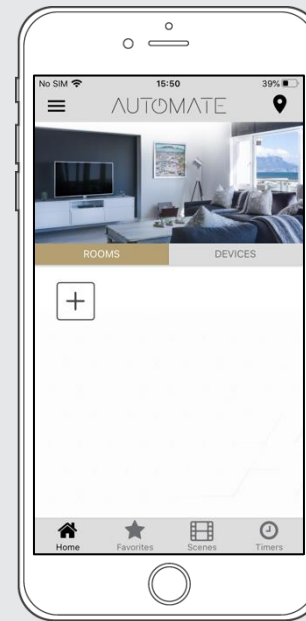

If you have setup multiple locations, select the 'Location' icon in the upper right corner to toggle between locations.


## ADDING CUSTOM HOME IMAGE:

**STEP 1- Custom Home Image**

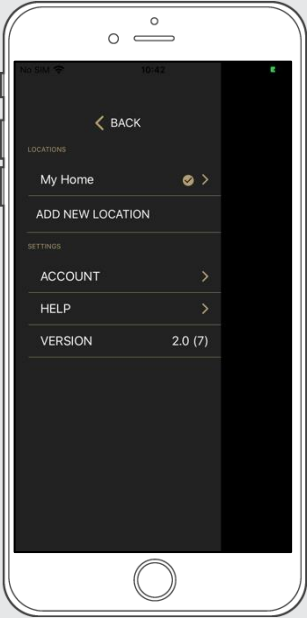


From the main menu select the location you wish to change the home image for.

**STEP 2- Custom Home Image**

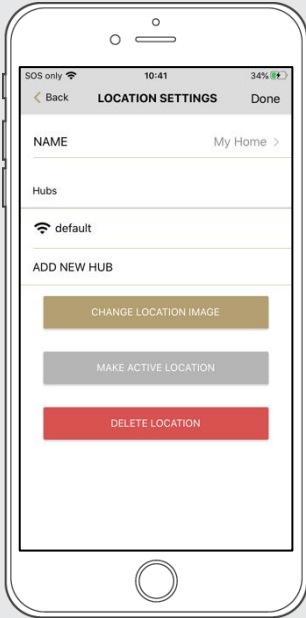


Select "Change Location Image".

**STEP 3- Custom Home Image**

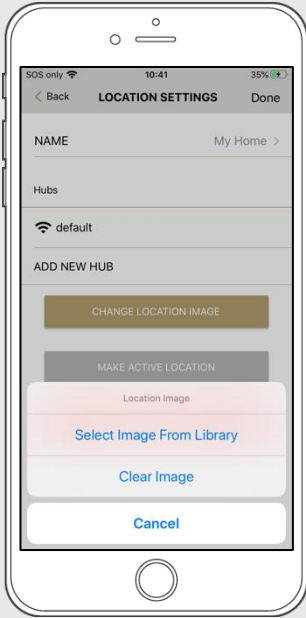

Choose to "Select Image from Library".

**STEP 4- Custom Home Image**

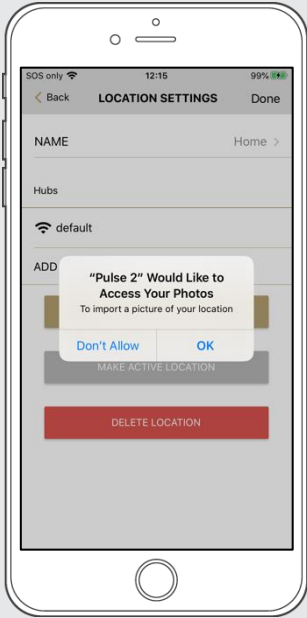


You will need to Allow Pulse 2 access to import a picture, Select the image and crop as desired.

## HOW TO PAIR A MOTOR TO THE APP:


During the setup, the hub may need to be moved room to room during the pairing process. We recommend setting up your motors with a remote prior to syncing with the App.

**STEP 1 – Pair a motor**

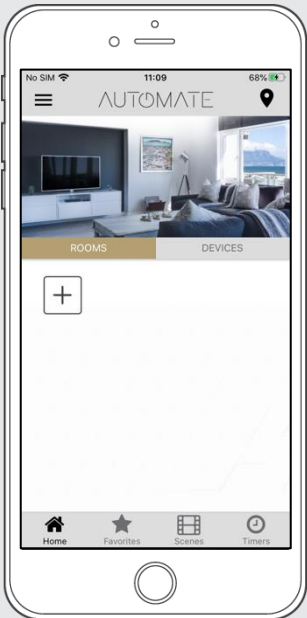


On the home screen select 'DEVICES' then select the 'Plus' icon to add a new shade.

**STEP 2 – Pair a motor**

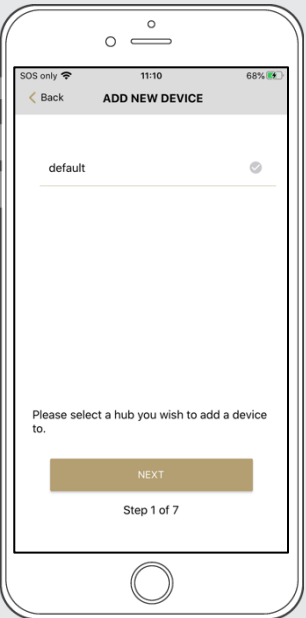


From the list select the HUB you wish to pair the motor too.

**STEP 3 – Pair a motor**

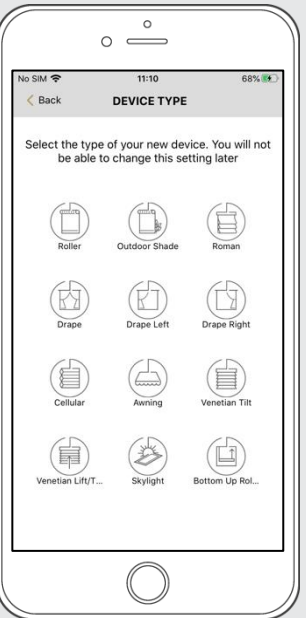


Select which device type best represents your shade.. (NOTE this can't be changed later)

**STEP 4 – Pair a motor**

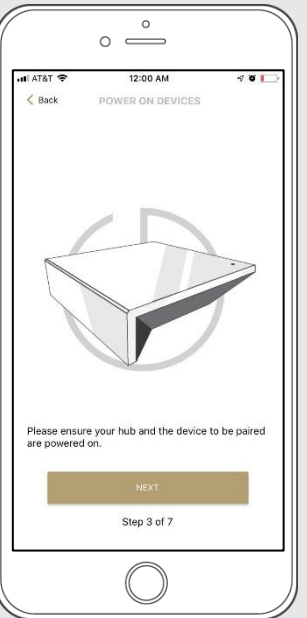


Make sure the shade device is plugged in or ready to be paired and select 'NEXT'

### STEP 5 – Pair a motor

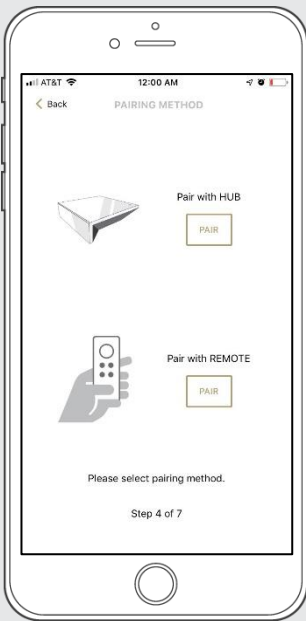


Choose your pairing method: 'PAIR USING HUB' or 'COPY FROM REMOTE'.  
\*We recommend copying from a remote for the best results.

### STEP 6 – Pair with Remote

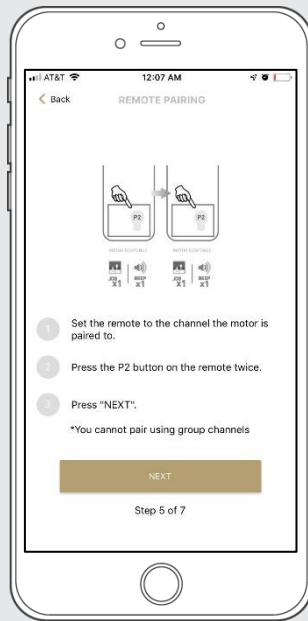

Make sure the remote is tuned to the shade's individual channel (not Ch 0). Remove the remote battery cover and press the upper left P2 button Twice, then "Next".

### STEP 7 – Pair with HUB

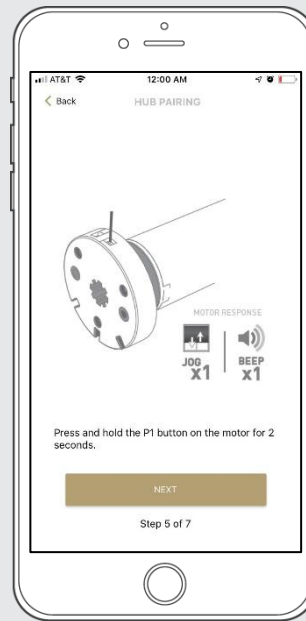

Press and hold the P1 button on the motor head ~2 seconds. The motor will jog up and down once and you will hear one audible beep. Press 'PAIR' on the app screen.

### STEP 8 – Pair a motor




Wait as the app searches for the new device.

### STEP 9 – Pair a motor




If the pairing process was successful, Press 'NEXT' to finalize pairing.  
If pairing fails, try the process again.

### STEP 10 – Shade Details

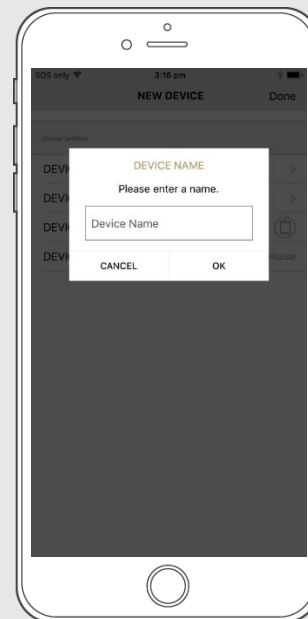


Input a Device Name to customize your treatment name. Press "Done" to complete setup.

### STEP 11 – Pair a motor

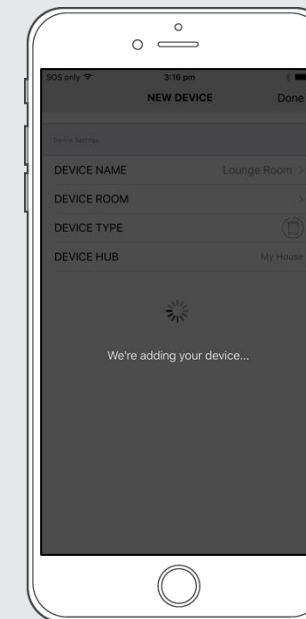

The "New Device" will now be added to the 'DEVICE' tab

### STEP 12 – Shade Ready

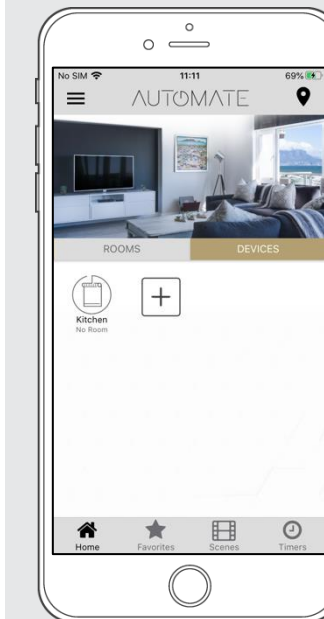

Shade is now ready for operation from Pulse 2 App.




## HOW TO OPERATE SHADES:

### STEP 1 – Operate Shade




Select the device that you wish to operate.

### STEP 2 - Open a shade

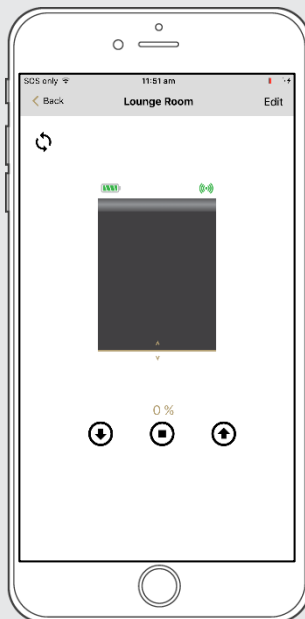


Close the shade by pressing the "Down Arrow" icon or scrolling the black line to the bottom.

### STEP 3 - Close a shade

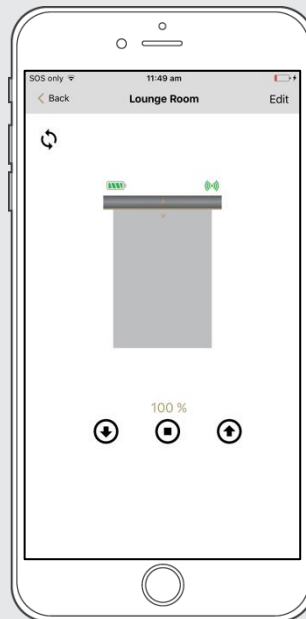

Open the shade by pressing the "Up arrow" icon or scrolling the black line to the top.


### STEP 4 - Move a shade

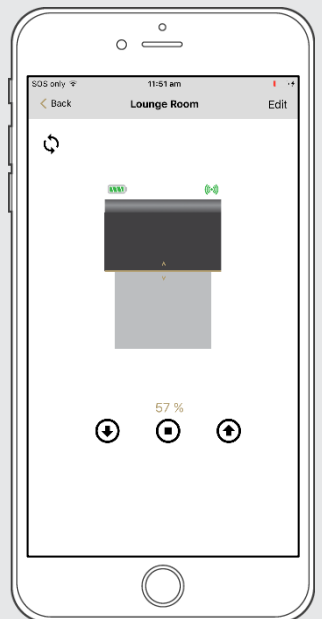


Move the shade to the position desired by scrolling the line to any position. Press the stop button to stop the shade anytime.


## DEVICE INFORMATION:


### Battery Device Information

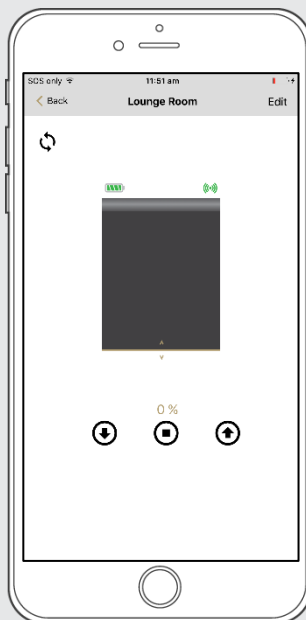

Top left corner, there is the battery icon – This icon has 3 levels. Full, Medium & Low. 

### Signal Device Information

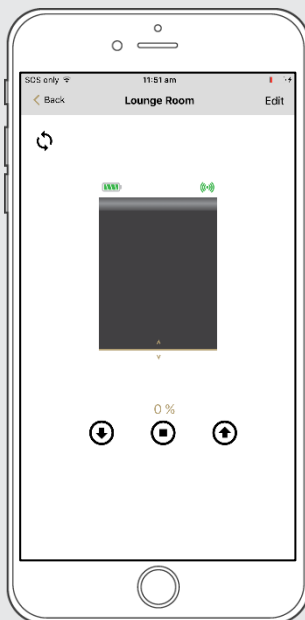

Top right there is the Signal Strength icon. 4 Levels. Excellent, Satisfactory, Low & No Signal. 

### Device Information




From the device window if you select "Edit" you can see all the motors device settings and the device information.

Refer to Page 18 for more information about the battery status and Signal Strength Status


## HOW TO CREATE A ROOM:

### STEP 1 – Create a Room

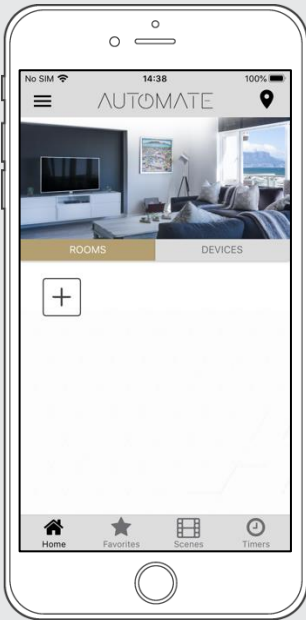


Once the Shade is paired to the App. Click 'ROOMS' tab. Select the "Plus" icon to add a new room.

### STEP 2 – Create a Room

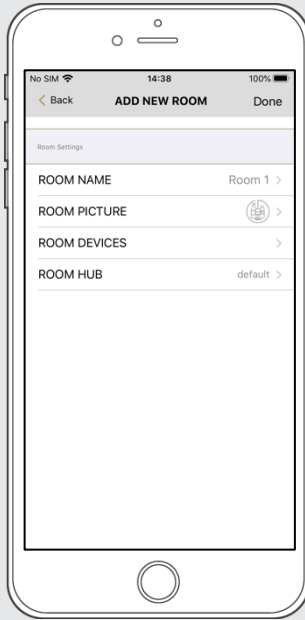


Select the 'ROOM NAME' to enter the desired room name.

### STEP 3 – Create a Room

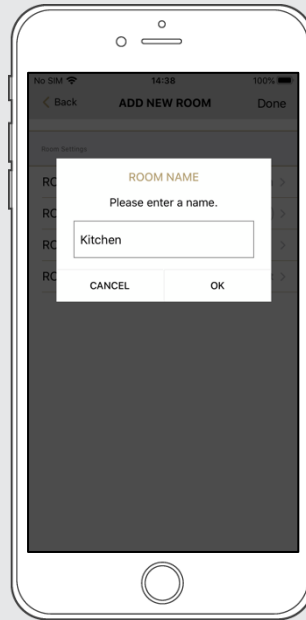


Enter the Room Name and click "OK".

### STEP 4 – Create a Room

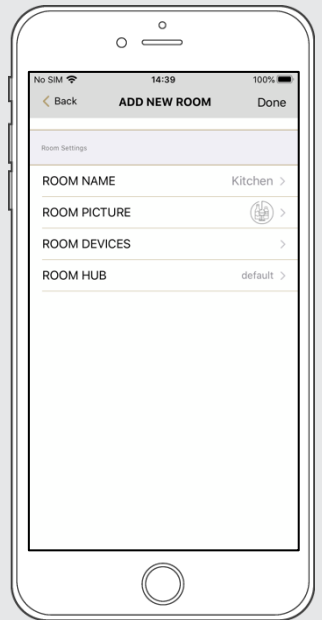


Select 'ROOM PICTURE' to select an icon to represent the room.

### STEP 5 – Create a Room

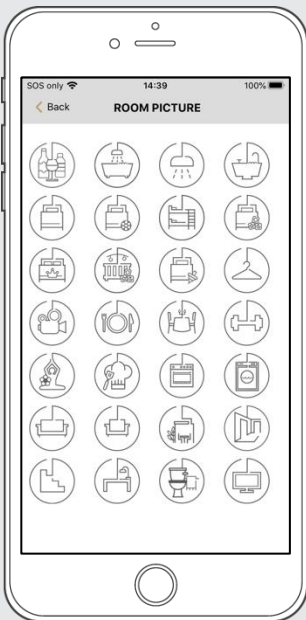


Select the appropriate icon for the Room.

### STEP 6 -Add Shades to a Room

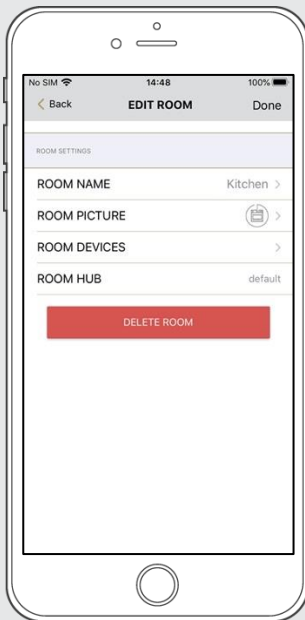

Select 'ROOM DEVICES' to add a new device to the room.

### STEP 7 -Add Shades to a Room

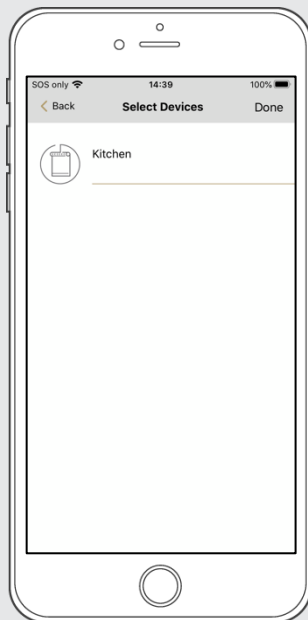


Select the devices you wish to be added to the room.

### STEP 8 -Add Shades to a Room




Press 'DONE' to complete the setup of the room.

### STEP 9 -Add Shades to a Room

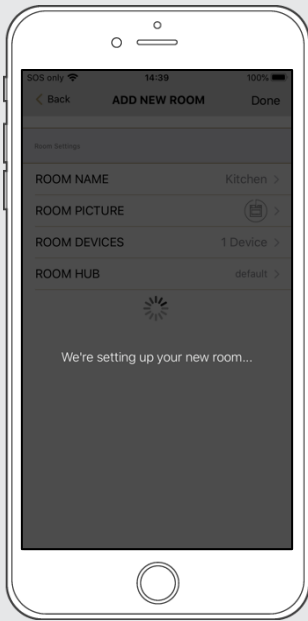

Wait for the App to conclude the process of room set up.

### STEP 10 – Operate a Room

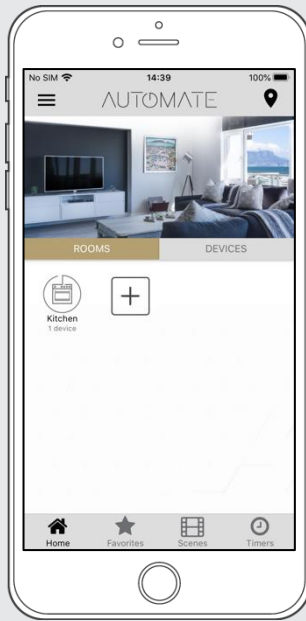

Select the Room to operate All shades that have been added to the room at the same time.

### STEP 11 – Operate a Room



Operate all shades in the Room with the three buttons options available: Open, Close and move 50%

## HOW TO CREATE A SCENE:


You can create scenes to set a treatment or group of treatments to specific heights or capture all the devices that you previously moved to the desired position even from the App or using a remote.

### STEP 1 – Create a Scene




Select Scenes then, 'Add New Scene' to begin programming your desired scene.

### STEP 2 – Create a Scene

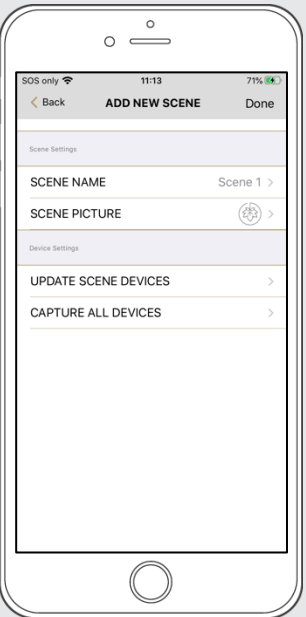


Select the 'SCENE NAME' to customize the name of your scene.

### STEP 3 – Create a Scene

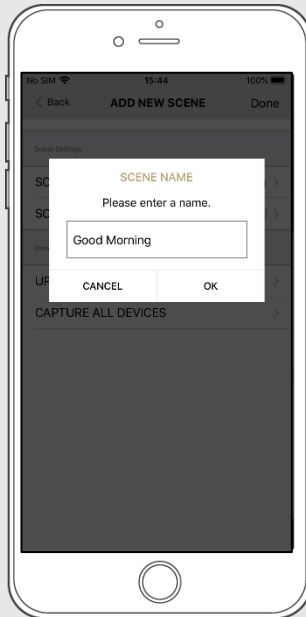


Input your scene name.

### STEP 4 – Create a Scene

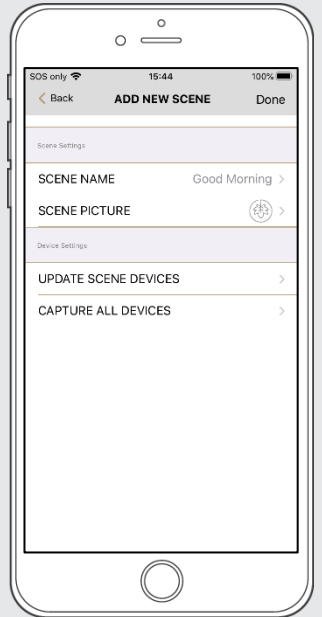


Select 'SCENE PICTURE' to customize the icon for your scene.

### STEP 5 – Create a Scene

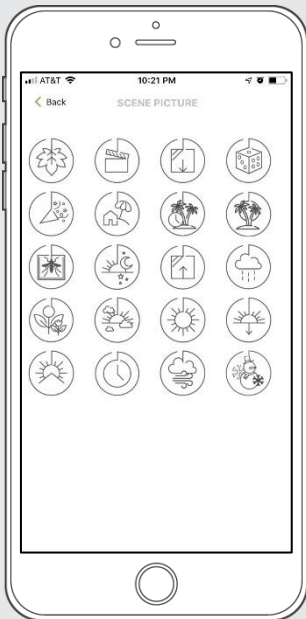


Select the icon that represents your scene.

### STEP 6 – Automatic Scene

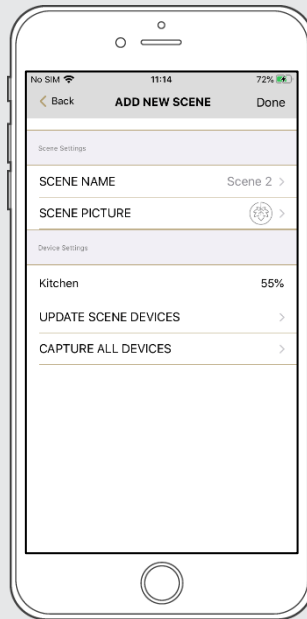


Automatic scene creation Set all devices with the remote to desired position. Then use the "Capture All Devices" button to create a scene of all current shades are positions. Select "Done".

### STEP 7 – Manual Scene Creation

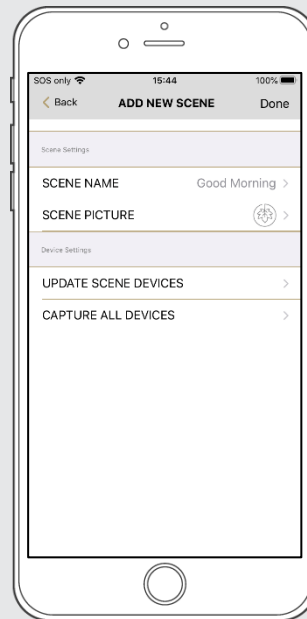


Or Select 'UPDATE SCENE DEVICES' to add devices into the Scene.

### STEP 8– Manual Scene Creation

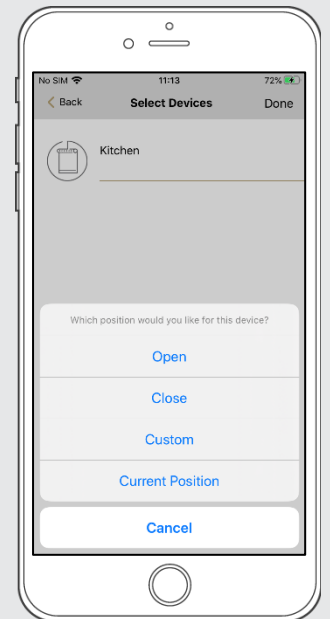

Choose custom heights (by %) or set open/close for all selected window treatments.

### STEP 9– Manual Scene Creation

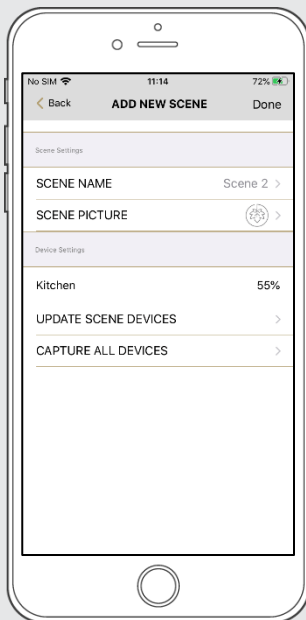

Repeat for all shade in that scene. Set the shade height percentage if necessary. Select 'DONE' to create your scene.

### STEP 10 – Activate a Scene



To activate your custom scene just press 'GO' next to the desired scene name

**PROGRAMMING TIMERS:**

You can program timers to trigger the specific operation of your shades and scenes at your desired times throughout the day.

**STEP 1 – Create a Timer**

Select 'TIMERS' then, 'ADD NEW TIMER' to program your timer.

**STEP 2 – Create a Timer**

Select 'TIMER NAME'.

**STEP 3 – Create a Timer**

Input your desired timer name.

**STEP 4 – Create a Timer**

Select 'TIMER ICON' to add an icon for your timer.

**STEP 5 – Create a Timer**

Select the appropriate icon for the Timer.

**STEP 6 – Create a Timer**

Select the 'TIMER SCENE' to choose the scene you wish the timer to activate.


**STEP 7 – Create a Timer**

In the Scene list, add the scenes you wish to operate.

**STEP 8 – Create a Timer**


Set the time you wish the timer to trigger shade control.

### STEP 9 – Create a Timer

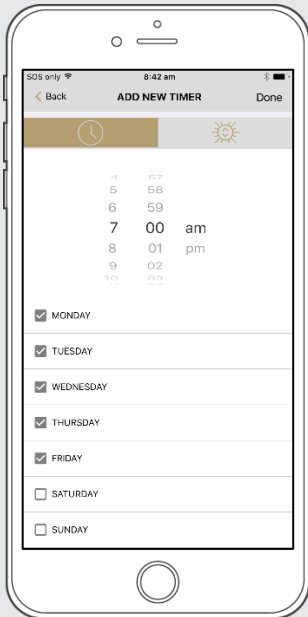


Select the days you wish the timer to operate.

### STEP 10 – Create a Timer

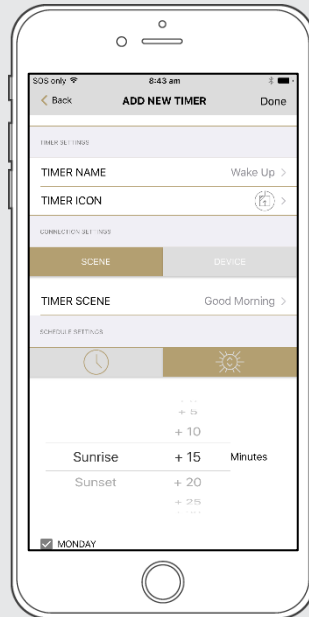


If you prefer, track your timer through the Sunrise/Sunset functions. Select 'DONE' to finalize your timer.

### STEP 11 – Enable /Disable Timer

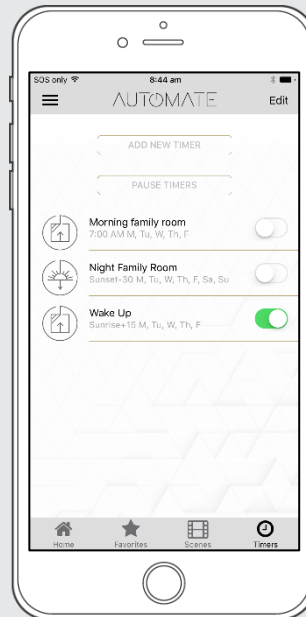

Your timers can be manually enabled and disabled by toggling the switch for each timer.

### STEP 12 – Pause/Un-Pause Timer

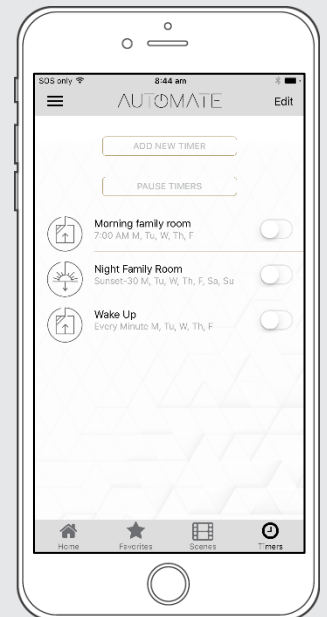

Your timers can be paused and un-paused to switch all timers on and off at the same time.


## HOW TO CREATE FAVORITE:

### STEP 1 – Create a Favorite Device



Select the "Plus" icon to add a favorite device to your "Favorite".

### STEP 2 – Edit a Favorite Device

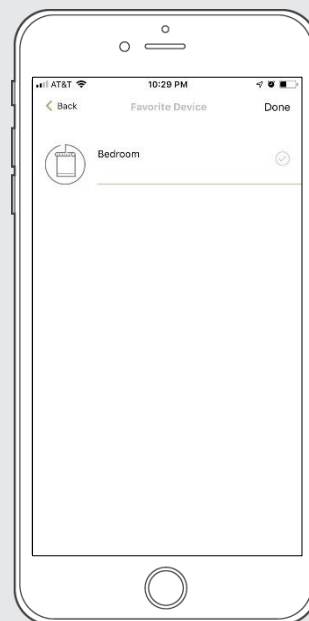

Select "EDIT" in the upper right corner to remove the favorite device from your screen.

### STEP 3 – Create a Favorite Scene



Select the "Plus" icon to add a favorite scene to your "Favorite".


### STEP 4 – Create a Favorite Scene



Select "EDIT" in the upper right corner to remove the favorite scenes from your screen.


## HOW TO ADJUST LIMITS:

### STEP 1 – Adjust Limits

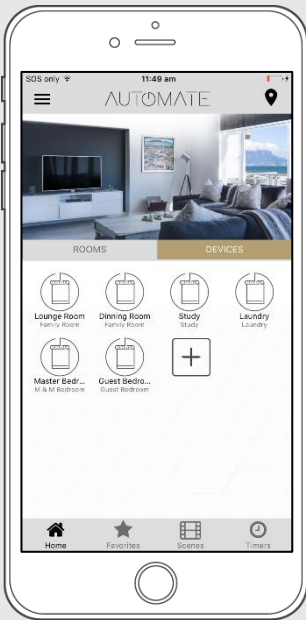


Select the device you want to adjust the limits on.

### STEP 2 – Adjust Limits

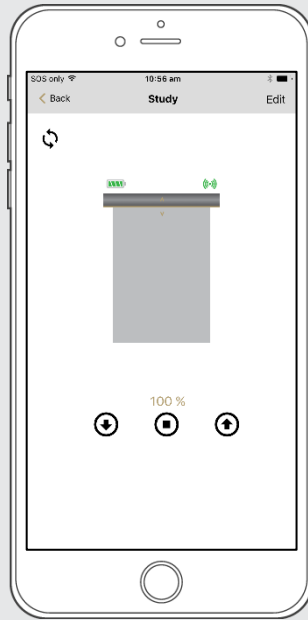


Select "Edit" on the top right to open the shades settings page.

### STEP 3 – Setting Limits

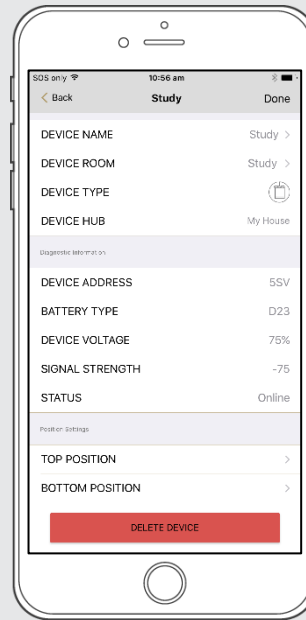


Modify the Top or Bottom position of the Device as desired.

### STEP 4 – Setting Limits

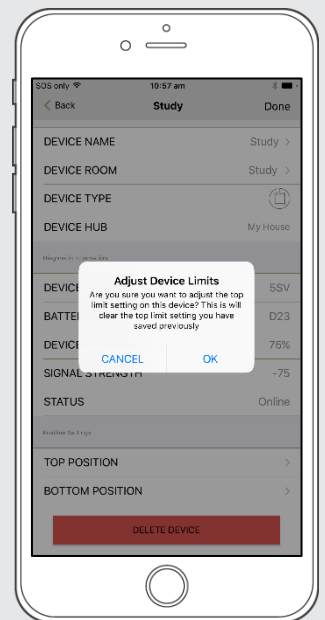


Select the 'Top Position' to change the upper limit of your shade. Press 'OK' to continue.

### STEP 5 – Setting Limits

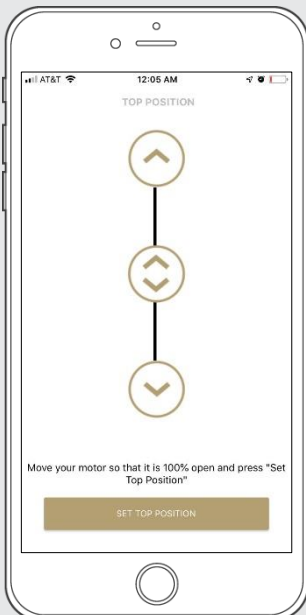


To move your shade a little bit, press the arrow buttons or slide the double arrow button. Press 'SET TOP POSITION' to save.

### STEP 6 – Setting Limits

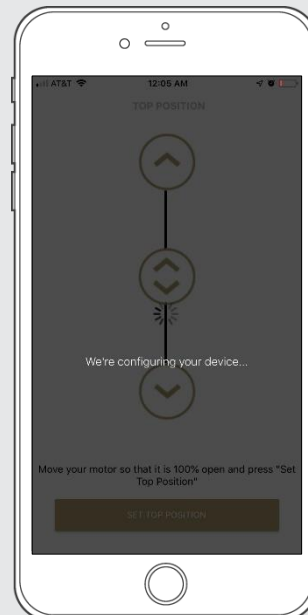


The app will configure the new top position.

### STEP 7 – Setting Limits

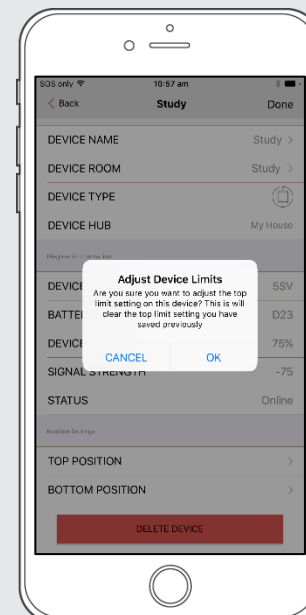

Press the "Bottom Position" to change the lower limit of your shade. Press 'OK' to continue

### STEP 8 – Setting Limits

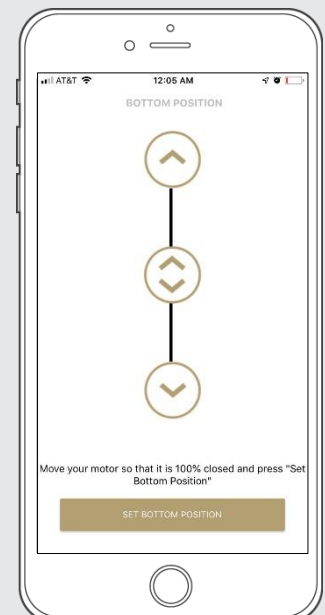

To move your shade a little bit, press the arrow buttons or slide the double arrow button. Press "SET BOTTOM POSITION" to save.


## STEP 9 – Setting Limits



The app will configure the new Bottom Position.


## HOW TO SHARE THE HUB:

### STEP 1 - Share a Hub

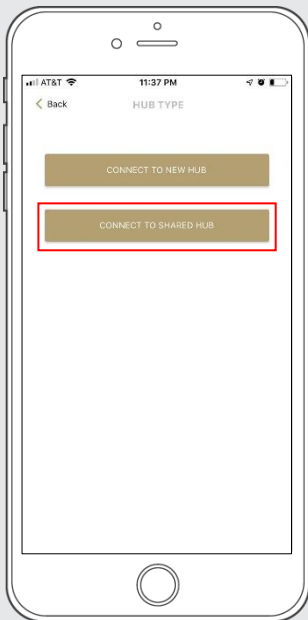

In the 'Add a Hub' Screen, it is possible to connect to a shared hub.

### STEP 2 - Share a Hub

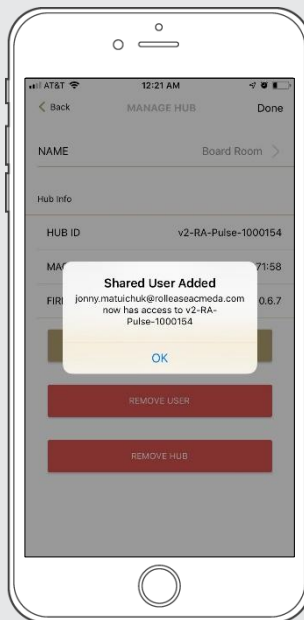


The HUB must have been shared from another account.

### STEP 3 - Share a Hub



The shared Hub will be listed on the shared Hubs list to be added.









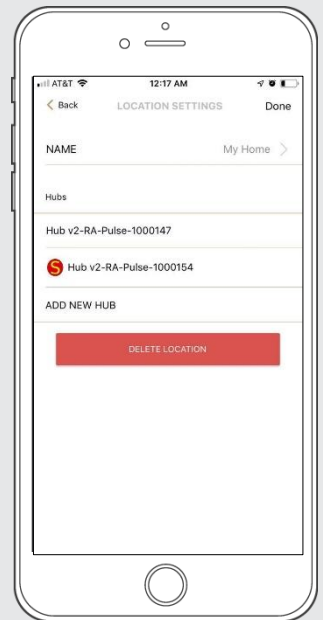


### STEP 4 - Share a Hub












After it is added, the shared hub will appear under the Location Settings it was added to with a red 'S'.



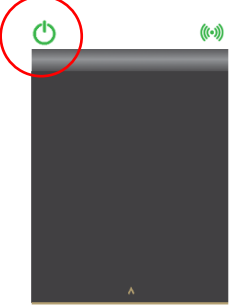


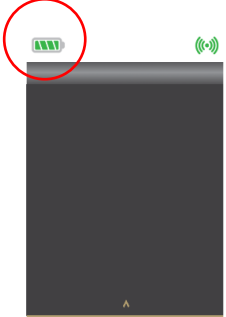
**LED STATUS INDICATION:**

| COLOR   | RESPONSE   | STATUS   |
|---|--|--|
|    | Blue LED blinks one time a second:<br><i>(On for 250ms and off for 850ms).</i>         | AP Mode (Pairing Mode)   |
|    | Blue LED short blinks five times a second:<br><i>(On for 100ms and off for 100ms).</i> | Firmware Updating  |
|    | Blue LED long blinks two times a second:<br><i>(On for 250ms and off for 250ms).</i>   | Connected to Wi-Fi (Paired without Internet)                               |
|    | Blue LED short blinks two times a second:<br><i>(On for 100ms and off for 500ms).</i>  | Pulse received configuration via the app (Before reset after Pairing Mode) |
|    | Blue LED is Solid  | Connected to Internet (Paired)   |
|    | Red LED long blinks four times a second:<br><i>(On for 250ms and off for 250ms).</i>   | Reset Button Pressed (Paperclip Needed)                                    |
|   | -Red LED short blinks four times a second:<br><i>(On for 100ms and off for 150ms).</i> | Network Disconnected (Paired without Wi-Fi)                                |
|  | Red LED is solid   | Factory Reset Initiated (User can release reset button)                    |
|  | -Green LED blinks 5 times for one second:<br><i>(On for 100ms and off 100ms).</i>      | HomeKit Identification   |
|  | Re-provisioning Initiated<br><i>(User can release P button).</i>                       | Green LED is solid   |
|  | LED is Off   | Hub is Offline   |

MEANING OF ICONS:

| App Screen  | Icon  | MEANING                       | STATUS  |
|---|---|-------------------------------|---|
|    |    | Signal Strength Icons         | <ul style="list-style-type: none"> <li><b>Excellent</b> Greater than -89</li> <li><b>Satisfactory</b> Between -96 to -89</li> <li><b>Low</b> Between -102 to -97</li> <li><b>No Signal</b> Between -102 to -97</li> </ul> |
|    |    | Battery Percentage Icon       | <p>3 Levels of Battery</p> <p>Full 100-70%</p> <p>Medium 69-11%</p> <p>Low 10% or less (and motor starts beeping)</p>   |
|  | <p>Pop up</p> <div data-bbox="613 1146 813 1272" style="border: 1px solid black; padding: 5px;"> <p><b>Motor Offline</b></p> <p>Your motor appears to be offline. Try adjusting the % to see if the motor moves. If not, ensure your motor is connected to power and try again</p> <p>Go Back OK</p> </div> | Motor Offline Pop up reminder | The motor is offline, and the control device is not on the same network.  |
|  |    | Motor Offline                 | The motor is offline, and the control device is not on the same network.  |
|  |    | Greyed out Icons              | Signal or Battery Icons being greyed out when the motor is offline, it displays the last known values   |
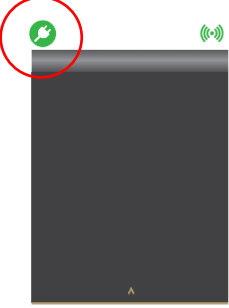
|   |   |                    |  |
|---|---|--------------------|--|
|  |  | AC Motor Type Icon | AC Powered Motor connected to continuous power   |
|  |  | DC Motor Type Icon | DC Powered Motor connected to continuous power<br><br>Full     100-70%<br><br>Medium   69-11%<br><br>Low     10% or less<br><br><i>Note varying voltages may be displayed as above</i> |

#### TROUBLESHOOTING:

The following scenarios are common issues that may cause connectivity problems during the AUTOMATE PULSE HUB 2 pairing process. If you cannot achieve success connecting the Automate Pulse Hub 2 to your network, please reference the below most common pairing roadblocks.

#### I CANNOT CONNECT TO MY 5GHZ WI-FI NETWORK.

The AUTOMATE PULSE HUB 2 does not currently support operation over a 5GHz network or hopping mesh networks. It operates on a 2.4GHz network or using a Lan Connection.

#### TRYING TO PAIR HUB VIA THE LAN CONNECTION.

The AUTOMATE PULSE HUB 2 does not currently support initial pairing via LAN, Pair through Wi-Fi and once the hub is setup connecting via the LAN can be done.

#### I CANNOT CONNECT TO MY HIDDEN WI-FI NETWORK.

The AUTOMATE PULSE HUB 2 does not currently support pairing with hidden networks. To connect to a hidden network, you will need to unhide the network. Once the network pairing process is complete you can re-hide the network and the Wi-Fi HUB will work without issue.

#### I HAVE MULTIPLE ACCESS POINTS AND CANNOT COMPLETE THE PAIRING PROCESS.

If you have multiple wireless access points, we recommend that you turn off all but one to complete the network pairing process. Once this is complete you can turn on all the wireless access points and the Wi-Fi HUB will work without issue.

#### NETWORK SECURITY SETTINGS ARE INTERFERING WITH THE SETUP PROCESS.

Some companies or large corporate offices have network security settings more advanced than the typical homeowner. If you are setting up in this environment, please consult your network administrator. It may be necessary to enable device-to-device communication. One solution is to use a device with a mobile data connection available in the background to complete the set-up process.

#### MY AUTOMATE PULSE HUB 2 IS NOT CONSISTENTLY WORKING.

There are many things that can interfere with the radio communication that the AUTOMATE PULSE HUB 2 uses. Try positioning the AUTOMATE PULSE HUB 2 in a different location and/or closer to the shade to improve performance. Due to varying levels of interference it may be necessary to purchase additional Wi-Fi HUB to extend the coverage throughout your location.

#### HOMEKIT PRIVACY SETTINGS NOT ENABLED.

Any issue related with HomeKit, please check out the [HomeKit Troubleshooting](#) available on your website and also [Apple Support](#) page.

#### SUPPORT RESOURCES:

For further assistance, contact your retailer, or visit our website at [www.automateshades.com](http://www.automateshades.com)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

*L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:*

*1) L'appareil ne doit pas produire de brouillage;*

*2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC&IC RF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

*Les antennes installées doivent être situées de façon à ce que la population ne puisse y être exposée à une distance de moins de 20 cm. Installer les antennes de façon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.*

Limited by local law regulations, version for North America does not have region selection option.