




Tx. Spurious NVNT 1-DH1 2480MHz Ant1 Ref

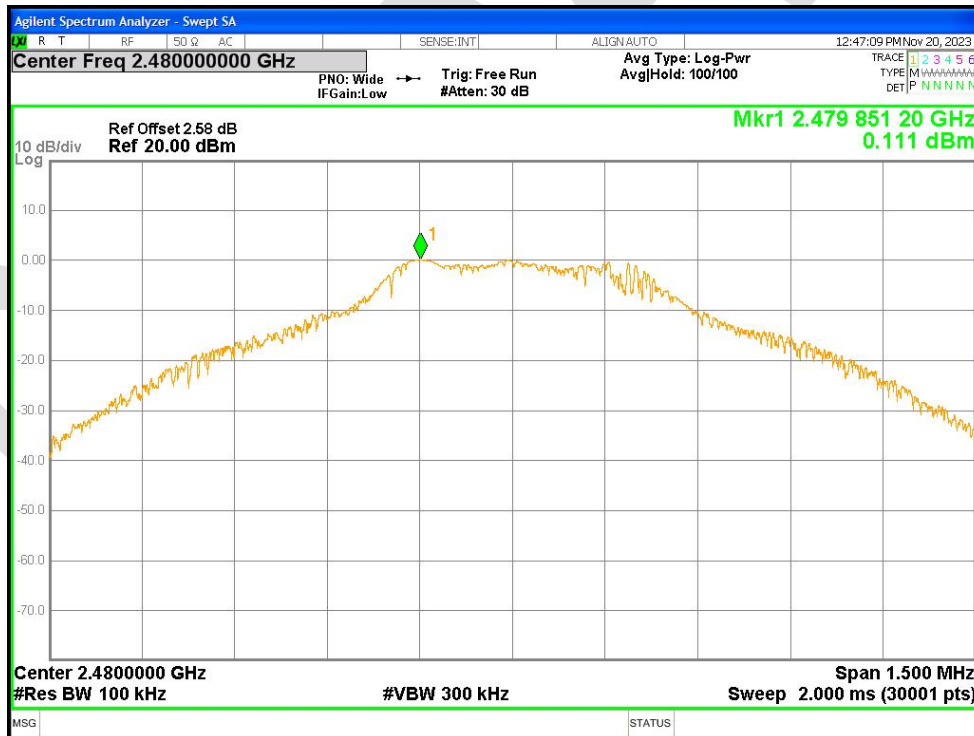


Tx. Spurious NVNT 1-DH1 2480MHz Ant1 Emission

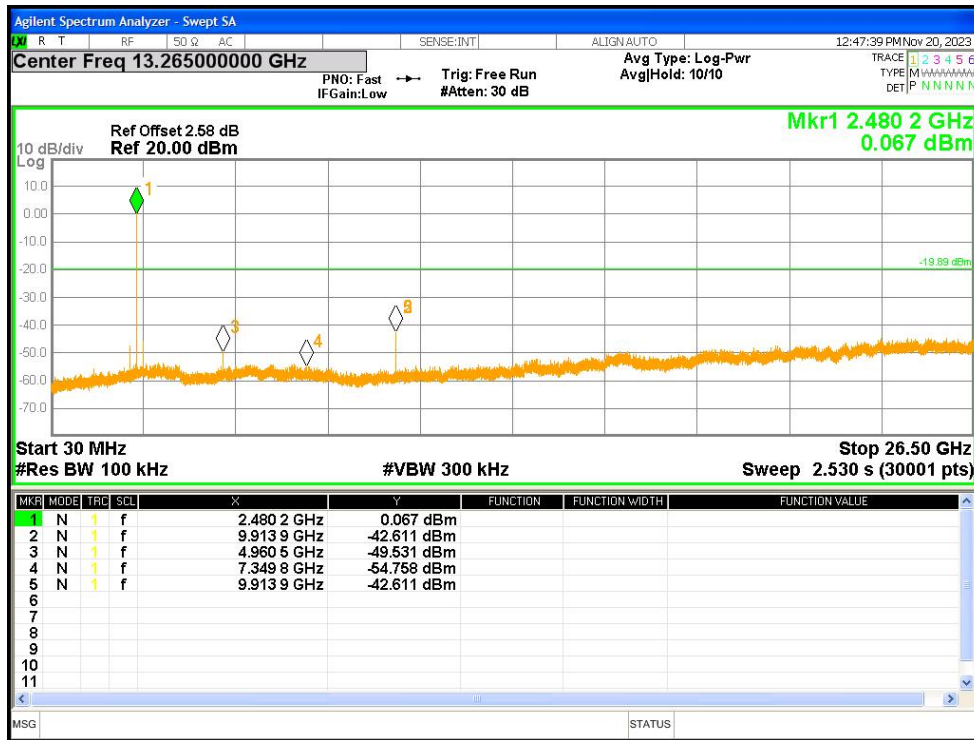


Tx. Spurious NVNT 2-DH1 2402MHz Ant1 Ref

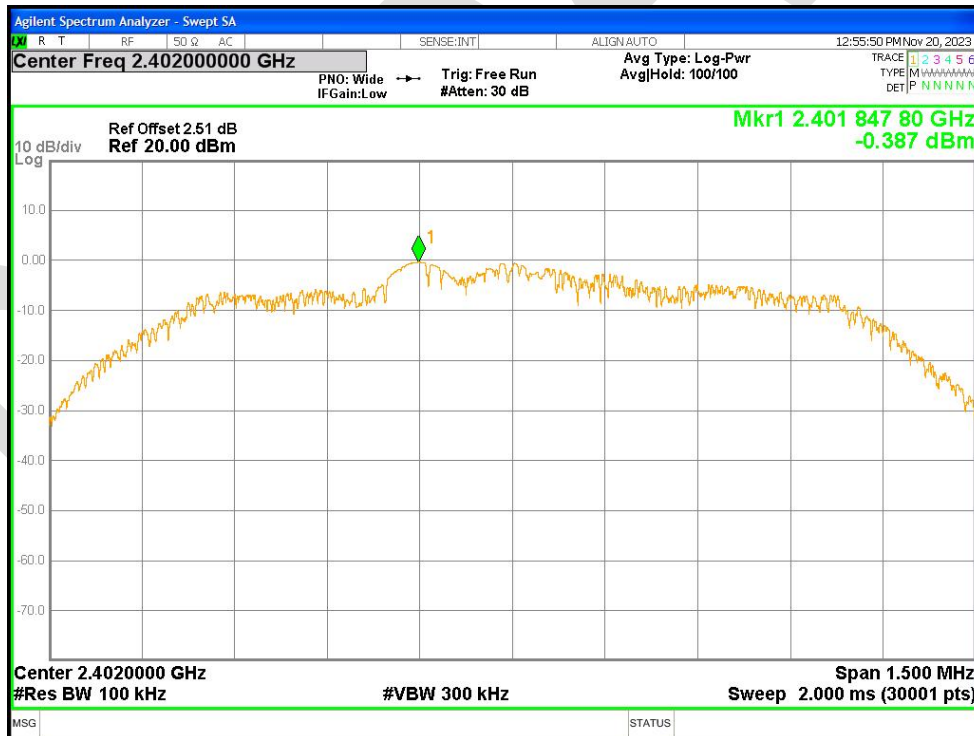


Tx. Spurious NVNT 2-DH1 2402MHz Ant1 Emission

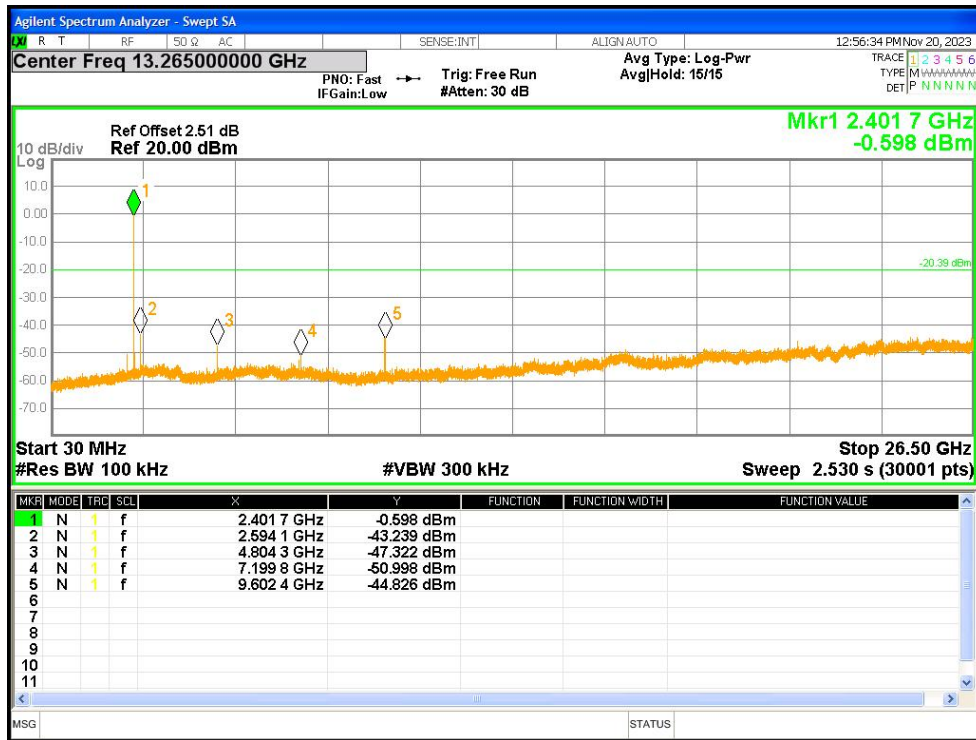


Tx. Spurious NVNT 2-DH1 2441MHz Ant1 Ref

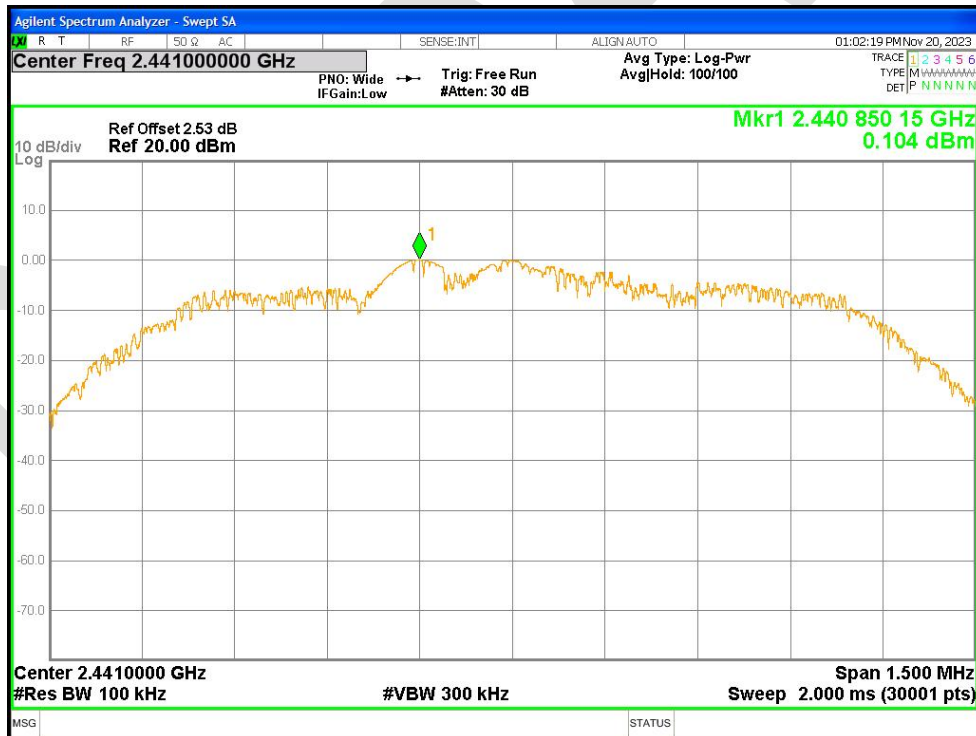


Tx. Spurious NVNT 2-DH1 2441MHz Ant1 Emission

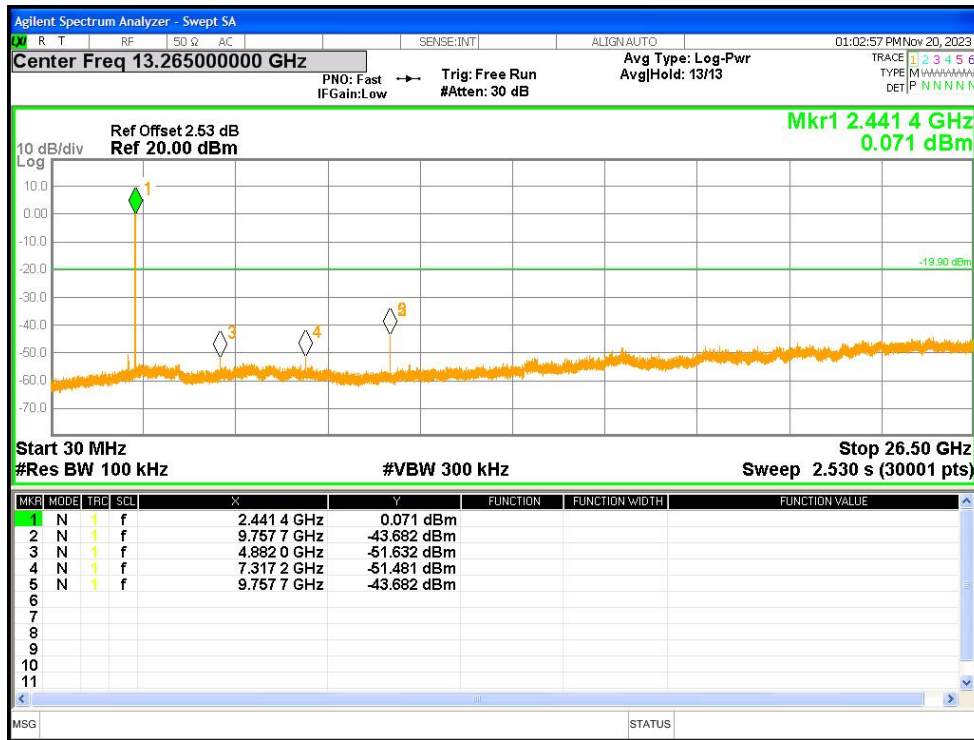


Tx. Spurious NVNT 2-DH1 2480MHz Ant1 Ref

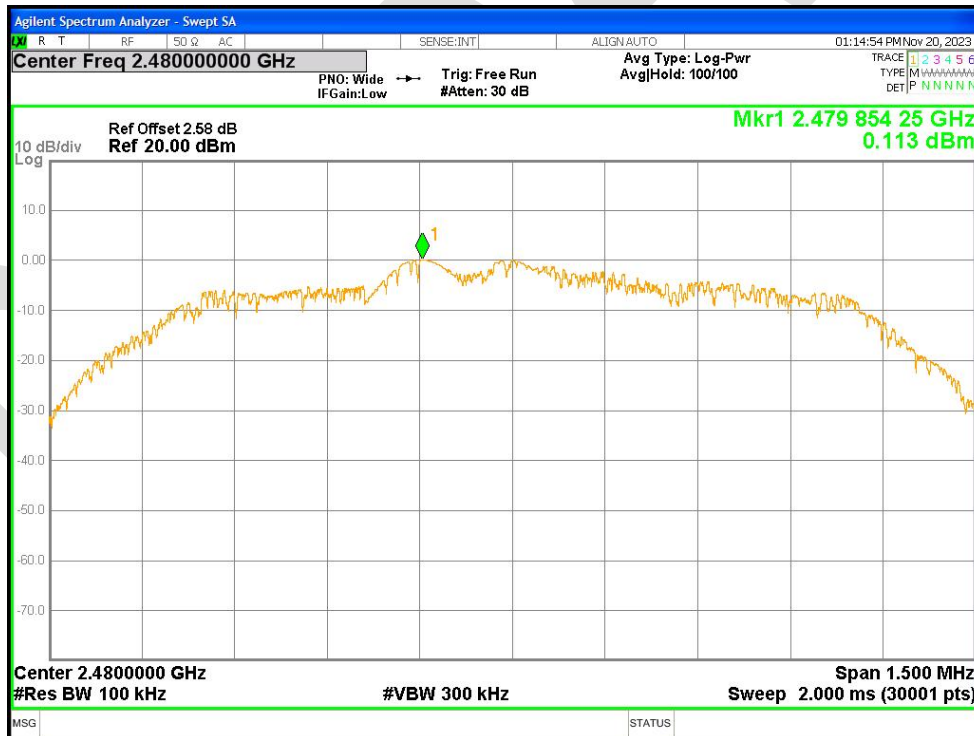


Tx. Spurious NVNT 2-DH1 2480MHz Ant1 Emission

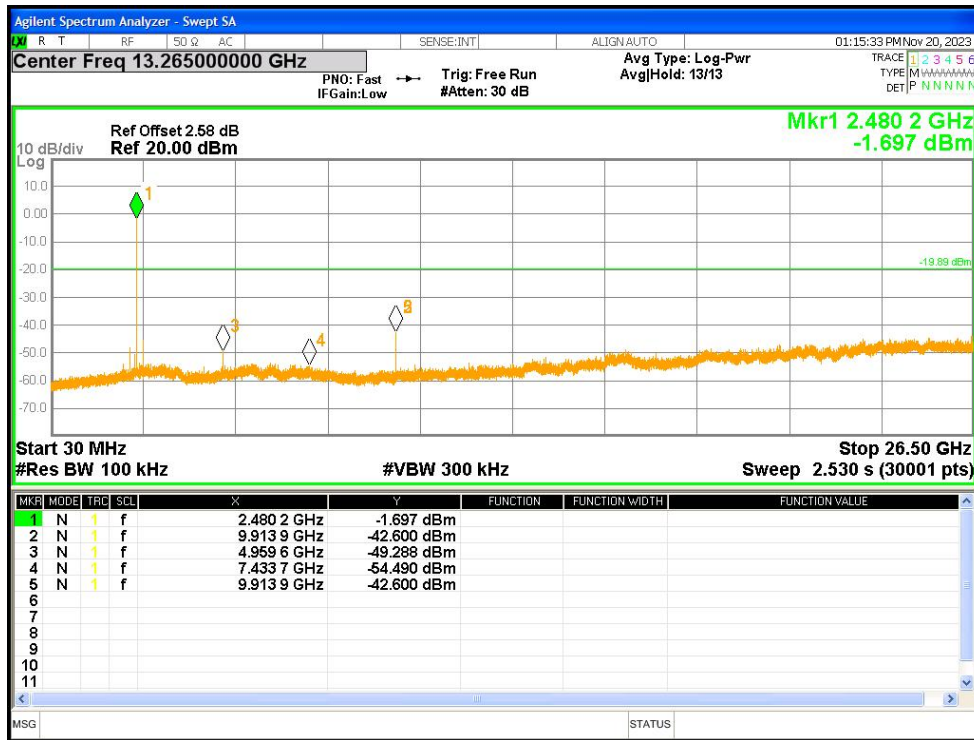


Tx. Spurious NVNT 3-DH1 2402MHz Ant1 Ref

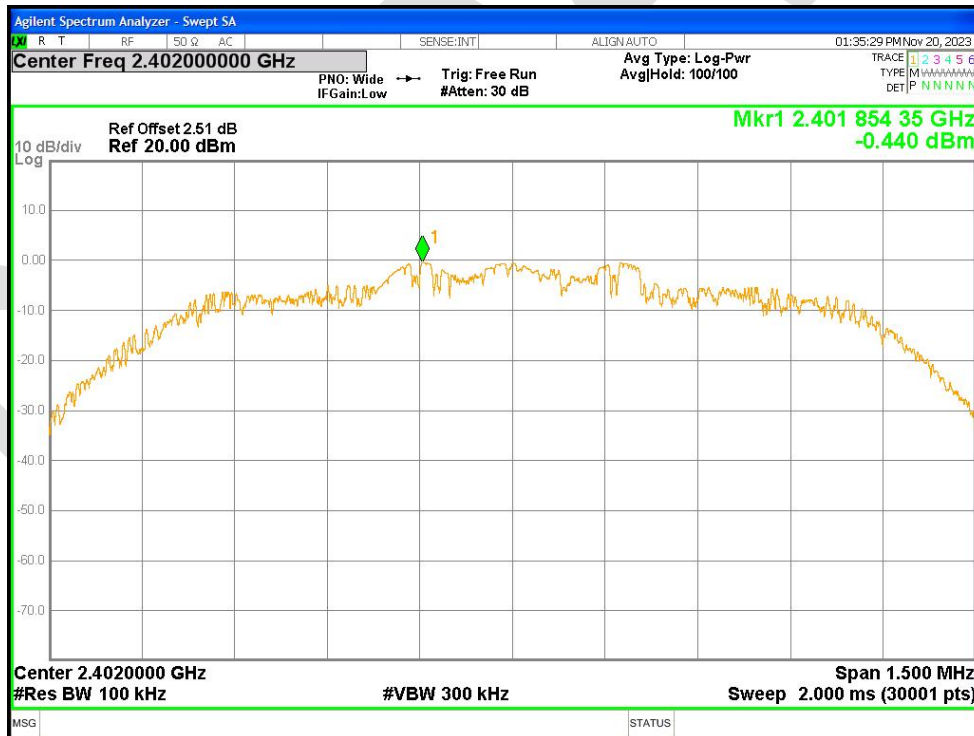


Tx. Spurious NVNT 3-DH1 2402MHz Ant1 Emission

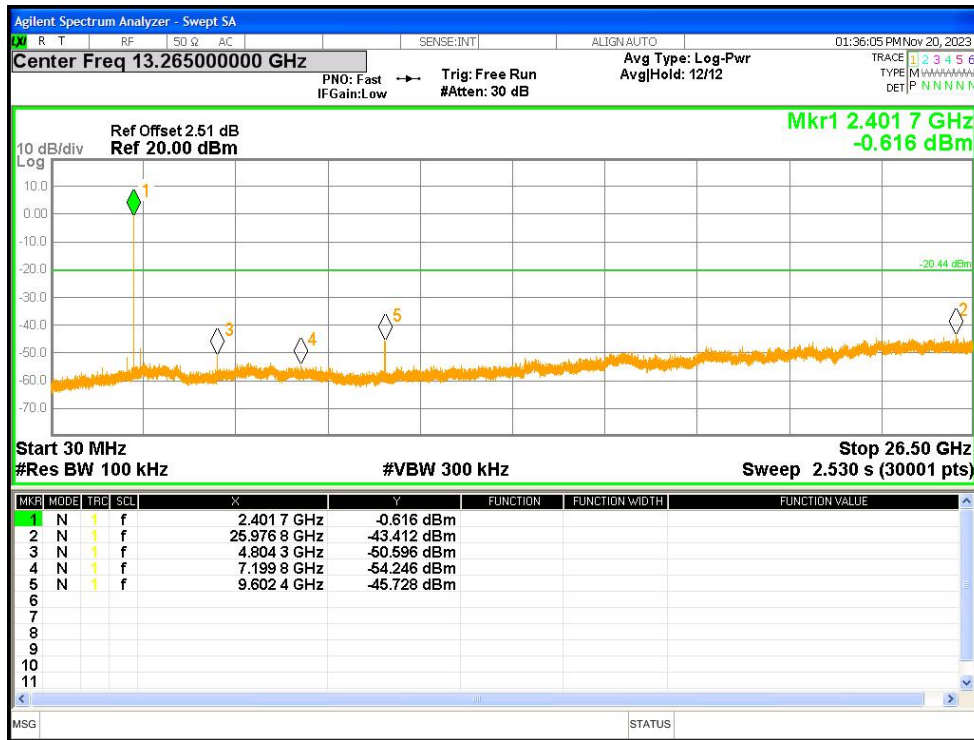


Tx. Spurious NVNT 3-DH1 2441MHz Ant1 Ref

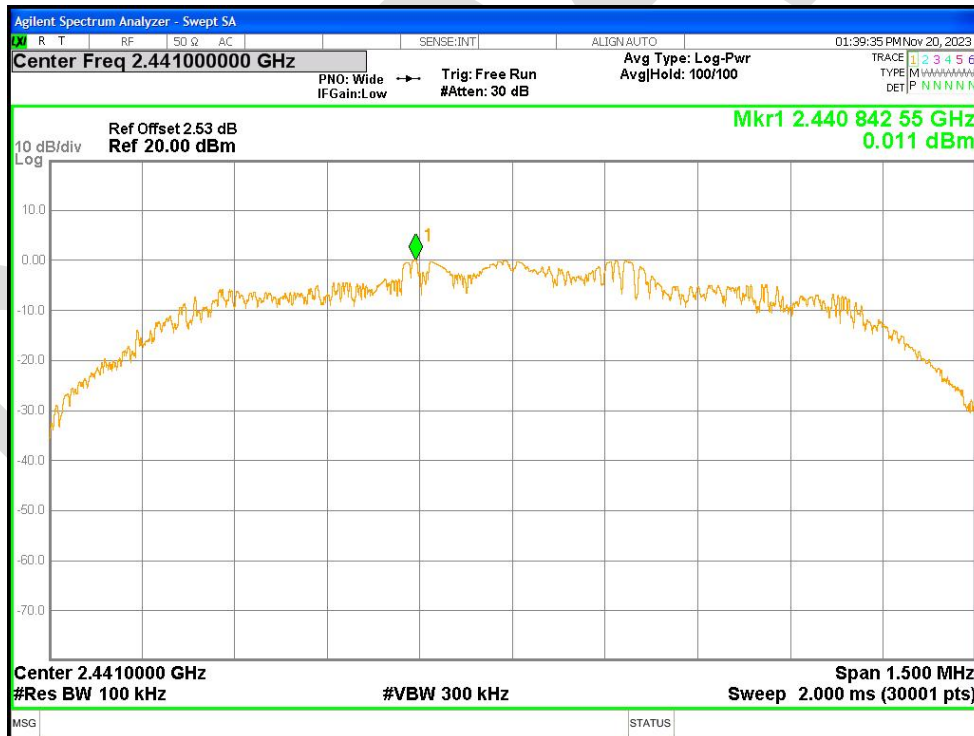


Tx. Spurious NVNT 3-DH1 2441MHz Ant1 Emission

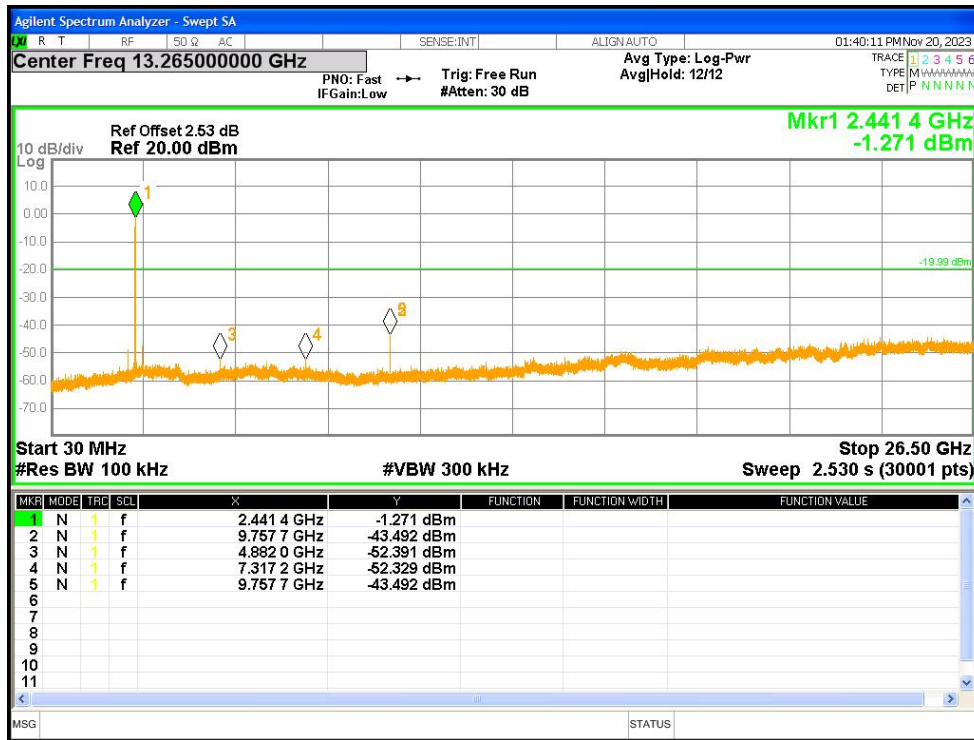

Tx. Spurious NVNT 3-DH1 2480MHz Ant1 Ref

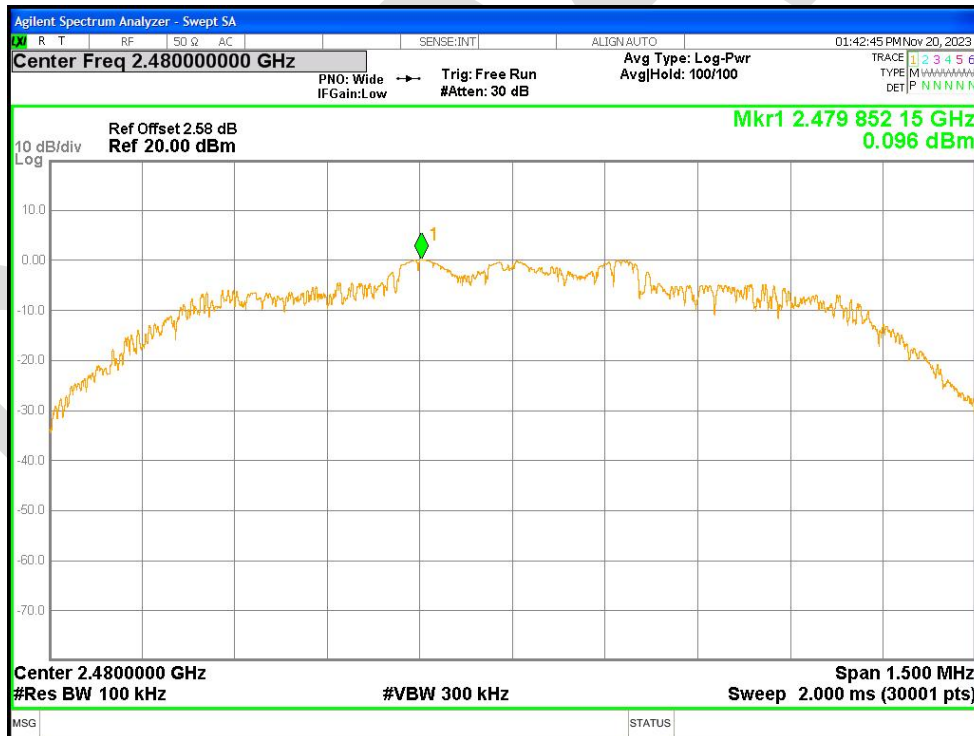


Tx. Spurious NVNT 3-DH1 2480MHz Ant1 Emission

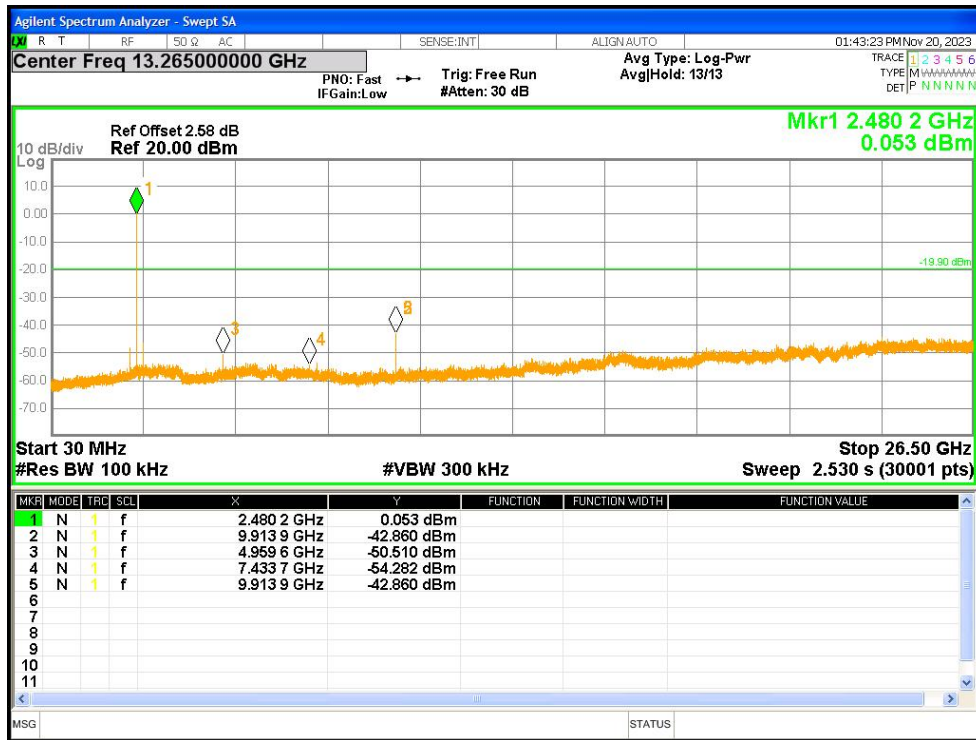


22.7 CARRIER FREQUENCIES SEPARATION

Condition	Mode	Antenna	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH1	Ant1	2440.945	2441.9845	1.0395	0.583	Pass
NVNT	2-DH1	Ant1	2440.8475	2441.848	1.0005	0.831	Pass
NVNT	3-DH1	Ant1	2441.0275	2442.0235	0.996	0.824	Pass


CFS NVNT 1-DH1 2441MHz Ant1

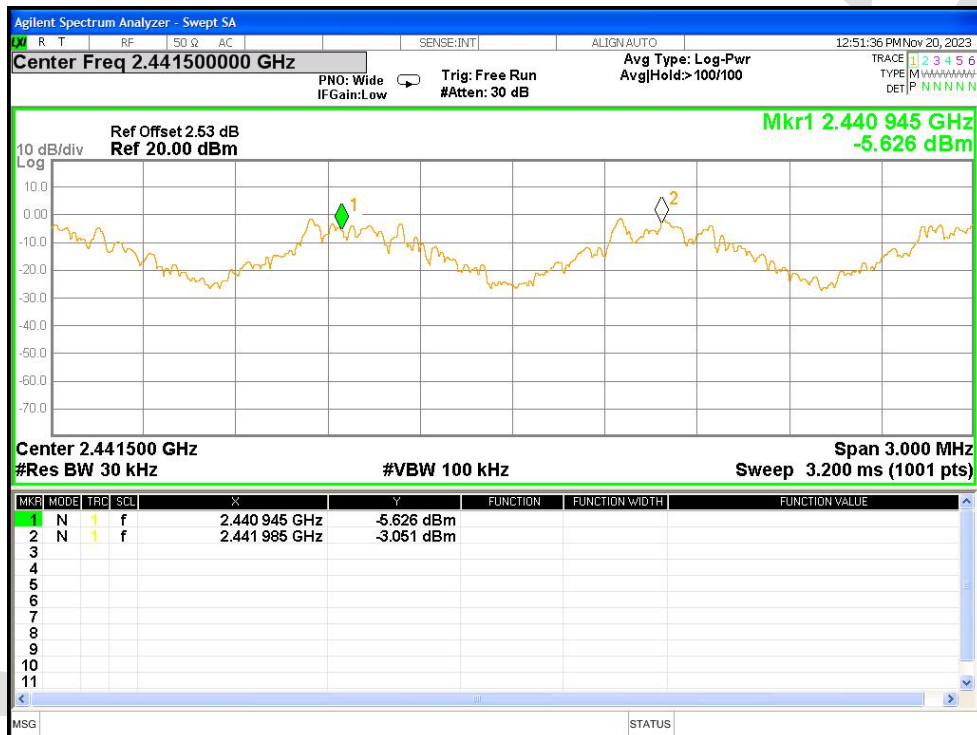

CFS NVNT 2-DH1 2441MHz Ant1

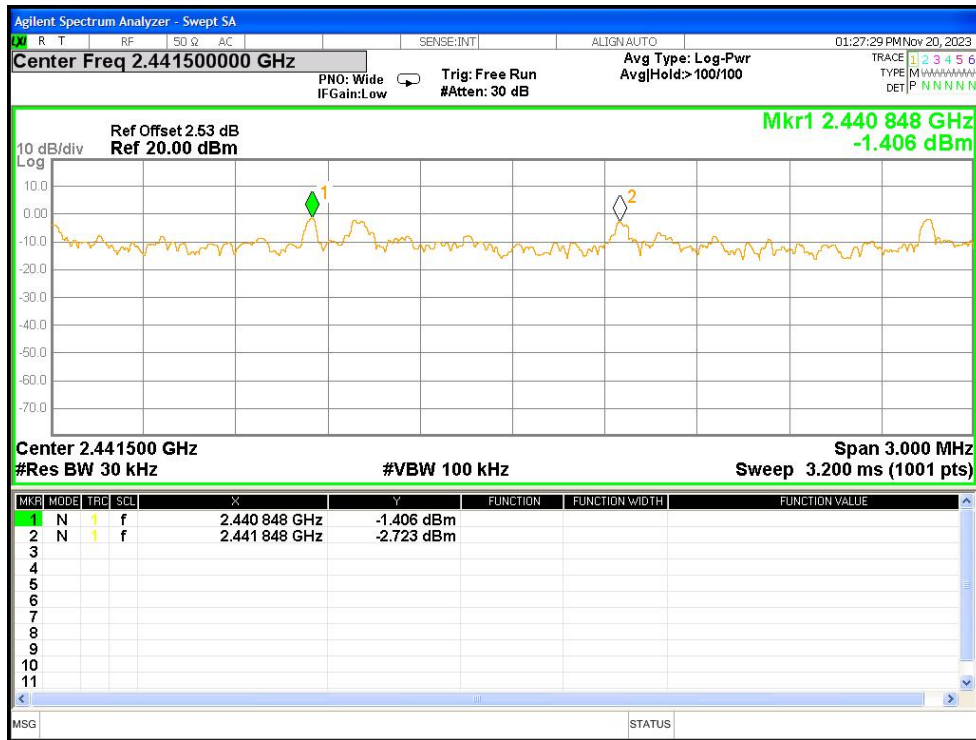


CFS NVNT 3-DH1 2441MHz Ant1

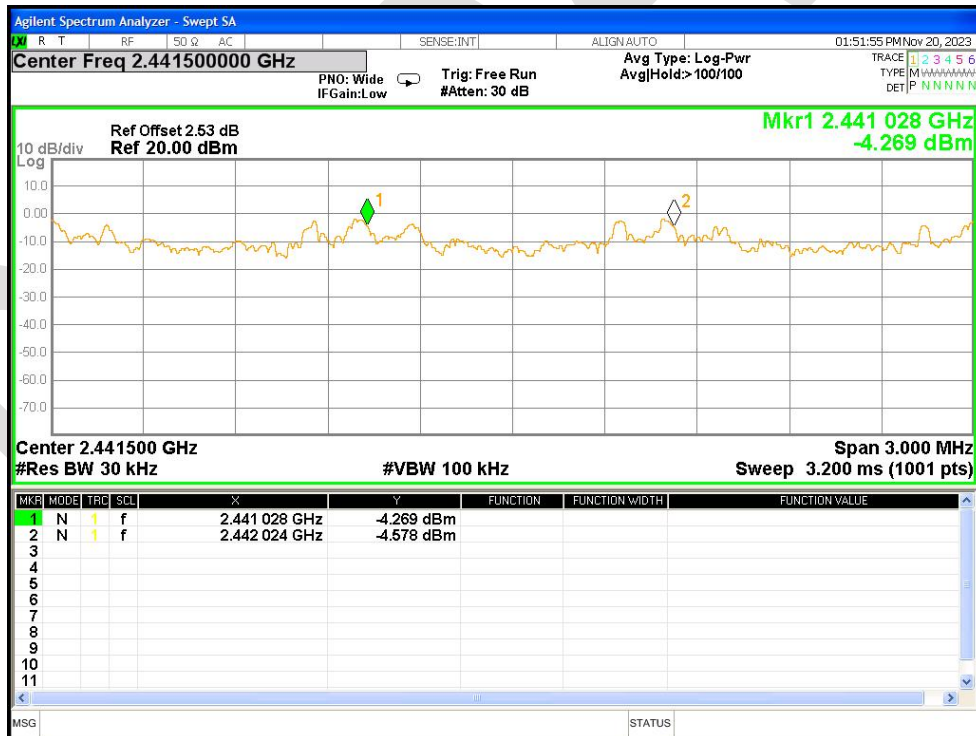


22.8 NUMBER OF HOPPING CHANNEL

Condition	Mode	Antenna	Hopping Number	Limit	Verdict
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass


Hopping No. NVNT 1-DH1 2441MHz Ant1

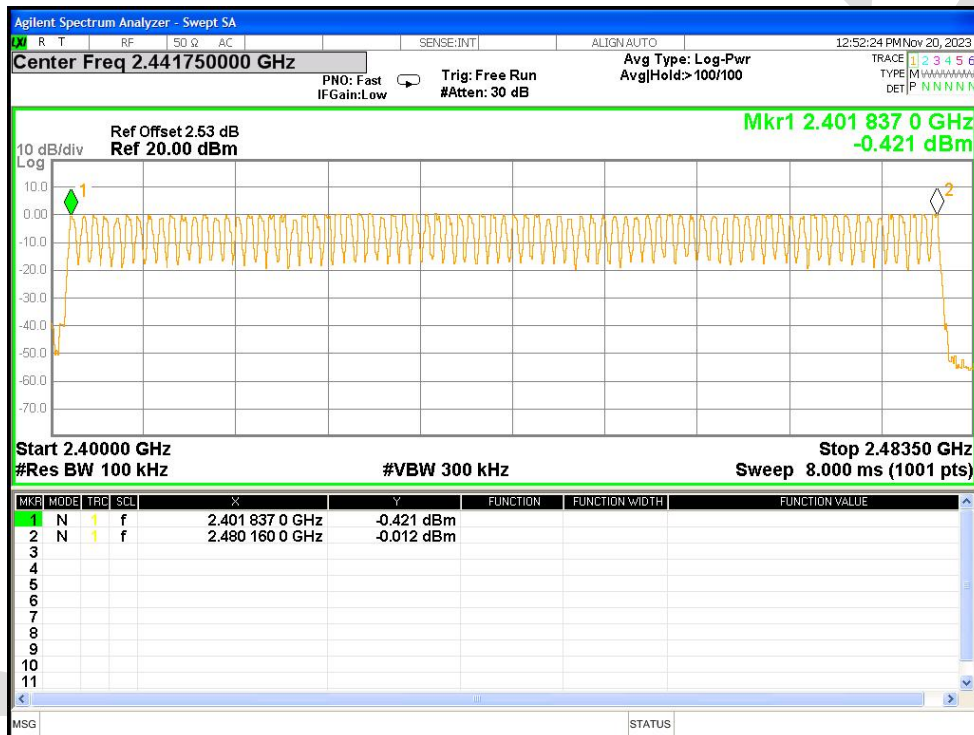

Hopping No. NVNT 2-DH1 2441MHz Ant1

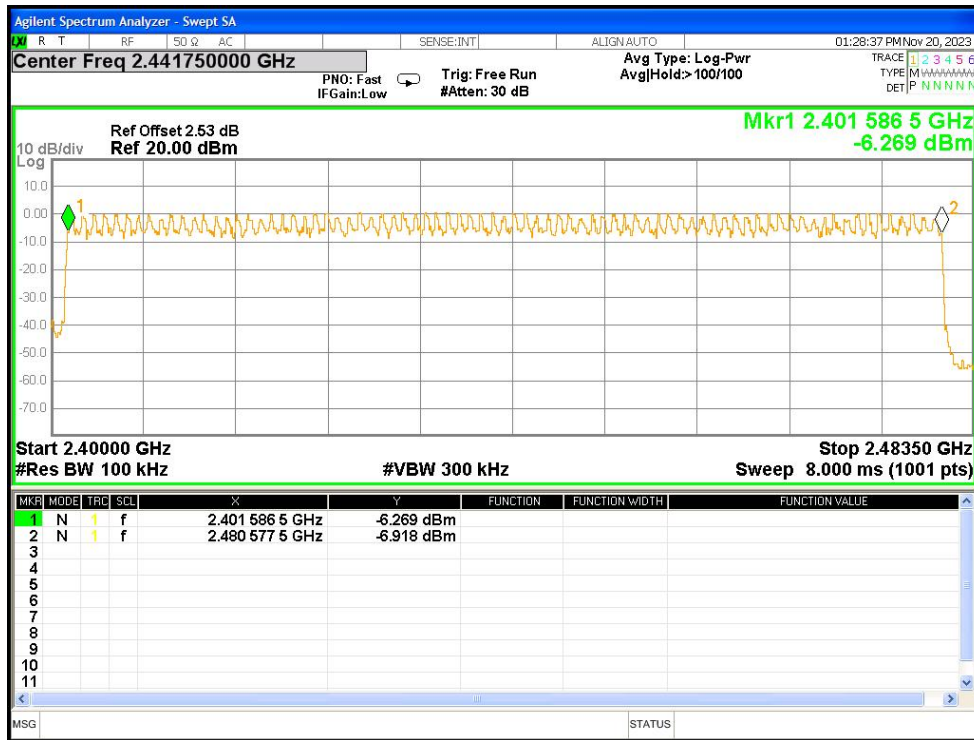

Hopping No. NVNT 3-DH1 2441MHz Ant1

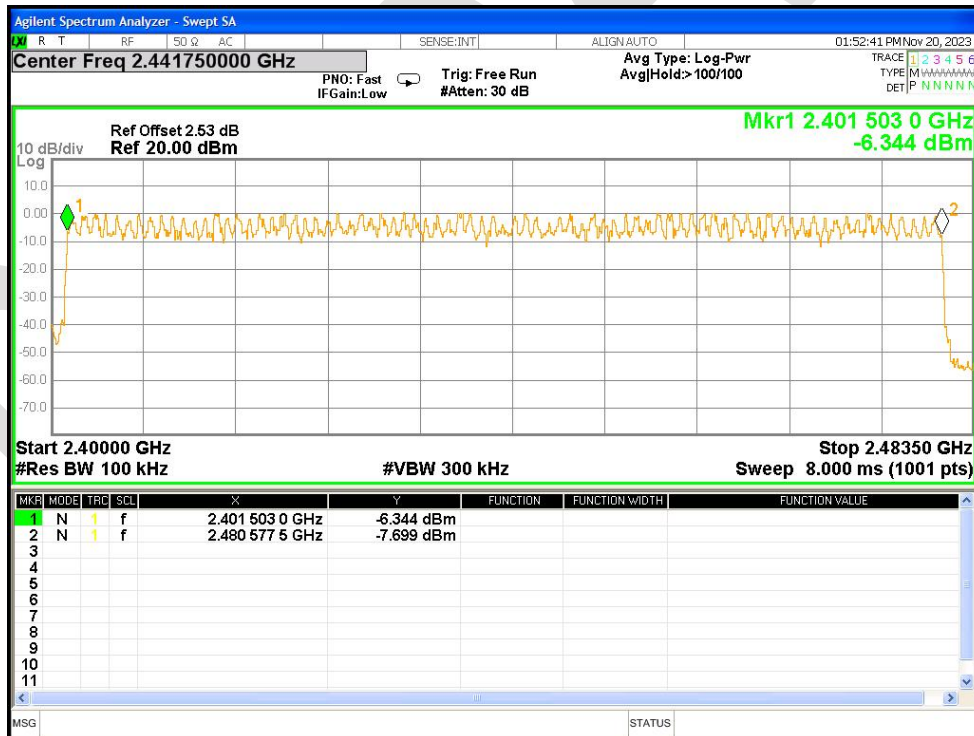

22.9 DWELL TIME

Condition	Mode	Frequency (MHz)	Antenna	Pulse Time (ms)	Total Dwell Time (ms)	Burst Count	Period Time (ms)	Limit (ms)	Verdict
NVNT	1-DH1	2441	Ant1	0.383	119.879	313	31600	400	Pass
NVNT	1-DH3	2441	Ant1	1.639	255.684	156	31600	400	Pass
NVNT	1-DH5	2441	Ant1	2.888	352.336	122	31600	400	Pass
NVNT	2-DH1	2441	Ant1	0.392	124.656	318	31600	400	Pass
NVNT	2-DH5	2441	Ant1	2.892	300.768	104	31600	400	Pass
NVNT	3-DH1	2441	Ant1	0.392	125.048	319	31600	400	Pass
NVNT	3-DH5	2441	Ant1	2.894	350.174	121	31600	400	Pass

Dwell NVNT 1-DH1 2441MHz Ant1 One Burst




Dwell NVNT 1-DH1 2441MHz Ant1 Accumulated



Dwell NVNT 1-DH3 2441MHz Ant1 One Burst



Dwell NVNT 1-DH3 2441MHz Ant1 Accumulated

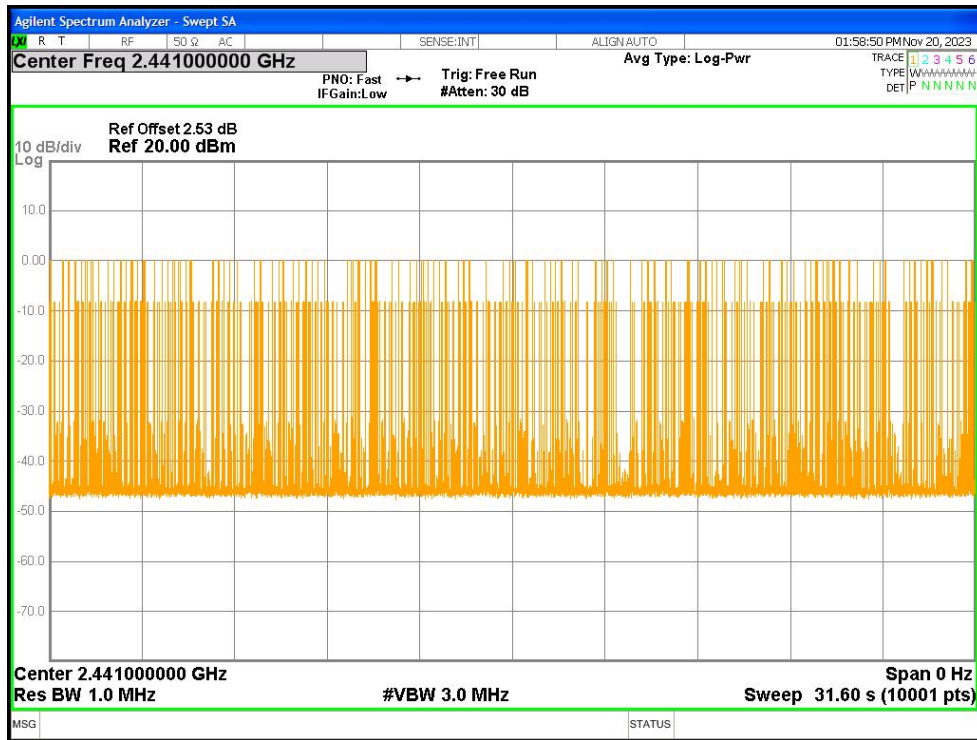

Dwell NVNT 1-DH5 2441MHz Ant1 One Burst




Dwell NVNT 1-DH5 2441MHz Ant1 Accumulated



Dwell NVNT 2-DH1 2441MHz Ant1 One Burst



Dwell NVNT 2-DH1 2441MHz Ant1 Accumulated

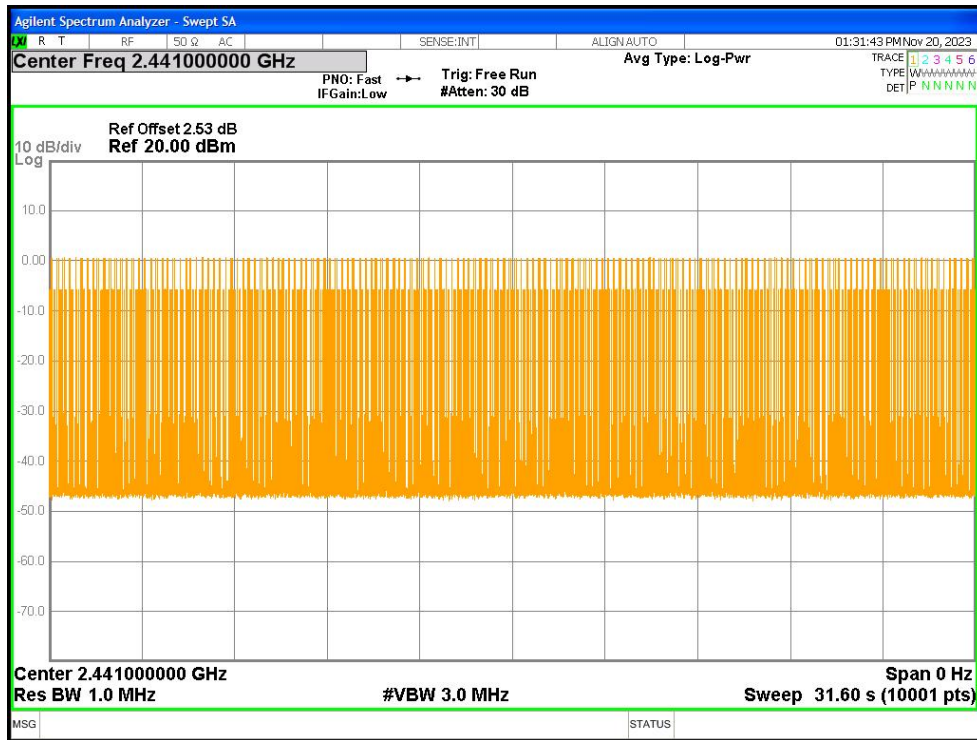


Dwell NVNT 2-DH5 2441MHz Ant1 One Burst



Dwell NVNT 2-DH5 2441MHz Ant1 Accumulated



Dwell NVNT 3-DH1 2441MHz Ant1 One Burst

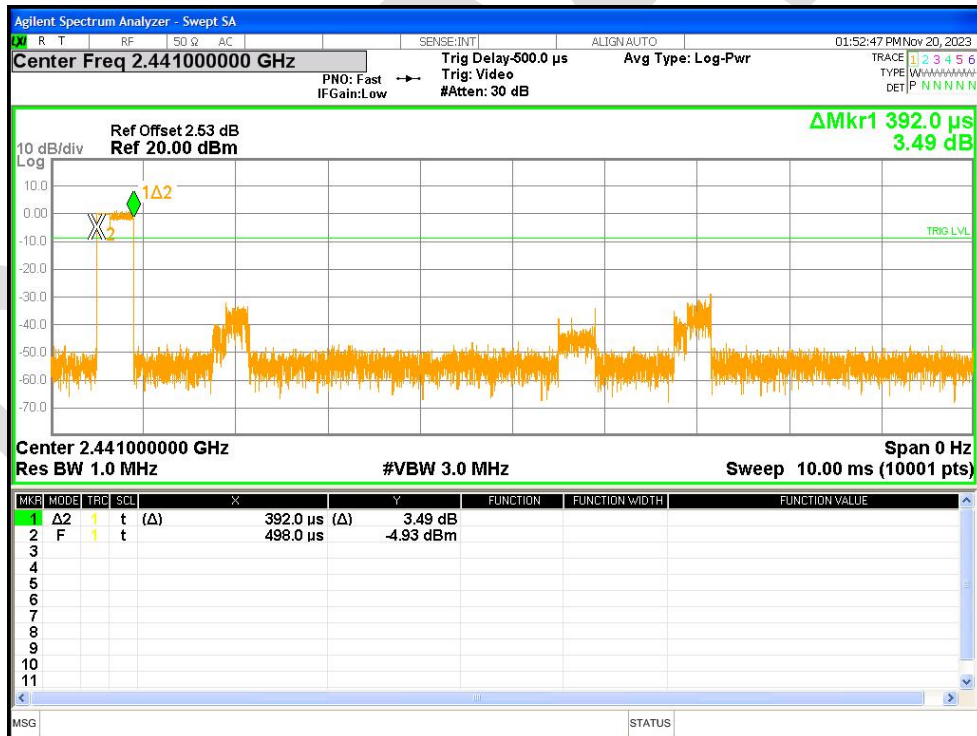

Dwell NVNT 3-DH1 2441MHz Ant1 Accumulated



Dwell NVNT 3-DH5 2441MHz Ant1 One Burst



Dwell NVNT 3-DH5 2441MHz Ant1 Accumulated

