



**TBI**  
**PRO**  
ENGINEERING

# Dog Training Collar **User Manual**



**READ FULL USER MANUAL BEFORE USE**



## Customer Service :

Scan me to Text us:



Text us: +1 800-674-9229

Scan me to Email us:



Email us: [support@tbi-pro.com](mailto:support@tbi-pro.com)

Just scan the QR code with your  
iphone or Android camera to get contact with us.

# Important Safety Information

## WARNING:

**Not for use with aggressive dogs.** Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

## CAUTION:

**Safety during on-leash training.** It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

**Risk of skin damage.** Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible re-position the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a leash to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a leash, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.

- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, stop using the collar until the skin is fully healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help to keep your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, stop using until the skin is fully healed.

# Table of Contents

Components .....	4
Other Items You May Need .....	4
How the System Works.....	5
Key Features.....	5
Definition of the Product .....	6
<b>Operating Guide</b> .....	7
How to Turn the Remote Training Collar On/Off .....	7
How the Transmitter Buttons Work .....	8
How to Fit the Receiver Collar.....	8
How to Find the Best Vibration/Shock Level for Your Pet.....	10
How to Maximize the Distance.....	11
The LCD Display & LED Indicator.....	12
Charging the Device .....	13
How to Pair the Remote Transmitter & Receiver Collar .....	14
How to Test the Functions.....	16
<b>General Training Guide</b> .....	18
<b>General Tips</b> .....	18
<b>Teaching Basic Obedience</b> .....	18
<b>Eliminating Unwanted Behavior</b> .....	21
<b>Frequently Asked Questions</b> .....	25
<b>Trouble Shooting</b> .....	26
<b>FCC</b> .....	27
<b>Reference Size for Different Dogs</b> .....	28

# Components



Remote Transmitter



Strap




Adapter



Probes



Conductive Silicone Covers

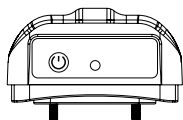


Receiver Collar



Test Bulb



USB Cable

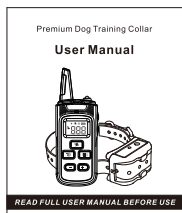

User Manual

## Other Items You May Need

- Scissors
- Lighter

# How the System Works

The Remote Training Collar is easy to use with an advanced digital display that tells you exactly what level of stimulation you are using.

This Remote Training Collar assists you in controlling your pet without a leash in a designed remote range. Push button of the remote sends a signal activating your dog's Receiver Collar. He receives a safe but annoying stimulation. He'll quickly learn the association between his behavior and your correction; in no time, you'll have a better-behaved pet. The Remote Training Collar has been proved as a safe, comfortable, and effective for both small and large dog breeds.


Using the Remote Trainer consistently and correctly, any basic obedience commands can be taught and many misbehaviors that your pet exhibits can be corrected.

## Key Features


1. Separate function buttons on Remote Transmitter, easy for training.
2. Press & Act technology, no training delay.
3. Receiver Collar Waterproof Guaranteed, allowing your dog diving into water for short time.
4. 100 level shock & vibration, provide behavior correction for the most of dogs.
5. Receiver Collar low battery & charging indicating.
6. Rechargeable with High Quality Lithium Battery, with working time twice increased.
7. Function LED Indicator, different color for different function.
8. Advanced Shock protection mode. Smart shock level reminding to avoid over shocking, better protects your pet.

# Definition of the Product

## Remote Transmitter

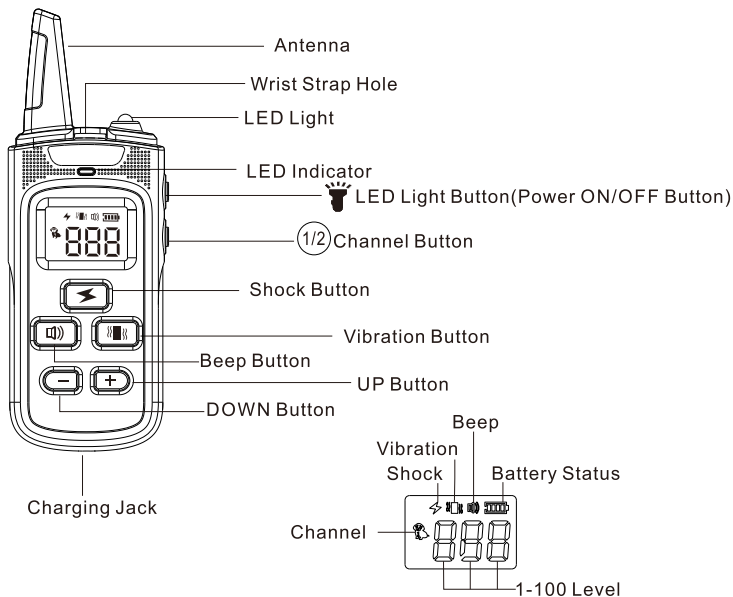


## Receiver Collar

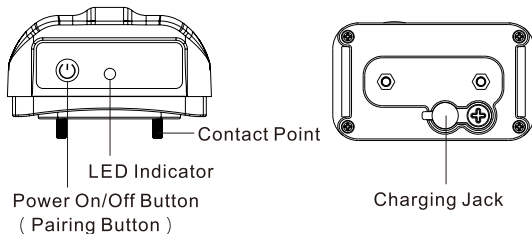



## Step 1 How to Turn the Remote Training Collar On/Off


### *To turn the Remote Transmitter on*

1. Press and Hold the LED light button  for 1 second to power on the Remote Transmitter. The backlight will be on.
2. Backlight will be off at 10 seconds if there is no operation.
3. LCD display will be turned off at 2 minutes if there is no operation. Any press on the button of the Remote Transmitter will activate it.

### *To turn the Remote Transmitter off*


Press and Hold the LED light button  for 2 seconds to power off the Remote Transmitter.

### *To turn the Receiver Collar on*

Press and Hold the power button  for 3 seconds, the Receiver Collar will vibrate and BLUE LED indicator become solid then blinking.







The Receiver Collar will be into sleep mode if there is no movement within 2 minutes. Any movement will activate the Receiver Collar.



### *To turn the Receiver Collar off*



Press and Hold the power button  for 3 seconds, the Receiver Collar will beep and BLUE LED indicator turns off.

**Notes: To extend the life of the batteries, turn off the Remote Transmitter and Receiver Collar when you are ready not to use them for a long time.**

## Step 2 How the Remote Transmitter Buttons Work

1. Press  /  /  once to send a vibration, shock and beep command to Receiver Collar.
2. Press and Hold  /  / , Receiver Collar will have a consecutive vibration, shock and beep and stop after 10 seconds.


Notes: Do not suggest to press and hold  /  for a long time to avoid physical or psychological hurt to your pet.

3. Press , then adjust the Up Button and Down Button to select the shock level. Press , then adjust the Up Button and Down Button to select the vibration level.

**Notes: the level of beep mode can NOT be adjusted. Level 0 is set by default.**

4. When the shock level is set from 001~020 or LCD Display shows shock mode icon, the Remote Transmitter delivers the shock command instantly after pressing the button.

### **Advanced Shock protection mode:**

If the shock level is set from 021~100, and current mode is displaying beep or vibration icon on LCD Display, the first press on  will not deliver the shock command to Receiver Collar in order to remind user to confirm the shock level, it will deliver the command on the second press. It's Pet Protection Control, avoiding delivering over shock to your pet.

## Step 3 How to Fit the Receiver Collar

**Important:** The proper fit and placement of your Receiver Collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of his neck, otherwise he cannot feel the static shock. To assure a proper fit, please follow these steps:

1. Make sure that the Receiver Collar is turned off.
2. Have your pet standing comfortably (3A).


3. Place the Receiver Collar on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck, touching the skin.

Note: Sometimes it is necessary to trim the hair around the Contact Points to make sure that contact is consistent.

**CAUTION:** Do not shave the pet's neck as this may increase the risk of skin irritation.

4. The Receiver Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck (3C).

5. Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Receiver Collar.

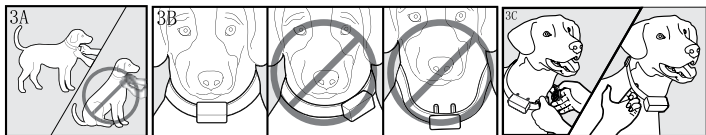


6. Trim the collar as follows (3D):

a. Mark the desired length of the collar with a pen. Allow for growth if your pet is young or grows a thick winter coat.

b. Remove the Receiver Collar from your pet and cut off the excess.

c. Before placing the Receiver Collar back onto your pet, seal the edge of the cut collar by applying a flame along the frayed edge.

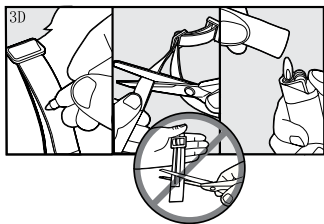

## Step 4 How to Find the Best Vibration/Shock Level for Your Pet

**Important:** Always start at the lowest level and work your way up. The Remote Training Collar has 100 Stimulation Levels for vibration and static shock, with level 1 being the lowest level and level 100 being the highest. This allows you to choose the Stimulation level that is the best for your pet. Once you have placed the Receiver Collar on your pet, it is time to find the Stimulation Level that is best for him. This is called the Recognition Level. A slight change in your pet's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is the best for him.

Follow the steps below to find your pet's Recognition Level:

1. Starting at Level 1 on the Digital Display, press the Vibration/Shock Button continuously for 1 to 2 seconds. Note: When the Vibration/Shock Button is held down for 10 consecutive seconds, the Transmitter will "time-out", and you must release and press the button again before additional stimulation can be delivered.
2. If your pet shows no reaction, repeat the Stimulation Level several times before moving up to the next level.
3. YOUR PET SHOULD NOT VOCALIZE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.
4. Move up through the Stimulation Levels until your pet reliably responds to the stimulation.
5. If your pet continues showing no response at Level 100, check the fit of the Receiver Collar. If your pet has long or thick hair, please use the longer set of Contact Points in package. Then go back to #1 and repeat the process.

If this still does not yield any results, your pet's hair will need to be trimmed around the Contact completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service.

## Step 5 How to Maximize the Distance

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.

Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For Maximum signal strength, keep the device properly charged.



Maximum range



Typical range








Minmum range

\*Avoid touching the antenna, otherwise the range may be substantially decreased.




# Step 6 The LCD Display & LED Indicator

## 6

### \*LCD Display on Remote Transmitter

	Indicates Shock Mode is on
	Indicates Beep Mode is on
	Indicates Vibration Mode is on
	Indicates battery level
	Indicates the 1 to 100 stimulation level of Shock/Vibration

### \*Remote Transmitter Indicator Light Definitions

Remote Transmitter Function	Remote Transmitter Indicator Light Response
Press  , deliver beep command to Receiver Collar (beep will be stopped after 10 consecutive seconds and reset after releasing the Beep Button )	Green LED is on when pressing the button
Press  , deliver vibration to Receiver Collar base on current level showed on LCD display (vibration will be stopped after 10 consecutive seconds and reset after releasing the Vibration Button)	Green LED is on when pressing the button
Press  , deliver shock to Receiver Collar base on current level showed on LCD display (shock will be stopped after 10 consecutive seconds and reset after releasing the Shock Button)	Red LED is on when pressing the button
Charging the Remote Transmitter	Red LED blinks
Remote Transmitter is fully charged	Green LED is on

## \*Receiver Collar Indicator Light Definitions

Receiver Collar Function	Receiver Collar Indicator Light Response
System Running	Slow Blinking, 1 blink every 3 seconds
Battery Low	Fast Blinking, 2 blinks every 1 second
Fully charged/Pairing Mode	Indicator light becomes Solid
On charging	Slow Blinking, 1 blink every 1 second

## Step Charging the Device

**7** The Remote Training Collar uses Lithium-Polymer batteries, DO NOT charge the device near any flammable substances. Fully charge the Remote Transmitter and Receiver Collar before use.

Charge the Remote Training Collar if:

- The indicator light on the Receiver Collar is blinking rapidly.
- There is only 1 battery level bar left on the Remote Transmitter LCD display.
- The indicator light on the Remote Transmitter and Receiver collar will not come on.

Charging Steps:

- 1.Plug the adaptor into a standard wall outlet.
- 2.Open the rubber cover on the Receiver Collar charging jack.
- 3.Connect the USB cable connectors to the charging jack on Receiver Collar and Remote Transmitter.