




-20 dB BW NVNT 2-DH5 2480MHz Ant1

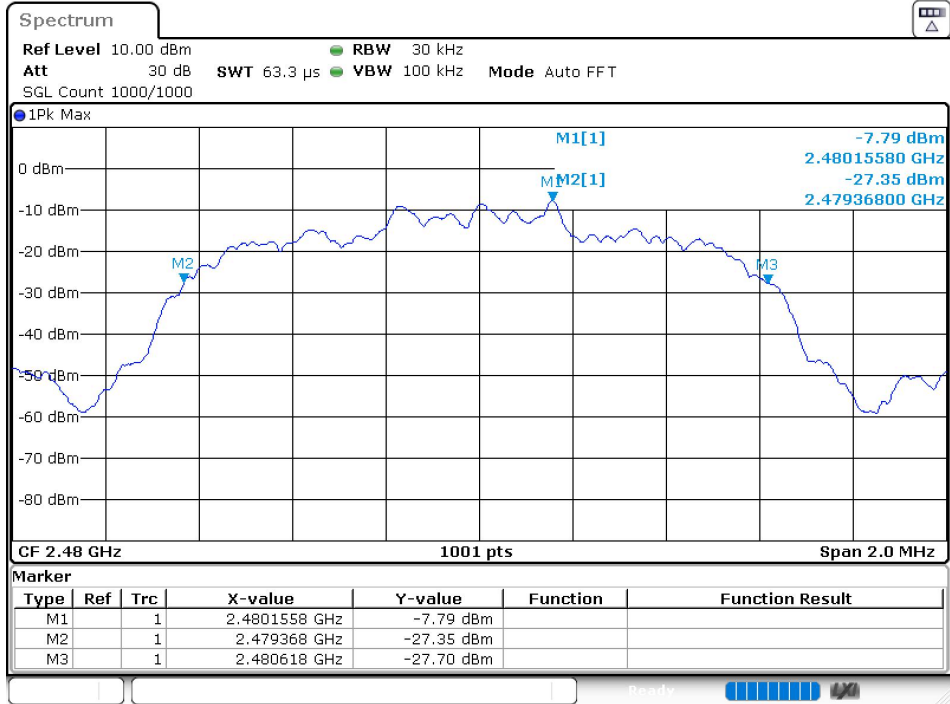


OBW NVNT 3-DH5 2402MHz Ant1

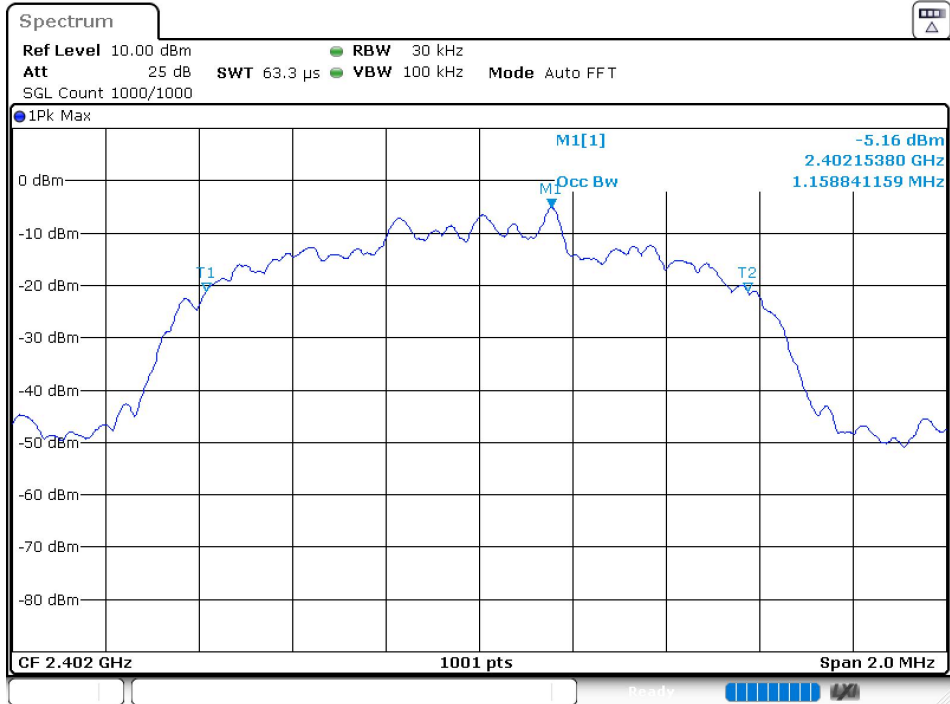


-20 dB BW NVNT 3-DH5 2402MHz Ant1

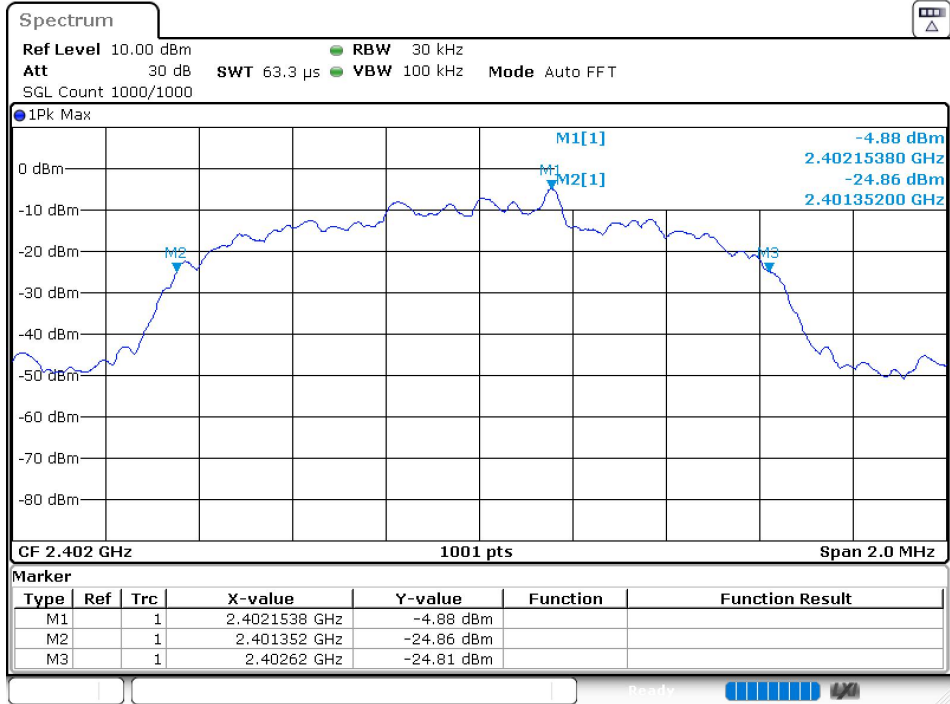


OBW NVNT 3-DH5 2441MHz Ant1

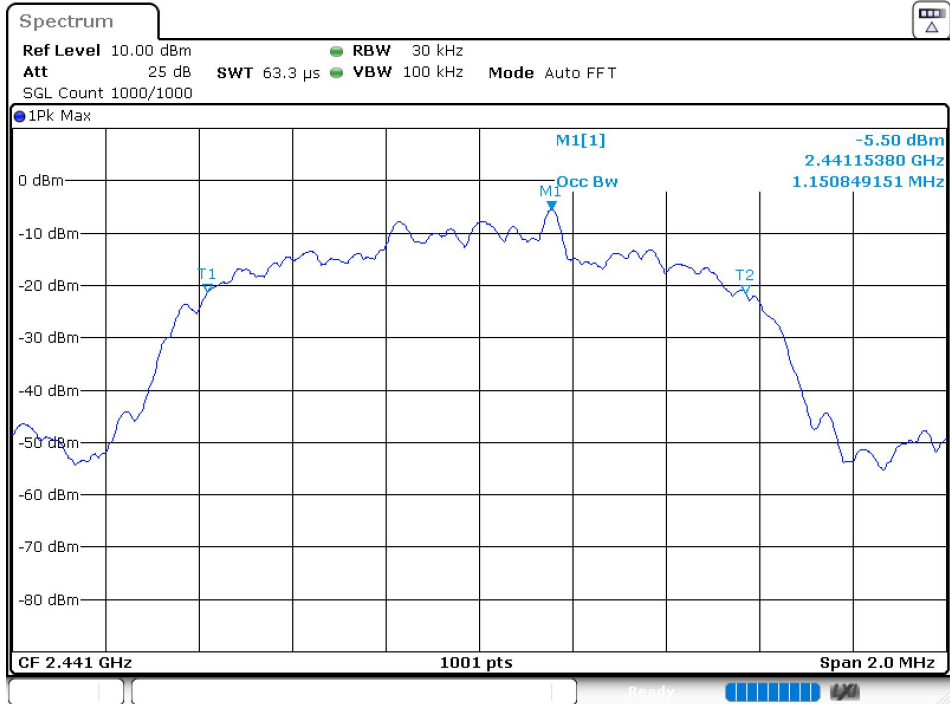

-20 dB BW NVNT 3-DH5 2441MHz Ant1

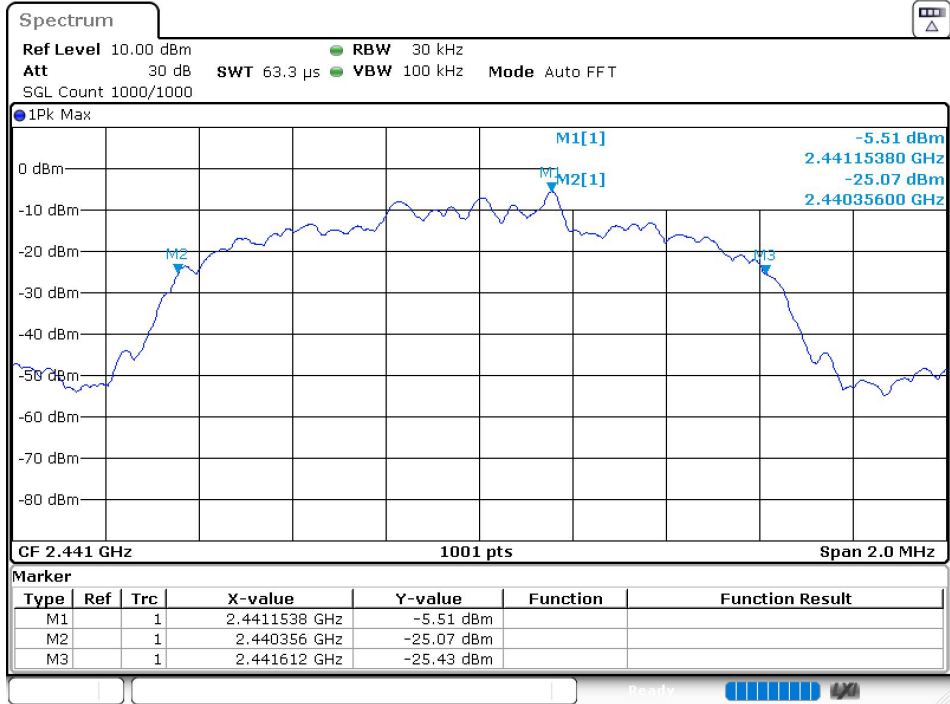

OBW NVNT 3-DH5 2480MHz Ant1

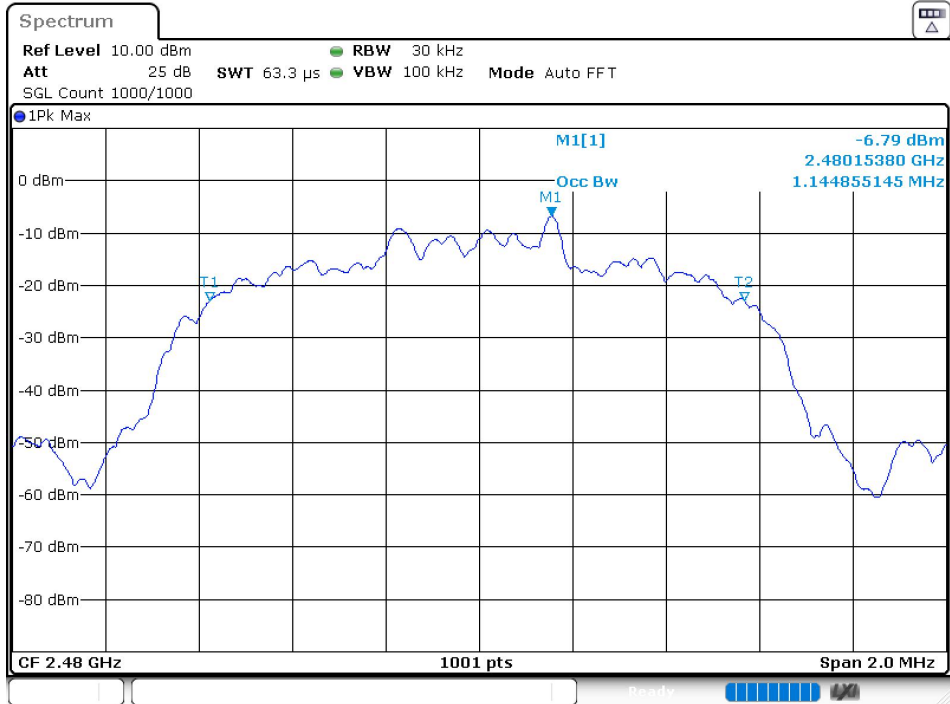





8.4 CARRIER FREQUENCIES SEPARATION

Condition	Mode	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH5	2402.05	2403.052	1.002	0.854	Pass
NVNT	1-DH5	2441.05	2442.049	0.999	0.864	Pass
NVNT	1-DH5	2479.05	2480.049	0.999	0.85	Pass
NVNT	2-DH5	2402.158	2403.157	0.999	0.847	Pass
NVNT	2-DH5	2441.155	2442.157	1.002	0.845	Pass
NVNT	2-DH5	2479.155	2480.157	1.002	0.833	Pass
NVNT	3-DH5	2402.005	2403.007	1.002	0.845	Pass
NVNT	3-DH5	2441.005	2442.007	1.002	0.837	Pass
NVNT	3-DH5	2479.155	2480.157	1.002	0.833	Pass


CFS NVNT 1-DH5 2402MHz

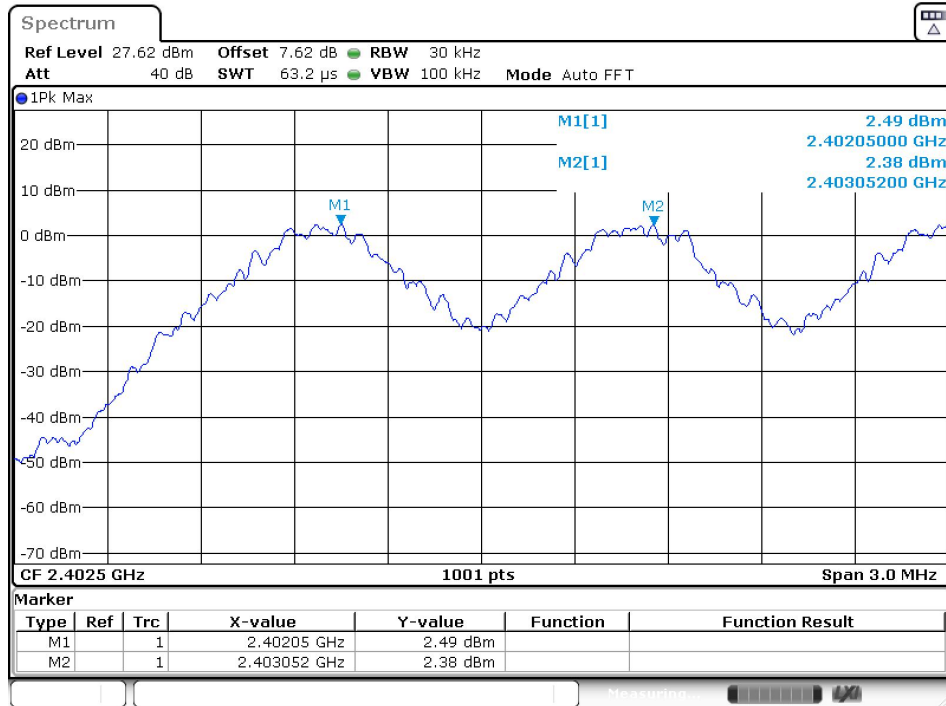


### CFS NVNT 1-DH5 2441MHz

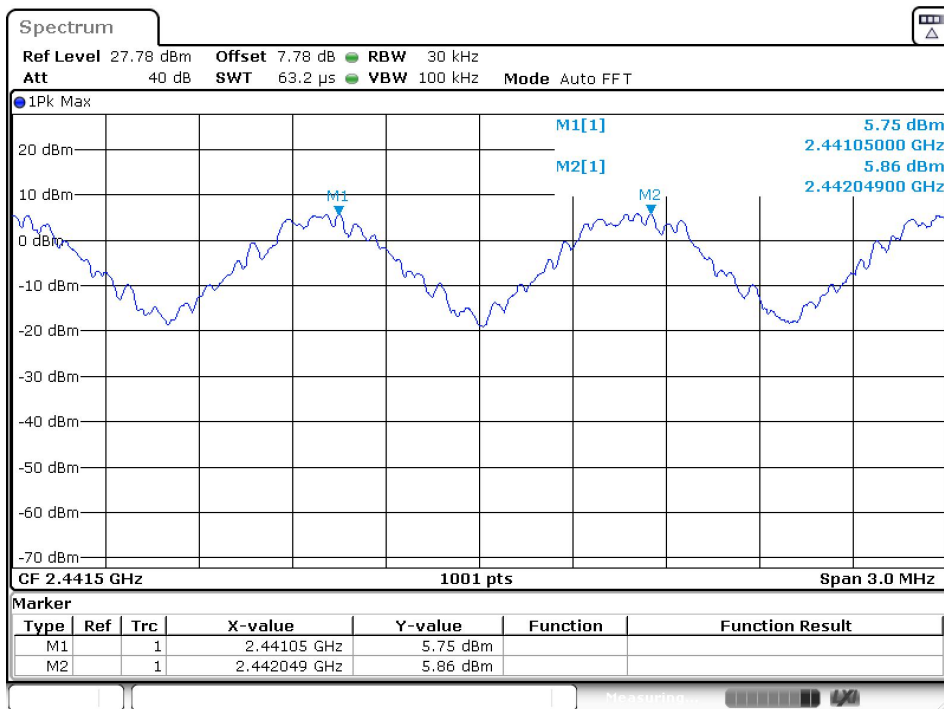


### CFS NVNT 1-DH5 2480MHz

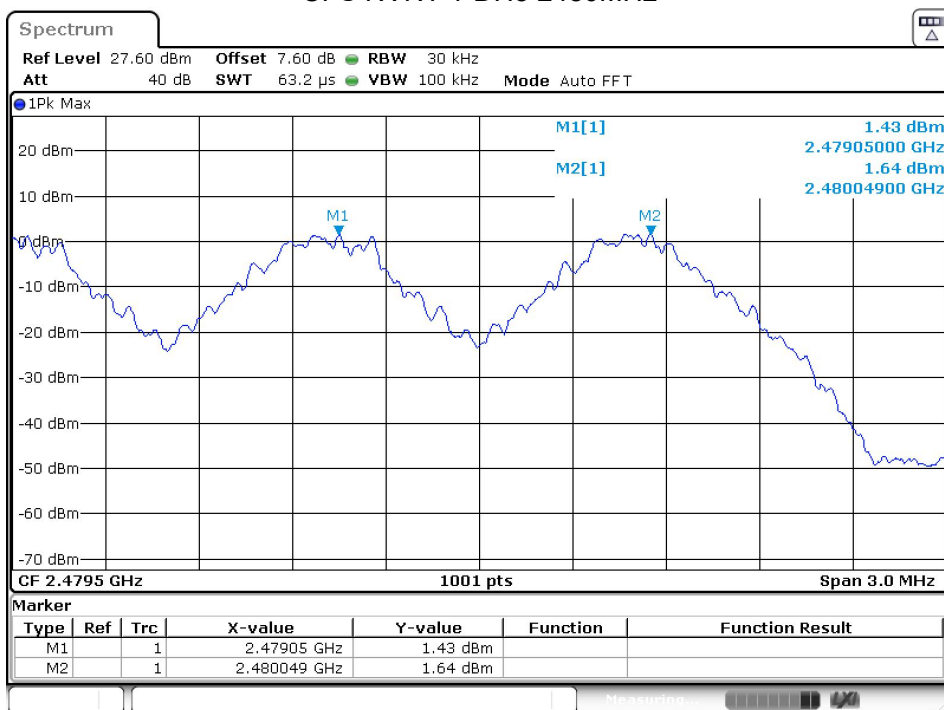


### CFS NVNT 2-DH5 2402MHz

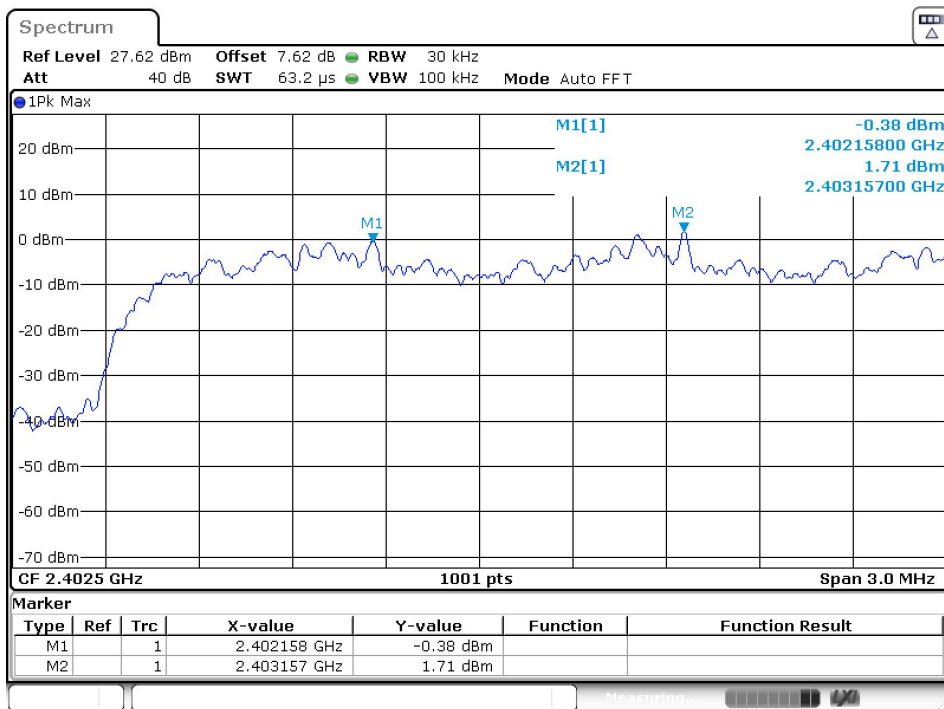


### CFS NVNT 2-DH5 2441MHz

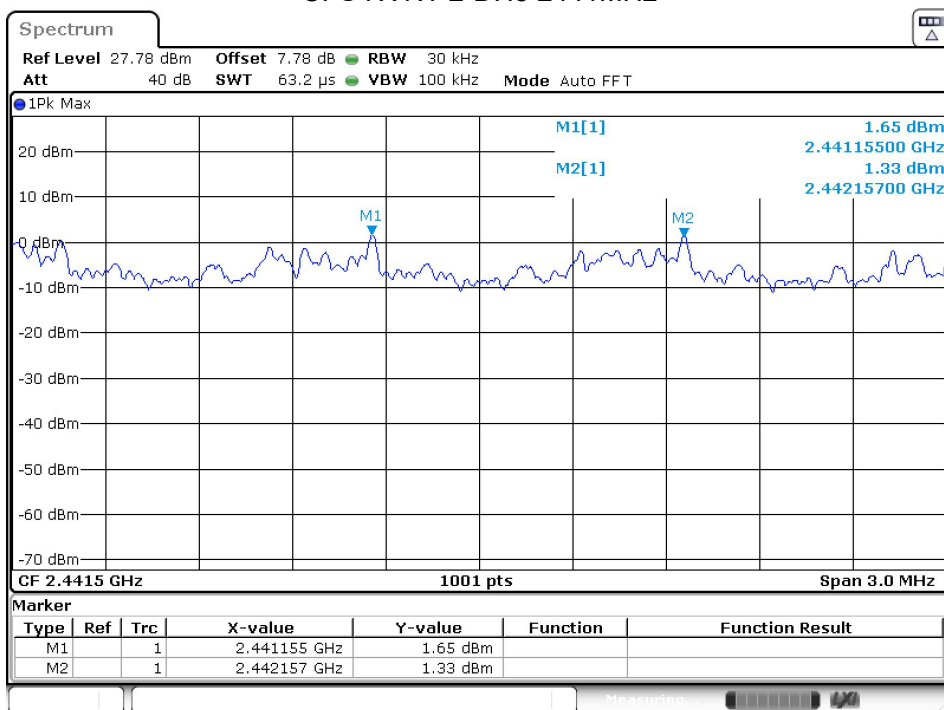

### CFS NVNT 2-DH5 2480MHz

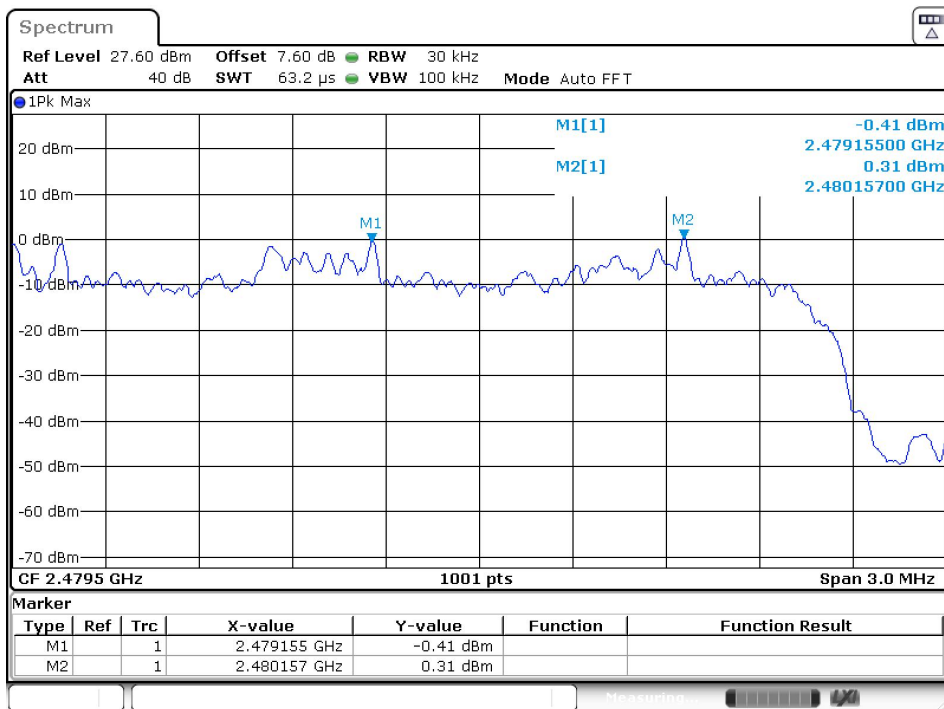


### CFS NVNT 3-DH5 2402MHz

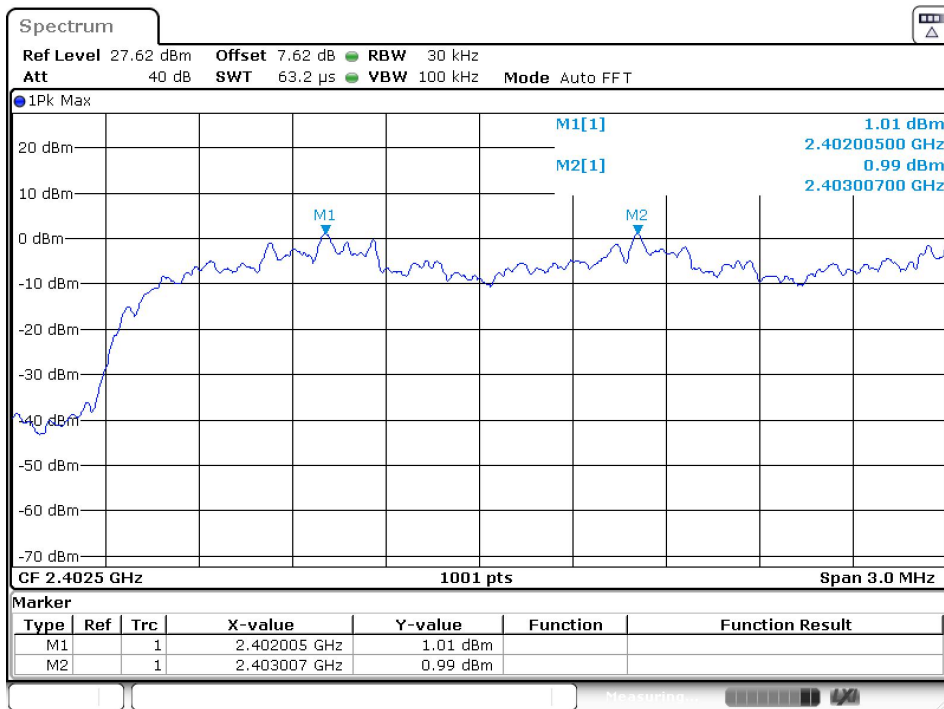




### CFS NVNT 3-DH5 2441MHz

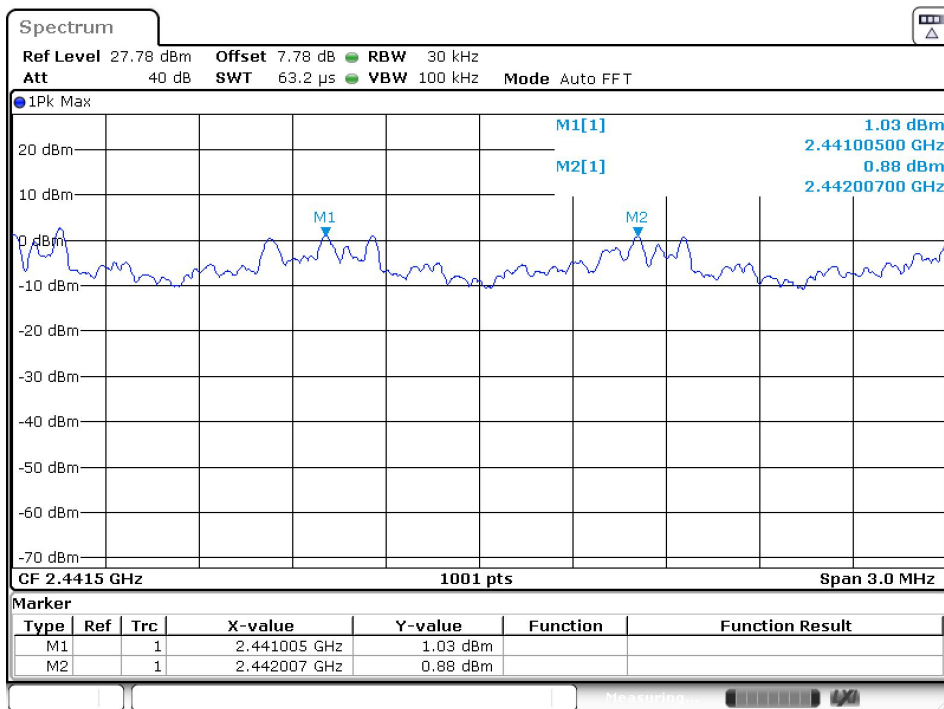

### CFS NVNT 3-DH5 2480MHz

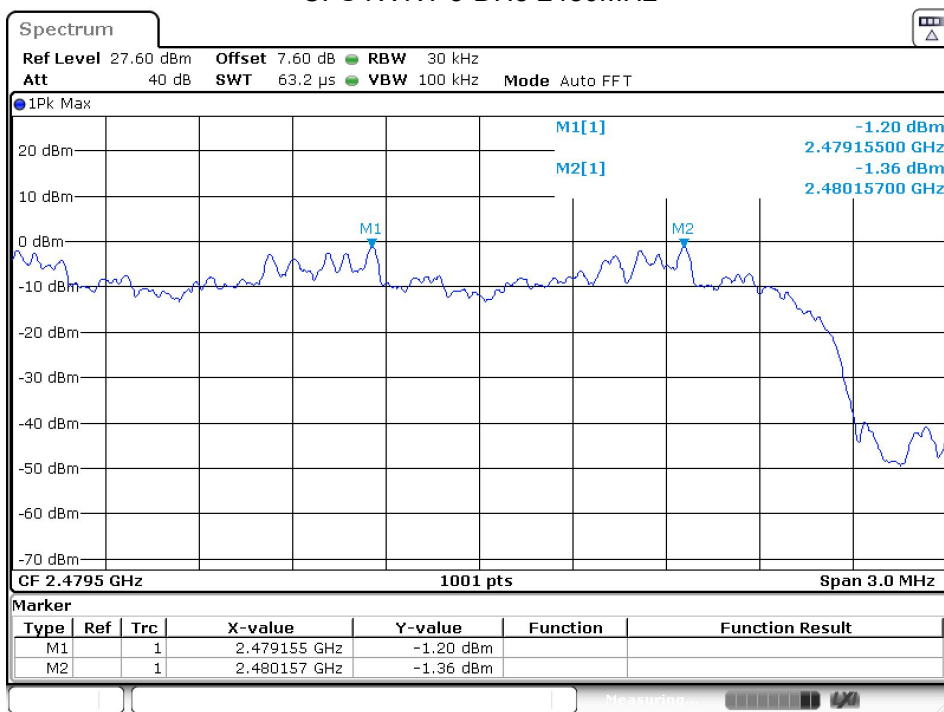

8.5 NUMBER OF HOPPING CHANNEL

Condition	Mode	Hopping Number	Limit	Verdict
NVNT	1-DH5	79	15	Pass

Hopping No. NVNT 1-DH5 2402MHz

