
# newline

# **USB Speakerphone**

TM-A220Y

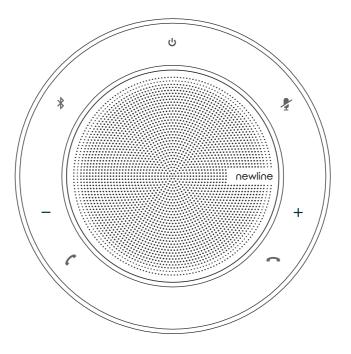


English | 简体中文

## Quick Start Guide 快速入门指南

newline-interactive.com


V1.0

## Package Contents

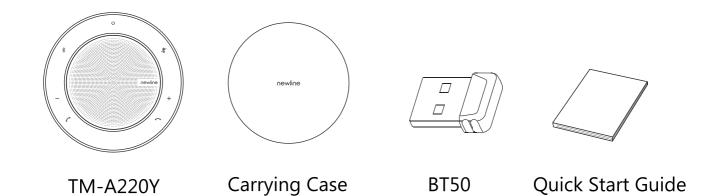


## **Charging Your TM-A220Y**

Plug the TM-A220Y into a USB power source. The TM-A220Y battery lasts for up to 12 hours of talk time and takes approximately 3 hours (5V/1.2A) to fully charge.

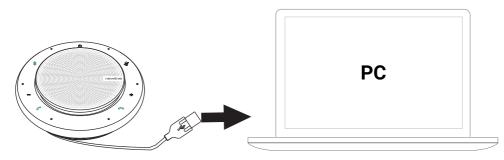


## Viewing the Battery Status

Tap **U** to view the battery status.

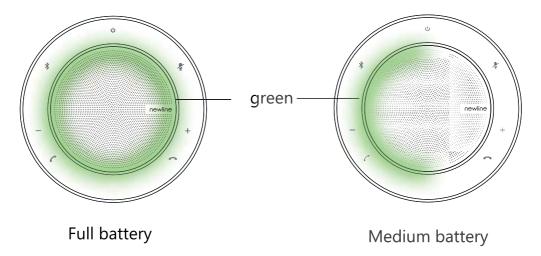


Extremely low on power, flashing red

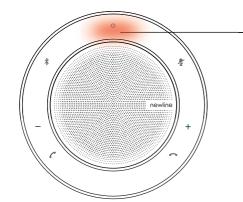

Low battery

## **Connecting Your TM-A220Y**

## **Connect to PC via USB Cable**

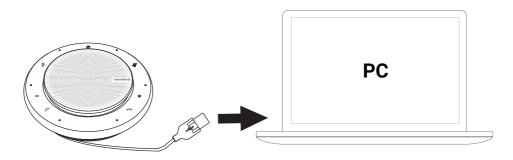

### **Connect to IFPD via Bluetooth**

Connect the BT50 into a USB port on your IFPD. The TM-A220Y and the BT50 are pre-paired and ready to use out of the box.



Note: If there is no sound coming from your TM-A220Y, you may need to set the TM-A220Y as the playback device in your operating system's audio settings.

### **Connect to smartphone via Bluetooth**

Hold  $\$  for 2 seconds to enter the pairing mode, and pair to your smartphone.


))) 🚯 🔞 🖉

To disconnect, double-tap **\***. To reconnect, tap **\*** again.


Note: You can connect your TM-A220Y to 2 Bluetooth devices at the same time.

# Placing Your TM-A220Y

Place the speakerphone in the center of the table, up to 2m/6.5ft from each participant. A TM-A220Y is ideal for up to 6 people.

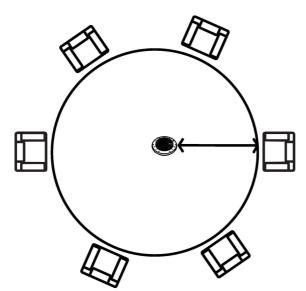

# Using Your TM-A220Y

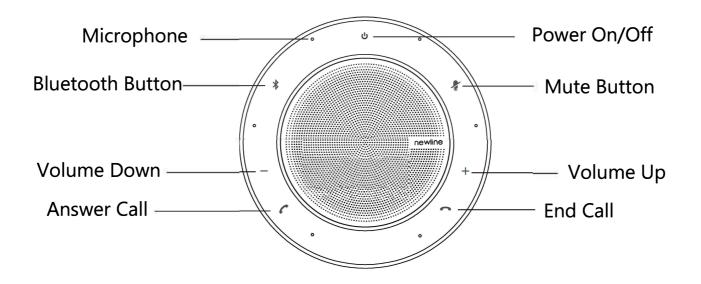


The TM-A220Y can connect to PC via USB cable or Bluetooth, and to IFPD / smartphone via Bluetooth. After connected, you can control the calls on the TM-A220Y.

Task	Do
Power on or off	Hold <b>じ</b> for 3 seconds.
Answer a call	Тар 🌈 .
End or reject a call	Тар 🦱 .
Volume up/down	Tap+/—.
Mute/unmute microphone	During a call, tap 🦨 . The mute LED indicator and LED light-ring glow red.
Hold a call	During a call, tap 🌈 . The LED light-ring flashes green.
Reset to the factory	Hold 🌈 and 🥌 for 6 seconds.
Play/pause the music	When the connected smartphone is playing music, tap <b>A</b> to pause. Tap <b>A</b> again to resume.
Voice assistant	Hold the  for 2 seconds to activate the smartphone's voice assistant (Siri®, Google Now™, Cortana™). Note: It depends on whether the connected smartphone supported voice assistant function.

Note: If connected to IFPD or smartphone via Bluetooth, TM-A220Y will enter the power safe mode afrer 60 seconds without operation. In this mode, you can tap any key to awake TM-A220Y.


The Bluetooth pairing information will be cleared after a factory reset.

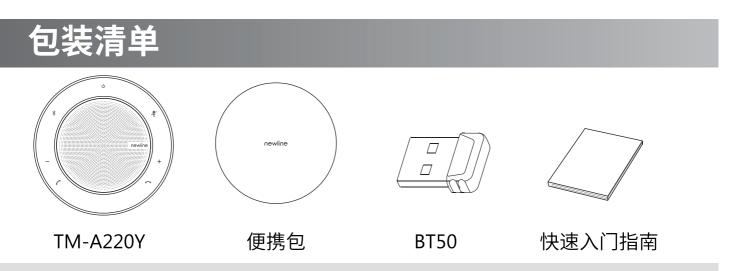

说明:TM-A220Y的无线型号核准代码体现在产品铭牌上;BT50的无线型号核准代码体现在产品说明书上,型号核准代码为 CMIIT ID: 2019DP8976。


## 充电

使用TM-A220Y自带的USB线缆接入USB电源。TM-A220Y电池可支持12 小时通话时长,充满电大约需要3小时(5V/1.2A)。

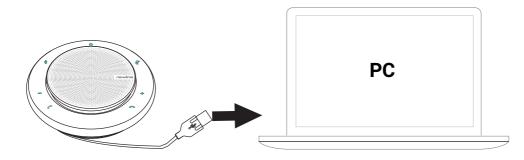


检查电量

在开机状态下,按 🕛 查看电池电量状态。

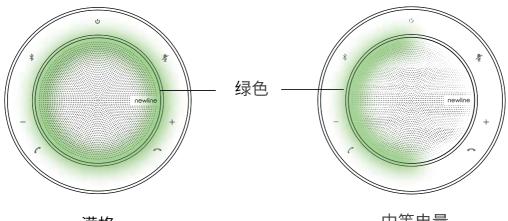

中等电量

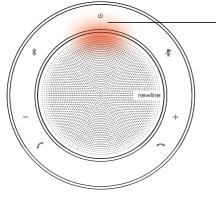


超低电量时,红灯闪烁

低电量

## 连接TM-A220Y

通过USB线连接至PC

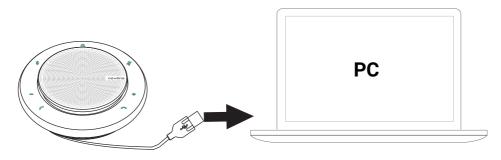

## 通过蓝牙BT50连接至交互平板

将BT50插入交互平板的USB接口。BT50与TM-A220Y已预先配对,开箱即可使用。



说明:如果使用过程无声,尝试手动将TM-A220Y设为系统音频设备。

### 通过内置蓝牙连接至智能手机

长按蓝牙键 ≵ 2秒, 蓝牙进入配对模式, 然后与智能手机进行配对。


)))

如果要断开蓝牙连接,双击蓝牙键≵断开连接。 再次按蓝牙键 ≵可重新连接。


说明:TM-A220Y支持同时连接2个蓝牙设备。

## 摆放位置

将TM-A220Y放在桌子中间,与每名与会者的距离不超过2米/6.5英尺。一台 TM-A220Y可供6人使用。

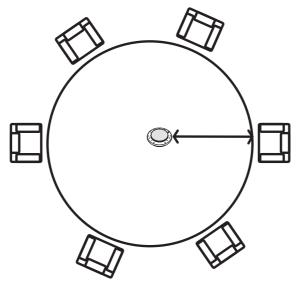

# 使用TM-A220Y

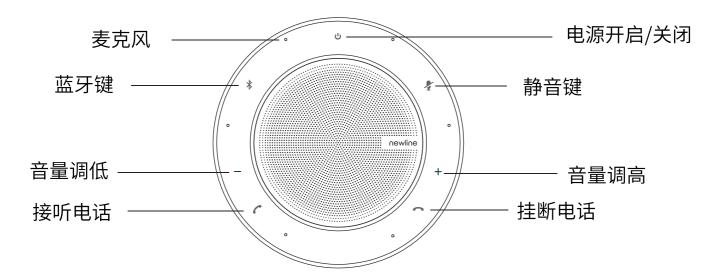

TM-A220Y可以通过蓝牙连接至交互平板/智能手机,或通过USB线/蓝牙连接至PC,连接后,你可以在TM-A220Y上控制通话。

任务	操作
开机/关机	长按电源键 <b>し</b> 3秒。
接听来电	按接听键 🦿 。
挂断电话/拒接来电	按挂断键 🦰 。
音量调高/调低	按音量调高键 + / 调低键 - 。环 形灯带的蓝色LED数增多/减少。
麦克风静音/取消静音	通话中,按静音键 🧲 。 静音键红灯常亮,环形灯带呈红色。
通话保持	通话中,按接听键 🦿 。环形灯带绿色闪烁。
恢复出厂	按住接听键 🌈 和挂断键 🖚 6秒钟。
播放音乐/暂停播放	当连接上的智能手机播放音乐时,按挂断键 <b>个</b> 暂停播放;再次按挂断键 <b>个</b> 继续播放。
语音助手	可激活手机上的语音助手(Siri, Google Now, Cortana);操作:长按  此功能键2秒。 注意:需所连接的手机支持此项功能。

说明:通过蓝牙连接到PC或智能手机时,TM-A220Y在60秒无操作后进入低功耗模式。在该模式下,你可以按任意键激活。恢复出厂后,蓝牙配对信息会被清空。

#### **Regulatory Notices**

**Operating Ambient Temperatures** 

•Operating temperature: +32 to 104°F (0 to 40°C)

• Relative humidity: 5% to 90%, noncondensing • Storage temperature: -22 to +160°F (-30 to +70°C)

#### Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Newline device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

#### Explanation of the symbols

• DC symbol

is the DC voltage symbol.

#### • WEEE Warning symbol

To avoid the potential effects on the environment and human health X as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic

equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS) This device complies with the requirements of the EU RoHS Directive Statements of compliance can be obtained by contacting support@newlineinteractive.com

#### Safety Instructions

Save these instructions. Read these safety instructions before use! General Requirements

- Before you install and use the device, read the safety instructions
- carefully and observe the situation during operation. • During the process of storage, transportation, and operation, please
- always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair. • Please refer to the relevant laws and statutes while using the device.
- Legal rights of others should be respected as well.

#### \Lambda Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater

#### A Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid liahtnina strike
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.

• Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables

### ▲ Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.

#### Troubleshooting

The unit cannot supply power to device other than Newline device.

There is a bad connection with the plug.

- 1. Clean the plug with a dry cloth.
- 2. Connect it to another wall outlet.

The usage environment is out of operating temperature range. 1. Use in the operating temperature range

The cable between the unit and the Newline device is connected incorrectly. 1. Connect the cable correctly.

You cannot connect the cable properly.

1. You may have connected a wrong Newline device.

2. Use the correct power supply

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions. FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected. -Consult the dealer or an experienced radio/TV technician for help.

#### RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference; and

(2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le

To avoid replacement of a battery with an incorrect type

Don't leaving a battery in an extremely high temperature surrounding environment To avoid battery subjected to extremely low air pressure

#### **Contact Information**

Newline Interactive Inc 101 East Park Blvd. Suite 807 Plano, TX 75074, USA

Headquartered in Plano, Texas, Newline Interactive is a leading supplier of interactive touch screens and innovative software that

increase productivity and enable collaboration. Newline Interactive develops products that help organizations in a wide range of vertical markets including financial services, education, healthcare, law enforcement, manufacturing, municipalities, and legal services.

#### **Technical Support**

**About Newline Interactive** 

Visit Newline (https://newline-interactive.com/) for the latest information, FAQ and product documents, or email us at support@newline-interactive.com for all your technical issues.



(1) l'appareil ne doit pas produire de brouillage;

fonctionnement.NMB-3(B)

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery