


# 588x115mm (8.4x7) 2018-9-7



**MODERN APOTHECARY**



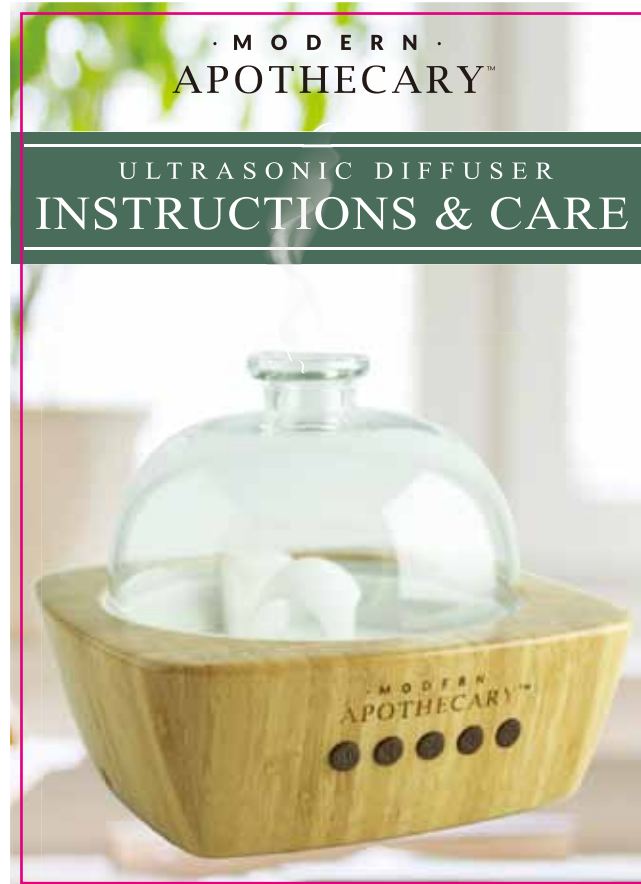

## Instructions & Care

**STOP-Need help or have questions?**  
Please read the instructions carefully before using. Do not throw away instructions and keep in a safe place. For indoor use only. For adult use only, not intended for children.


**● DIFFUSER SPECIFICATIONS**

<b>Dimensions</b>	7.6" x 7.6" x 6.2" (19.5 cm x 19.5 cm x 16 cm)
<b>Weight</b>	2.86 lbs (1300 g)
<b>Voltage</b>	24V DC
<b>Electric Consumption</b>	12W
<b>Power Adapter</b>	INPUT: 100-240V, 50/60Hz, 0.35 A MAX OUTPUT: 24V --- 0.65A
<b>Cord Length</b>	4.9' (1.5 m)
<b>Run Time</b>	Up to 4-6 hours for continuous use
<b>Tank Capacity</b>	200 mL
<b>Lighting</b>	LED Lights
<b>Material</b>	PP + Bamboo + Glass
<b>Accessories</b>	Power Supply, Measuring Cup, Remote
<b>Ultrasonic Rate</b>	1.7MHz
<b>Coverage</b>	300 square feet (Approximate)
<b>Battery</b>	Lithium CR2025 3v
<b>ETL Listing</b>	Intertek 3162944

Olympic Mountain Products  
8655 South 208th Street  
Kent, WA 98031  
www.omplabs.com  
1.800.937.2545

**● DIFFUSER COMPONENTS**

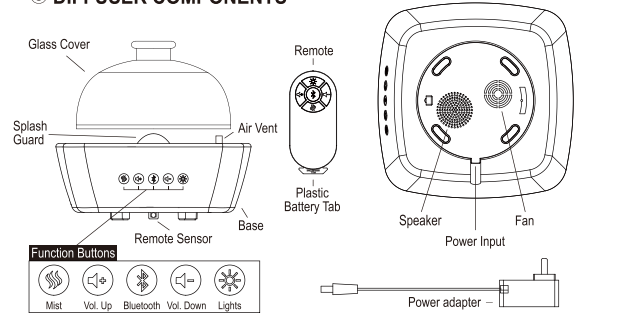


**Use only with Ultrasonic Diffuser Oils.**  
**Do NOT use with warming oil or other types of fragrance oils.**

The ultrasonic diffuser uses high frequency ultrasonic technology that vibrates cool water inside the unit creating an ultra fine mist into the air. When oils are added to the water, they are immediately dispersed into the air providing a pleasant fragrance mist.

**● HOW TO USE**

- Carefully remove the glass cover (Fig.1).
- Plug power adapter into the power input of the base. (Fig.2)
- Use the measuring cup to fill the base with room temperature water (Fig.3).
- Very important to not fill over the max fill line (200 mL) marked in the water tank.
- Do not use with wax.
- Recommended use distilled, purified, or filtered water.
- Add 5-10 drops of oil directly into the water (Fig.3).
- Replace the glass cover onto the base (Fig.4).
- Plug the power adapter into a wall outlet and follow the chart below to operate (Fig.5).

MIST	LED LIGHTS	BLUETOOTH
1st press - Mist on	1st press - 7 color rotations	1st Press & hold (3 sec.) - Bluetooth on
2nd press - Mist off	2nd press - Stop on current color	(Pair using mobile device "Modern Apothecary")
Press & hold - Mist off	3rd+ - Cycle through colors	2nd Press & hold (3 sec.) - Bluetooth off
	Press & hold - Lights off	Use the Vol. Up & Down buttons to control volume.

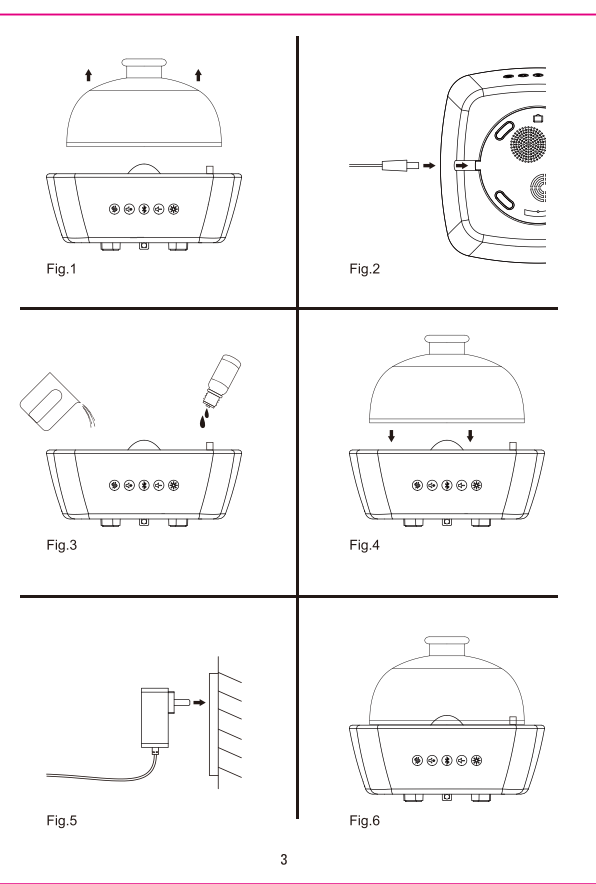

**● IMPORTANT SAFETY INSTRUCTIONS**

INSTRUCTIONS PERTAINING TO THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS  
**WARNING-**When using electric products, basic precautions should always be followed, including the following:

- READ AND FOLLOW ALL INSTRUCTIONS.
- SAVE THESE INSTRUCTIONS FOR REFERENCE LATER.
- Modern Apothecary Ultrasonic Oil Diffuser is designed exclusively for ultrasonic diffuser oils and is not intended to be used for any other purpose. Not intended for use with straight diffuser oil.
- Concentrated diffuser oils can damage and stain fine surfaces.
- Only use the Ultrasonic Oil Diffuser for its intended purpose.
- Place the Ultrasonic Oil Diffuser on a stable surface so it cannot be tipped over. Never allow the cord to hang over a counter edge or table, or to touch any hot surface. Failure to use as directed could cause damage, injury or fire.
- The Ultrasonic Oil Diffuser is not a toy and should be kept out of reach of children and pets to prevent serious injury.
- Do not allow the spray nozzle to spray directly on furniture, clothes or walls.
- Never cover the diffuser or block the spray nozzle while in use. This will damage the unit.
- The plug on the electric cord is intended for Ultrasonic Oil Diffuser purposes only. Never add or modify electrical parts, as fire or dangerous electrical shock could result.
- Not for outdoor use.
- Never plug the Ultrasonic Oil Diffuser in with a wet hand or a wet cord.
- Keep the outside of the Ultrasonic Oil Diffuser dry. Do not immerse in water or use near a water source as electrical shock may occur.
- Never operate the Ultrasonic Oil Diffuser with a damaged cord, plug, cracked glass or if it has been damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the Ultrasonic Oil Diffuser should be disposed of.
- Properly secure the cord so it cannot be accidentally tripped on.
- Extension cords may be used if care is exercised in their use. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the Ultrasonic Oil Diffuser. If the extension cord is of the grounded type, 3-prong plug, the extension cord should be arranged so that it is not draped over a counter top or tabletop where it could be tripped over, snagged or pulled on unintentionally (especially by pets and/or children).
- Do not use in small, confined areas without adequate ventilation.
- Never submerge the appliance in water.
- If you feel unwell using this product, turn off the unit immediately.
- Ensure the oil does not get into your eyes. Should it happen, rinse eyes immediately with water. Consult a doctor if irritation persists.
- Do not apply undiluted oil onto your skin or swallow it. If skin comes in contact with oil, wash immediately with water. Should you swallow, seek medical help immediately.
- Always use the measuring cup to fill the water tank. Do not fill directly from sink.
- Do not move the unit while the unit is on.
- Do not drink from the water tank.
- When unplugging from the outlet, hold the diffuser securely.
- Do not place cord over objects.
- Do not operate diffuser before replacing the glass cover and do not remove glass cover while diffuser is running.

**● ATTENTION**

If the unit is not in use, unplug the unit, drain out the water from the water tank, dry and store in a safe place. The diffuser will auto shut off when the unit is out of water. The diffuser will not work without water.

The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault. Factors that affect this include water type, humidity, temperature and air currents.

We recommend that you clean it every time you change diffuser oils. Oils are corrosive and, over time, they will build up on the diffuser parts.

Store diffuser oils in a cool, dark place with the cap tightly closed and out of the reach of children.

Always use caution when handling the glass cover.

**● MAINTENANCE**

After using 5-6 times, or 3-5 days, please clean the product as follows.

- Unplug the unit from main power supply and remove the body cover.
- Pour any remaining water out from the "DRAIN SIDE" of the water tank.
- Wipe the interior of the water tank with a dry cloth.
- If you find any debris in the air outlet, remove the water tank cover, rinse with water and wipe dry with clean dry cloth.
- Never use acids, enzymes, solvents or detergents, as this may risk poisonous gas to be created or cause malfunction.
- Do not touch the ultrasonic transducer.
- If any water or essential oil accidentally lands on the wood base, wipe immediately to avoid damage, fading or discoloration.

**ATTENTION: DO NOT USE ANY CLEANING AGENTS.**

**● BATTERY REPLACEMENT**

- Remove battery cover from the bottom/back of the remote by pushing the small tab towards the larger tab while pulling the larger tab out.
- Replace with 3v CR2025 battery.
- Make sure that the text side of the battery is facing the back of the remote and the bottom of the battery is facing the front of the remote.
- Slide the battery cover back into the remote until it "clicks" into place.

**● ACCIDENTAL LEAKAGE**

In the event of the unit being knocked over or tipped during use, please follow the instructions below:

- Unplug the unit from power source and remove water tank cover.
- Pour out any remaining water out of the water tank.
- Shake the unit gently to drain any water inside the mechanism, and then allow to dry for at least 24 hours before re-using.

**● TROUBLESHOOTING**

**The product will not turn on.**  
Confirm there is water in the tank and it is not over the max fill line. Confirm the product is connected to the power adapter and that the power adapter is connected correctly to a power outlet.

**No mist spray or abnormal mist spray.**  
Confirm there is water in the tank and it is not over the max fill line. Clean the diffuser. (Refer to the maintenance section of this manual.)

**The diffuser leaks water.**  
Confirm the glass cover is installed correctly. If the temperature is too low and or the humidity is high, the mist may form water drops.

**The remote wont work.**  
Make sure nothing is blocking the remote sensor on the bottom of the diffuser from seeing the remote. Replace the battery with a 3v CR2025 battery and make sure it is installed correctly.

**FCC AND IC STATEMENTS**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.