




-26dB Bandwidth NVNT n40 5510MHz Ant 2

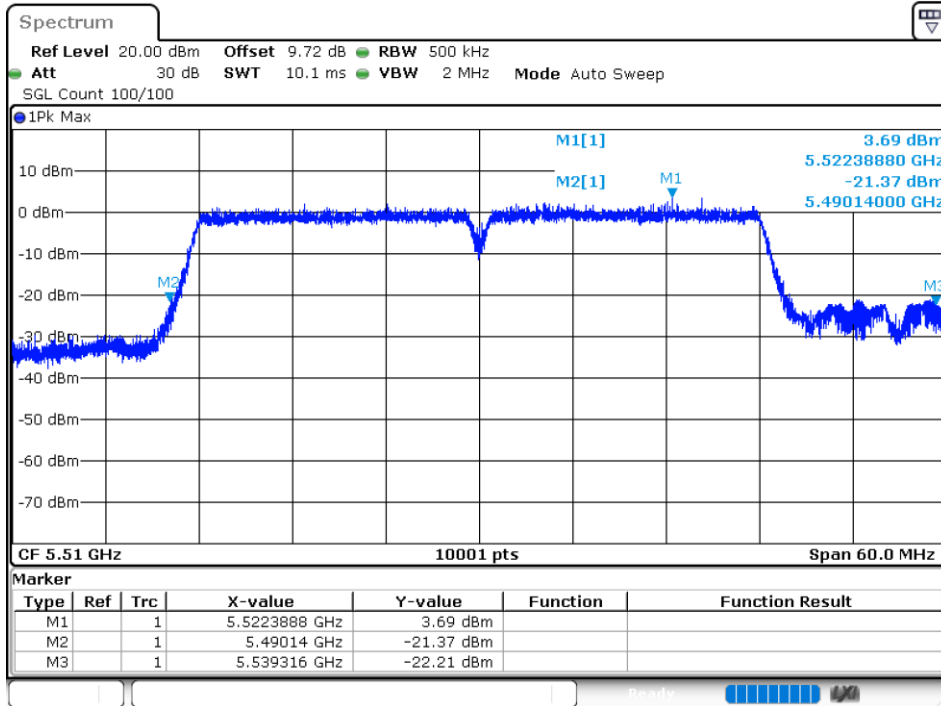

-26dB Bandwidth NVNT n40 5550MHz Ant 2

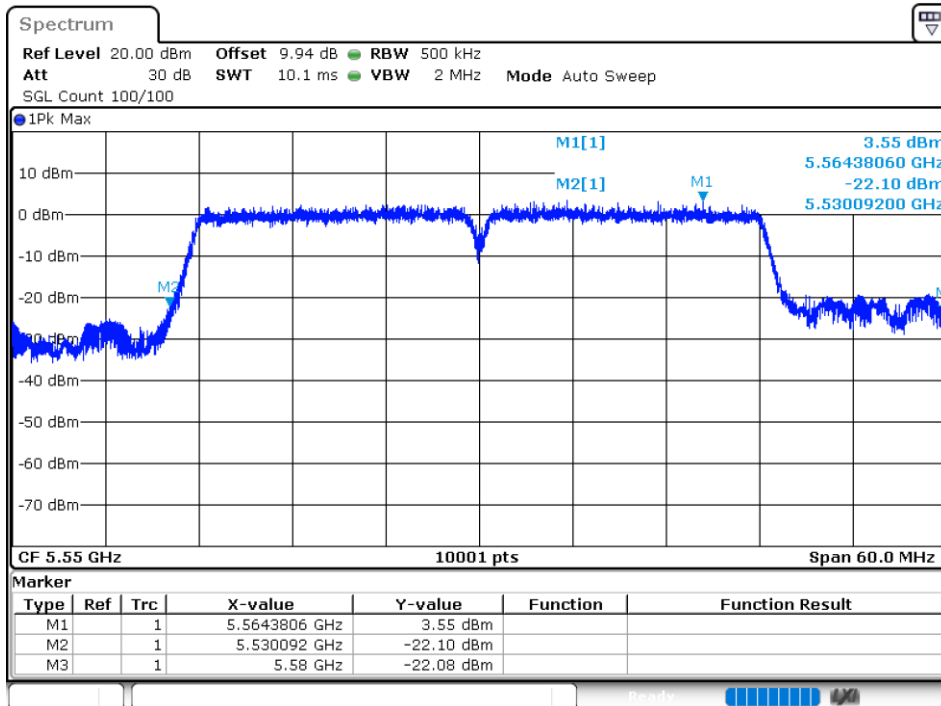

-26dB Bandwidth NVNT n40 5670MHz Ant 2

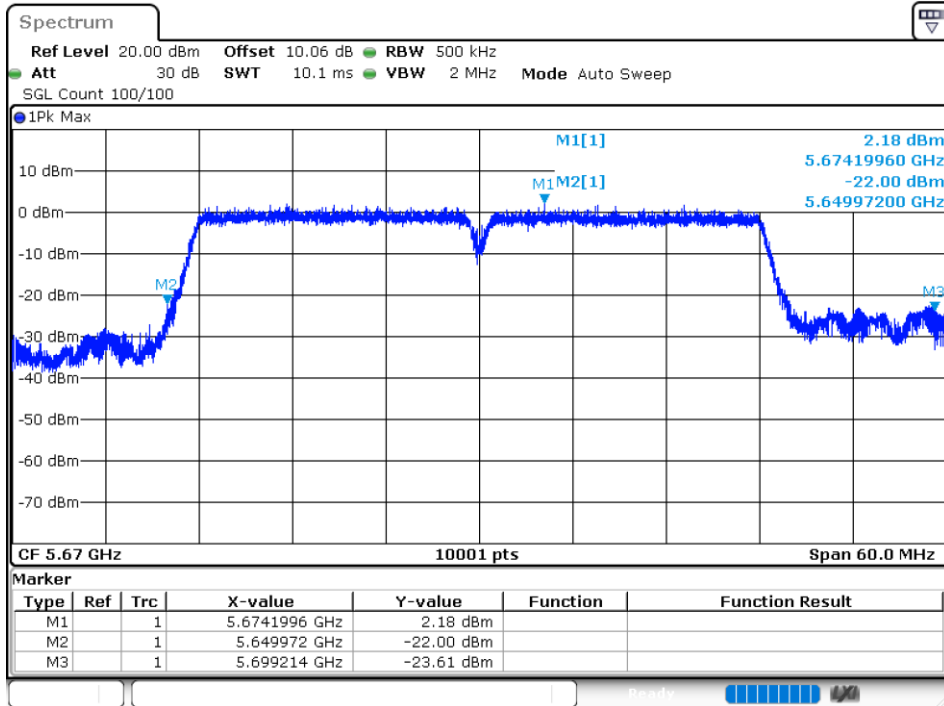


Occupied Channel Bandwidth


Condition	Mode	Frequency (MHz)	Antenna	99% OBW (MHz)
NVNT	a	5500	Ant 1	16.633
NVNT	a	5580	Ant 1	16.528
NVNT	a	5660	Ant 1	16.567
NVNT	a	5700	Ant 1	16.501
NVNT	a	5500	Ant 2	16.495
NVNT	a	5580	Ant 2	16.513
NVNT	a	5660	Ant 2	16.534
NVNT	a	5700	Ant 2	16.492
NVNT	ac20	5500	Ant 1	17.716
NVNT	ac20	5580	Ant 1	17.893
NVNT	ac20	5660	Ant 1	17.818
NVNT	ac20	5700	Ant 1	17.896
NVNT	ac20	5500	Ant 2	17.773
NVNT	ac20	5580	Ant 2	17.782
NVNT	ac20	5660	Ant 2	17.746
NVNT	ac20	5700	Ant 2	17.791
NVNT	ac40	5510	Ant 1	36.68
NVNT	ac40	5550	Ant 1	36.566
NVNT	ac40	5670	Ant 1	36.572
NVNT	ac40	5510	Ant 2	36.686
NVNT	ac40	5550	Ant 2	36.416
NVNT	ac40	5670	Ant 2	36.62
NVNT	ac80	5530	Ant 1	75.82
NVNT	ac80	5530	Ant 2	75.916
NVNT	ax20	5500	Ant 1	18.949
NVNT	ax20	5580	Ant 1	18.961
NVNT	ax20	5660	Ant 1	18.988
NVNT	ax20	5700	Ant 1	18.967
NVNT	ax20	5500	Ant 2	19.021
NVNT	ax20	5580	Ant 2	18.991
NVNT	ax20	5660	Ant 2	18.985
NVNT	ax20	5700	Ant 2	18.982
NVNT	ax40	5510	Ant 1	37.658
NVNT	ax40	5550	Ant 1	37.616
NVNT	ax40	5670	Ant 1	37.652
NVNT	ax40	5510	Ant 2	37.718
NVNT	ax40	5550	Ant 2	37.67
NVNT	ax40	5670	Ant 2	37.7

NVNT	ax80	5530	Ant 1	77.032
NVNT	ax80	5530	Ant 2	77.128
NVNT	n20	5500	Ant 1	17.785
NVNT	n20	5580	Ant 1	18.007
NVNT	n20	5660	Ant 1	17.689
NVNT	n20	5700	Ant 1	17.767
NVNT	n20	5500	Ant 2	17.842
NVNT	n20	5580	Ant 2	17.905
NVNT	n20	5660	Ant 2	17.716
NVNT	n20	5700	Ant 2	17.794
NVNT	n40	5510	Ant 1	36.53
NVNT	n40	5550	Ant 1	36.422
NVNT	n40	5670	Ant 1	36.398
NVNT	n40	5510	Ant 2	36.422
NVNT	n40	5550	Ant 2	36.47
NVNT	n40	5670	Ant 2	36.428


OBW NVNT a 5500MHz Ant 1

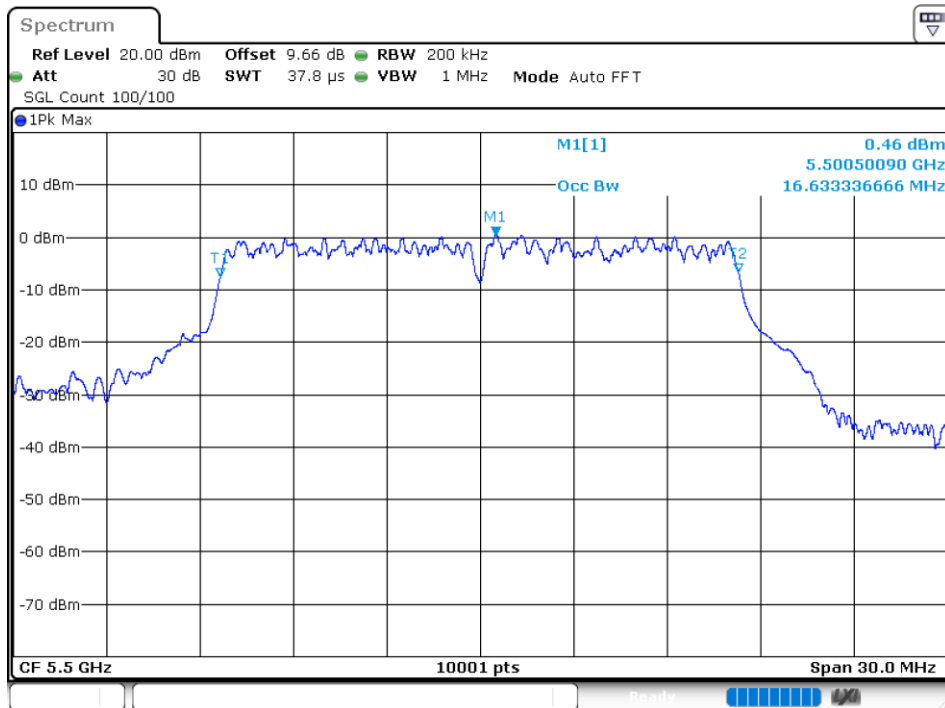


OBW NVNT a 5580MHz Ant 1

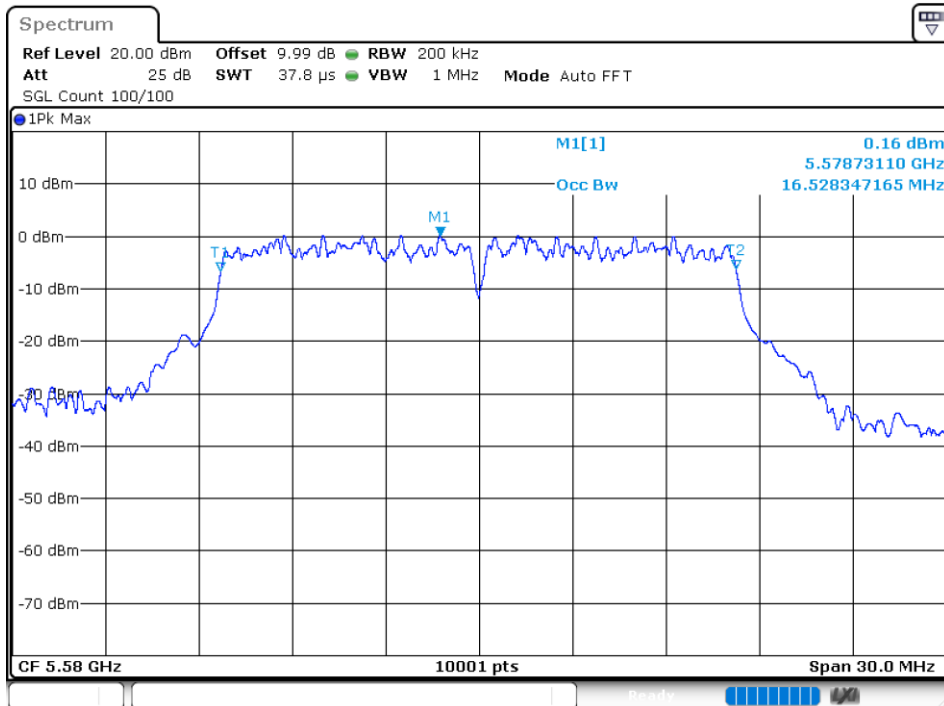


OBW NVNT a 5660MHz Ant 1

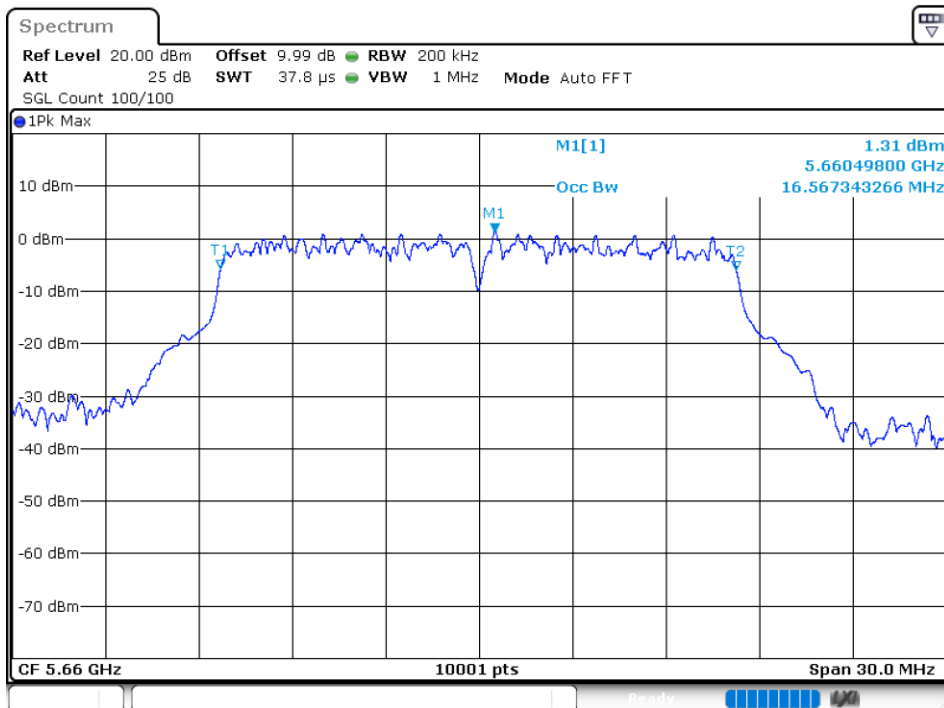


OBW NVNT a 5700MHz Ant 1

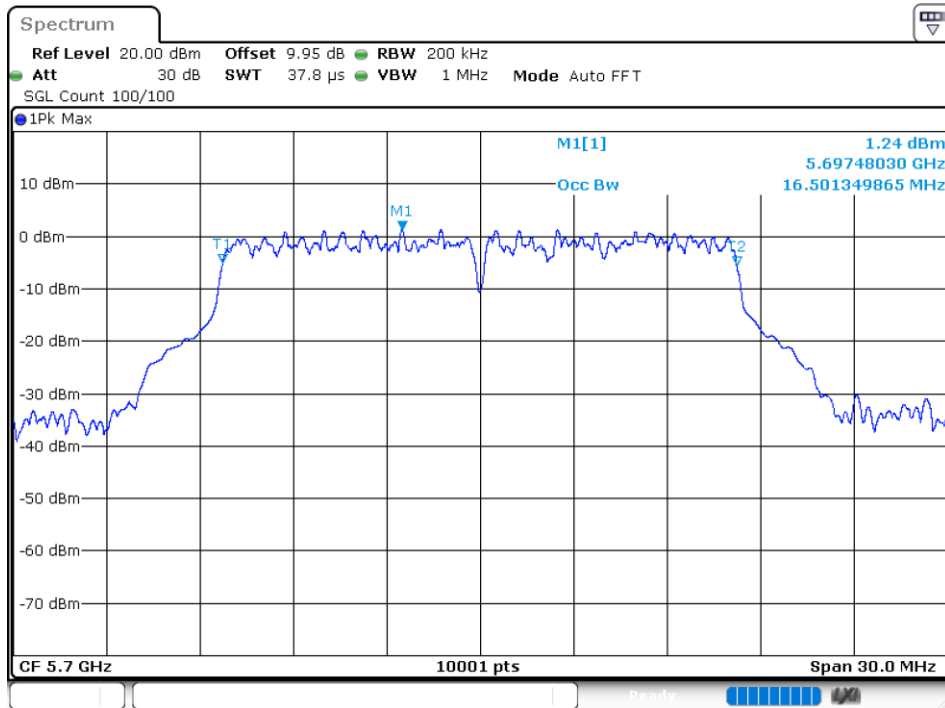


OBW NVNT a 5500MHz Ant 2

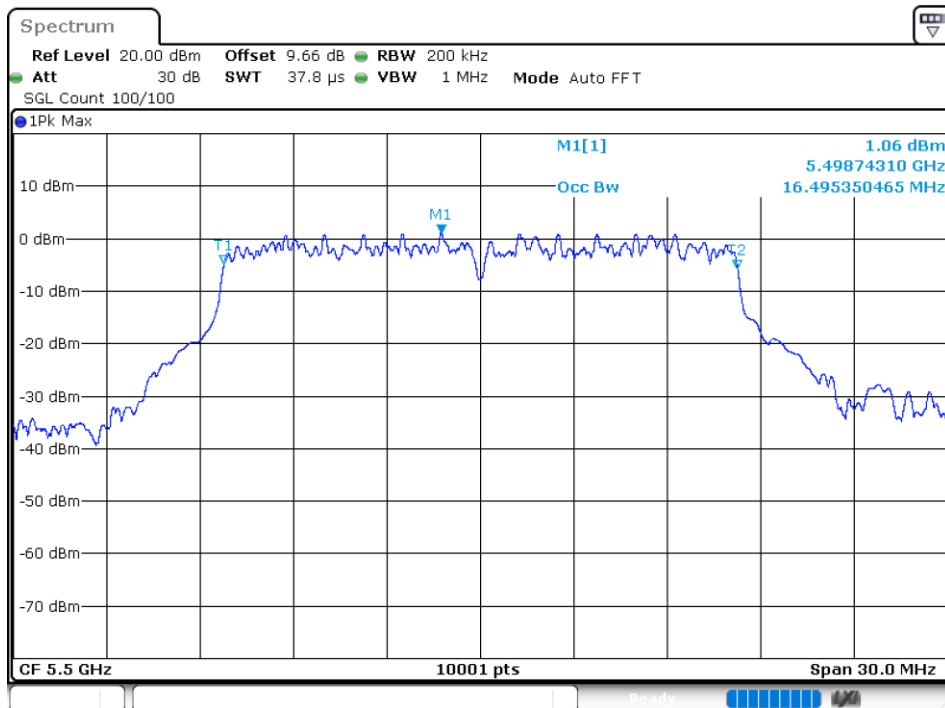


OBW NVNT a 5580MHz Ant 2

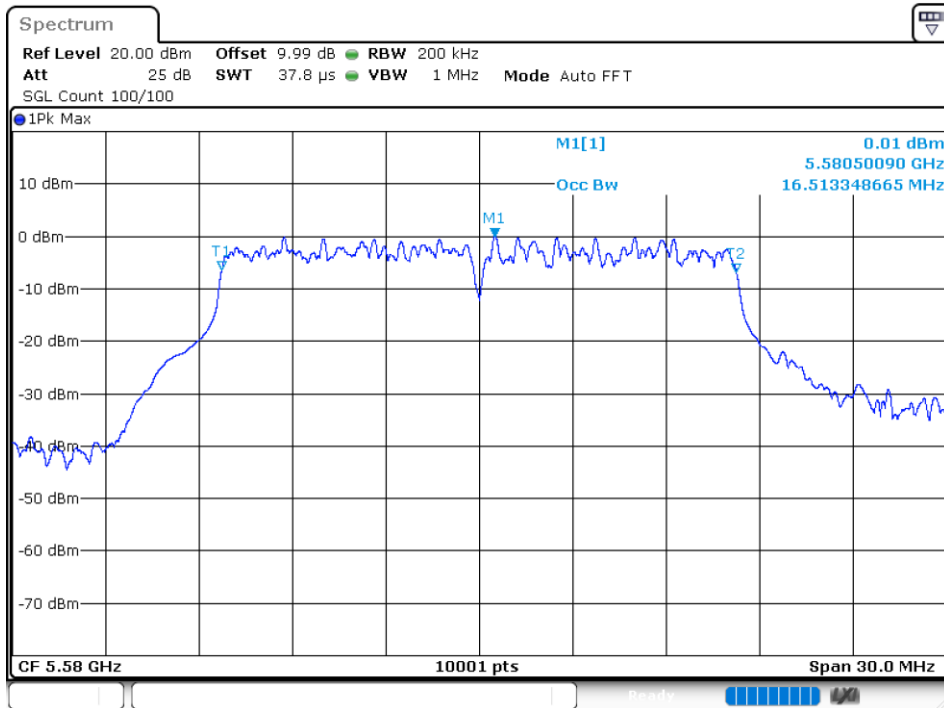


OBW NVNT a 5660MHz Ant 2

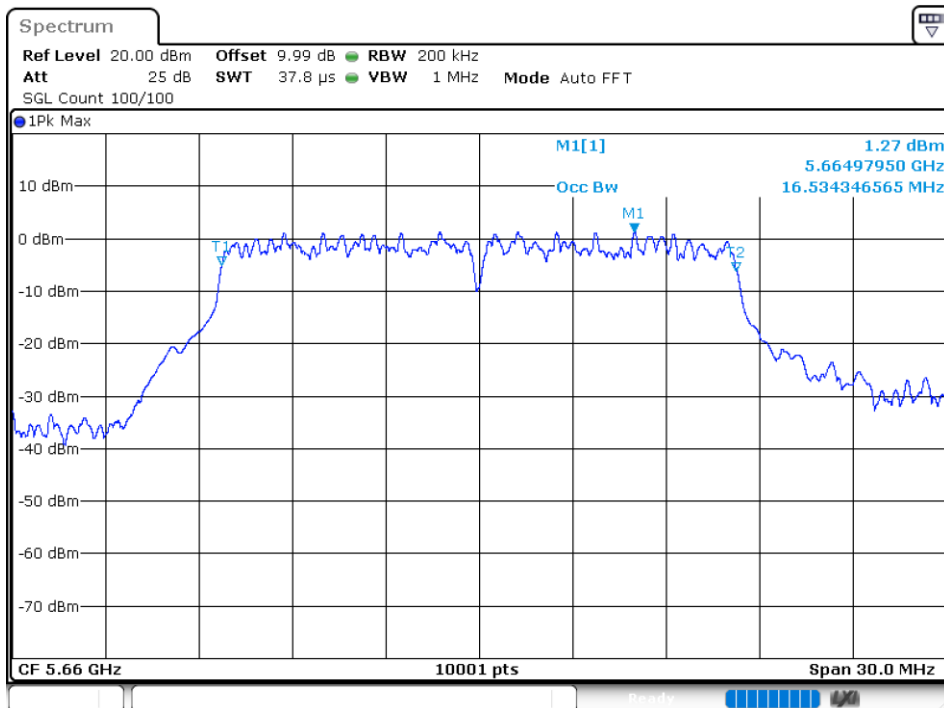


OBW NVNT a 5700MHz Ant 2

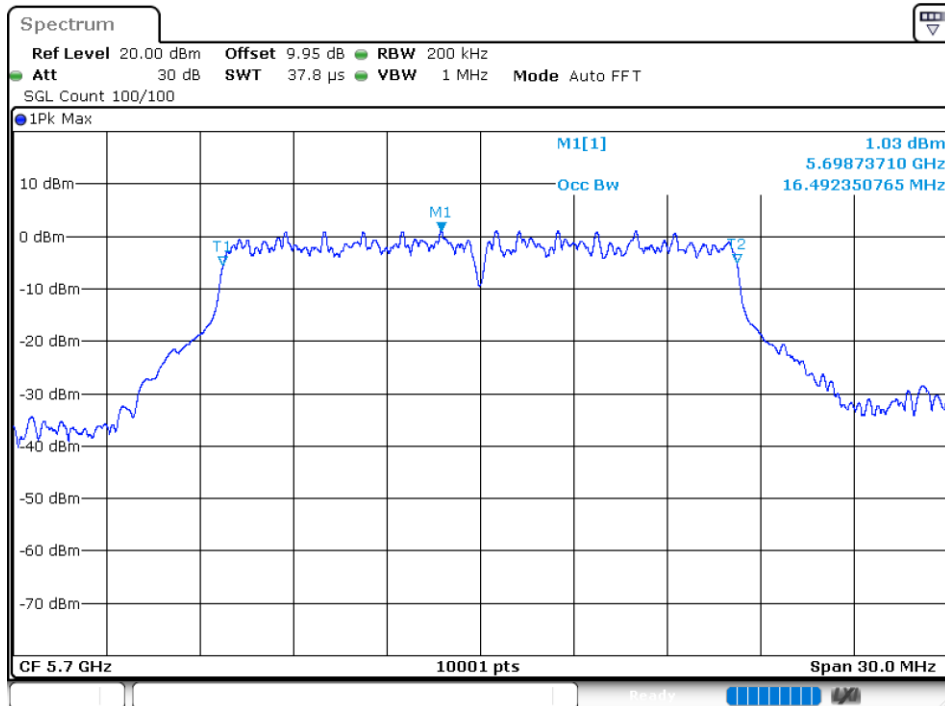


OBW NVNT ac20 5500MHz Ant 1

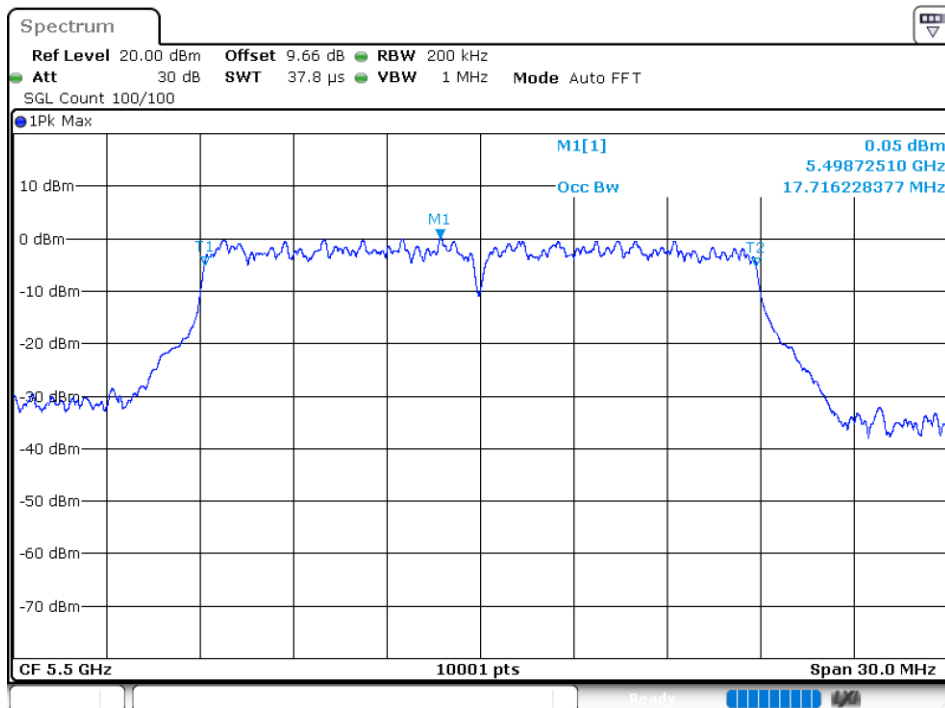


OBW NVNT ac20 5580MHz Ant 1

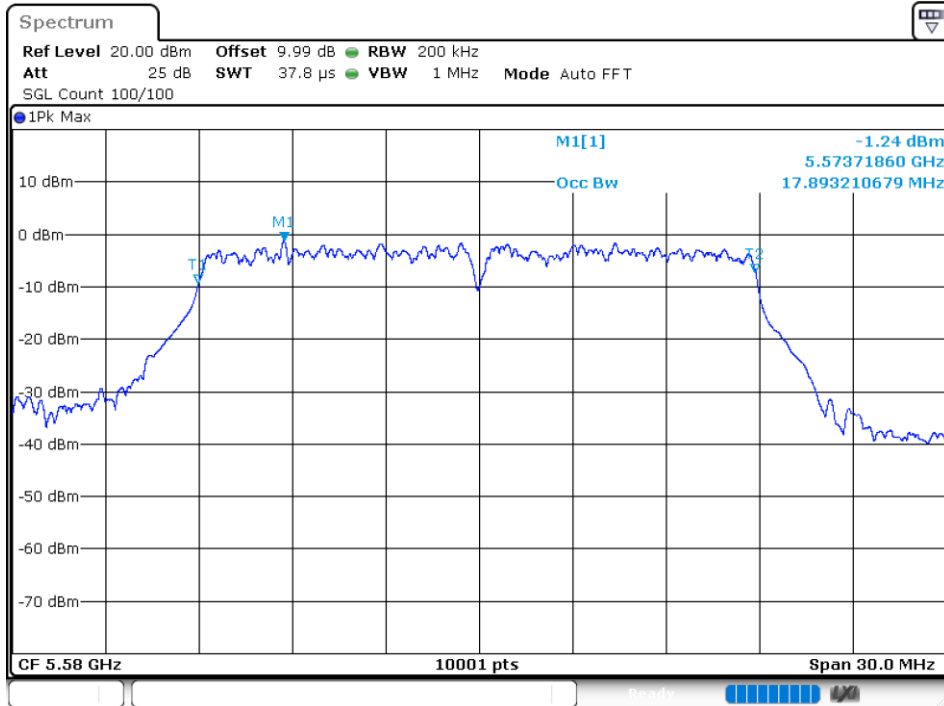


OBW NVNT ac20 5660MHz Ant 1

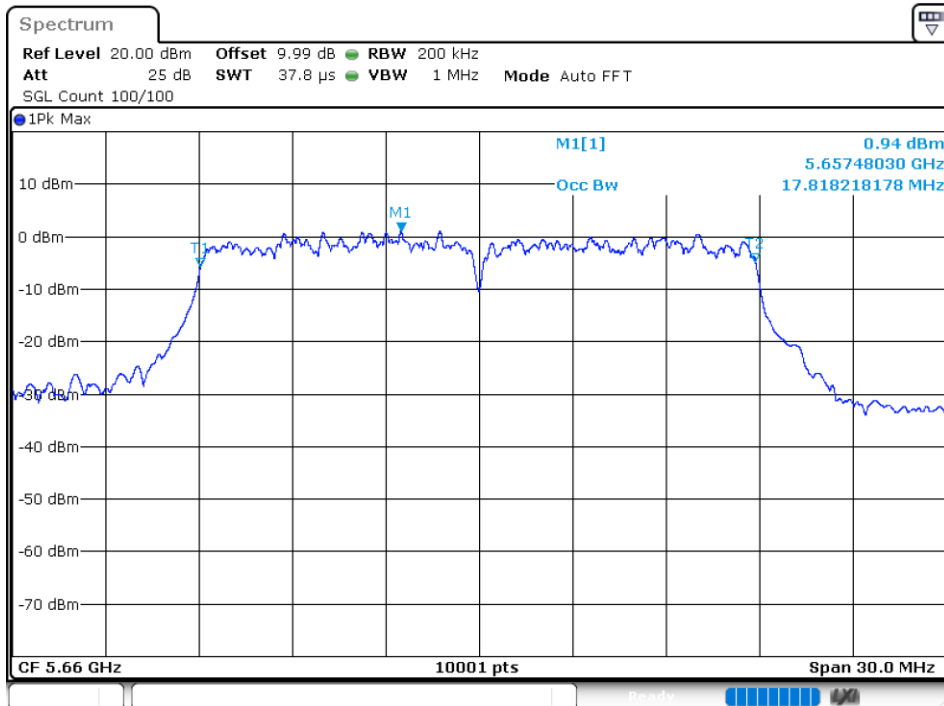


OBW NVNT ac20 5700MHz Ant 1

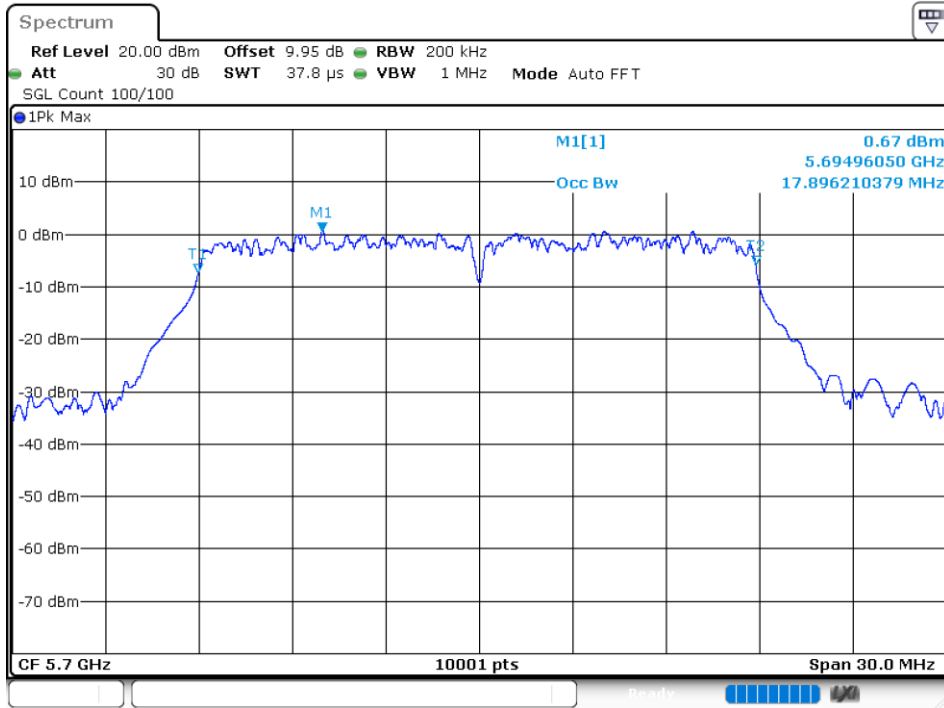


OBW NVNT ac20 5500MHz Ant 2

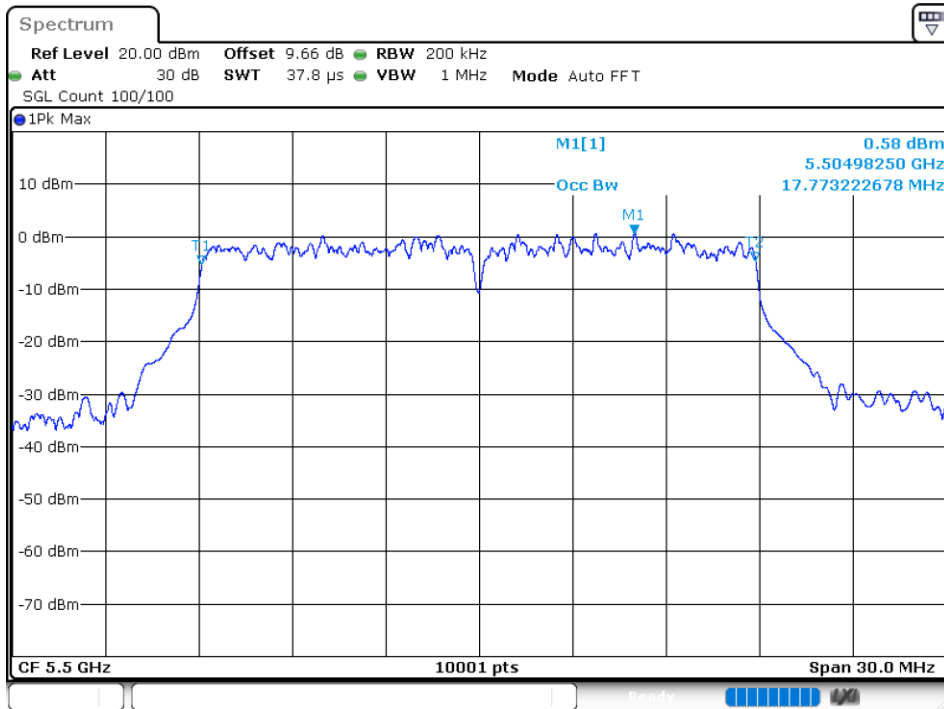


OBW NVNT ac20 5580MHz Ant 2

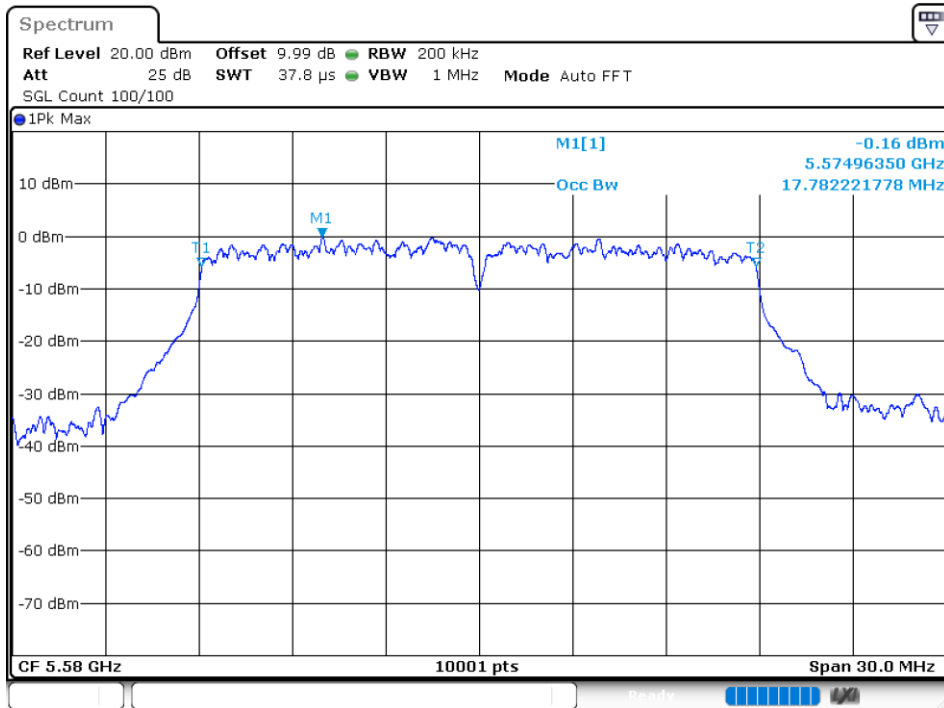


OBW NVNT ac20 5660MHz Ant 2

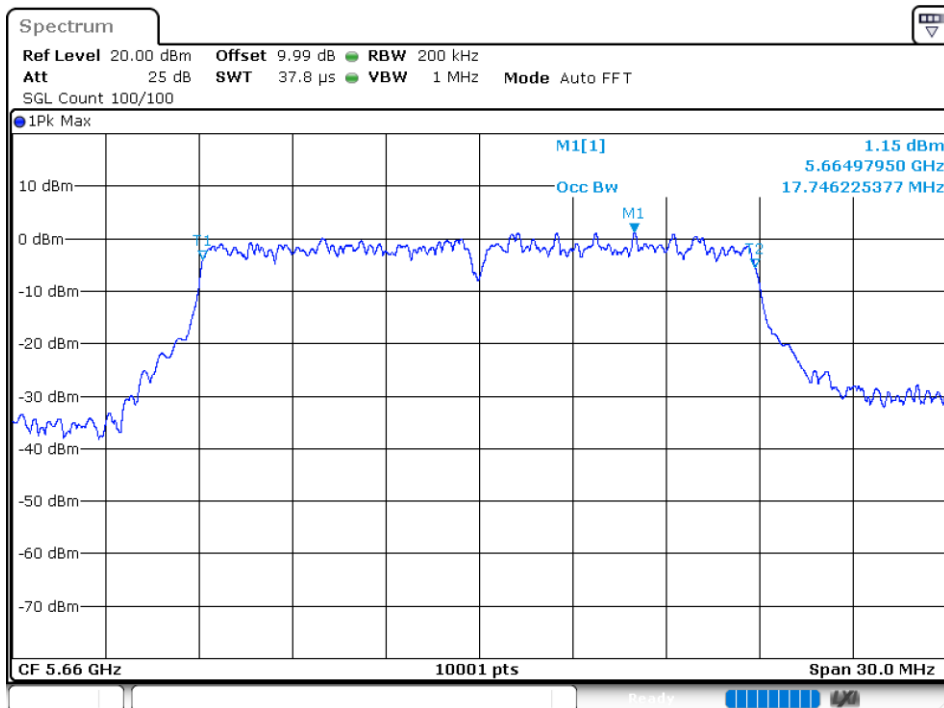


OBW NVNT ac20 5700MHz Ant 2

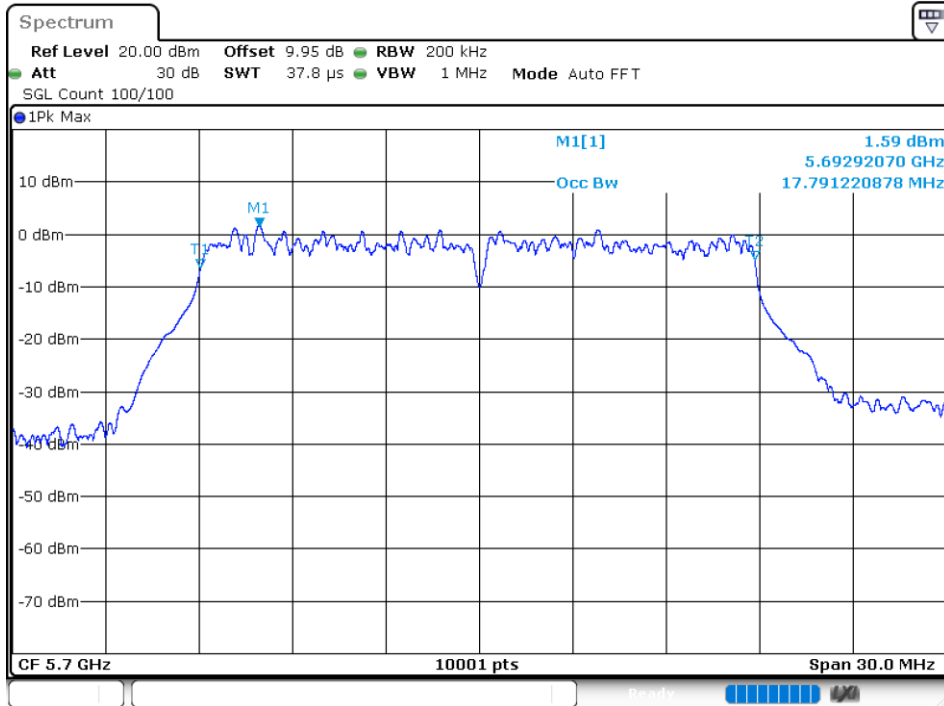


OBW NVNT ac40 5510MHz Ant 1

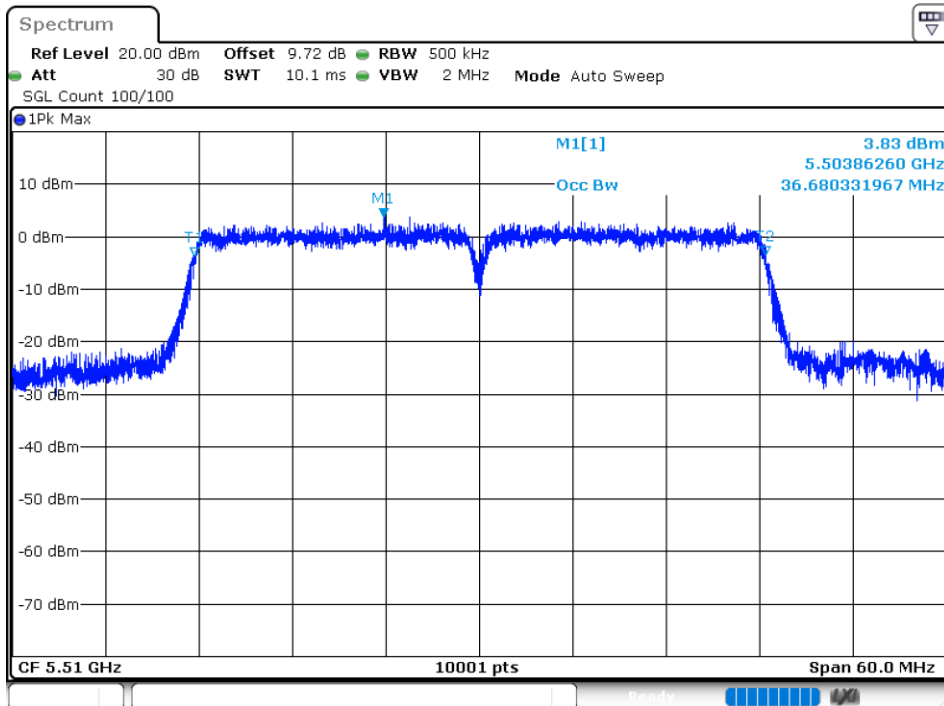


OBW NVNT ac40 5550MHz Ant 1

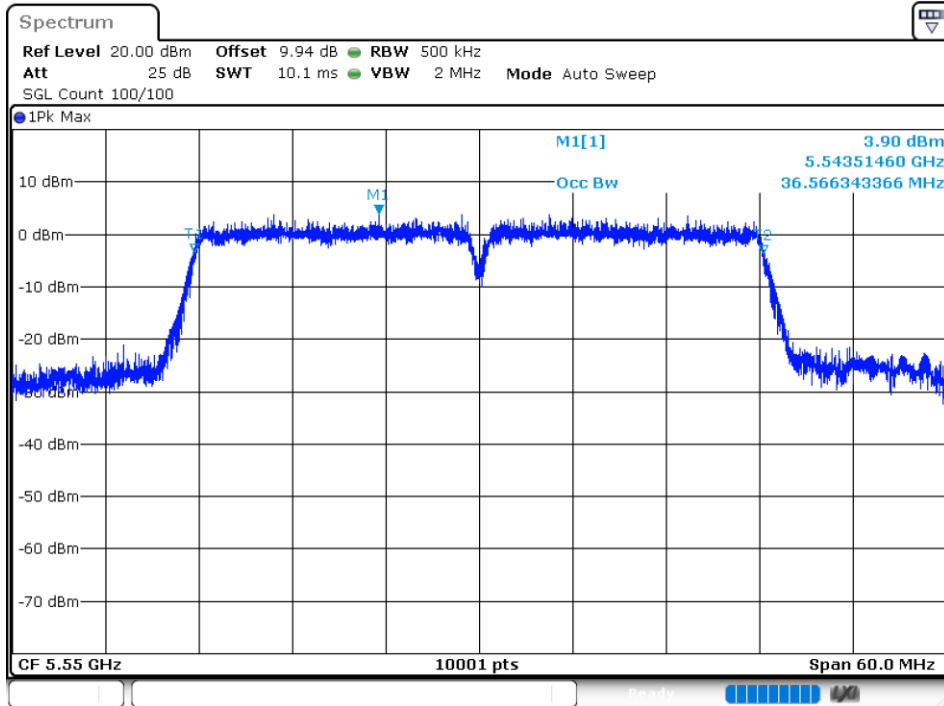


OBW NVNT ac40 5670MHz Ant 1

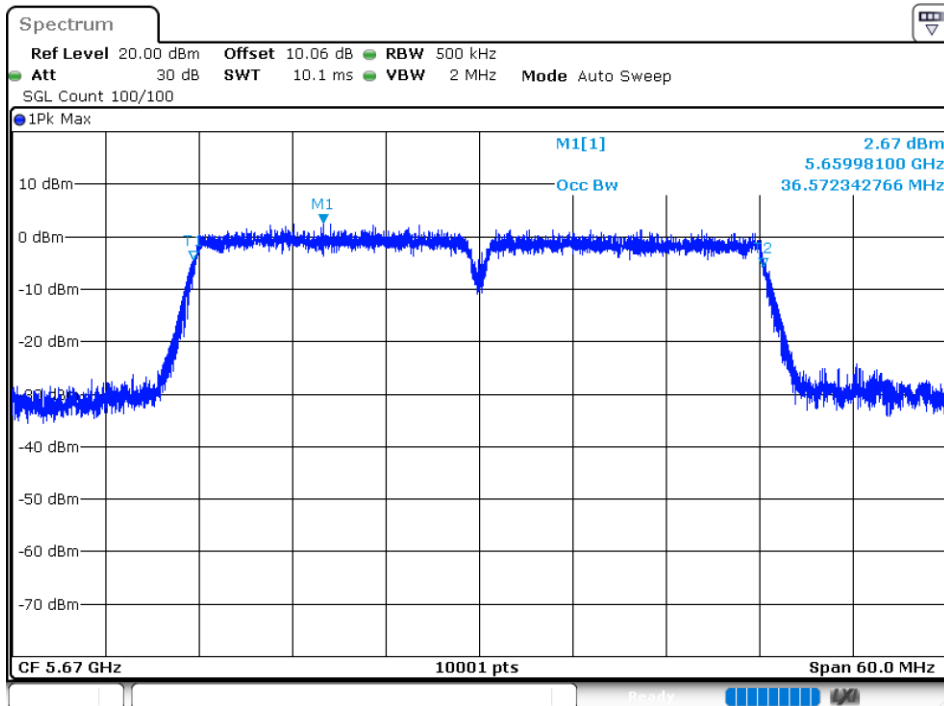


OBW NVNT ac40 5510MHz Ant 2

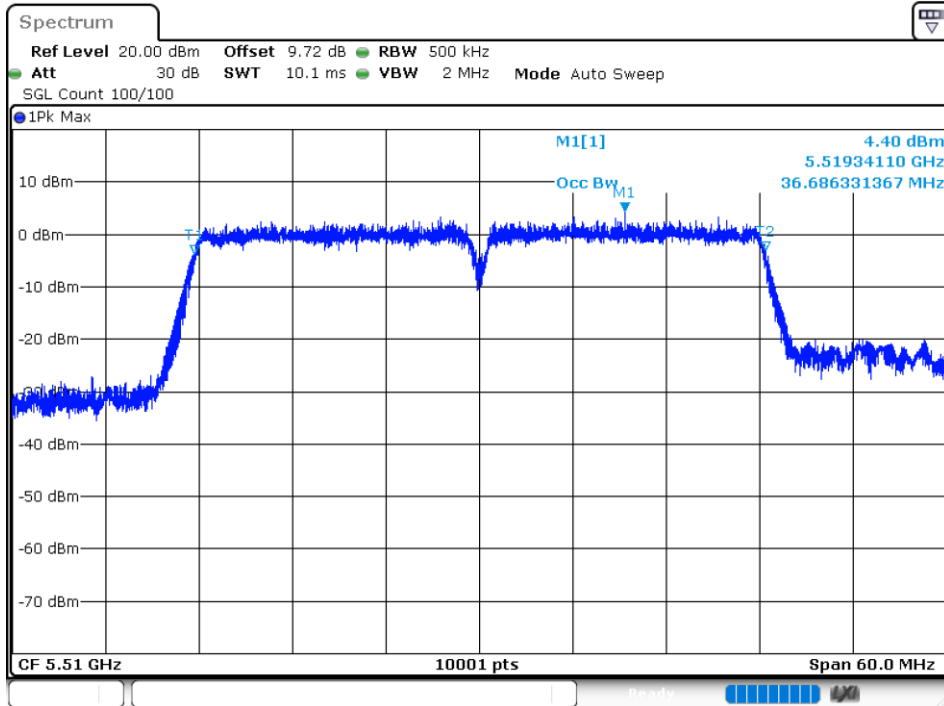


OBW NVNT ac40 5550MHz Ant 2

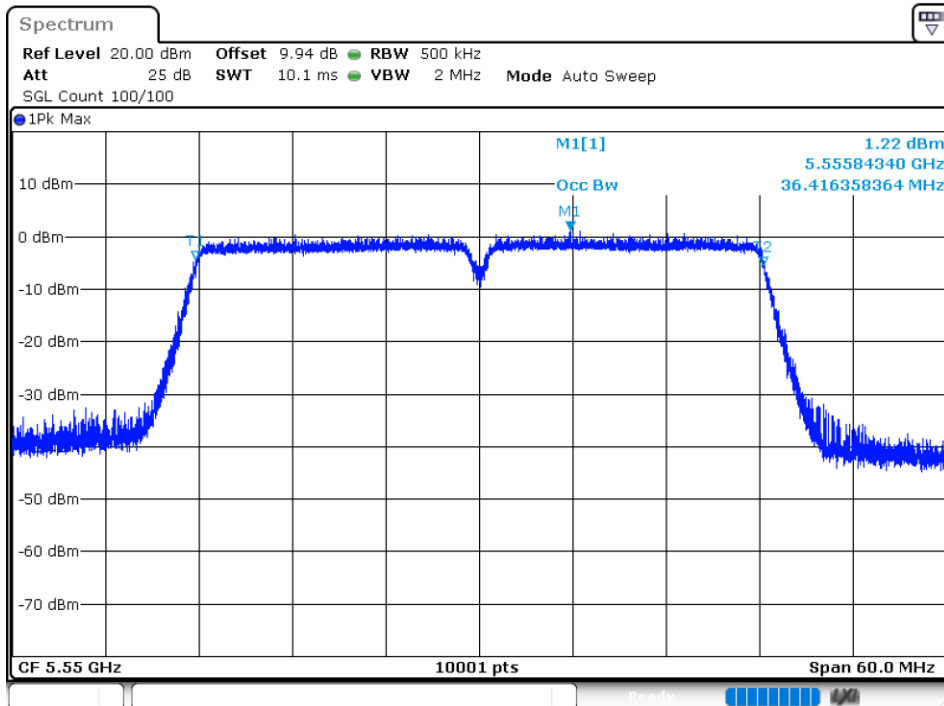


OBW NVNT ac40 5670MHz Ant 2

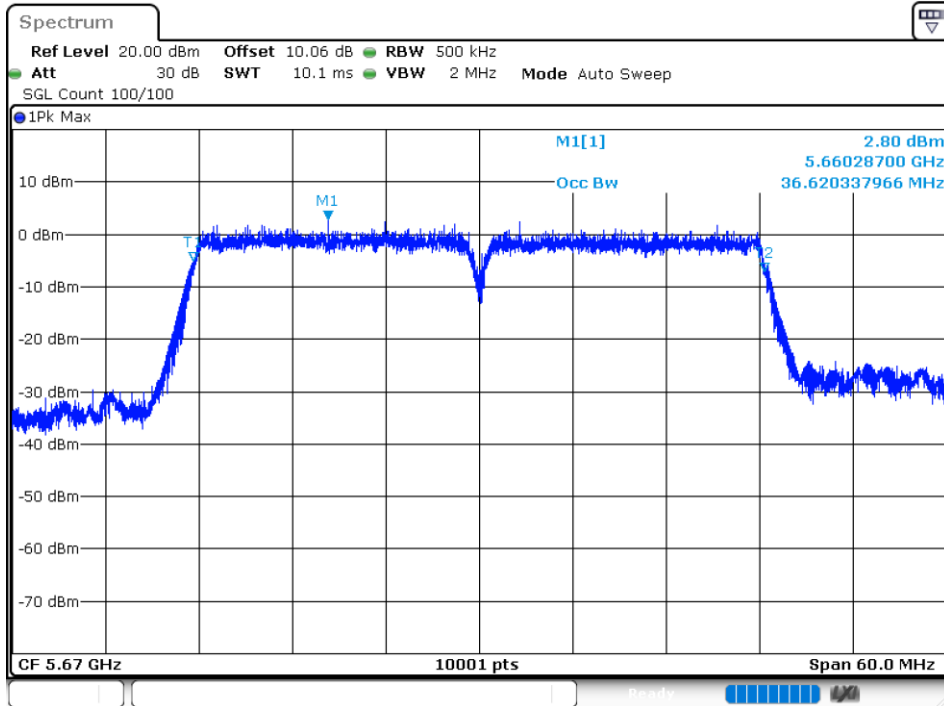


OBW NVNT ac80 5530MHz Ant 1

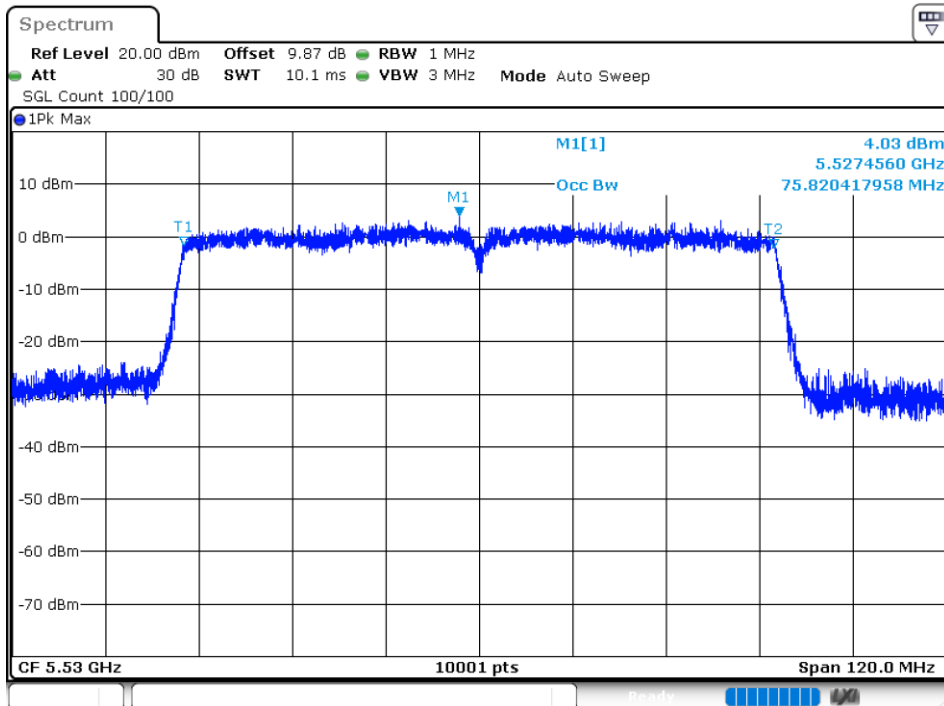


OBW NVNT ac80 5530MHz Ant 2

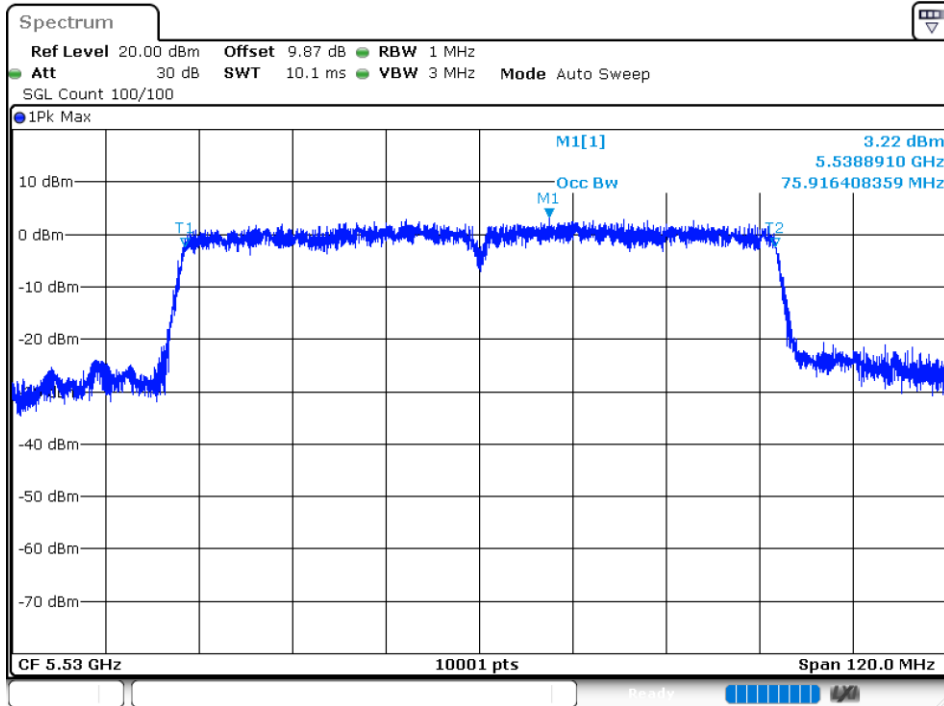


OBW NVNT ax20 5500MHz Ant 1

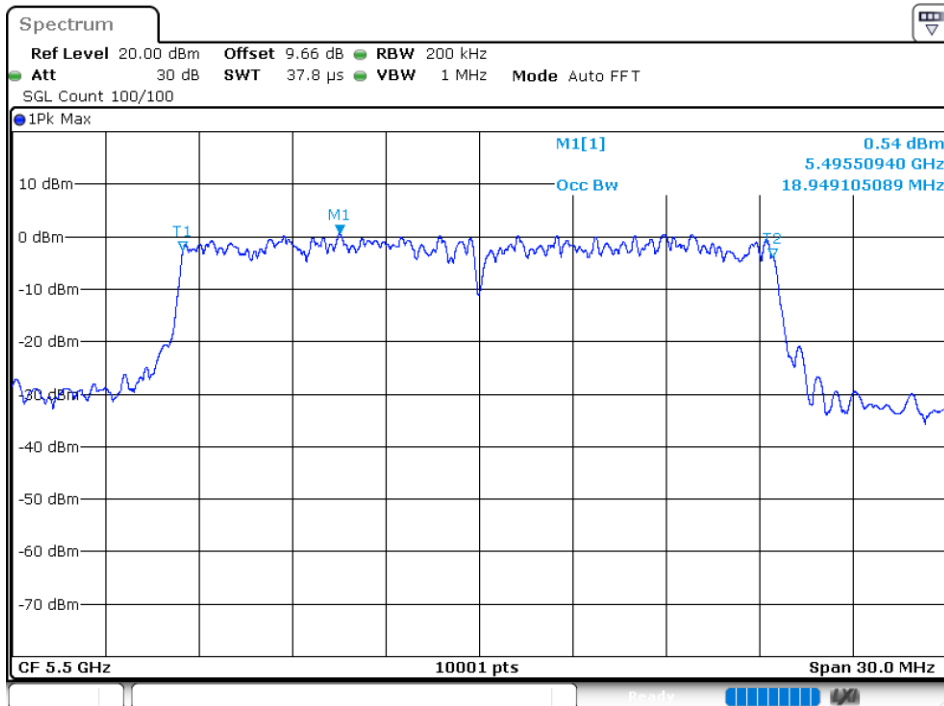


OBW NVNT ax20 5580MHz Ant 1

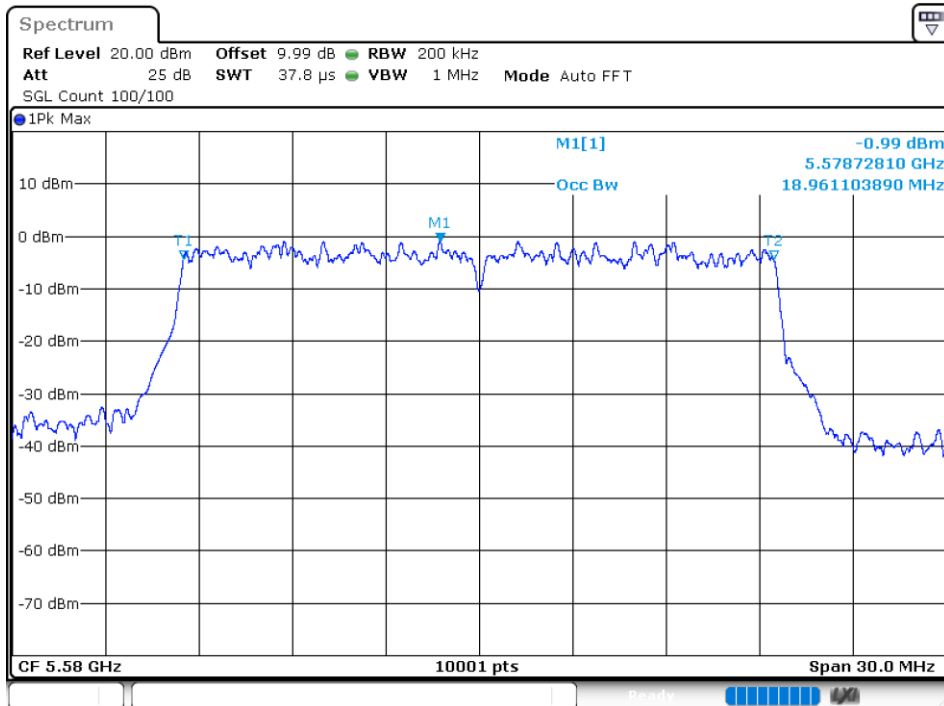


OBW NVNT ax20 5660MHz Ant 1

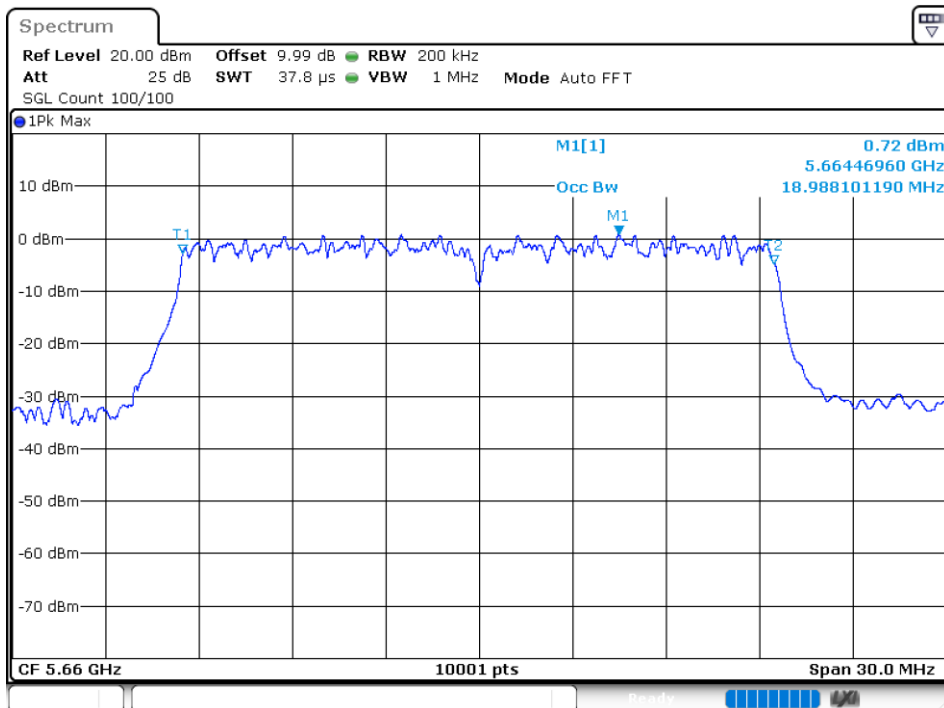


OBW NVNT ax20 5700MHz Ant 1

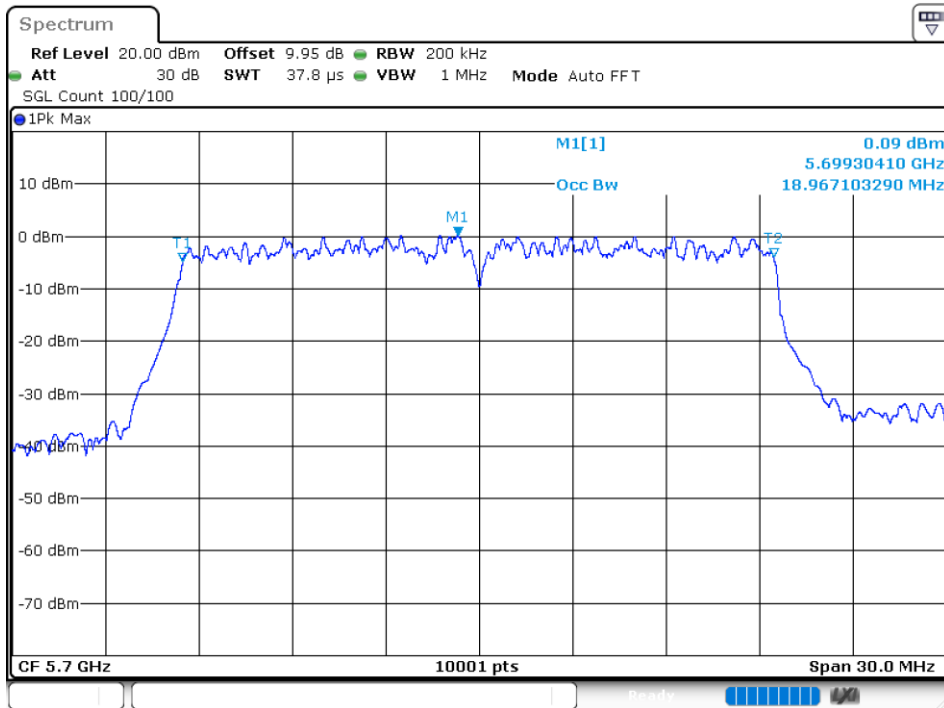


OBW NVNT ax20 5500MHz Ant 2

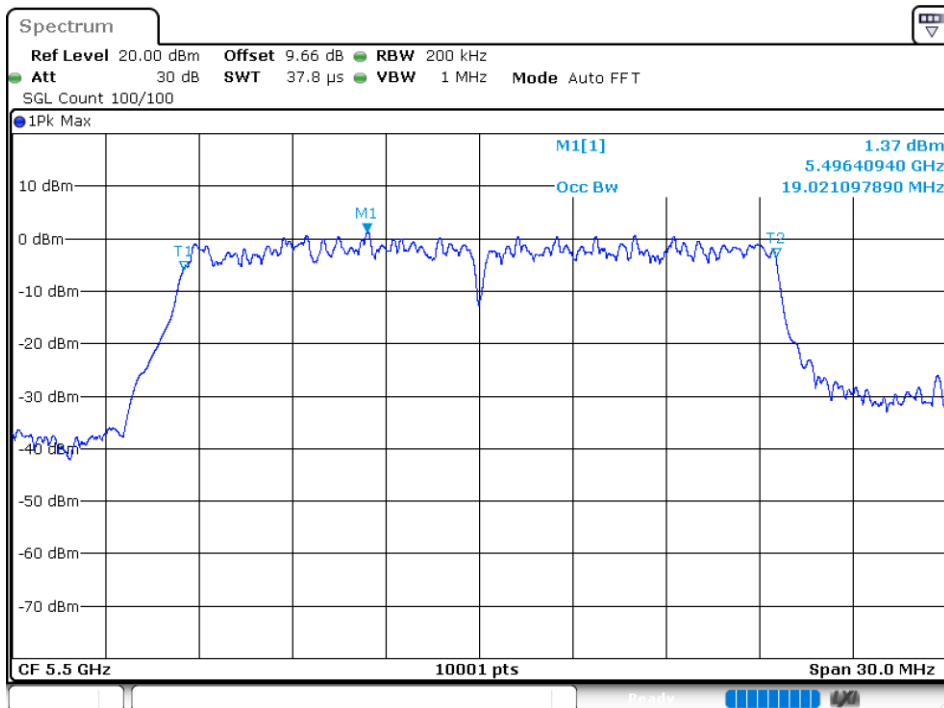


OBW NVNT ax20 5580MHz Ant 2

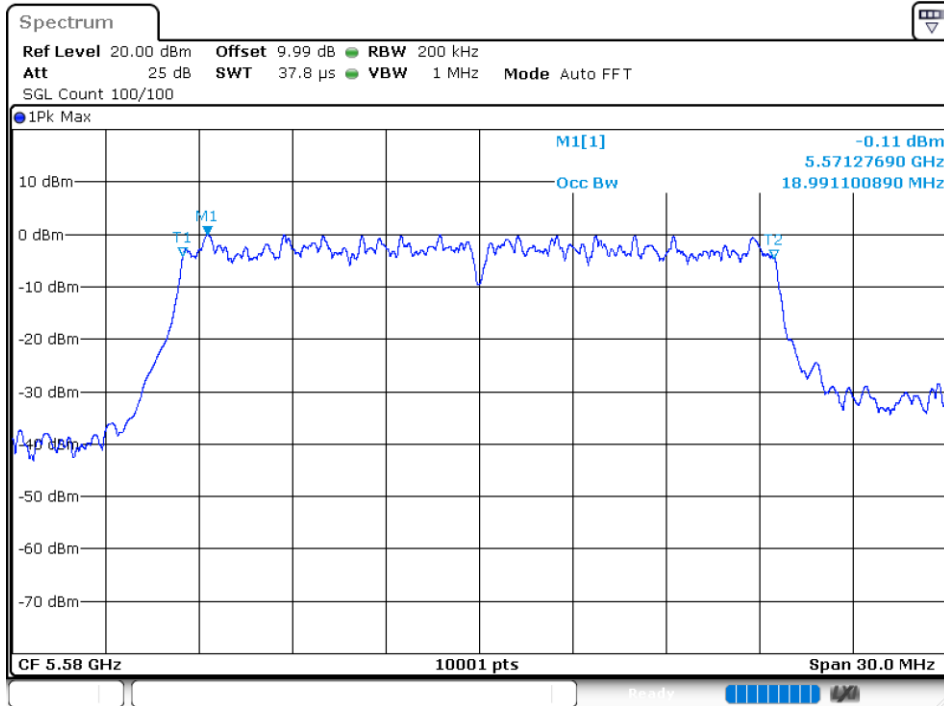


OBW NVNT ax20 5660MHz Ant 2

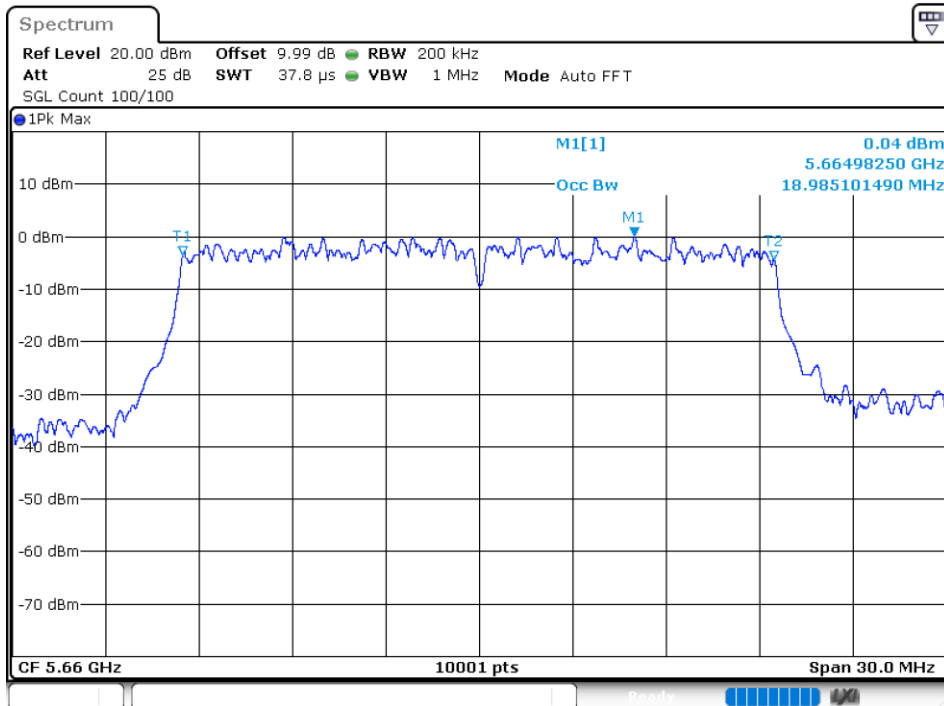


OBW NVNT ax20 5700MHz Ant 2

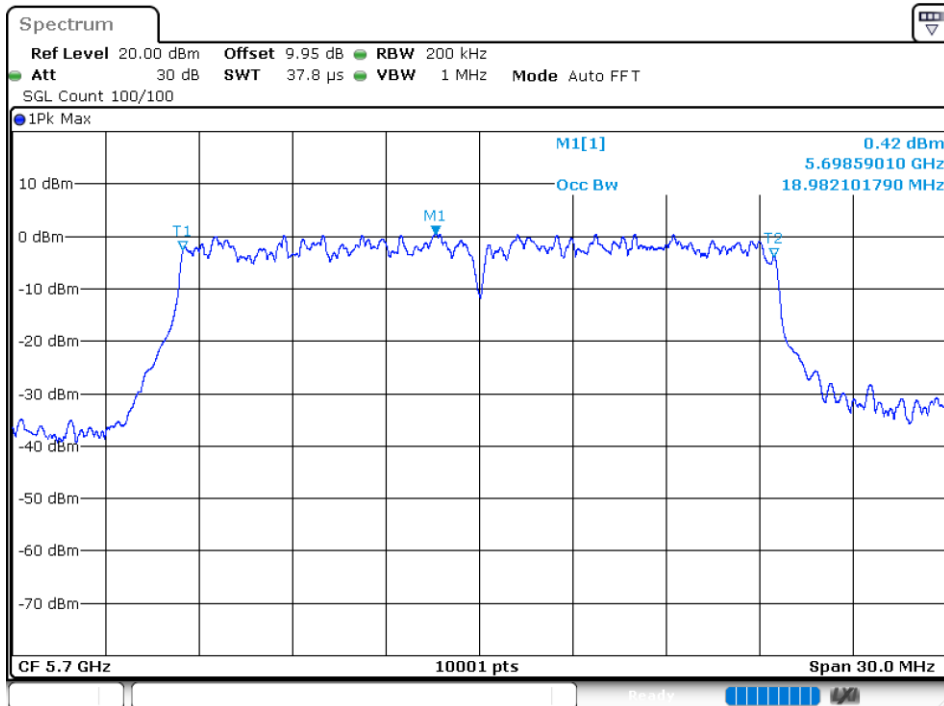


OBW NVNT ax40 5510MHz Ant 1

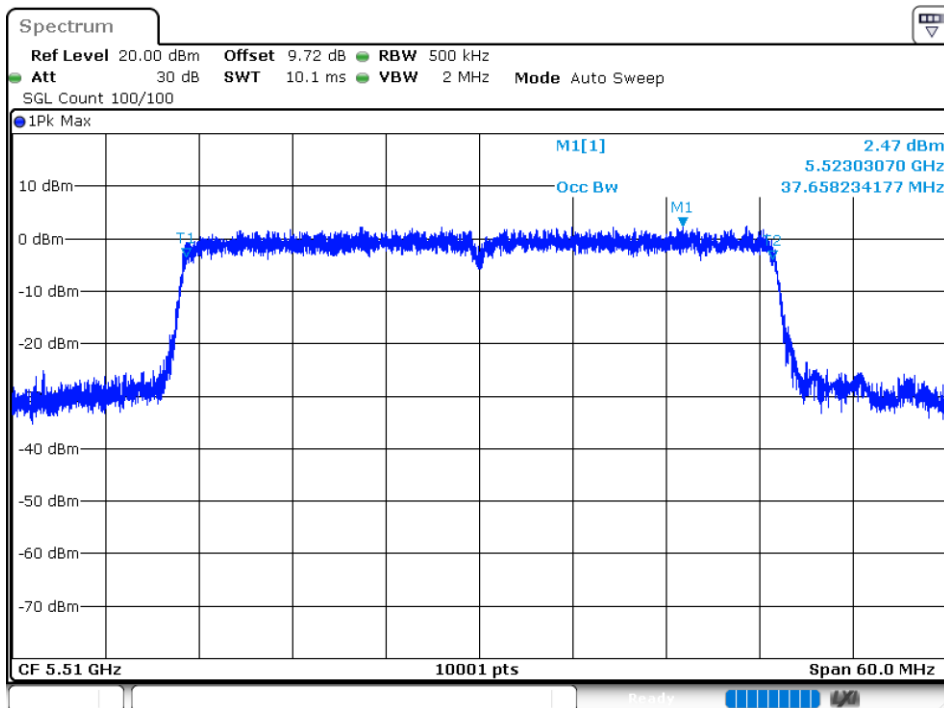


OBW NVNT ax40 5550MHz Ant 1

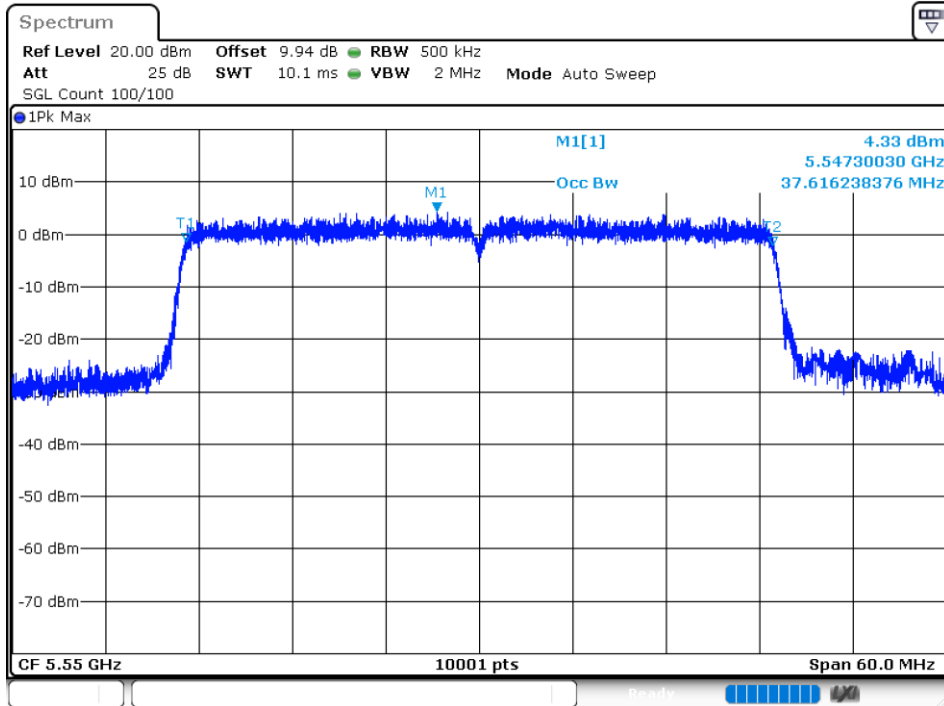


OBW NVNT ax40 5670MHz Ant 1

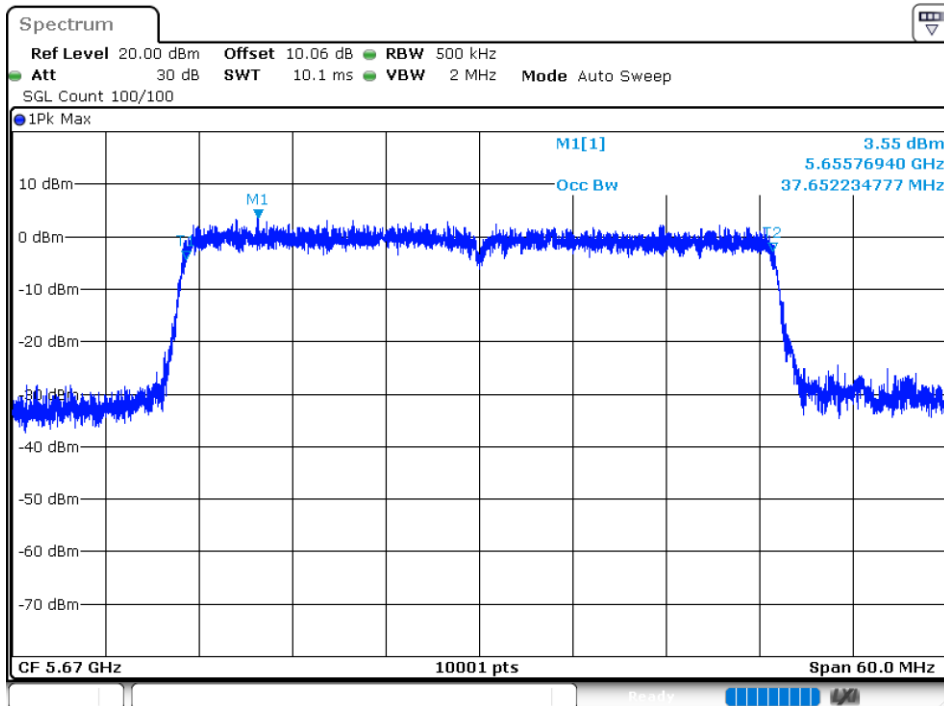


OBW NVNT ax40 5510MHz Ant 2

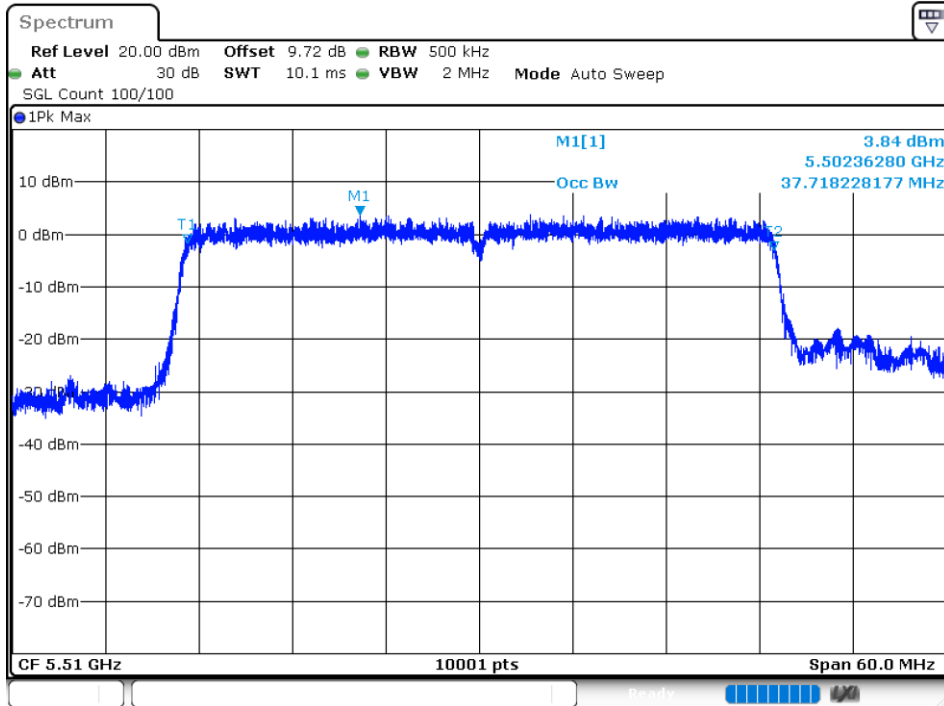


OBW NVNT ax40 5550MHz Ant 2

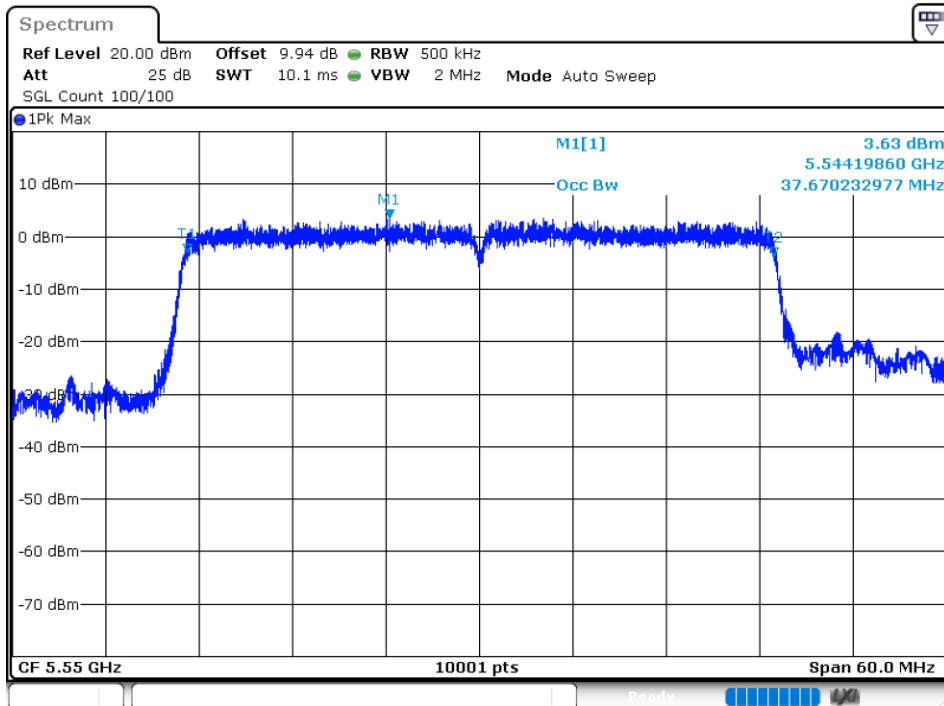


OBW NVNT ax40 5670MHz Ant 2

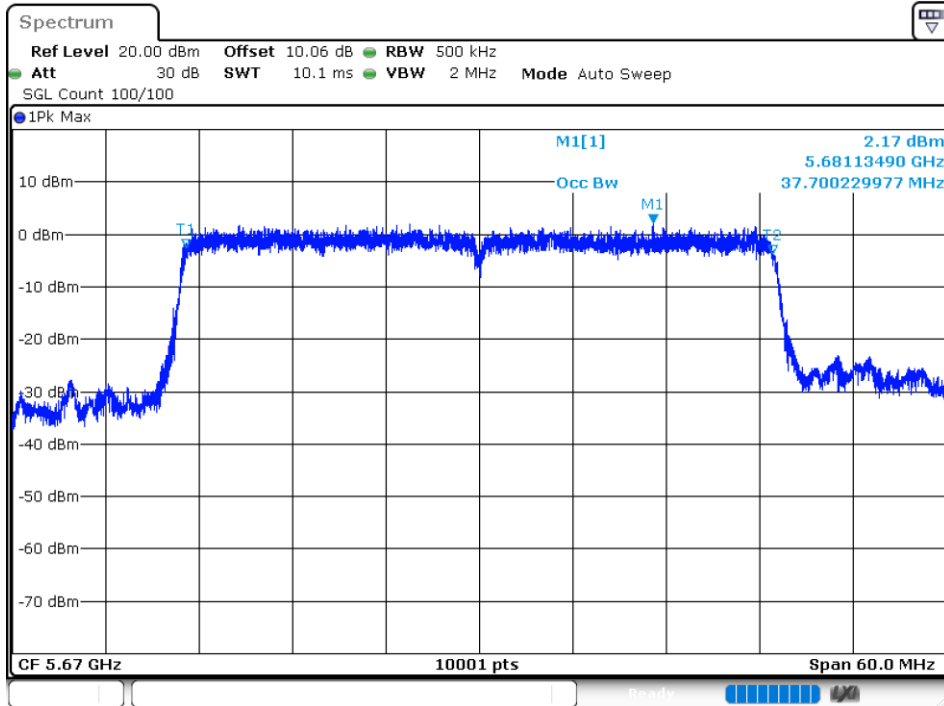


OBW NVNT ax80 5530MHz Ant 1

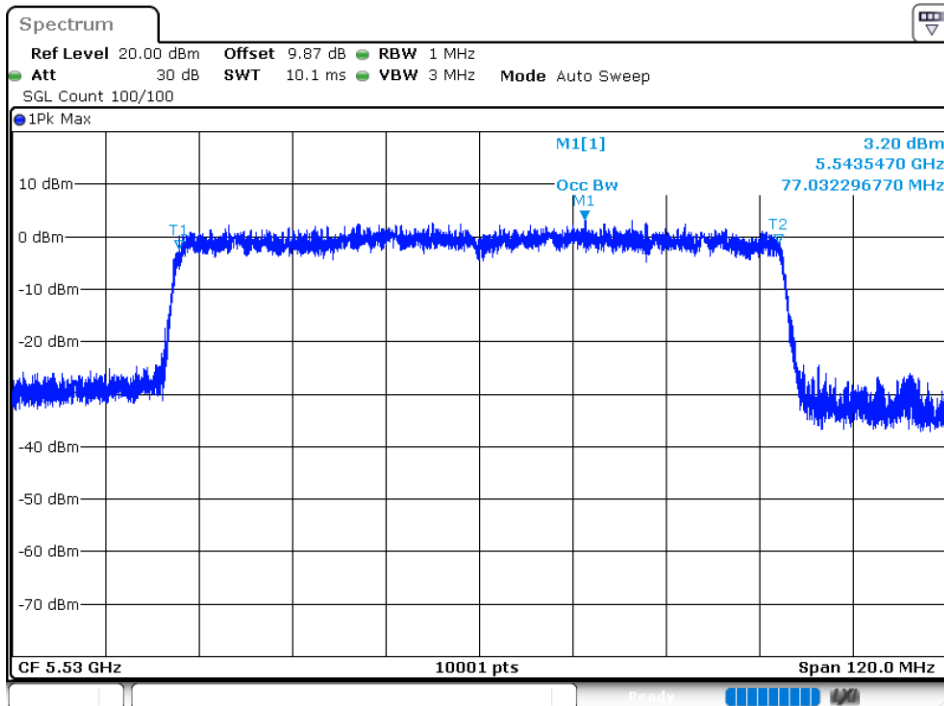


OBW NVNT ax80 5530MHz Ant 2

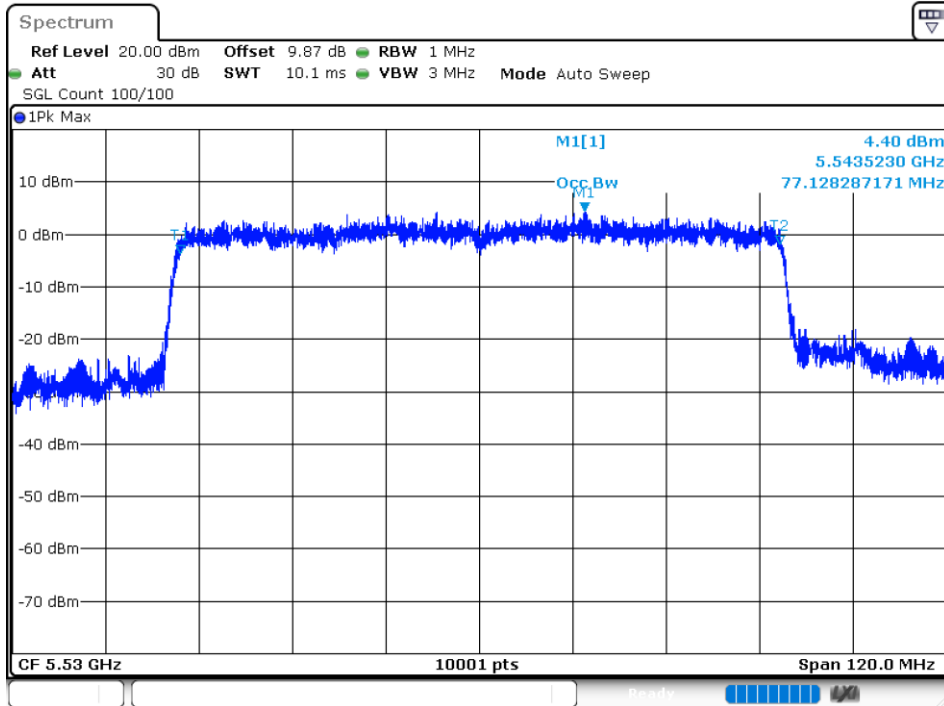


OBW NVNT n20 5500MHz Ant 1

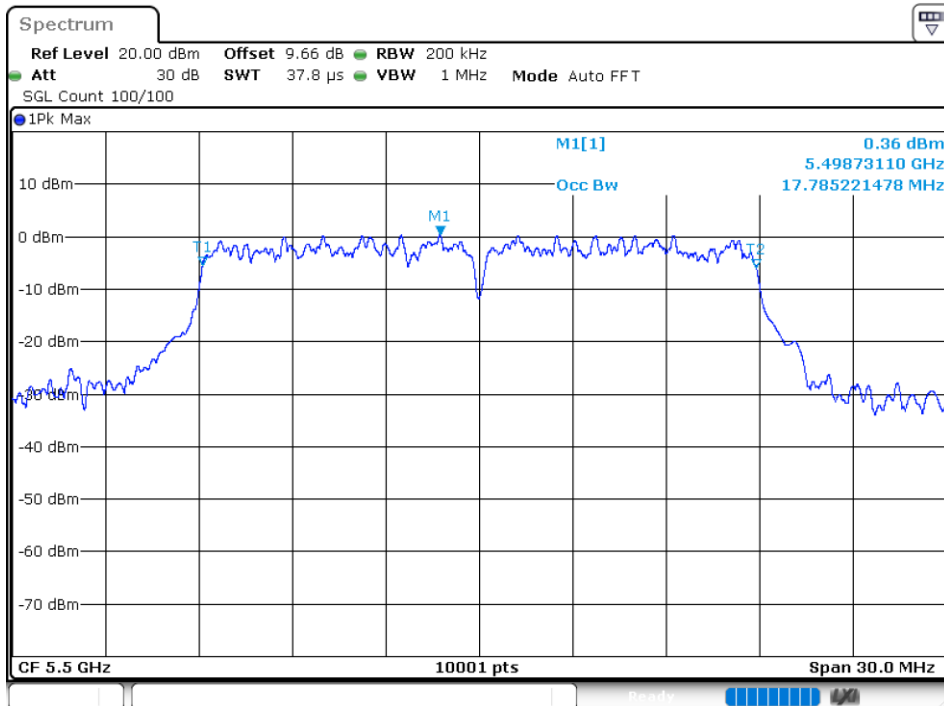


OBW NVNT n20 5580MHz Ant 1

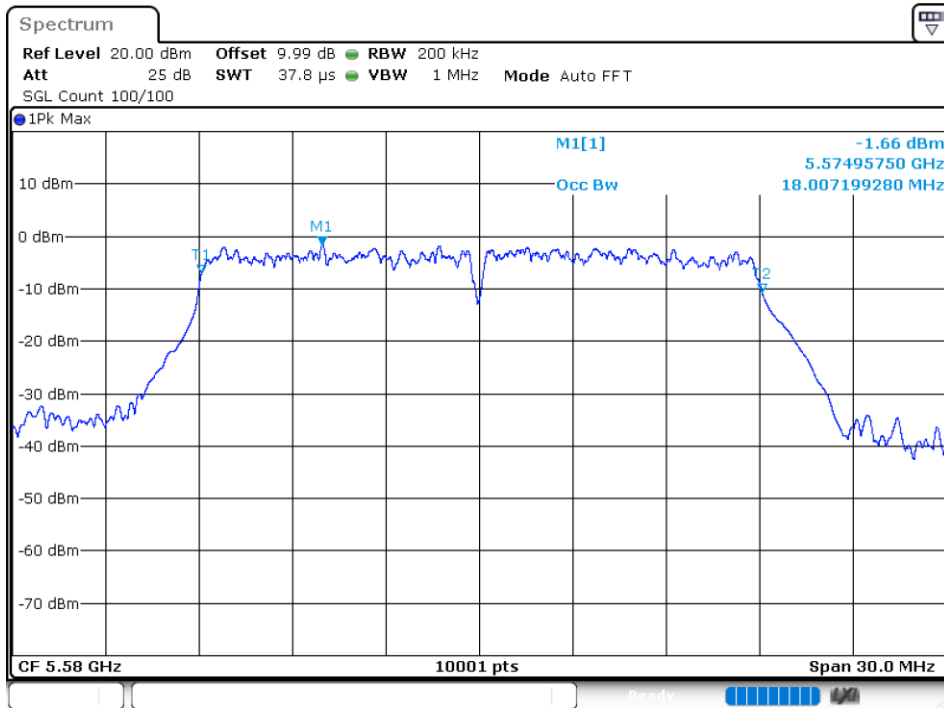


OBW NVNT n20 5660MHz Ant 1

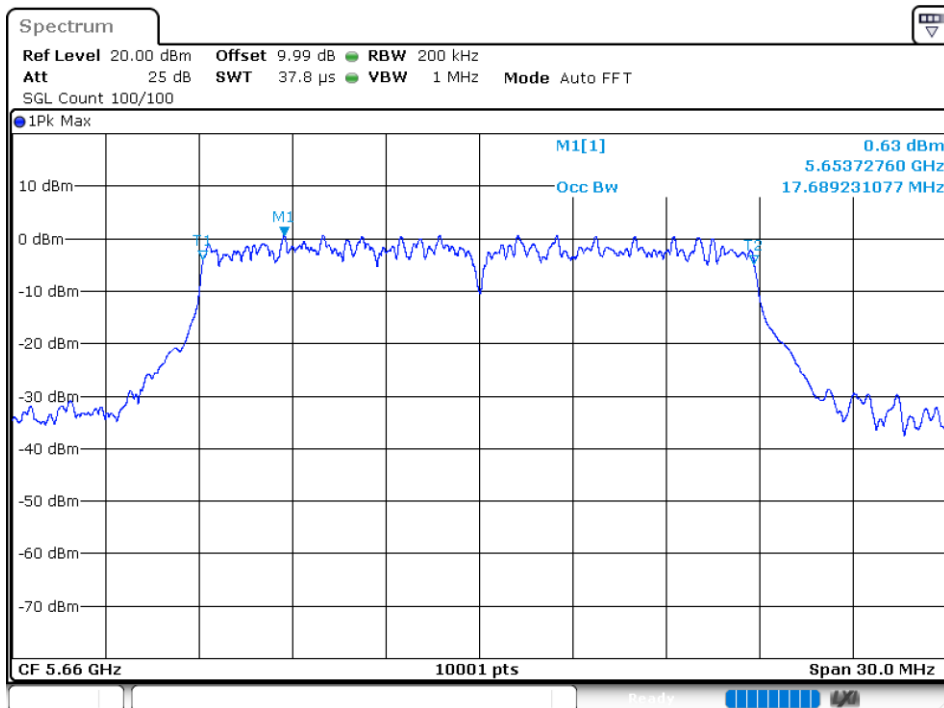


OBW NVNT n20 5700MHz Ant 1

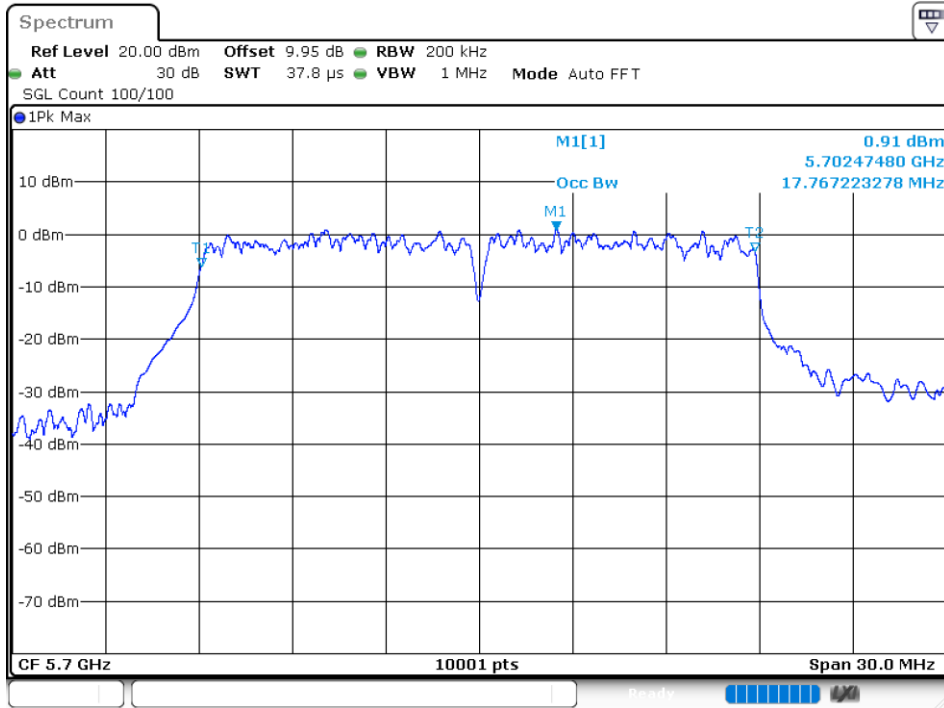


OBW NVNT n20 5500MHz Ant 2

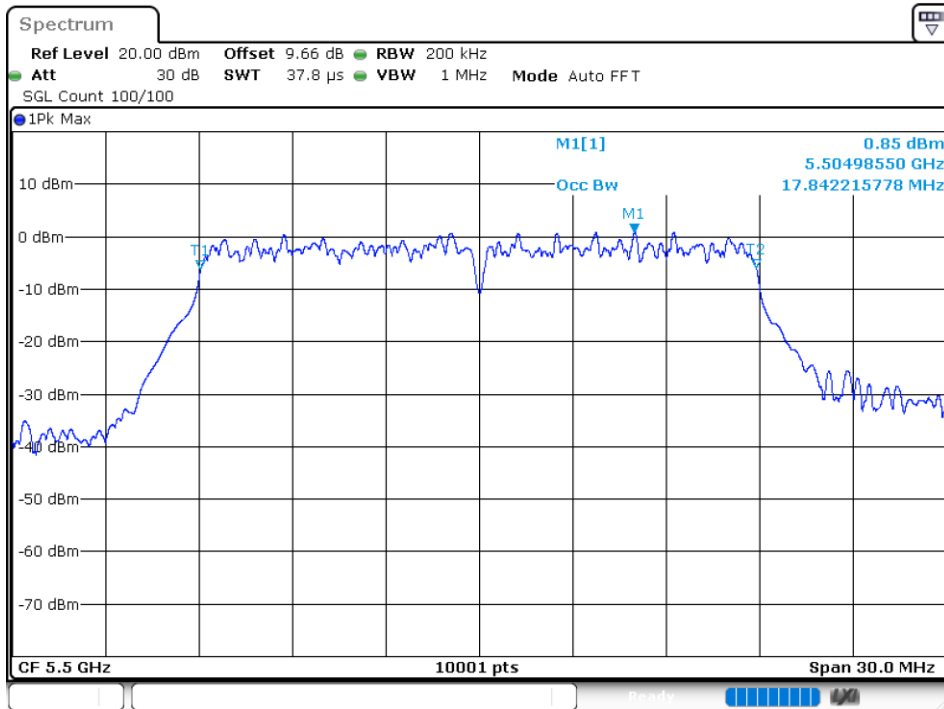


OBW NVNT n20 5580MHz Ant 2

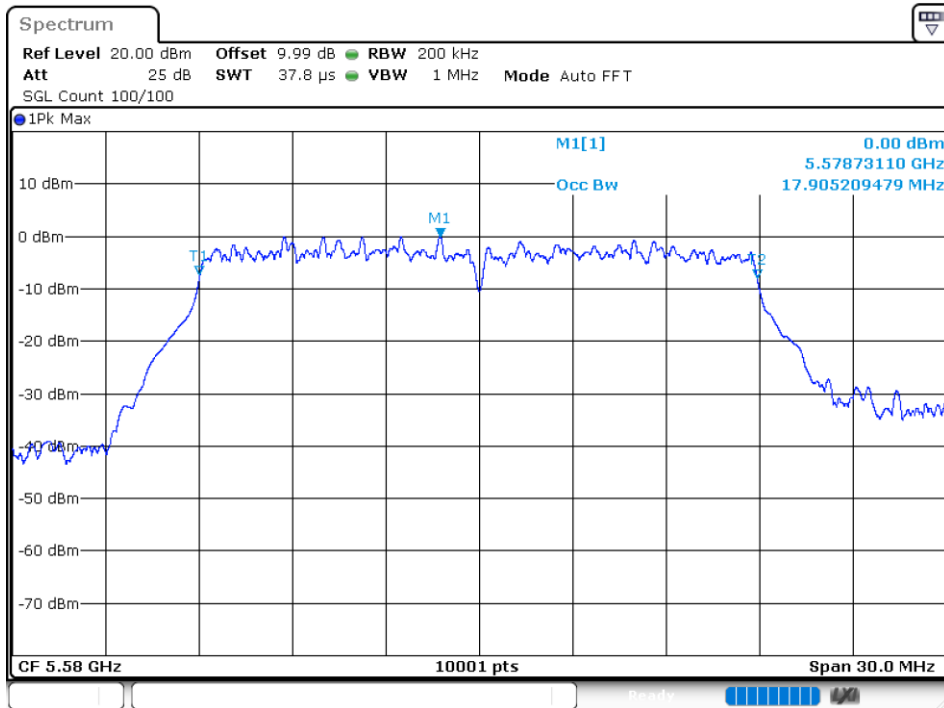


OBW NVNT n20 5660MHz Ant 2

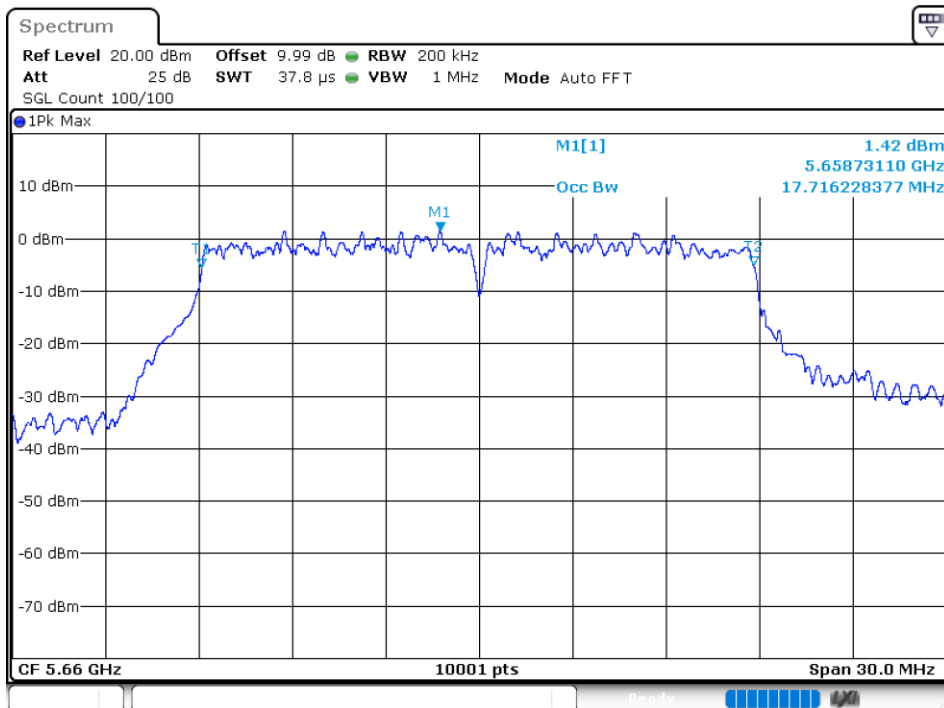


OBW NVNT n20 5700MHz Ant 2

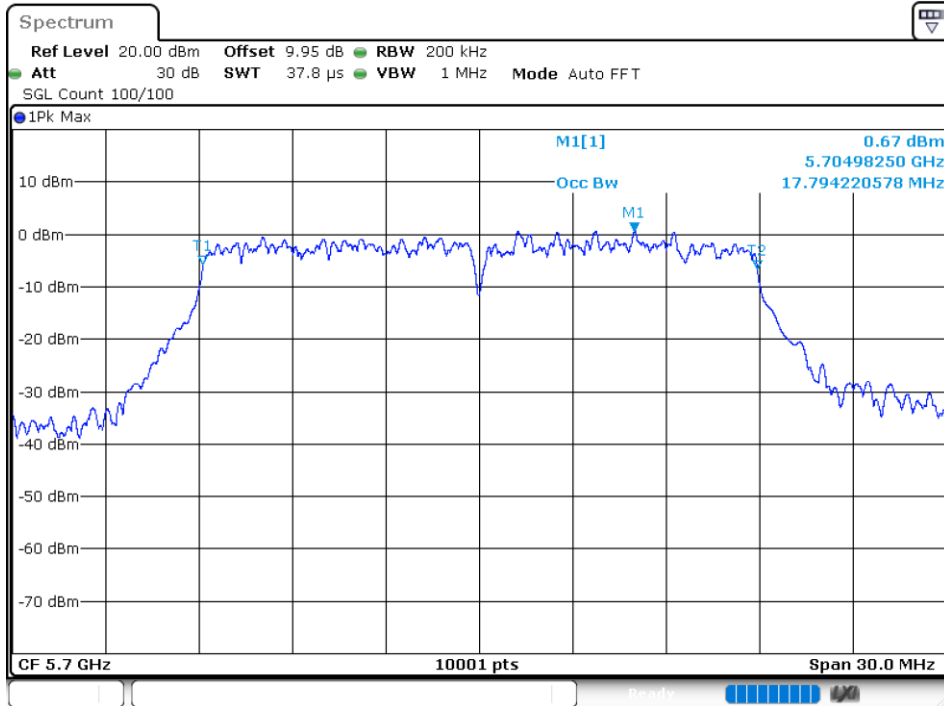


OBW NVNT n40 5510MHz Ant 1

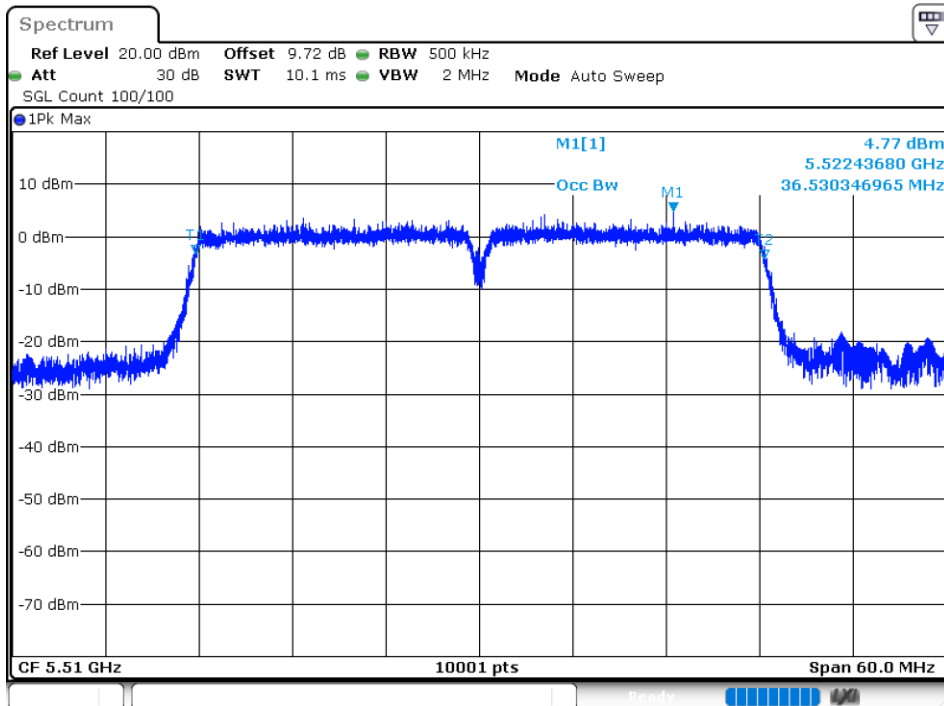


OBW NVNT n40 5550MHz Ant 1

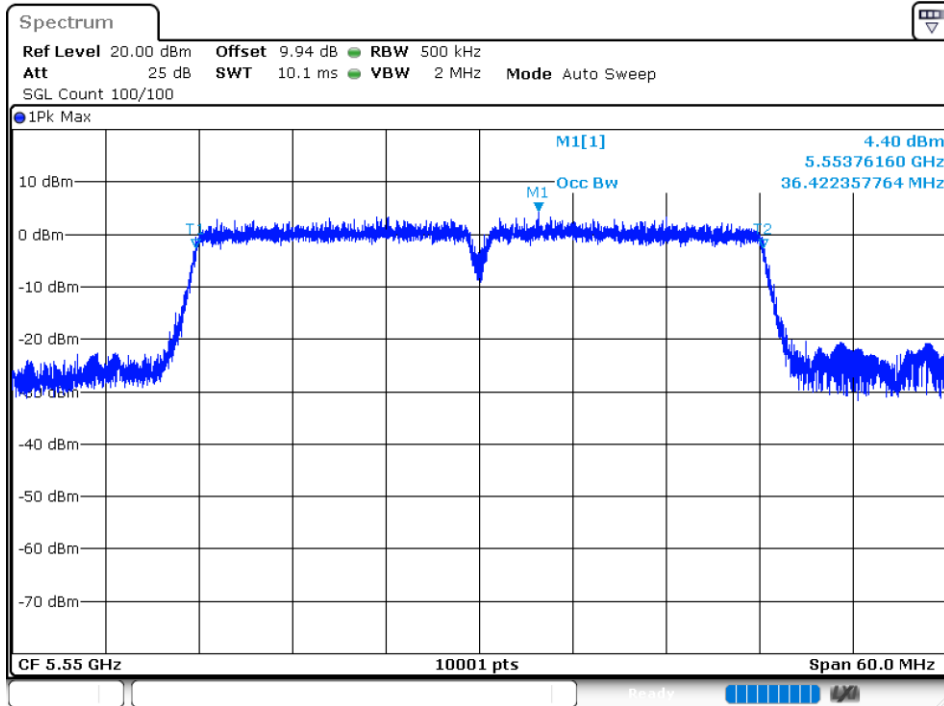


OBW NVNT n40 5670MHz Ant 1

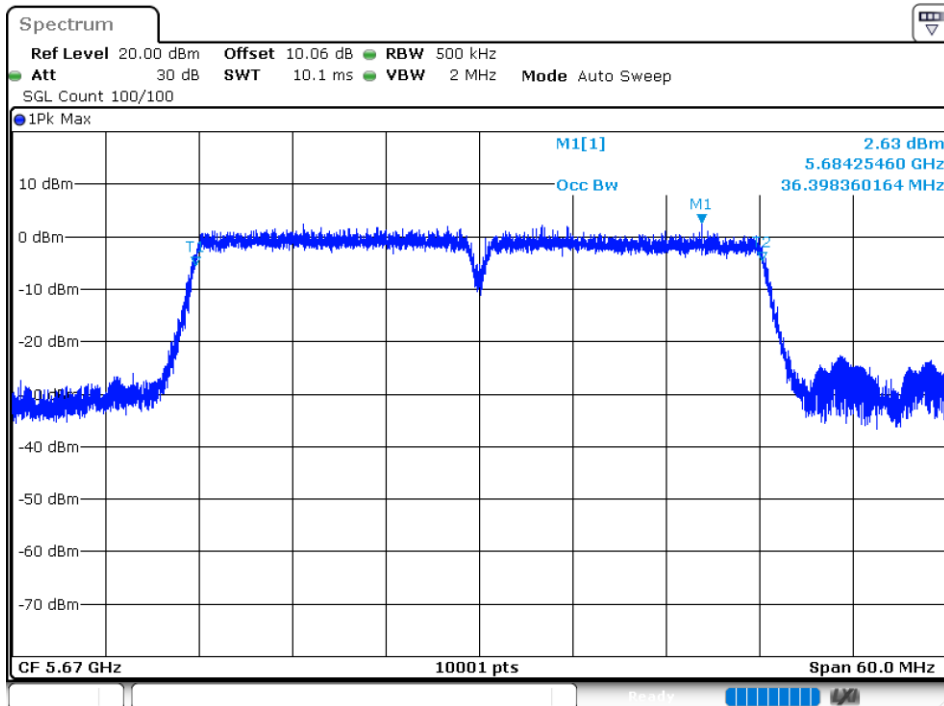

OBW NVNT n40 5510MHz Ant 2

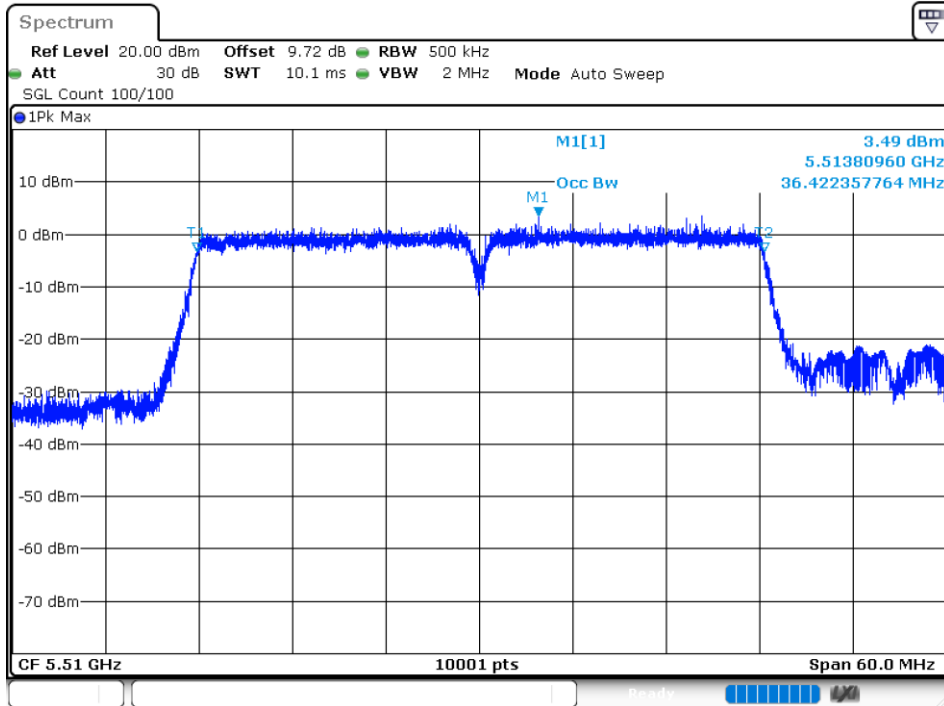

OBW NVNT n40 5550MHz Ant 2

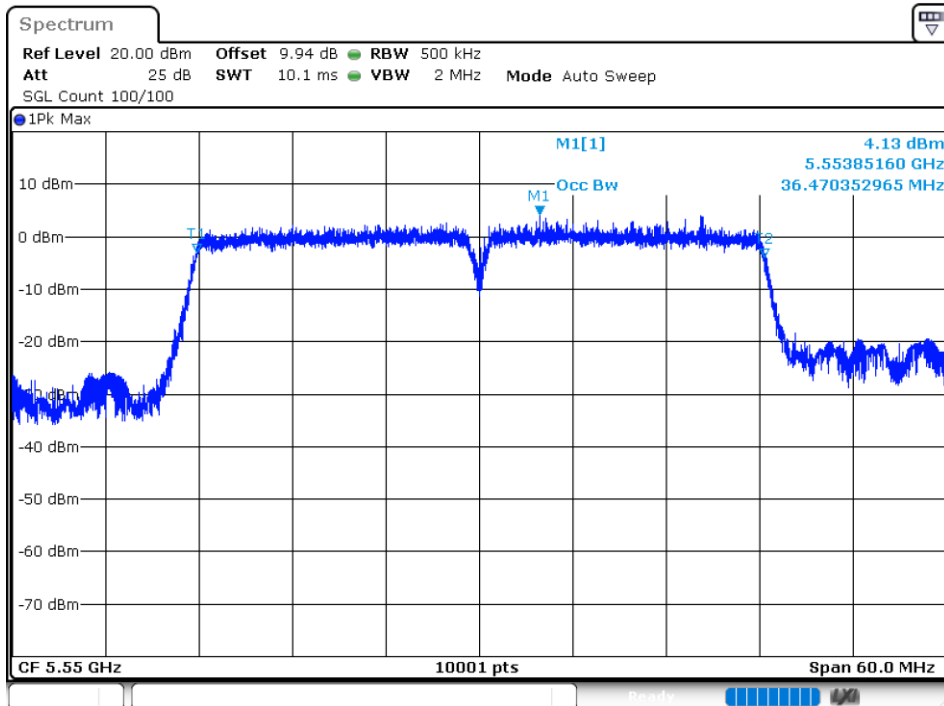

OBW NVNT n40 5670MHz Ant 2

