


Owner's Manual

Infrared Forehead Thermometer

Model **DET-3012b**

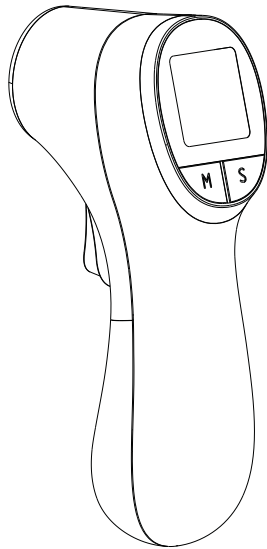

Document No.: JDET-1204-005
Article No.: 003
Version: Z
Date of Issue: 2020-12

Contents

Introduction	02
Product Description	03
LCD Display Introduction	04
Basic Functions	05
Forehead Thermometer Advantages	06
Real Time Clock Setting	07
Temperature Taking Hints	09
Illustration For Use	12
Memory Mode	16
Care And Cleaning	17
Battery Replacement	18
Specifications	19
Troubleshooting	20
Calibration	22
Service	23
Warranty	24
FCC Information.....	25
Electromagnetic Compatibility Information	27

Introduction

The DET-3012b infrared forehead thermometer is specifically designed for safe use on the forehead. The Infrared Forehead Thermometer is a device capable of measuring people's body temperature by detecting the intensity of infrared light emitted from the forehead. It converts the measured heat into a temperature reading displayed on the LCD. The infrared forehead thermometer is intended for the intermittent measurement of human body temperature from the skin surface of forehead by people of all ages. When properly used, it will quickly assess your temperature in an accurate manner.




Please read all instructions carefully and thoroughly before using this product.

Warning:

1. There is no gender or age limitation for using infrared forehead thermometer.
2. Do not touch the temperature probe with hands.
3. Use of this Forehead thermometer is not intended as a substitute for consultation with your physician.
4. Do not allow children to take their temperatures unsupervised, some parts are small enough to be swallowed.
5. Never immerse this device in water or other liquids(not waterproof).
6. Do not modify this equipment without authorization of manufacturer.
7. Do not expose the thermometer to temperature extremes (below -25°C/-13°F or over 55°C/131°F) nor excessive humidity (>95%RH).
8. Keep the battery away from children.
9. Remove battery from the device when not in operation for a long time.


Product Description

1. Probe
2. Test Button
3. Memory Button
4. Setting Button
5. Battery Cover

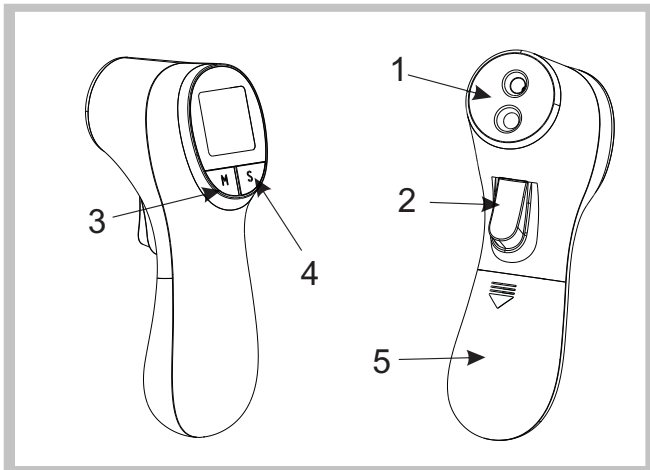

3

LCD Display Introduction

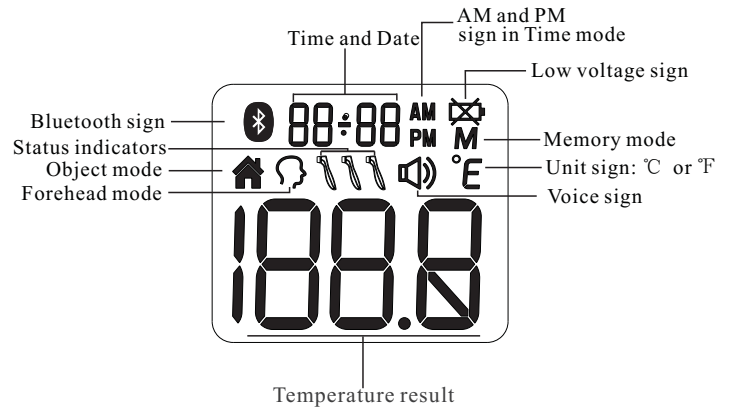

4

Basic Functions

Real Time Clock	The real time clock will be recorded with the memory function and help you to recognize each measurement result. → Please see the Real time clock setting section to learn how to setup the time in the first use.
Forehead Mode	The thermometer has been designed for practical use. It's not meant to replace a visit to the doctor. Please also remember to compare the measurement result to your regular body temperature. → Please see the Illustration For Use section to learn how to measure the body temperature.
Object Mode	The object mode shows the actual, unadjusted surface temperatures, which is different from the body temperature. It can help you to monitor if the object temperature is suitable for the baby or patient, for example the baby's milk. → Please see the Illustration For Use section to learn how to measure the object temperature.
Memory Mode	There are each 30 sets memories for forehead and object measurements. Each memory also records the measurement date/time/mode icon.
°C/ °F Switch	Please see the Selecting A Temperature Scale section to learn how to change between Celsius and Fahrenheit.
Distance Detection	If the object is too far away from the probe, the temperature will not be measured until the probe is moved within the measured range.
Voice	The thermometer will broadcast the result after finishing measurement.
Bluetooth sign	If the APP is successfully connected to the machine, the Bluetooth sign will always be on, otherwise it will keep flashing.

5

Forehead Thermometer Advantages

Infrared Forehead Thermometer measures core body temperature, which is the temperature of a body's vital organs. (See Figure 1) This thermometer is designed to measure the temperature of the skin surface over the temporal artery, a major artery of the head. The temporal artery is connected to the heart via the carotid artery, directly leading from the aorta, the main trunk of the arterial system. It offers constant blood flow. Therefore, body temperature changes are reflected sooner in the forehead than they are in other parts of the body such as oral, rectal and underarm.


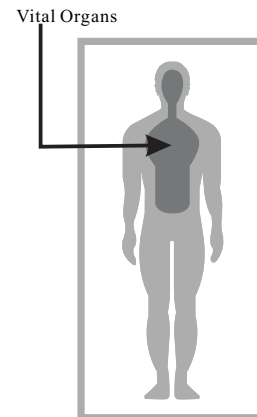


Figure 1


6

Real Time Clock Setting

When using thermometer for the first time, please set the parameters of the thermometer.

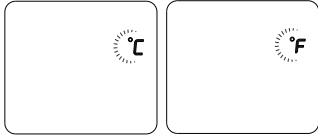

① Set the unit
Press *Memory Button* to select the unit you want.
After the unit is set, press *Setting Button*, the time format figure will appear.

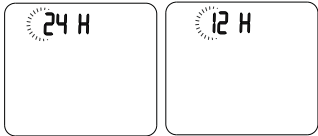

② Set the time format
The device can display the time in either an AM/PM (12-hour) or a 24:00 (24-hour) format. Press and release *Memory button* to select the format. With the preferred time format on the display, press *Setting Button*, the Hour figure is flashing automatically.




③ Set the hour
Press and release the *Memory Button* to advance one hour until the correct hour appears. After the hour is set, press *Setting Button*, the Minute figure is flashing automatically.

7


Real Time Clock Setting




④ Set the minute
Press and release the *Memory Button* to advance one minute until the correct minute appears. After the minute is set, press *Setting Button*, the Year figure is flashing automatically.

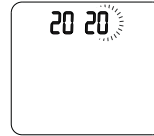

⑤ Set the year
Press and release the *Memory Button* to advance one year until the correct year appears. After the year is set, press *Setting Button*, the Month figure will appear.

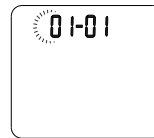

⑥ Set the month
Press and release the *Memory Button* to advance one month until the correct month appears. After the month is set, press *Setting Button*, the Date figure will appear.

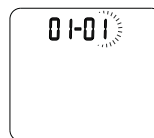

⑦ Set the date
Press and release the *Memory Button* to advance one day until the correct month appears. After the day is set, press *Setting Button*, the Language of voice figure will appear.

8

Temperature Taking Hints

To ensure that the reading always reflects the body temperature accurately, you need to take account of the following factors which may affect an accurate reading.

1. It is important to know each individual's normal temperature when they are well. This is the only way to accurately diagnose a fever. To determine normal temperature, take multiple readings when healthy. Re-measure with a standard digital thermometer for confirmation.
2. Users must be inside for 30 minutes before taking a measurement.
Note: Users and the thermometer should be in the same ambient temperature for at least 10 minutes before taking a reading.
3. Users should not drink, eat, or be physically active such as bathing, showering, shampooing and hair drying before/while taking the measurement. Remove hat and hair and wait 10 minutes before taking a reading.
4. Oils or cosmetics on the forehead may give a lower temperature reading than the actual one. Remove dirt from the forehead before taking a measurement. Wait at least 10 minutes after washing the forehead area before taking a reading.

9

Temperature Taking Hints

5. Holding a hand on the forehead for any length of time will affect the temperature reading.
6. Do not take temperature over scar tissue, open sores or abrasions.
7. Do not use the thermometer on a perspiring or sweating forehead, as this may affect the reading.
8. Don't take a measurement while or immediately after nursing a baby.
9. Do not take temperatures with this thermometer near places that are very hot, such as fireplaces and stoves.
10. The probe window of the thermometer is the most delicate part of the device. Do not touch the probe window. The accuracy of the reading may be affected if the probe window is damaged or dirty.
11. If the thermometer is stored in a significantly different environment than testing location, place it in the testing location for approximately 30 minutes prior to use.
12. It is not intended for use in the oxygen rich environment and presence of flammable anesthetic mixture with air, oxygen or nitrous oxide.

10

Illustration For Use

► To measure forehead temperature:

1. Press the *Test Button*, The display is activated to show all segments. After self-checking Figure 2 appears on the display with voice, so you can start a new measurement.
2. Aim the thermometer at the center of the forehead with a distance less than 5cm (See figure 3) and then press the *Test Button*.

Note: Do not remove the thermometer from the forehead before hearing voice.

Note2: If the object to be tested is too far from the probe, a prompt will appear (See figure 4).

3. Read the temperature on the display.
4. Press and hold *Test Button* to turn off.



Figure 2



Figure 3



Figure 4

11

Illustration For Use

► How to change the forehead mode and object mode:

You can press and hold *Setting Button* to switch the mode between Forehead mode and Object mode.

► To measure object temperature:

1. Press the *Test Button* to turn on the thermometer, you can take the object temperature after hearing two beep sounds. (see figure 5)
2. Aim the thermometer at the center of the object you want to measure with a distance less than 5cm.
3. Press the *Test Button* and then read the temperature on the display.
4. Press and hold *Test Button* to turn off.

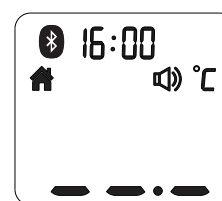


Figure 5

12

Illustration For Use

► After measurement:

1. Power off: Device will automatically shut off if left idle for more than 1 minute to extend battery life.
2. Clean the probe after each use to ensure an accurate reading and avoid cross contamination.
(See the section of Care and Cleaning for details.)

► BackLight:

In Forehead mode:

1. The display will be lighted GREEN for 3 seconds with a happy face 😊 when the unit is ready for measurement and a measurement is completed with a reading less than 37.3°C (99.1°F).
2. The display will be lighted YELLOW for 3 seconds with a happy face 😊 when a measurement is completed with a reading less than 37.8°C (100.0°F).
3. The display will be lighted RED for 3 seconds with a bad face ☹ when a measurement is completed with a reading equal to or higher than 37.8°C (100.0°F).

In Object mode:

The display will only be lighted GREEN for 3 seconds when the unit is ready for measurement and a measurement is completed.

13

Illustration For Use

► Bluetooth requirements

The thermometer requires a bluetooth device with:

- . Bluetooth 4.0 or later
- . Android 6.0 or later
- . IOS 8.0 or later

And works with:

- . iPhone, iPod, iPad
- . Android Phones and Tablets

► Using for the first time

1. Download the "JoyHeath" App from Website or APP Store (Such as Apple Store).
2. Open the App on your phone or tablet. If requested, you should enable Bluetooth on your device. You can enable Bluetooth under the Settings menu on your smart phone or tablet.
3. Create a new user login, or login with your existing user name and password.
4. Selection device "Thermometer".

14

Illustration For Use

► Match your thermometer with a Smart Device

1. If this is your first time using it, bind first. Open "SETTING" menu, choose "Bind and unbind device" and select the appropriate model.
The date and time on your thermometer will automatically be updated when it's connected with your phone.
2. Confirm that your thermometer is connected successfully.
When your thermometer is connected successfully to your smart phone, the "📶" symbol stop flashing and keep showing.

► Transfer your readings

1. As soon as your measurement is finished, open the app on your smart phone to transfer the readings.
Note: On the matched smart phone, Bluetooth must be enabled.
2. You can view your temperature readings in the app.

15

Memory Mode

1. The Memory Mode can be accessed either in forehead mode or object mode:
When the thermometer has been turned on and followed by Figure 2/4 or finished testing, press the *Memory Button*. The letter M will appear in the center right corner of the display. (See Figure 6)
2. The thermometer will automatically memorize the last 30 temperature readings. Each memory also records the measurement date/time/mode icon. Each time the *Memory Button* is pressed, the screen displays past readings that correspond with a number 1-30. The number 1 reflects the most recent reading, while the number 30 reveals the oldest reading stored in memory. (See Figure 7)
3. In the memory mode, 🏠 mark or 🔄 mark will not change.
The user can press the *Test Button* to take new measurements.

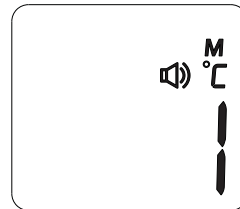


Figure 6

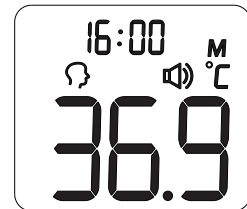


Figure 7

16

Care And Cleaning

1. The probe window must be kept clean, dry, and undamaged at all times to ensure accurate readings. The accuracy of temperature readings can be affected by damage to the probe window, or the presence of dirt, fingerprints, earwax, dust and other soiling compounds on the probe window. Degraded sensors can degrade performance or cause other problems.
2. The probe window is the most delicate part of the thermometer. Use a soft cloth slightly moistened with a 75% isopropyl alcohol solution to disinfect probe window and the thermometer. Do not use abrasive cleaners. After cleaning, allow at least 10 minutes drying time before taking temperatures.
Note: Do not use any chemical other than isopropyl alcohol to clean the probe window.
3. Use a soft, dry cloth to clean the thermometer display and exterior.
4. The thermometer is not waterproof. Do not submerge the unit in water when cleaning.
5. Store the thermometer in a dry location, free from dust and contamination and away from direct sunlight.
6. Strong electromagnetic fields may interfere with the proper operation of the thermometer. The device needs special pre-cautions regarding EMC according to the EMC information.
7. Put the thermometer back to the original packaging after using.

17

Battery Replacement

1. Replace battery when "🔋" appears in the upper right corner of LCD display. (See Figure 8)
2. Slide battery cover down as shown in Figure 9.
3. Remove battery and install 2 new AAA alkaline batteries as shown in Figure 10.
4. Slide battery cover back on.



Figure 8

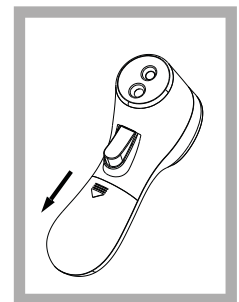


Figure 9

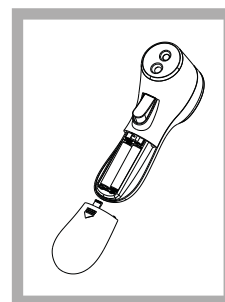


Figure 10

18

Specifications

Measuring range	Forehead mode: 34.0°C~43.0°C(93.2°F~109.4°F) Object mode: 0°C~100°C(32°F~212°F)
Measuring site	Forehead(Forehead Mode)
Reference body site	Oral (This thermometer converts the forehead temperature to display its "oral equivalent.")
Operation mode	Forehead mode(Adjust mode)
Laboratory accuracy	Forehead mode: ±0.2°C (0.4°F) during 35.5°C~42.0°C (95.9°F~107.6°F) at 15°C~35°C (59.0°F~95.0°F) operating temperature range ±0.3°C (0.5°F) for other measuring and operating temperature range Object mode: ±4% or ±2°C(4°F) whichever is greater
Display resolution	0.1°C or 0.1°F
Measure time	Approximately 1 second
Operating temperature range:	10°C~40°C(50°F~104°F), 15%~85%RH, non-condensing Atmospheric Pressure : 700hPa ~ 1060hPa
Storage and transport temperature range	-25°C~ 55°C (-13°F~131°F), 15%~95%RH, non-condensing Atmospheric Pressure : 700hPa ~ 1060hPa
Clinical accuracy	Clinical bias: -0.09°C (-0.16°F) Clinical repeatability: 0.13°C (0.23°F) Limits of agreement: 0.87°C (1.57°F)
Shock	withstands drop of 3 feet
Dimension	153*41*44mm
Weight	Approx. 84grams(with batteries)
Battery	DC3V(2×AAA battery)
Battery life	Approx. 1 year/6000 readings
Expected service life	Three years
Ingress protecting rating	IP22

19

Troubleshooting

Error message	Problem	Solution
	The thermometer is not functioning properly.	Unload the battery, wait for 1 minute and repower it. If the message reappears, contact the retailer for service.
	The ambient temperature is not within the range between 10°C and 40°C (50°F~104°F).	Place the thermometer in a room for at least 30 minutes at room temperature between 10°C and 40°C (50°F~104°F)

20

Troubleshooting

Error message	Problem	Solution
	In Forehead mode: Temperature taken is higher than 43.0 °C (109.4°F). In Object mode: Temperature taken is higher than 100 °C (212°F).	Read Temperature Taking Hints Thoroughly, then take a new temperature measurement.
	In Forehead mode: Temperature taken is lower than 34.0 °C (93.2°F). In Object mode: Temperature taken is lower than 0°C (32°F).	Read Temperature Taking Hints thoroughly , then make sure the lens filter are clean, then take a new temperature measurement.
	The thermometer could not work due to low battery.	Replace two new alkaline batteries size AAA.

21

Calibration

The thermometer is initially calibrated at the time of manufacture. If the thermometer is used according to the use instruction, periodic readjustment is not required. However, We recommends checking calibration every two years or whenever clinical accuracy of the thermometer is in question. Please send the complete device to the dealers or manufacturer.

The above recommendations do not supersede the legal requirements. The user must always comply with legal requirements for the control of the measurement, functionality, and accuracy of the device which are required by the scope of relevant laws, directives or ordinances where the device is used.

A clinical summary and procedures for checking calibration are available upon request. (Turn on the thermometer and press the power button long time until entering into calibrate mode, software version will be displayed.)

ASTM laboratory accuracy requirements in the display range of 36.0 to 39.0 °C (96.8 to 102.2 °F) for IR thermometers is ±0.2°C(±0.4 °F), whereas formercury-in-glass and electronic thermometers, the requirement per ASTM Standards E 667-86 and E 1112-86 is ±0.1°C(±0.2°F)."



Type BF applied part

— Direct Current



Disposal of this product and used batteries should be carried out in accordance with the national regulations for the disposal of electronic products



Consult Accompanying Documents



Batch Code



Storage and Transportation Temperature Limit:
-13°F ~ 131°F (-25°C~55°C)

22

Service

The thermometer has a limited one year warranty. Do not attempt to disassemble or repair the thermometer by yourself. Should service be required during or after the warranty period you must contact the manufacturer. Repackage the thermometer carefully in its original packaging or securely pack to avoid damage during shipping. Include the original sales slip indicating the date of purchase, a note describing the problem, and your return address. Send the thermometer prepaid and insured.

The lay operator or lay responsible organization should contact the manufacturer or the manufacturer's representative:

- for assistance, if needed, in setting up, using or maintaining the thermometer; or
- to report unexpected operation or events.



Manufacturer:
JOYTECH HEALTHCARE CO. LTD.
No.365,Wuzhou Road,Yuhang Economic Development Zone ,
hangzhou city,311100 zhejiang , China
Telephone: +86-571-81957767
Fax: +86-571-81957750

Made in China

23

Warranty

This appliance conforms to the following standards:
ISO 80601-2-56 Medical electrical equipment —Part 2-56:
Particular requirements for basic safety and essential performance of clinical thermometers for body temperature measurement,
IEC 60601-1-11 Medical electrical equipment —Part 1-11: General requirements for basic safety and essential performance –Collateral Standard: Requirements for medical electrical equipment and medical electrical systems used in the home healthcare environment and complies with the requirements of IEC 60601-1-2(EMC) ,
IEC 60601-1(Safety) standards. And the manufacturer is ISO 13485 certified.

Thermometer is warranted by manufacture to be free from defects in material and workmanship under normal use and service for a period of one year from the date of delivery to the first user who purchases the instrument. This warranty does not cover batteries, damage to the probe window, or damage to the instrument caused by misuse, negligence or accident, and extends to only to the first purchaser of the product.

24

FCC Information

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

***Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

25

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

26

Electromagnetic Compatibility Information

The device satisfies the EMC requirements of the international standard IEC 60601-1-2. The requirements are satisfied under the conditions described in the table below. The device is an electrical medical product and is subject to special precautionary measures with regard to EMC which must be published in the instructions for use. Portable and mobile HF communications equipment can affect the device. Use of the unit in conjunction with non-approved accessories can affect the device negatively and alter the electromagnetic compatibility. The device should not be used directly adjacent to or between other electrical equipment.

27

Electromagnetic Compatibility Information

Table 1

Guidance and manufacturer's declaration – electromagnetic emission		
The device is intended for use in the electromagnetic environment specified below. The customer or the user of the device should assure that it is used in such an environment.		
Emissions test	Compliance	Electromagnetic environment – guidance
RF emissions CISPR 11	Group 1	The device uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	
Harmonic emissions IEC 61000-3-2	Not applicable	The device is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Voltage fluctuations / flicker emissions IEC 61000-3-3	Not applicable	

28

Electromagnetic Compatibility Information

Table 2


Guidance and manufacturer's declaration – electromagnetic immunity			
The device is intended for use in the electromagnetic environment specified below. The customer or the user of the device should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	± 8 kV contact ±2 kV, ±4 kV, ±8 kV, ±15 kV air	± 8 kV contact ±2 kV, ±4 kV, ±8 kV, ±15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrostatic transient / burst IEC 61000-4-4	± 2 kV for power supply lines 100 kHz repetition frequency ± 1 kV for input/output lines	N/A	N/A
Surge IEC 61000-4-5	± 0.5 kV, ± 1 kV differential mode line-line	N/A	N/A
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	0 % UT (100 % dip in UT) for 0.5 cycle at 0°, 45°, 90°, 135°, 180°, 225°, 270°, and 315° 0 % UT (100 % dip in UT) for 1 cycle at 0° 70 % UT (30 % dip in UT) for 25/30 cycles at 0° 0 % UT (100 % dip in UT) for 250/300 cycle at 0°	N/A	N/A
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	30 A/m, 50/60Hz	30 A/m, 50/60Hz	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.

NOTE: UT is the a. c. mains voltage prior to application of the test level.

29

Electromagnetic Compatibility Information

Table 3

Guidance and manufacturer's declaration – electromagnetic immunity			
The device is intended for use in the electromagnetic environment specified below. The customer or the user of the device should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz 6 Vrms 150 kHz to 80 MHz outside ISM bands	N/A	Portable and mobile RF communications equipment should be used no closer to any part of the device, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance $d = \left[\frac{3.5}{V_1} \right] \sqrt{P}$ $d = \left[\frac{3.5}{E_1} \right] \sqrt{P} \quad 80\text{MHz to } 800\text{MHz}$ $d = \left[\frac{7}{E_1} \right] \sqrt{P} \quad 800\text{MHz to } 2.7\text{GHz}$ where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in metres(m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, ^a should be less than the compliance level in each frequency range ^b Interference may occur in the vicinity of equipment marked with the following symbol: 
Radiated RF IEC 61000-4-3	10 V/m 80 MHz to 2.7 GHz	10 V/m	

30

Electromagnetic Compatibility Information

Table 3 continued

NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies. NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

a The ISM (industrial, scientific and medical) bands between 0,15 MHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz. The amateur radio bands between 0,15 MHz and 80 MHz are 1,8 MHz to 2,0 MHz, 3,5 MHz to 4,0 MHz, 5,3 MHz to 5,4 MHz, 7 MHz to 7,3 MHz, 10,1 MHz to 10,15 MHz, 14 MHz to 14,2 MHz, 18,07 MHz to 18,17 MHz, 21,0 MHz to 21,4 MHz, 24,89 MHz to 24,99 MHz, 28,0 MHz to 29,7 MHz and 50,0 MHz to 54,0 MHz.

b The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2,7 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 has been incorporated into the formulae used in calculating the recommended separation distance for transmitters in these frequency ranges.

c Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the device is used exceeds the applicable RF compliance level above, the device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the device.

d Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

31

Electromagnetic Compatibility Information

Table 4

Recommended separation distances between portable and mobile RF communications equipment and the device

The device is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the device can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the device as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output of transmitter W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = \left[\frac{3.5}{V_1} \right] \sqrt{P}$	80 MHz to 800 MHz $d = \left[\frac{3.5}{E_1} \right] \sqrt{P}$	800 MHz to 2.7 GHz $d = \left[\frac{7}{E_1} \right] \sqrt{P}$
0.01	0.12	0.04	0.07
0.1	0.37	0.12	0.23
1	1.17	0.35	0.7
10	3.7	1.11	2.22
100	11.7	3.5	7.0

For transmitters rated at a maximum output power not listed above the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.


32

Electromagnetic Compatibility Information

Table 5

Recommended separation distances between RF wireless communications equipment

The device is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the device can help prevent electromagnetic interference by maintaining a minimum distance between RF wireless communications equipment and the device as recommended below, according to the maximum output power of the communications equipment.

Frequency MHz	Maximum Power W	Distance	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
385	1.8	0.3	27	27	RF wireless communications equipment should be used no closer to any part of the device, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance $E = \frac{6}{d} \sqrt{P}$ Where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitter, as determined by an electromagnetic site survey, should be less than the compliance level in each frequency range. Interference may occur in the vicinity of equipment marked with the following symbol: 
450	2	0.3	28	28	
710	0.2	0.3	9	9	
745					
780	2	0.3	28	28	
810					
870					
930					
1720	2	0.3	28	28	
1845					
1970					
2450	2	0.3	28	28	
5240	0.2	0.3	9	9	
5500					
5785					

Note 1: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

33

Electromagnetic Compatibility Information

WARNINGS!

- This device should not be used in the vicinity or on the top of other electronic equipment such as cell phone, transceiver or radio control products. If you have to do so, the device should be observed to verify normal operation.
- The use of accessories and power cord other than those specified, with the exception of cables sold by the manufacturer of the equipment or system as replacement parts for internal components, may result in increased emissions or decreased immunity of the equipment or system.

34