



完全ワイヤレスイヤホン NUARL N10 Plus ユーザーズガイド


Operation Manual/ 操作說明書

HDSS® High Definition Sound Standard





各部の名称

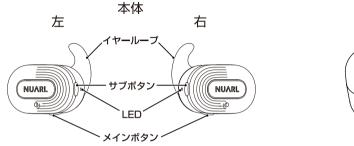



付属のイヤーピース / イヤーループからお好みの形状・サイズ を選んで 付け替えてご使用ください。



使用前の準備


■絶縁シートをはがす

イヤホン本体の裏側に貼り付けてある絶縁シートをはがします。



■充電する

充電ケース背面の USB ポートに付属の充電用ケーブルの Type C USB コネクタを接続し、USB(A) コネクタを USB 充電アダプタなどに接続した後、ケースに本体を装着すると充電が始まります。 充電中は、本体の LED がオレンジ色に点灯します。 充電が完了すると、LED は消灯します。

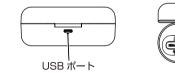



■電源を入れる / 電源を切る

本体の電源がオンの状態で、ケースに本体を装着すると本体の電源はオフになります。 また、充電ケースから本体を取り出すと、本体の電源は自動的にオンになります。

ペアリングについて

■ペアリングする

З

お手持ちのスマートフォン等の機器と初めて接続する場合は、ペアリングを行う必要があります。 ペアリングが完了した機器同士は、次回から電源をオンにするだけで接続できます。

【本機を初めてご使用になる場合】

①接続する機器の Bluetooth 機能をオンにします
 ②左右のイヤホンの電源オンにします。
 ③接続する機器の画面に本機「NUARL N10 Plus」が表示されたら選択します。
 ④接続する機器の画面で「接続」と表示されたらペアリングは完了です。

【ペアリングをやり直す場合・2 台目以降の機器とペアリングする場合】 ①接続する機器の Bluetooth 機能をオンにします。 ②本機が他の機器と接続されていないの状態で、8 秒以上経過するか、メインボタンをダブル クリックすると LED は白・オレンジに交互点滅します。 ③接続する機器の画面に本機「NUARL N10 Plus」が表示されたら選択します。 ④接続する機器の画面で「接続」と表示されたらペアリングは完了です。



充電ケースの機能について


■内蔵バッテリーを充電する

充電ケース背面の USB ポートに付属の充電用ケーブルの Type C USB コ ネクタを接続し、USB(A) コネクタを USB 充電アダプタなどに接続する と充電ケース内蔵バッテリーの充電が開始されます。

充電中は充電インジケーター(中央)がオレンジ色に点灯します。

フル充電時には充電インジケーター (中央) が消灯します。

イヤホンを収納した状態でカバーを閉めた時に、充電ケースの電池残量に 応じて充電インジケーターが点滅します。

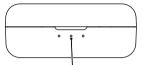

・ 充電インジケーター (中央)

充電インジケーター	電池残量
3回点滅	70%以上
2回点滅	30~70%
1回点滅	10~30%
5秒間高速点滅	10%以下

※リチウムイオン電池の特性として、電池残量を完全に使い切ると性能が 著しく劣化しますので、完全放電する前に充電を行ってください。

■本体の電源をオン・オフをする

本体の電源がオンの状態で、ケースに本体を装着すると本体の電源はオフになります。 また、充電ケースから本体を取り出すと、本体の電源は自動的にオンになります。

※充電ケースの内蔵バッテリー残量が少ない場合は、本体を充電ケースに装着しても電源はオフにならず、充電もできません。 また、本体を充電ケースに装着中に、充電ケース内蔵バッテリーの残量が無くなると、本体の電源がオンになりますのでご注意ください。

Δ

マルチポイント接続について

本機は2台の機器と同時に接続を行う、マルチポイント接続に対応しております。 マルチポイント接続で使用するには、2 台目の機器をあらかじめ本機とペアリングする必要があります。

マルチポイント接続で接続できる機器は2 台までです。また、音楽の再生は接続中のどちらの機器でも可能で すが、2 台の機器の音楽を同時に再生することはできません。

また1台の機器を再生中の場合、もう一方の機器を操作しても音楽は切替りません。再生を停止してからもう 一方の機器で操作を行ってください。



電源オン	白色1秒点灯
未接続待機中	3秒ごとに白色2回点灯
接続中待機時	7秒ごとに白色1回点灯
音楽再生中	消灯
ペアリングモード	白・オレンジ交互点滅
ペアリング情報削除	白色高速点滅

5

ボタン操作 メインボタン R 電源オン 1回押す 1回押す 電源オフ 電子音が2回鳴るまで長押し 電子音が2回鳴るまで長押し **1**回押す 再生・停止 次の曲へ 2回押す -前の曲へ 3回押す -音量上げる 3回押す -音量下げる 2回押す -**1**回押す 着信受話

1回押す

2秒長押し

未接続状態でL/Rどちらかのメインボタンを2回押す

L/R両方のメインボタンを電子音が3回鳴るまで長押しして手を離し、2回押す

音楽再生停止中に1秒長押し

1回押す

2回押す

※: アプリによってはボタン操作が機能しない場合があ	りま	す。
----------------------------	----	----

ANCモード→ 外音取り込みモード → OFF

ゲーミングモード ON/OFF

通話終了

着信拒否

ペアリングモード

ペアリング情報削除

起動する

雷源

音楽

音量

诵話

ペアリング

音声コマンド

サブボタン

| アクティブノイズキャンセリング (ANC) 機能について |

本機には、アクティブノイズキャンセリング(ANC)機能が搭載されています。 サブボタンを1回押すごとに、「ANC」→「外音取り込み」→「オフ」と機能が切り替わります。

本機のアクティブノイズキャンセリング機能は、マイクで外部の音を取り込み、不要な騒音をデジタル 処理で低減します。 アクティブノイズキャンセリングの効果レベルは、「N10 CONNECT」アプリで変更することができます。

外音取り込み機能について

本機には、周辺の音をマイクで集音して聴くことが出来る、外音取り込み機能が搭載されています。 外音取り込み機能が有効になっている状態でイヤホンに風が当たると、風切り音がノイズのように聴こえる 場合がありますが、製品の不良ではありませんのでご理解・ご容赦のほどお願い申し上げます。

※ANCと外音取り込みを同時に利用することはできません。

ゲーミングモードについて

ゲーミングモードを有効にすることで、映像に対する音声の遅延を軽減することができます。 ただし、ゲーミングモード中は、音質や通信の安定性が低下する場合があります。

N10 CONNECT アプリについて

N10 CONNECTアプリ(無料)を使用することで、本製品の機能を最大限に活用することができるようになります。

Apple App StoreまたはGoogle Play Storeで「N10 CONNECT」を検索してダウンロードしてください。



8

■N10 CONNECT アプリの主な機能

- ・ANC 効果レベルの調整
- ・外音取り込み時の動作設定
- ・音量レベル設定
- ・コーデック切り替え
- ・ボタン設定
- ・ファームウェアアップデート

※アプリの機能はバージョンアップにより変更される場合があります。

耐水性能について

本製品のイヤホン本体は、IPX4相当の耐水性能を有しておりますので、小雨や汗などの影響を気にせずに ご使用いただけます。

ただし、シャワーや水洗いなど、直接水流がかかるような環境でのご使用は、故障する場合がありますので おやめください。

また、本体に水滴がついた状態で充電ケースに収納することは絶対におやめください。

※充電ケースは耐水仕様ではありません。

Bluetooth ワイヤレスについて

本製品は2.4GHz帯の電波を利用しております。2.4GHz帯の電波は、産業・科学・医療用など、様々な機器 で利用されております。

そのため、ご利用の環境によっては、他の無線機器の影響により通信が途切れ、一時的に片側または両側の 音声が聴こえなくなったりすることがありますが、製品の不良ではありませんのでご理解・ご容赦のほどお 願い申し上げます。

特に下記のような環境下では通信障害が発生する可能性が高くなります。

- ・満員電車内など2.4GHzの利用密度が高い場所での使用
- ・交差点などの交通信号システムが設置されている場所での使用
- ・WiFiアンテナが多く設置されている場所での使用

9

- ・鉄道駅構内やコインパーキングなど監視カメラが多数設置されている場所での使用
- ・スマートホン等の再生機器と本製品の間で人体が障害物となる状態での使用
 ・スマートホン等の再生機器に保護ジャケットなどを装着している状態での使用

よくある質問

Q)再生機器と接続しなくなった。

A) 再生機器のBluetoothメニューからデバイス情報を削除してペアリングをやり直してください。 再ペアリングを行う場合は、イヤホンのメインボタンをダブルクリックします。(3ページ参照)

Q)片側の音声が途切れることがある。

A) 周囲の電波環境によっては、音声が途切れる場合があります。(7ページ参照)

Q)ケースに入れても電源が切れない/ケースから出しても接続されない。

A)ケースの充電が空の場合は自動オン・オフ機能は動作しません。手動でオン・オフしてください。

Q)片側イヤホンのLEDランプが白色で高速点滅している。

A) 「白色で高速点滅していない側」のイヤホンの「ペアリング情報削除」を行ってください。(6ページ参照) 操作後は、ペアリングをやり直してください。(3ページ参照)

Q)イヤーピースや充電ケースなど付属品だけ追加購入したい。

A)NUARL公式オンラインストアでご購入いただけます。 右記QRコードのリンク先をご確認ください。

Q)イヤホンの片側を紛失した/片側を破損した。

A) 片耳紛失補償制度(有償)がございます。
 お申し込みはNUARL公式オンラインストアからのみ承ります。
 右記QRコードのリンク先をご確認ください。
 ※両側のイヤホンを紛失された場合は対象外となります。



仕様

	製品仕様
ドライバー	Φ10mm PTT振動板 NUARL DRIVER[N10]V3
再生周波数帯域	20~20,000Hz
電源	イヤホン: 3.7V/60mAh リチウムイオン充電池(内蔵)
电你	充電ケース: 3.7v/760mAh リチウムポリマー充電池(内蔵)
連続再生時間(ANC OFF)	約7時間(SBC/AAC) / 約5時間(aptX)
連続再生時間(ANC ON)	約5時間(SBC/AAC) / 約3.5時間(aptX)
充電時間	約1.5時間
Bluetooth仕様	Version5.2/Class2/マルチペアリング(4)/マルチポイント接続(2)
対応コーデック	aptX Adaptive, aptX, AAC, SBC
Bluetoothプロファイル	A2DP, HFP, HSP, AVRCP
マイク	全指向性(cVc NC, ANC, 外音取り込み)
防水性能	IPX4相当
使用温度範囲	5~50°C(結露無きこと)
付属品	充電ケース,充電用ケーブル,イヤーピース, イヤーループ, ユーザーズ
1)))尚 印	ガイド,保証書
技術基準適合証明番号	R210-155015

11

アフターサービスについて

■アフターサービスについてのお問い合わせ先

【ホームページからのお問い合わせ】 https://nuarl.com/contact/


【E メールでのお問い合わせ】 support@nuarl.com

【スマートホンからのお問い合わせ】 右記 QR コードのリンク先をご参照ください。



対応時間:祝祭日及び弊社休業日を除く月曜日から金曜日の10:00~17:30


Product Diagram

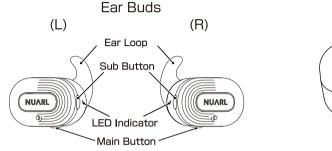


NUAR

Charging Case

*Please choose and replace Ear Tip to suit your preference.

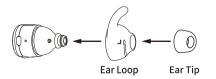

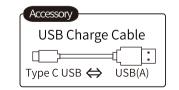

Before Use

Remove Insulating Sheet


Remove Insulating sheet from back side of earbuds.

Insulating Sheet —



Battery Charge

Insert USB type A connector of USB Charge Cable to USB AC charger or USB port of PC, and insert Type C USB connector to USB port of Charging Case. Put the Ear Buds into Charging case. While charging, the LED light constantly. When charging is completed, the LED will turn off.

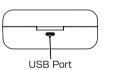



LED (Orange: Charging)

14

Power On/Power Off

Put the Ear Buds into Charging Case , Ear Buds power OFF automatically. When pick up the Ear buds, power ON automatically. %When Case battery is low, this function does not work.

Pairing

Pairing

To use Ear Buds first time, you must pairing Ear Bud with mobile phone or player. Once your Ear Buds is paired with other devices, they will remain paired and automatically recognize each other.

[First time to use]


Turn on Bluetooth function of your mobile phone.
 Turn on the power of both earbuds.
 Select "NUARL N10 Plus" in discovered device list of the phone.
 Click "Pair" in the phone display.

[Re-pairing or Pairing with second mobile phone]

1. Turn on Bluetooth function of your mobile phone.

2. When Earbuds is not connected to any other device, the LED will blink alternately in white and orange after 8 seconds, or by double-clicking the main button.

Select "NUARL N10 Plus" in discovered device list of the phone.
 Click "Pair" in the phone display.

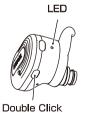


Charging Case

Charge Case Battery

Insert USB type A connector of USB Charge Cable to USB AC charger or USB port of PC, and insert Type C USB connector to USB port of Charging Case. While charging,the Orange LED(Center) light constantly. When charging is completed, the LED will turn off.

When put into earbuds and the cover is closed, the charging indicator flash for about 3 seconds depending on the remaining battery level in the charging case.

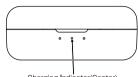

Charging Indicator(Center)

Charging Indicator	Remaining
Flash 3 times	Over 70%
Flash 2 times	30~70%
Flash 1 time	10~30%
Quickly Flash 5 seconds	Under 10%

Auto Power ON/OFF

Put the Ear Buds into Charging Case, Ear Buds power OFF automatically. When pick up the Ear buds power ON automatically. When Case battery is low, this function does not work.

15

Multipoint Connection

This product supports Multipoint connection, which allows you to connect to two devices simultaneously. To use the Multipoint connection, the second device must be paired with this product in advance.

The maximum number of devices that can be connected via Multipoint connection is two. Music can be played back on either of the connected devices. However, you cannot play music from both devices at the same time.

Also, when one device is playing, operating the other device will not switch the music. Please stop playback and then operate the other device.

Meaning of LED

Power ON	White 1 Second
Disconnected	White 2 times each 3 Seconds
Connected	White 1 time each 7 Seconds
Music Play/Talking	No Flash
Delete Pairing	Flashing White continuously
Pairing	Flashing White and Orange

Button Operation

Main Button				
		L	R	
Power	ON	1Click	1Click	
Fower	OFF	Long press until beep 2 times	Long press until beep 2 times	
	Play/Pause	10	lick	
Music *	Next Track	2Click	-	
	Previous Track	3Click	-	
Volume	Volume Up	-	3Click	
volume	Volume Down	-	2Click	
	Answer Call	10	lick	
Phone	Hang Up	1Click		
	Reject Call	Long pres	s 2seconds	
Pairing	Forced Pairing	2Click with n	o connection	
Fairing	Clear	Long press Main button 8seconds until beep 3times, then 2Click		
Siri/Google	Start	Long press Main button until a beep without music play		

Sub Button	ANC Mode \rightarrow Ambient Mode \rightarrow OFF	1Click	
	Gaming Mode ON/OFF	2Click	
			· 7

*: Button operation may not work depending on the app.

Active Noise Canceling (ANC)

This product equipped with active noise cancellation (ANC). Each time you press the sub-button, the function switches from ANC to Ambient and then to Off.

This product's active noise canceling function uses microphones to capture external noise. It captures sound and digitally reduces unwanted noise. The effectiveness level of active noise cancellation can be changed in the N10 CONNECT app.

Ambient Mode

This product is equipped with an Ambient mode that allows you to listen to ambient sounds from the microphone.

The operation settings for Ambient sound function can be changed with the N10 CONNECT app.

When the wind hits the earphones with the Ambient mode enabled, a wind noise can be heard. This is not a product defect.

 $\ensuremath{\ll}\xspace$ ANC and Ambient sound cannot be used at the same time.

Gaming Mode

By enabling the gaming mode, you can reduce the audio delay in relation to the video. However, sound quality and Bluetooth stability may be degraded while in the gaming mode.

N10 CONNECT APP

The N10 CONNECT app (free of charge) allows you to get the most out of this product. You can customize various features, update the firmware and more.

Download the app by searching for "N10 CONNECT" in the Apple App store or Google Play store.



Main features

- Adjust the ANC effect level.
- Operation Settings for External Sound Intake
- Volume level setting
- CODEC switching
- Button setting
- Firmware update

%The function of the app may change with the version up.

Frequently Asked Questions

Q)Suddenly I heard no sound from one earbud. A)Please turn off earbud and turn on it again.

2

Q) Bluetooth connection has dropped. A) Please delete 「NUARL N10 Plus」 from Bluetooth device list and pairing with your device again.

Q) The pairing between L and R earbud has dropped.A) Turn off both earbuds and turn on them again.A)Please try to "Clear" pairing as page 18.

Q) When I place the earbud in the case, it won't turn off itself. When I get the earbud out from the case it won't turn on.A) While the case's power is low, the automatic on off function will not be active. Please turn on/off it manually.

Q) The case has run out of charges. A) The case will discharge itself, please recharge the case regularly.

Q) I want to know about warranty and repair in outside of Japan.A) The warranty is only valid in the country in which the product was purchased. Please contact purchased store directly for the specific repair of the goods.




Our ANC TRULY WIRELESS STEREO EARBUDS does not have enough space to print the product name, model, tademark, MIC ID and LOGO on the product itself, thus we locate them on product packaging and product user manual

Specification

Product Specification		
Driver	Φ10mm PTT Diaphragm NUARL DRIVER[N10]V3	
Frequency Response	20~20,000Hz	
Battery	Earbuds: 3.7V/60mAh Li-ion Battery	
battery	Charger Case: 3.7v/760mAh Li-Po Battery	
Continuous Play time(ANC OFF)	7hours(SBC/AAC) /5hours(aptX)	
Continuous Play time(ANC ON)	5hours(SBC/AAC) / 3.5hours(aptX)	
Charging Time	1.5hours	
Bluetooth Specification	Version5.2/Class2/Multi Pairing(4)/Multi Point(2)	
Bluetooth CODEC	aptX Adaptive, aptX, AAC, SBC	
Bluetooth Profile	A2DP, HFP, HSP, AVRCP	
Microphone	Omni-direction(cVc NC, ANC, Ambient)	
Waterproof Level	IPX4	
Operation Temperature	5~50°C	
Accessories	Charger Case, Charging Cable, Ear Tip, Ear loop,	
Accessories	Operation Manual	
Certification	CE, FCC ID: 2ARGT-N10PLUS	

22

各部位名稱

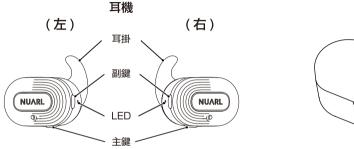




充電盒

※請選用自己佩戴舒適的耳掛和耳帽,來裝在耳機上使用

 ①
 ①
 ●
 ①
 ●
 ①
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●
 ●

 ●
 ●

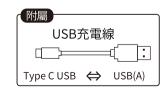

使用前的準備

■揭下絕緣片

請揭下耳機下面的絕緣片。



■耳機充電

USB 充電線的 USB 連接器插入 PC 機 USB 接口或 USB 充電器,Type C USB 接插入充電盒的 USB 充電口。 耳機放入充電盒併蓋上蓋子。

充電時,橙色充電提示燈點燈。充電完成後,LED 會熄滅。





■電源 ON/OFF

耳機電源打開的狀態下,裝上耳機,耳機電源就關閉了。 另外,從充電盒取出耳機,耳機電源自動打開。 ※時電量低,這個功能不工作。



■耳機配對

初次使用耳機時,需要與手機進行配對。 一旦配對成功之後,以後只需要電源打開,耳機就會自動與手機連接。

【耳機初次使用時】

打開手機的設置,並把藍牙功能打開
 耳機的按鍵電源打開,此時 LED 燈會橙白色交替閃燈
 手機的藍牙自動搜索並出現「NUARL N10 Plus」
 選擇「NUARL N10 Plus」,手機與耳機連接完成

【再次配對連接 / 與第二台手機的配對連接】

打開手機的設置,並把藍牙功能打開
 耳機沒有連接到手機,雙擊主鍵或大約 8 秒後,LED 指示燈將以白色和橙色交替閃燈。
 手機的藍牙自動搜索並出現「NUARL N10 Plus」
 選擇「NUARL N10 Plus」,手機與耳機連接完成



充電盒的功能

■充電

USB充電線的USB連接器插入PC機USB接口或USB充電器, Type C USB接插入充電盒的USB充電口。

充電時,橙色充電提示燈(中央)點燈。充電完成後,LED會熄滅。

沒有連接充電線的情況下戴上耳機時,LED 燈會亮起約3秒, 以顯示充電盒的電池剩餘量。



■自動 ON/OFF

耳機電源打開的狀態下,裝上耳機,耳機電源就關閉了。 另外,當拿起耳機,然後自動開機。 ※時電量低,這個功能不工作。

Multipoint 連接

本產品支持Multipoint連接,允許您同時連接到兩個設備。 要使用Multipoint連接,第二個設備必須事先與本產品配對。通過多點連接可以連接的設備的最大數量是兩個。

音樂可以在任何連接的設備上播放。但是,不能同時播放這兩種音樂同時使用設備。 另外,當一臺設備正在播放時,操作另一臺設備不會切換音樂。 請停止播放,然後操作其他設備。

LED 表示

電源ON	白橙1秒亮燈
未連接待機	白色每3秒閃二次
接続中	白色每7秒閃一次
播放中/通話中	消橙
低電壓警告	橙色每3秒閃一次
耳機配對	白橙交替閃



主鍵			
		L	R
電源	電源ON	甲擊	単撃
电师	電源OFF	長按3秒,聽到電子音二聲後放手	長按3秒,聽到電子音二聲後放手
*1	播放/暫停		2
音樂	下一曲	雙擊	-
	上一曲	三撃	-
音量	音量加	-	三撃
日里	音量減	-	雙擊
	接聽電話		隆
電話	舌 通話終了 ^{單擊}	段	
	來電拒聽	長按注	2秒
耳機配對	被迫配對	雙擊L或R(耳機與	手機未連接狀態)
中1成間王	清除	長按L和R,聽到電子音音	三聲後放手,然後雙擊
語音命令(Siri)	啟動	長按2秒,聽到電子音一聲後放手 啟 動Siri	

副鍵	ANC 模式→ Ambient 模式 → OFF	單擊
副蜓	遊戲模式 ON/OFF	雙擊

主動降噪 (ANC)

本產品配有主動降噪(ANC)和環境音功能。 每按一次子按鈕,功能就會從ANC切換到環境音,再切換到關閉。

本產品的主動降噪功能使用麥克風,於捕捉外部噪音。它能捕捉聲音並以數字方式減少不必要的噪音。 主動降噪的有效級別可在N10 CONNECT app中更改。

環境音模式

本耳機配備了環境模式,可以讓您聆聽來自麥克風的環境聲音。 啟用環境模式後,當風吹到耳機時,可以聽到風聲。這不是產品缺陷。 環境音功能的操作設置隨著N10 CONNECT app。 ※ANC和環境音不能同時使用。

遊戲模式

通過啟用遊戲模式,您可以減少音頻延遲與視頻的關係。 但是,在遊戲模式下,音質和通信穩定性可能會降低。

N10 CONNECT APP

N10 CONNECT app(免費)可以讓您最大限度地利用這款產品。您可以自定義各種功能,更新固件等。

在Apple App store或Google Play store 中搜索" N10 CONNECT"來下載該app。



■主要功能

- 調整 ANC 效果

- 環境音操作設置

- EQ 設置

- 音量級設置

- CODEC 切換

- 按鈕設置

- 固件更新

※該app的功能可能會隨著版本的增加而改變。



Q)突然聽不到一個耳機的聲音 A)關閉耳機,再重新啟動耳機。

Q)和播放設備的連接中斷了。 A)在播放設備的藍芽選單中刪除本機器,並重新進行配對。

Q)左右兩邊的耳機沒有連接在一起。 A)關閉左右兩邊的耳機,再重新啟動耳機。 A)耳機配對清除。(請參照P28)

Q)把耳機放入收納盒時沒有自動切斷電源/從收納盒取出時沒有自動連接播放設備。 A)收納盒的電量不足時,自動關閉.自動連接功能將不能正常運作。請手動開啟動及關閉耳機。

Q)收納盒的電力在沒有使用的情況沒電了。 A)收納盒會自然放電,請定期進行充電確保耳機正常運作。

Q)想知道有關日本國外的保證及維修等售後服務詳情。 A)保證對象僅限在該產品的購買国家有效。有關商品的具体的維修事宜,請直接与授權經銷商聯繫。

規格

產品規格	
喇叭	Φ10mm PTT Diaphragm NUARL DRIVER[N10]V3
頻率回應	20~20,000Hz
電源	耳機: 3.7V/60mAh Li-ion Battery
	充電盒: 3.7v/760mAh Li-Po Battery
連續播放時間(ANC OFF)	7小時(SBC/AAC) /5小時(aptX)
連續播放時間(ANC ON)	5小時(SBC/AAC) / 3.5小時(aptX)
充電時間	1.5hours
Bluetooth規格	Version5.2/Class2/Multi Pairing(4)/Multi Point(2)
Bluetooth 解碼	aptX Adaptive, aptX, AAC, SBC
Bluetooth 協議	A2DP, HFP, HSP, AVRCP
麥克風	全方向(cVc NC, ANC, Ambient)
耐水性能	IPX4
使用溫度範圍	5~50°C
飾品	耳帽,耳掛,充電盒,USB充電線,使用說明書
認証	NCC

Federal Communications Commission Part15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.

The National Communications Commission

取得審驗證明之低功率射頻器、非經核准、公司、商號或使用者均不得擅自變更頻

率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時、應立 即停用、並改善至無干擾時方得繼續使用。

前述合法通信、指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。