


标识	版本号	处数	修改内容	日期
1	A1		文字内容修改	20221014
2	A2		转接头图片修改	20221028
3				

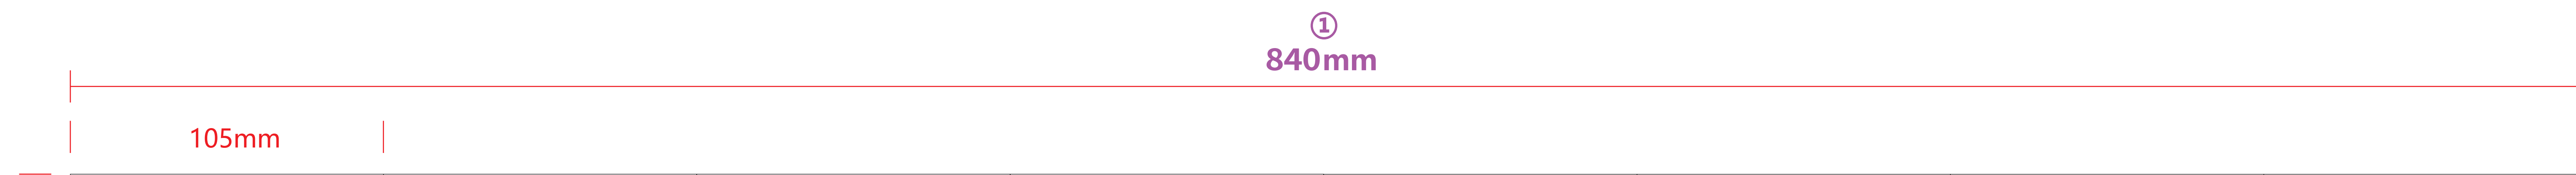

MUNBYN USER GUIDE

148mm

Contents

- 01 Product Introduction 1
- 02 Set Up the Printer 3
- 03 Pro Tips 7
- 04 FAQ 8
- 05 LED Status 8
- 06 Feeder Button Instruction 9
- 07 Safety Notices 11
- 08 Tech Support 12
- 09 IC Caution 13
- 10 FCC Warning 14

01 Product Introduction

1.1 What's in the package?

1.2 Specifications

Method	Direct Thermal
Resolution	203 dpi
Max Printing Speed	150 mm/s
Paper Width	25.4-117mm
Paper Thickness	0.06-0.25 mm
Power Adapter	24V / 2.5A
Printing Life	TPH 50KM
Operating Environment	Temperature: 5 to 50 °C Humidity: 20-85% (non-condensing)
Storage Environment	Temperature: -20 to 60 °C Humidity: 5-95% (non-condensing)
Connection	USB/Bluetooth
Weight	1.59lb /0.74kg
Dimensions	213×80×95mm(L*W*H)

1.3 Printer features

02 Set Up The Printer

Recommended: Watch the short setup video at: www.munbyn.biz/129unboxing

1.2.1 Quick printer connection

1.2.2 Label setup

Automatic label identification:

- Load no less than 6 consecutive labels of paper into the printer.
- After the paper is stable, press and hold FEED until the blue light flashes 2 times.
- Then, the printer will run automatically label identification.

1.2.3 Bluetooth connection

2.3.1 Connect to App

1. Search "Munbyn Print" on App Store or Google Play to get the app.

2.0. Scan the QR code to download the App.

Note:

- Due to the mobile phone system requirements, App needs access to location, you need to enable GPS and confirm authorization (Android only).
- Make sure to select 4"×6" file to print.

1.2.4 Driver installation

For the latest driver, please visit, www.munbyn.biz/129d

- Please run the downloaded software from the web address indicated above and follow the prompts to complete installation.

2.4.1 Windows Driver Installation

2.4.2 Mac Driver Installation

03 Pro Tips

- Anytime you change your label, run the automatic label identification.
- Press the circle feeder button on the printer to skip a blank label.
- To run a self-test, press and hold the feeder button until the blue light flash once.
- Avoid poor quality labels as they can damage the printer.
- Regularly clean the printer head.
- If the paper is jammed and the blue flashing slowly, run Automatic label identification.
- Insert Munbyn into the same USB port on your computer every time. This will avoid creating duplicate copies of the printer in your operating system.

04 FAQ

FAQ file, please visit www.munbyn.biz/129faq

05 LED Status

Light	Printer Status
Solid blue	Standby
Blue flashing slowly	Label jams or label detection error
Blue flashing quickly	Wrong media tracking
Solid red	Printer head is over-heated
Red flashing slowly	Paper shortage
Red flashing quickly	Cover is not closed
Solid purple	Printing
Purple flashing quickly	Pause printing

06 Feeder Button Instruction

Desired Action	Execution
Skip a label	When the printer is standby/not in the middle of printing, press the Feed Button once.
Restore factory setting	Insert the label, ensure it is straight and smooth. When the printer is standby and ready, press and hold the Feed Button for about 10 seconds while the blue light flashes 4 times, then release the Feed Button.
Run the automatic label identification (for labels with black marks)	Insert the label, ensure it is straight and smooth. When the printer is standby and ready, press and hold the Feed Button for about 8 seconds while the blue light flashes 3 times, then release the Feed Button.
Run the automatic label identification (for labels with gaps)	Insert the label, ensure it is straight and smooth. When the printer is standby and ready, press and hold the Feed Button for about 6 seconds while the blue light flashes 2 times, then release the Feed Button.
Print test page	Insert the label, ensure it is straight and smooth. When the printer is standby and ready, press and hold the Feed Button for about 4 seconds while the blue light flashes once, then release the Feed Button.
Pause printing	When the printer is printing, press the Feed Button once.

Desired Action	Execution
Resume printing	When the printer pauses printing, press the Feed Button once to resume printing.
Clear printing data	When the printer pauses printing, press the Feed Button twice to clear the printing data.

07 Safety Notices

- The printer head can become very hot after printing labels. Do not touch the printer head.
- Do not bend the power cord excessively or place objects on the cord.
- Do not use the printer if you find any irregularities as these could result in fire or electrocution.
- Keep the printer out of reach of children.
- Use only approved accessories and do not try to disassemble, repair the unit by yourself.
- Keep the printer away from water and other objects that could penetrate the components.
- Please unplug the printer when it is not in use for long periods.

08 Tech Support

E-mail: support@munbyn.com
 Whatsapp: +86 1 781 788 1067
 Phone: +1 403 477 1911
 Skype: munbyn
 Support time: Monday to Friday 24 hours

MUNBYN provides 18 months warranty and lifetime free service. If you encounter any issues with the product, please contact the MUNBYN team to promptly receive troubleshooting tips or a replacement.

Website: www.munbyn.com (how-to videos, warranty details)

09 IC Caution

Radio Standards Specification RSS-Gen, Issue 5 - English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: This device may not cause interference. This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement: The equipment complies with IC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

- French: Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: Cet appareil ne doit pas causer d'interférences. Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF: L'équipement est conforme à la limite d'exposition aux radiations de la IC établie pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

10 FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement: The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

MUNBYN
More Choice
For Your Growing Business

80g书写纸, 双面印刷, 折叠
 折叠要求: 保证封面在最前面



除非另有说明, 否则公差按下表:				产品型号		QUIN ENJOY PRINTING	
尺寸标注	CLASS A	CLASS B	CLASS C	C.A643/AM-242-BT ITPP129		珠海趣印科技有限公司 Zhuhai Quin Technology Co., Ltd.	
<6.0	± 0.5	± 1	± 2				
6.0~30.0	± 0.5	± 1	± 2				
30~120	± 0.5	± 1	± 2				
120~400	± 0.5	± 1	± 2				
400~1000	± 0.5	± 1	± 2	名称	说明书	材料	80g书写纸
设计				料号		颜色	
确认				版本号	A2	比例	1:1
审核				第三角度投影			单位 mm 图幅
						第 1 张 共 1 张	