



EN

Symptoms	Solutions
No power on (battery)	The battery may be in protection mode or the battery may be fully discharged. Connect the headphones to a wall charger.
Headset does not connect to mobile devices	On your device, 1. Disable and re-enable the Bluetooth function. 2. Remove the headset pairing name from the Bluetooth list on your device. 3. Clear the pairing list on your device. Connect again.
No sound	1. Make sure the voice prompt is on, press the button briefly to listen to the connected device. 2. Make sure you are using the correct device. 3. Please use another music source. 4. If two devices are connected, pause the audio on the first device and then play the audio on the other device. 5. If two devices are connected, move the device to within headphone reception range (within 10m).
Poor sound quality	1. Please use another music source. 2. Disable any audio enhancements on the device or music app. 3. If the headphones have been in contact with water, allow them to dry and try again.
Headsets won't charge	1. Ensure that the connector on the cable is correctly aligned with the connector on the speaker. 2. Try another charging source. 3. Ensure that the ends of the USB cable are secured. 4. If your headset has been exposed to high or low temperatures, wait for it to return to room temperature and then retry charging.
No power after a day or two in storage	1. Check that the headset is switched on 2. Check if the NC is on 3. Re-charge
Microphone does not receive sound	1. Try talking again. 2. Try another compatible device. 3. If the headset has been in contact with water, wait for it to dry and try again. 4. Try moving closer to the headset while talking. 5. During a call, ensure that the headset is selected as the audio source in the current call window.

TOZO reserves the right of final interpretation of this manual and the design and specifications are subject to change without notice.











EN

- This product contains magnetic material. Please consult your doctor as to whether it will affect implantable medical devices.
- Please keep this product away from sources of fire and heat. Do not place an exposed flame source (e.g. a lit candle) on or near this product.
- Do not modify the product without authorization.
- Do not use this product in conjunction with an inverter.
- Only use this product with a power supply that has been approved by the relevant authorities and meets local regulatory requirements (e.g. UL, CSA, VDE, CQC).
- The batteries supplied with this product may keep a few of chemical burn hazard if not handled properly.
- Do not overheat the product containing the batteries (e.g. keep out of direct sunlight and away from sources of fire etc.).
- If the speaker is exposed to salt or chlorinated water, wash it gently with clean water afterwards to remove any residue.
- Make sure the connector port is completely dry before charging.
- Do not charge the speaker when it is under repair.

AUX audio jack • 1

Type-C cable • 1

HT Headphones

User manual • 1

Quick guide • 1

Speaker size	Φ40.0mm	Charging port	Type-C
APP	Support TOZO APP	Frequency range	20Hz-44.1KHz
Battery capacity	500mAh	Speaker impedance	16Ω
50% volume regular play time	41H	Talking noise reduction	1 Mic ENC
Charging time	<2h	Transmission range	>10m
Charging voltage current	5V=1A		

EN

X1: Press once **X2:** Press twice **Hold:** Press and hold

 X1 Hold	 Volume up Short press to increase the volume by 1 step (total 16 steps)	 NC	Active noise reduction Toggle the NC switch to turn on the active noise cancellation functions, turn off or return to the regular mode. The active noise cancellation function can be used in both the on and off state.
	 Next song Long press 1S to switch to the next song		
X1 Hold	 Volume down Short press to decrease the volume by 1 step 1/16 steps in total	 +  - Hold	Restore factory settings When the headset is switched on, Press and hold the plus and minus keys simultaneously for 8 seconds to restore the factory settings
	 Previous song Long press 1S to switch to the previous song		
X1 Hold	 Play/Pause music button. Switch between play/pause	 Answer/Hang up Short press on/off button to answer/hang up call	
	 Last number replay In non-call mode, double press the switch button		
X2 Hold	 Reject In phone mode: Long press ≥2S to reject the call	Hold	On/Off button Press and hold the power button 3S to turn on, press and hold the power button 3S to turn off

Download the TOZO App for UI customization, EQ settings and more.


- UI customization: Most of the controls can be customized in the App.
- EQ settings: There're lots of EQ settings you can choose in the App to optimize your experience while enjoying different music genres.
- Earbuds firmware update: The earbuds firmware can be updated in the App. You will be informed once the new version of firmware is detected when you connect the earbuds with the App.

Step1:
TOZO APP can be downloaded from the TOZO website and Google Play and Apple APP Store.




EN

Step2:
Bluetooth pairing with your headphones

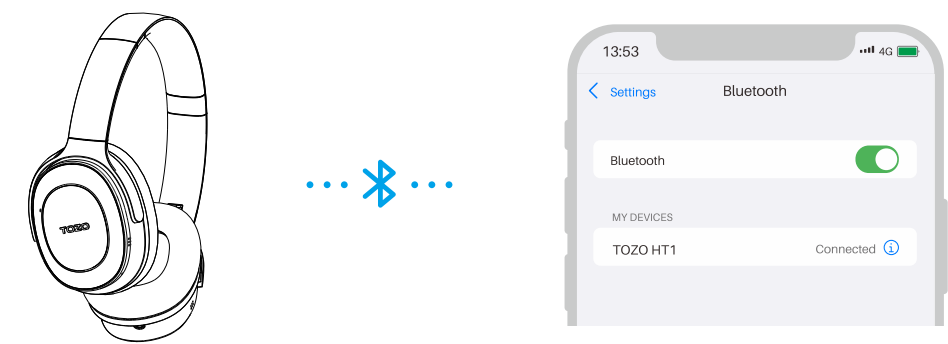

Step 3:
Open the TOZO APP and pairing with your HT1.

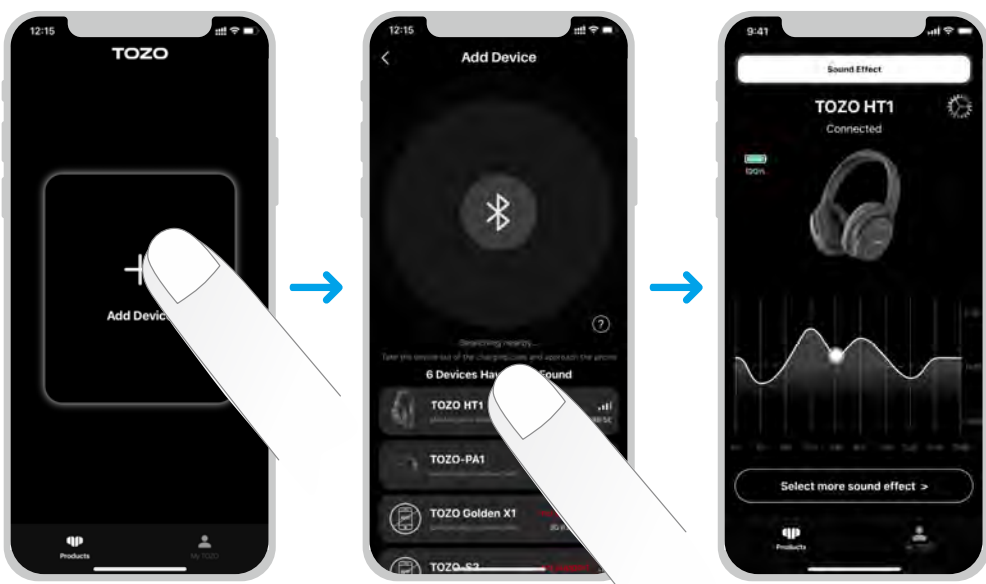

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.