


SISO 2

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz

Vertical

130 dBuV/m

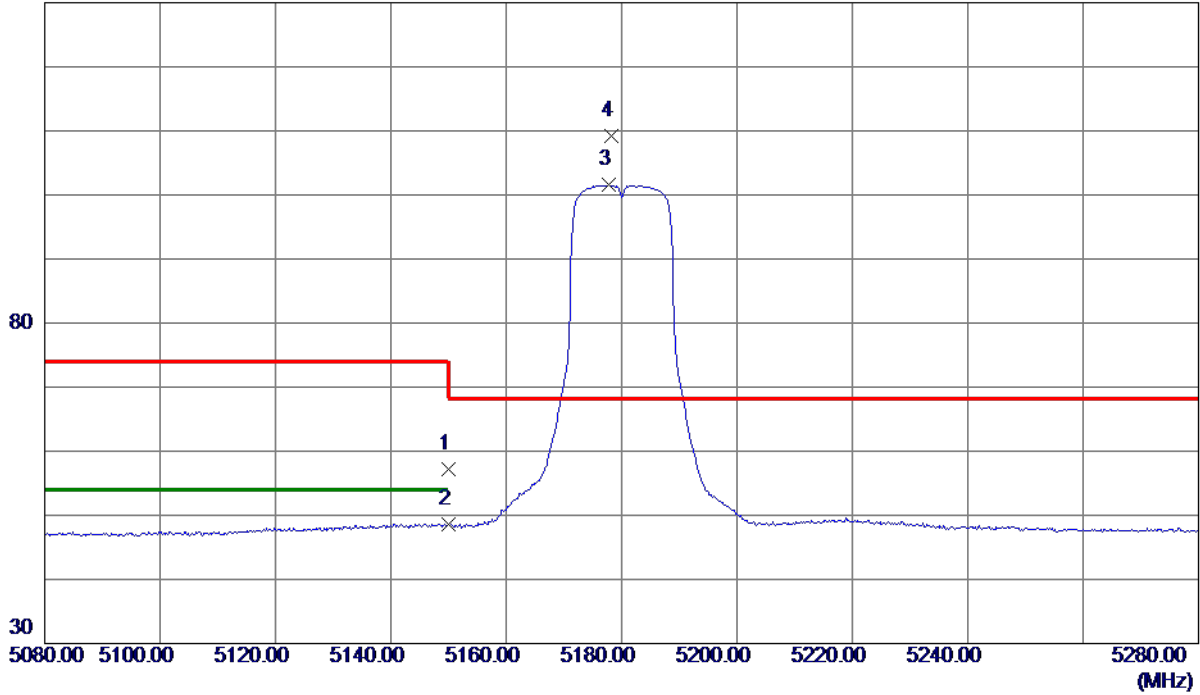

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.04	16.16	57.20	74.00	-16.80	Peak	
2	5150.0000	32.41	16.16	48.57	54.00	-5.43	AVG	
3	5177.8000	85.31	16.22	101.53	999.00	-897.47	AVG	No Limit
4 *	5178.2000	93.07	16.22	109.29	68.30	40.99	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz

Horizontal

130 dBuV/m

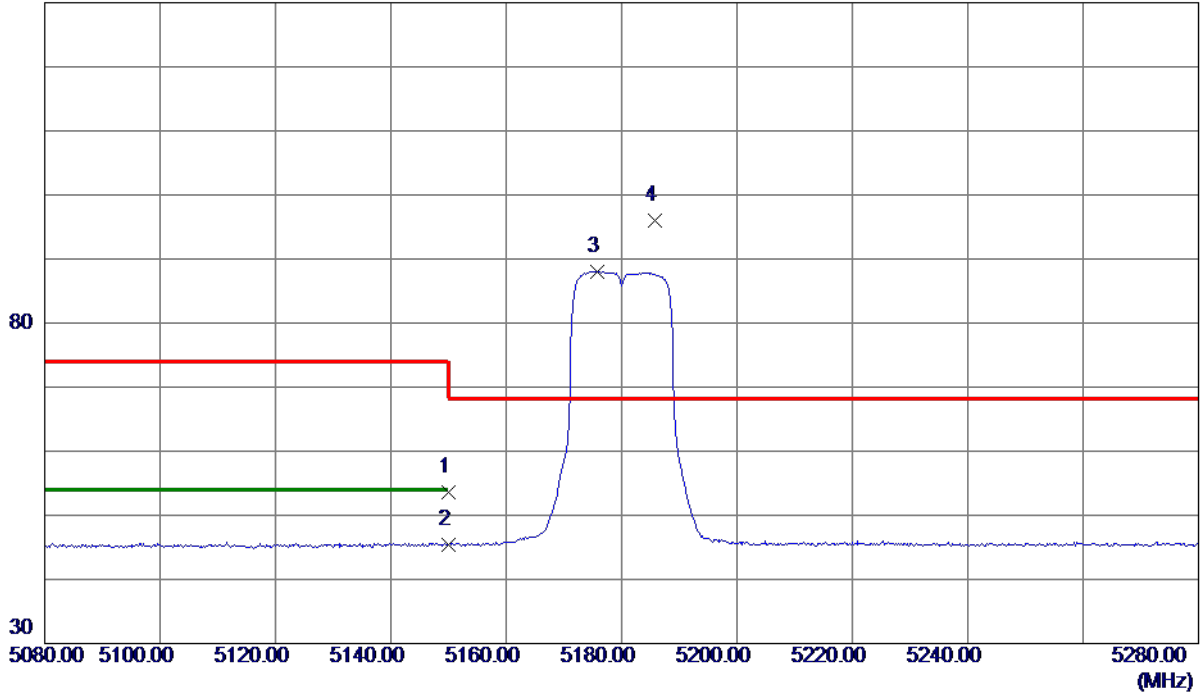

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.43	16.16	53.59	74.00	-20.41	Peak	
2	5150.0000	29.24	16.16	45.40	54.00	-8.60	AVG	
3	5175.8000	71.82	16.22	88.04	999.00	-910.96	AVG	No Limit
4 *	5185.8000	79.79	16.24	96.03	68.30	27.73	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz

Vertical

130 dBuV/m

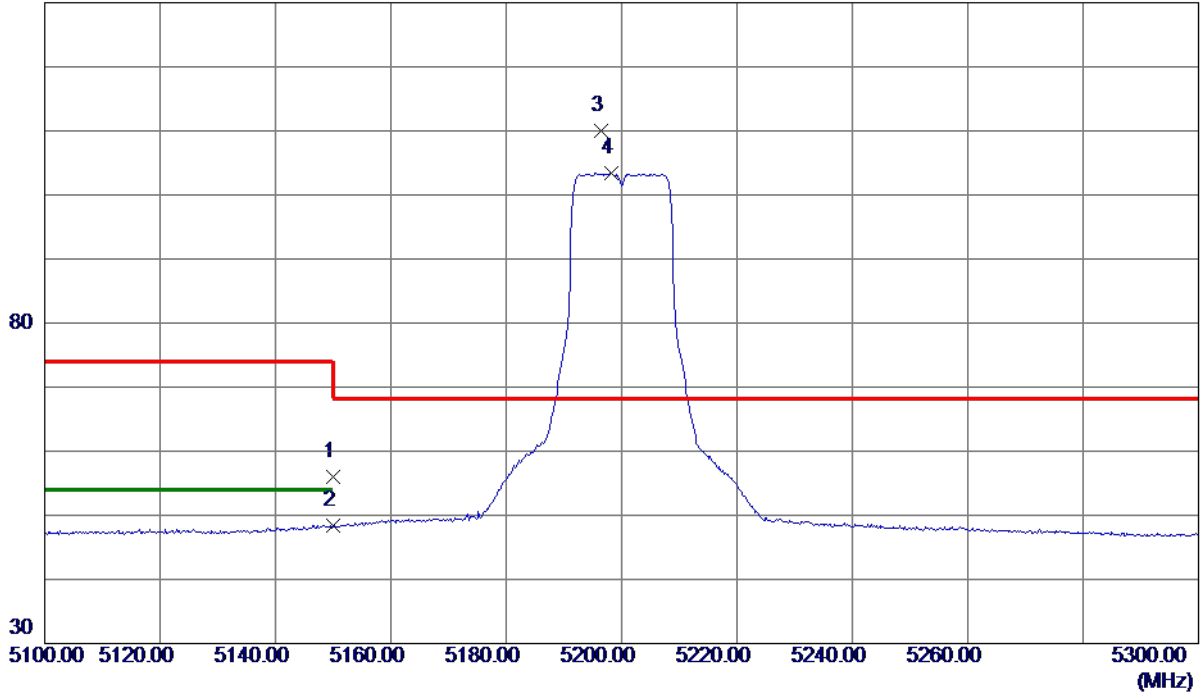

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	39.91	16.16	56.07	74.00	-17.93	Peak	
2	5150.0000	32.17	16.16	48.33	54.00	-5.67	AVG	
3 *	5196.4000	93.65	16.27	109.92	68.30	41.62	Peak	No Limit
4	5198.2000	87.11	16.27	103.38	999.00	-895.62	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz

Horizontal

130 dBuV/m

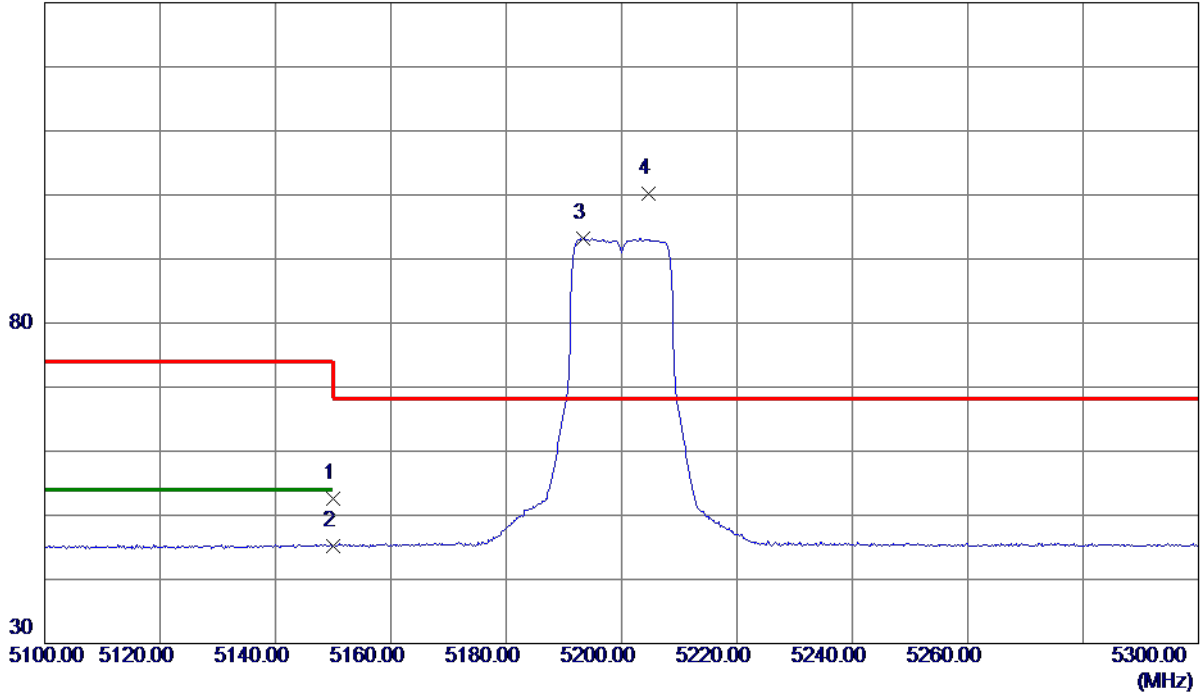


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.52	16.16	52.68	74.00	-21.32	Peak	
2	5150.0000	29.12	16.16	45.28	54.00	-8.72	AVG	
3	5193.4000	76.95	16.26	93.21	999.00	-905.79	AVG	No Limit
4 *	5204.6000	83.97	16.28	100.25	68.30	31.95	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5220 MHz

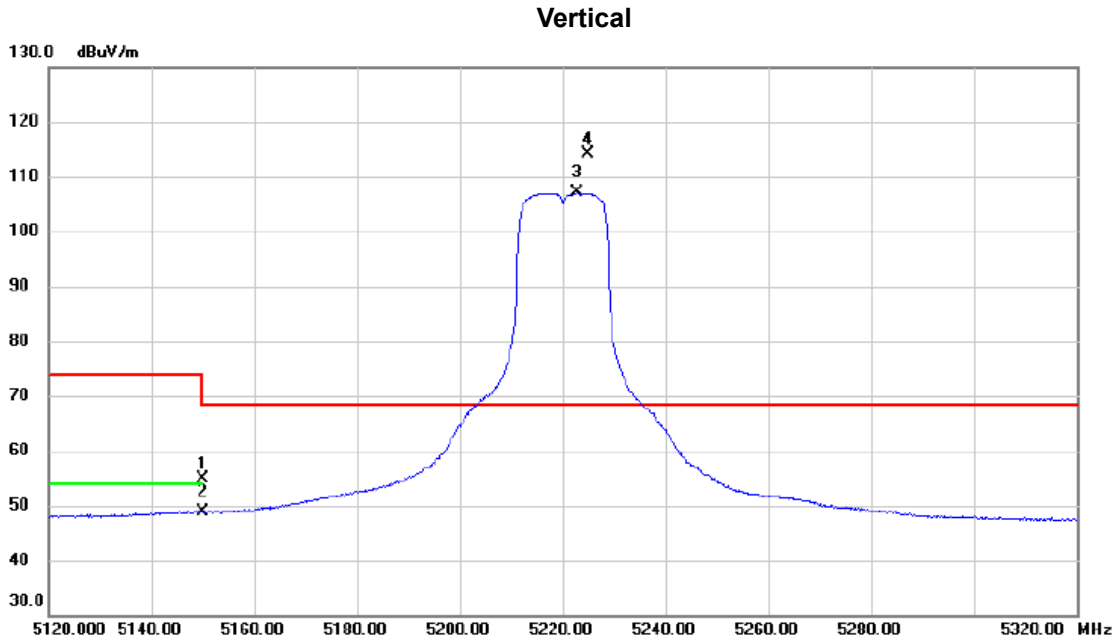


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	38.74	16.15	54.89	74.00	-19.11	peak	
2		5150.000	32.69	16.15	48.84	54.00	-5.16	AVG	
3	X	5222.800	90.70	16.33	107.03	68.30	38.73	AVG	No Limit
4	*	5224.800	97.90	16.33	114.23	68.30	45.93	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5220 MHz

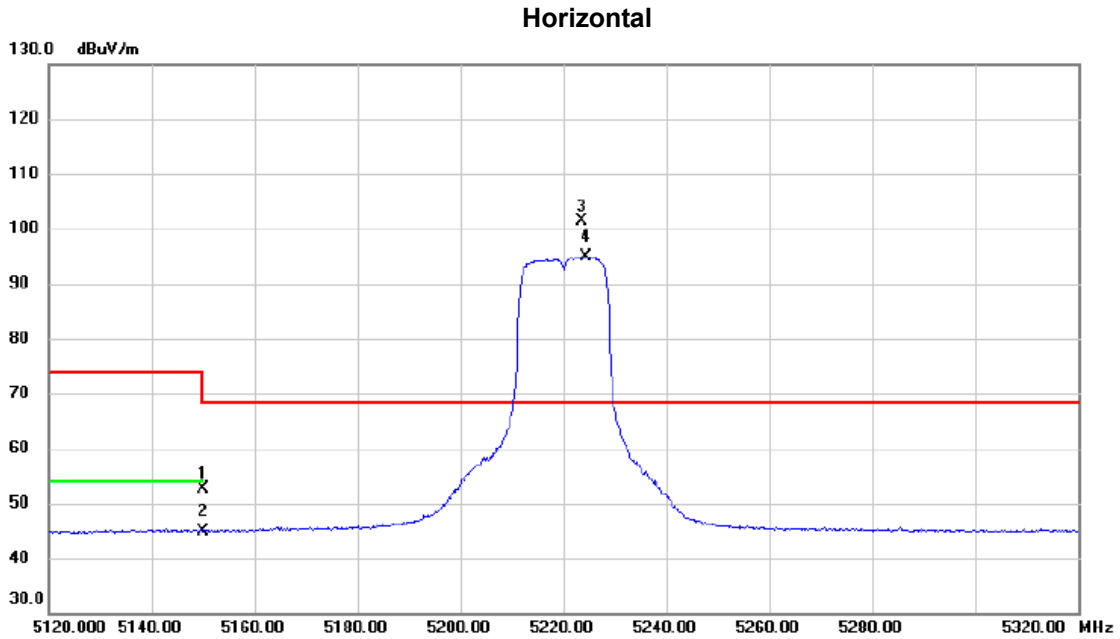

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	36.45	16.15	52.60	74.00	-21.40	peak	
2		5150.000	28.82	16.15	44.97	54.00	-9.03	AVG	
3	*	5223.600	85.08	16.33	101.41	68.30	33.11	peak	No Limit
4	X	5224.400	78.66	16.33	94.99	68.30	26.69	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Vertical

130 dBuV/m

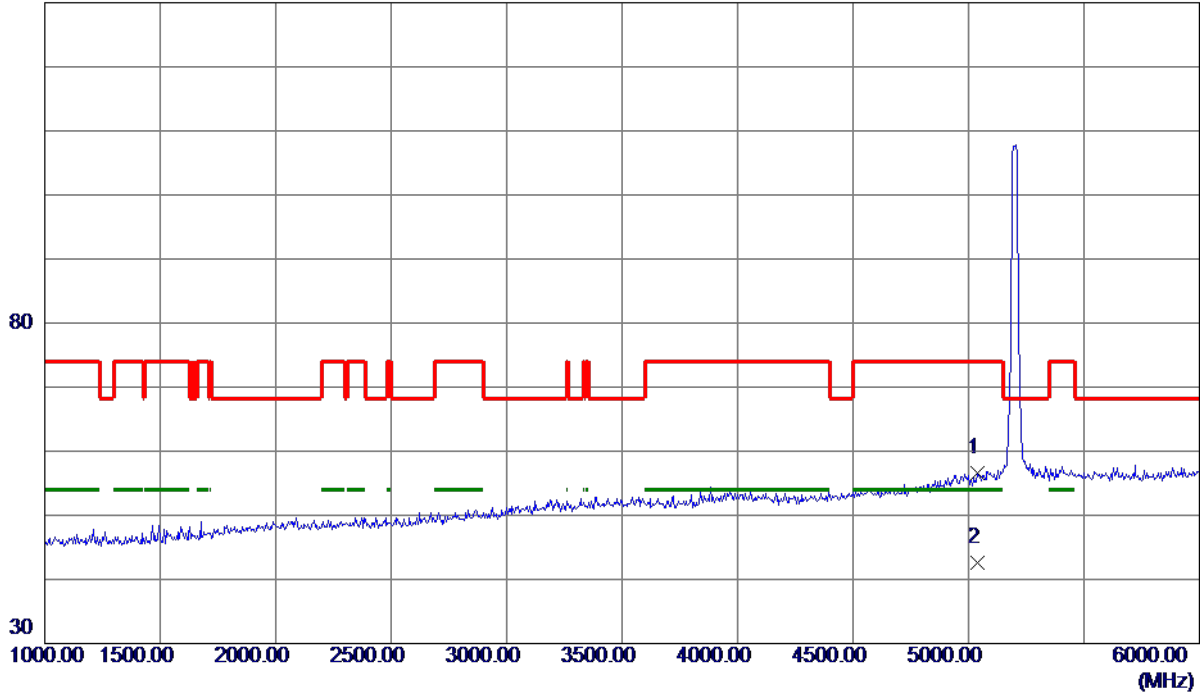

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5040.0000	40.75	15.89	56.64	74.00	-17.36	Peak	
2 *	5040.0000	26.63	15.89	42.52	54.00	-11.48	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Vertical

130 dBuV/m

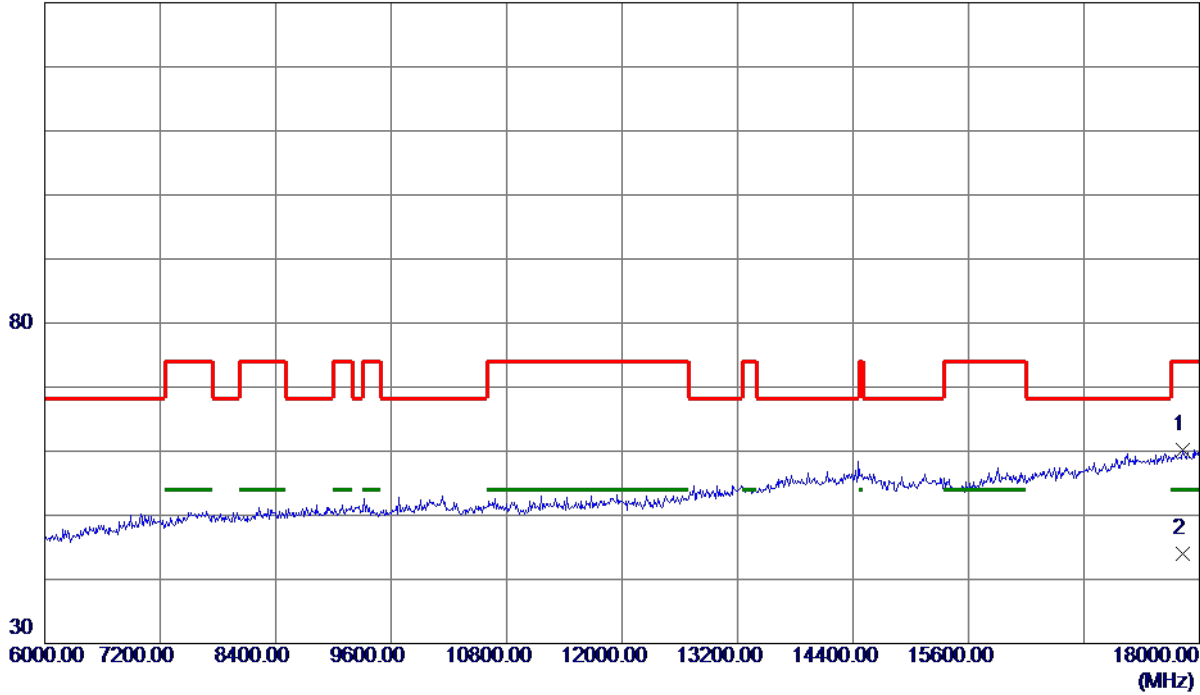

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17832.0000	38.05	22.20	60.25	74.00	-13.75	Peak	
2 *	17832.0000	21.71	22.20	43.91	54.00	-10.09	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Vertical

130 dBuV/m

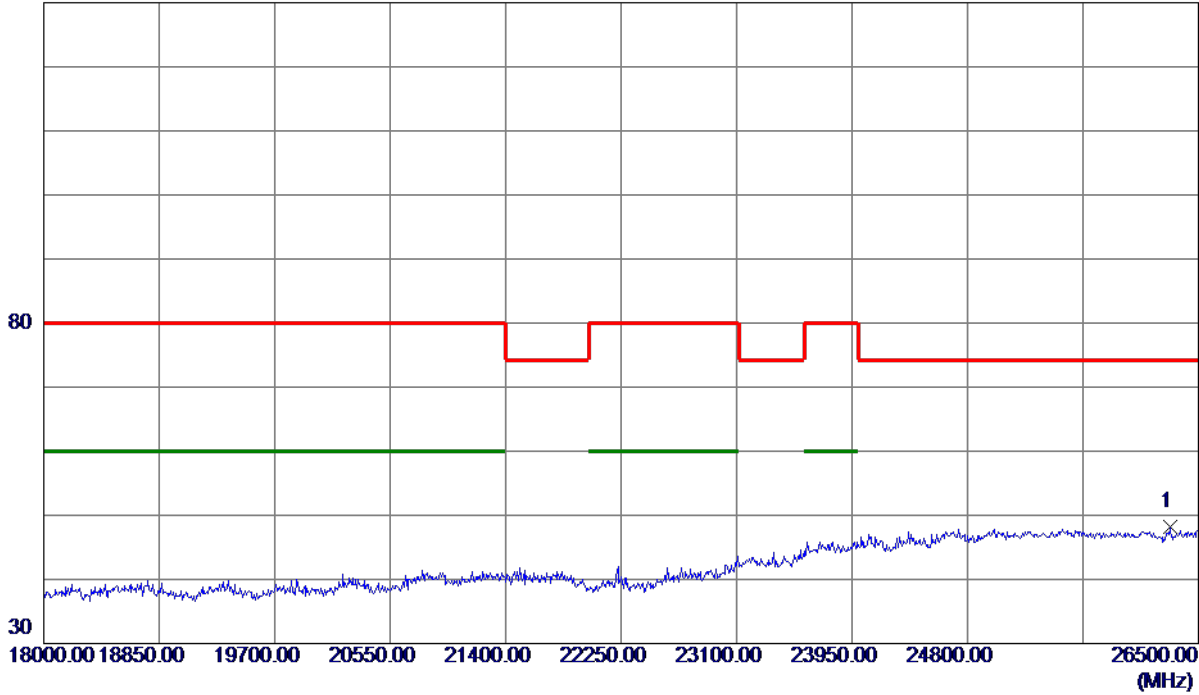


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26291.7500	27.85	20.32	48.17	74.30	-26.13	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

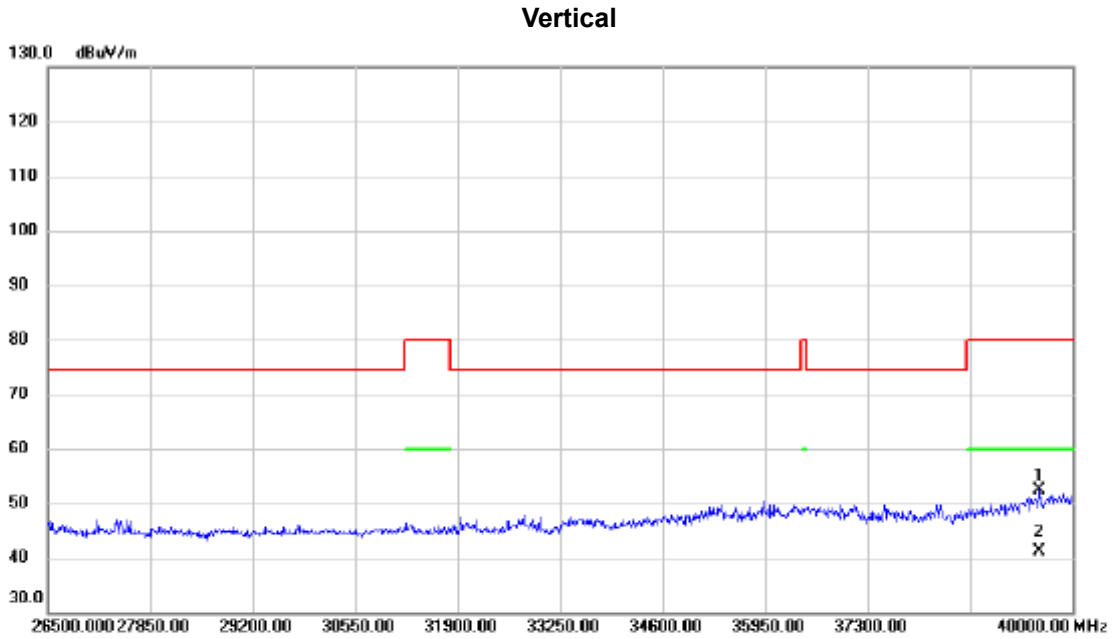

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39561.250	36.98	15.34	52.32	80.00	-27.68	peak	
2	*	39561.250	25.78	15.34	41.12	60.00	-18.88	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

130 dBuV/m

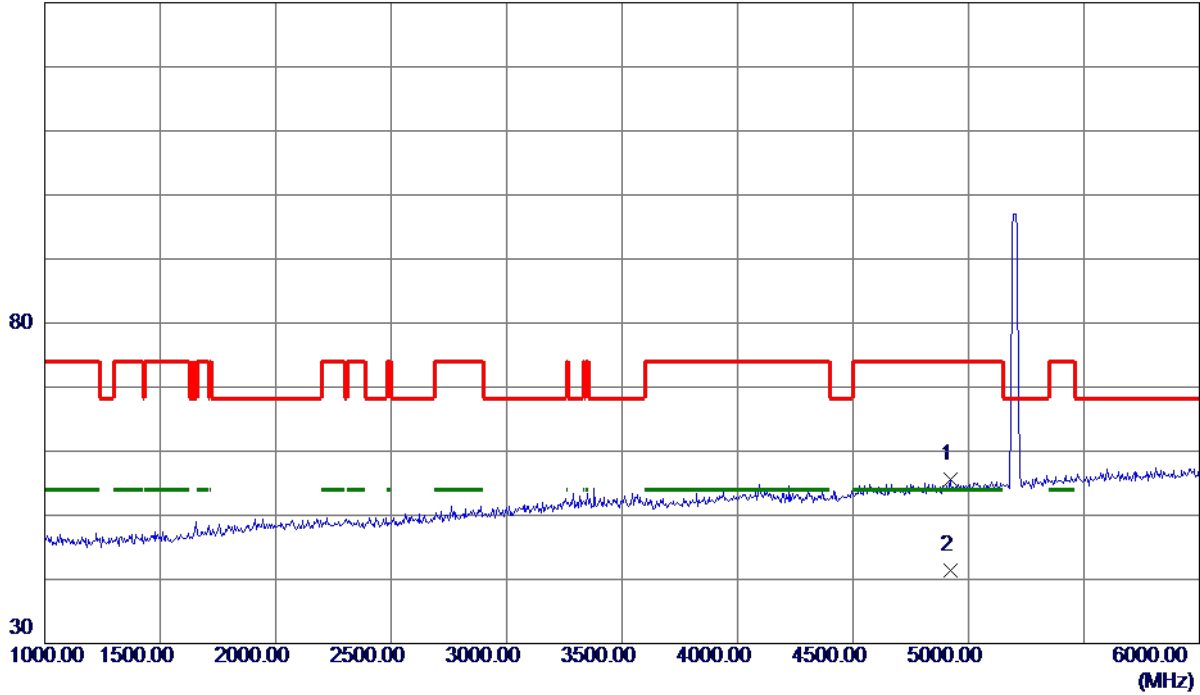

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4920.0000	40.02	15.58	55.60	74.00	-18.40	Peak	
2 *	4920.0000	25.74	15.58	41.32	54.00	-12.68	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

130 dBuV/m

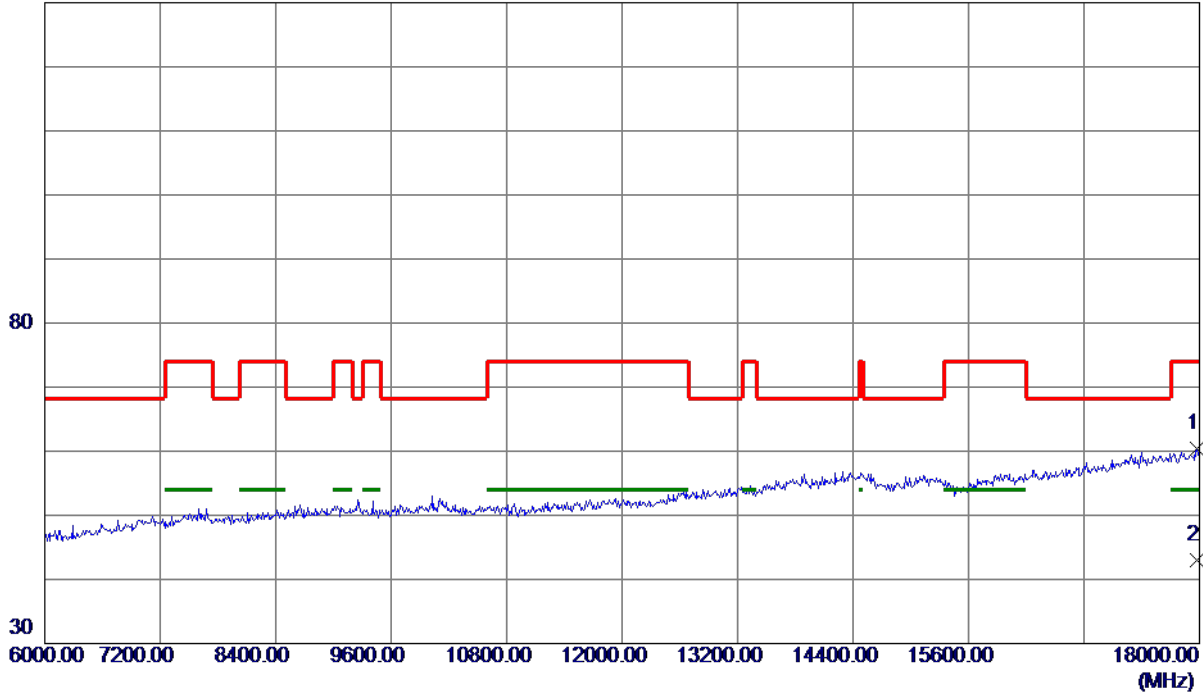

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17976.0000	38.06	22.29	60.35	74.00	-13.65	Peak	
2 *	17976.0000	20.79	22.29	43.08	54.00	-10.92	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

130 dBuV/m

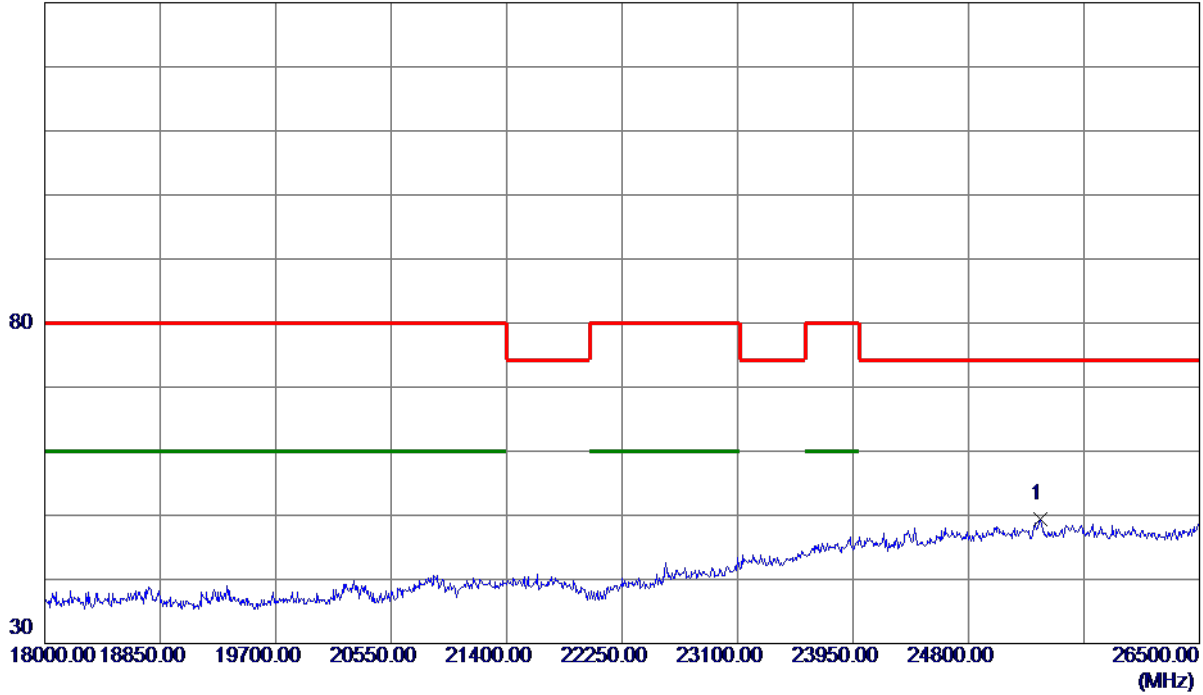


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25327.0000	29.43	20.03	49.46	74.30	-24.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

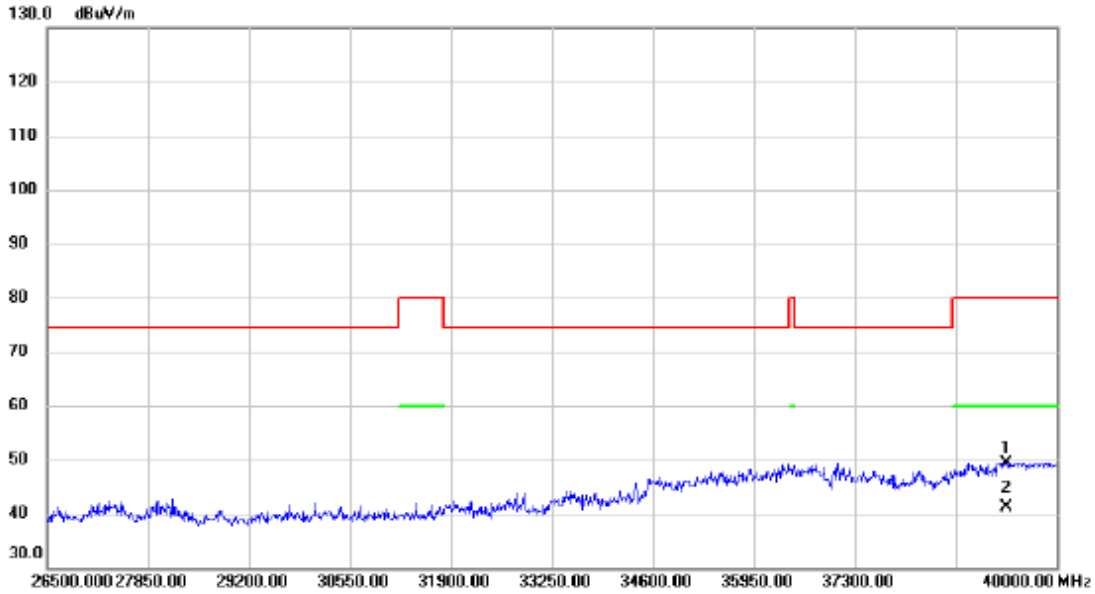

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39331.750	34.89	14.60	49.49	80.00	-30.51	peak	
2 *		39331.750	26.45	14.60	41.05	60.00	-18.95	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz

Vertical

130 dBuV/m

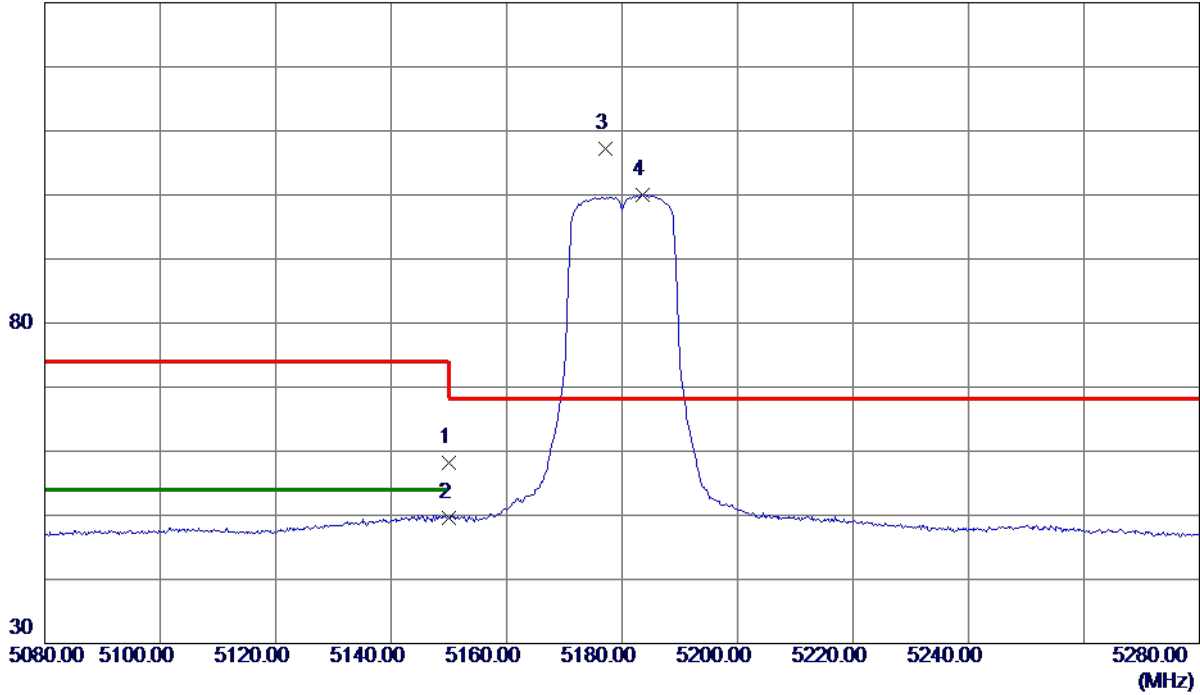

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	42.02	16.16	58.18	74.00	-15.82	Peak	
2	5150.0000	33.41	16.16	49.57	54.00	-4.43	AVG	
3 *	5177.2000	90.97	16.22	107.19	68.30	38.89	Peak	No Limit
4	5183.6000	83.82	16.24	100.06	999.00	-898.94	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz

Horizontal

130 dBuV/m

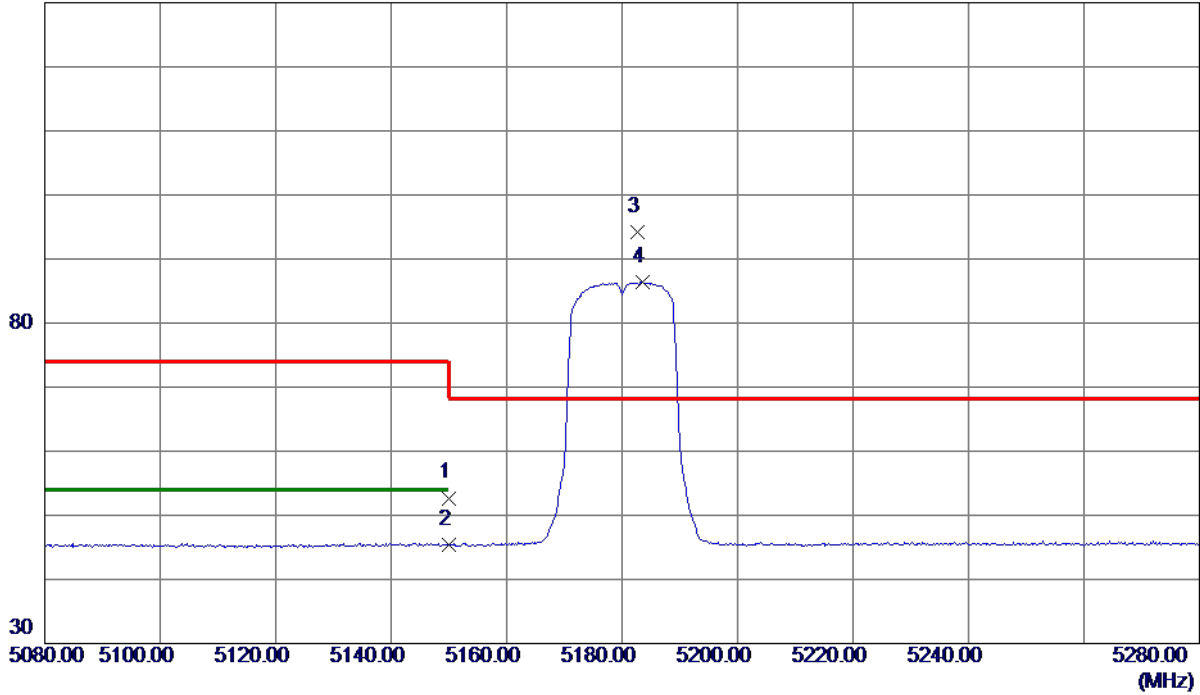

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.54	16.16	52.70	74.00	-21.30	Peak	
2	5150.0000	29.19	16.16	45.35	54.00	-8.65	AVG	
3 *	5182.6000	77.99	16.23	94.22	68.30	25.92	Peak	No Limit
4	5183.6000	70.16	16.24	86.40	999.00	-912.60	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz

Vertical

130 dBuV/m

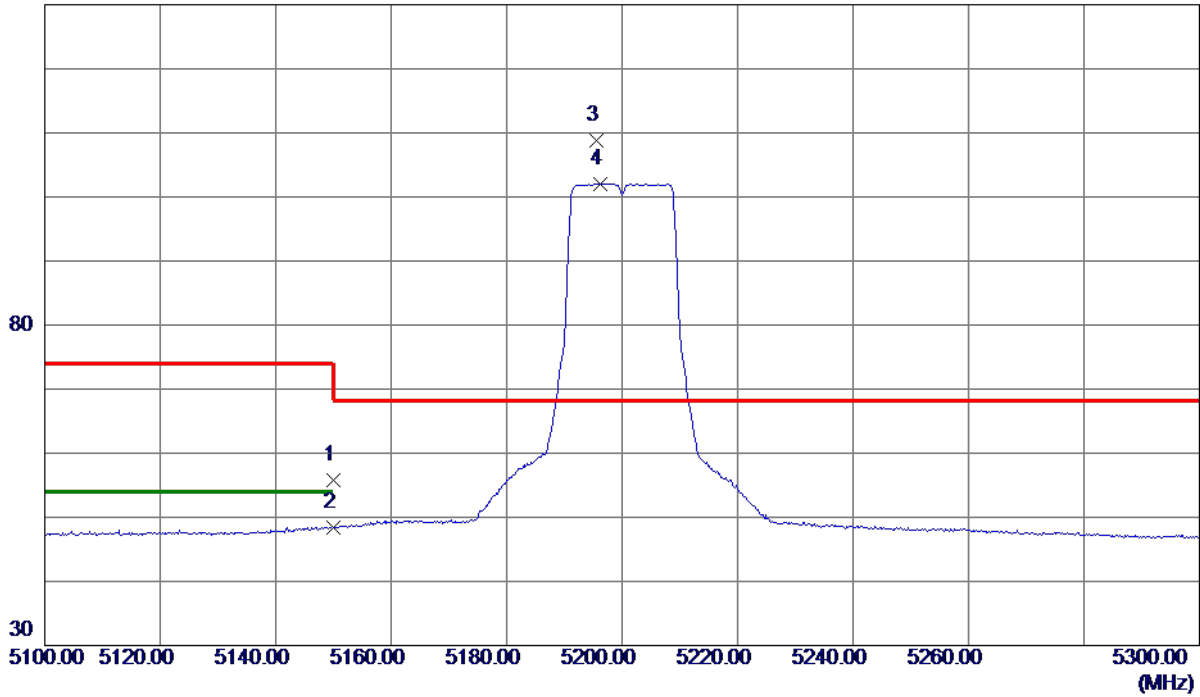

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	39.60	16.16	55.76	74.00	-18.24	Peak	
2	5150.0000	32.16	16.16	48.32	54.00	-5.68	AVG	
3 *	5195.6000	92.62	16.26	108.88	68.30	40.58	Peak	No Limit
4	5196.2000	85.80	16.27	102.07	999.00	-896.93	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz

Horizontal

130 dBuV/m

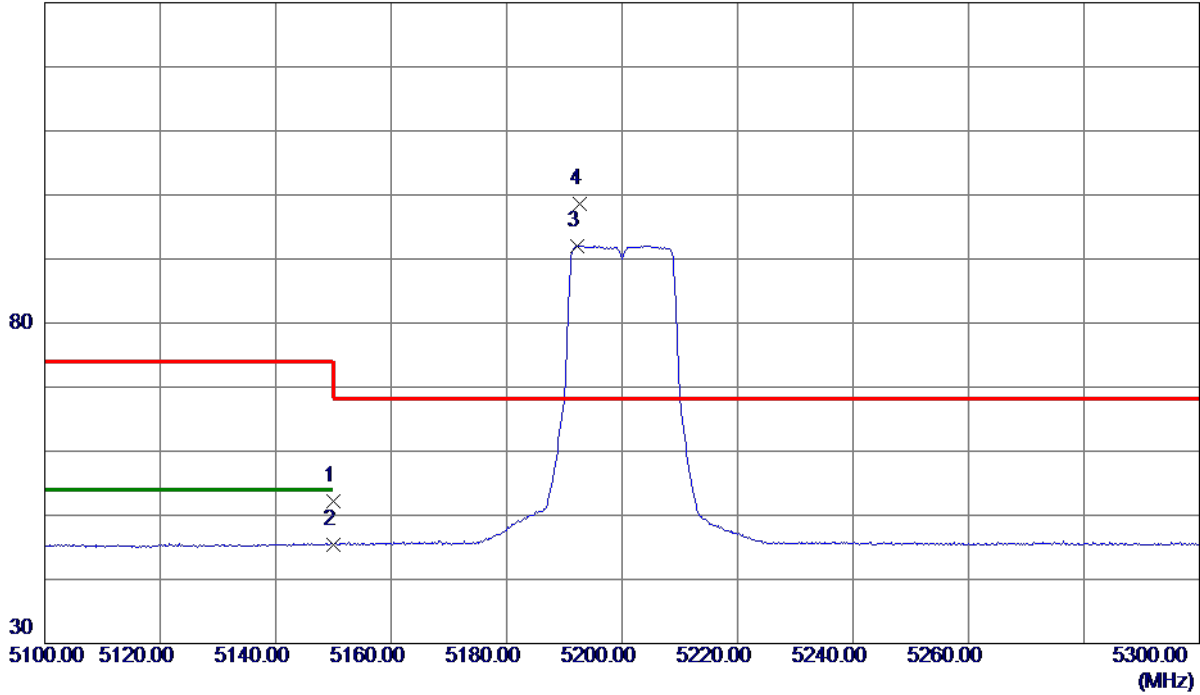


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.01	16.16	52.17	74.00	-21.83	Peak	
2	5150.0000	29.25	16.16	45.41	54.00	-8.59	AVG	
3	5192.2000	75.75	16.26	92.01	999.00	-906.99	AVG	No Limit
4 *	5192.6000	82.43	16.26	98.69	68.30	30.39	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5220 MHz

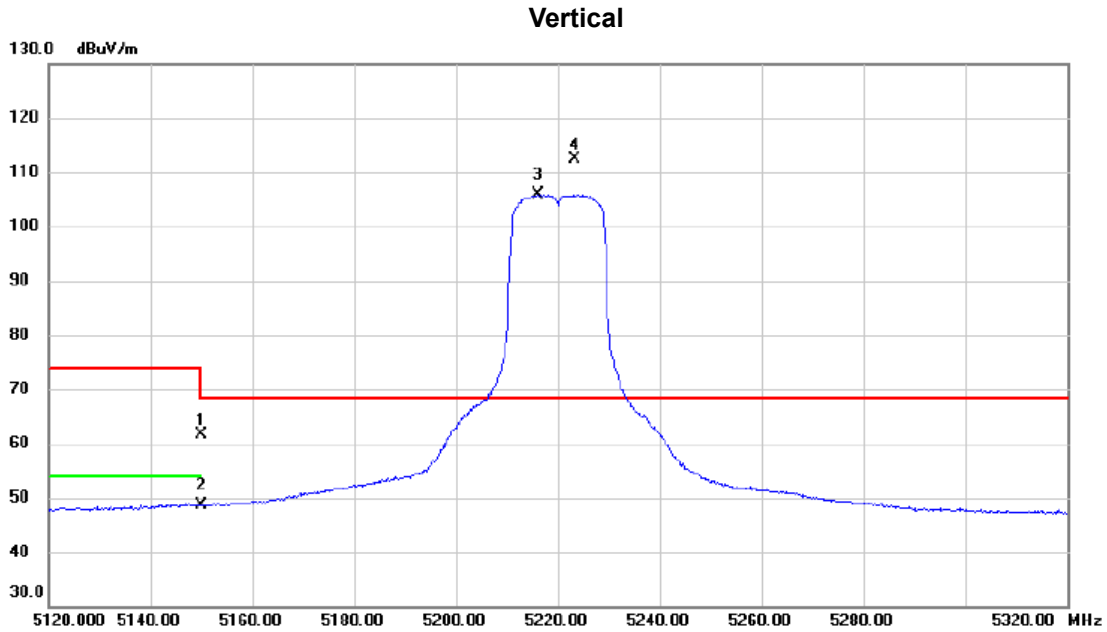


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	45.42	16.15	61.57	74.00	-12.43	peak	
2		5150.000	32.54	16.15	48.69	54.00	-5.31	AVG	
3	X	5216.000	89.51	16.31	105.82	68.30	37.52	AVG	No Limit
4	*	5223.400	96.12	16.33	112.45	68.30	44.15	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5220 MHz

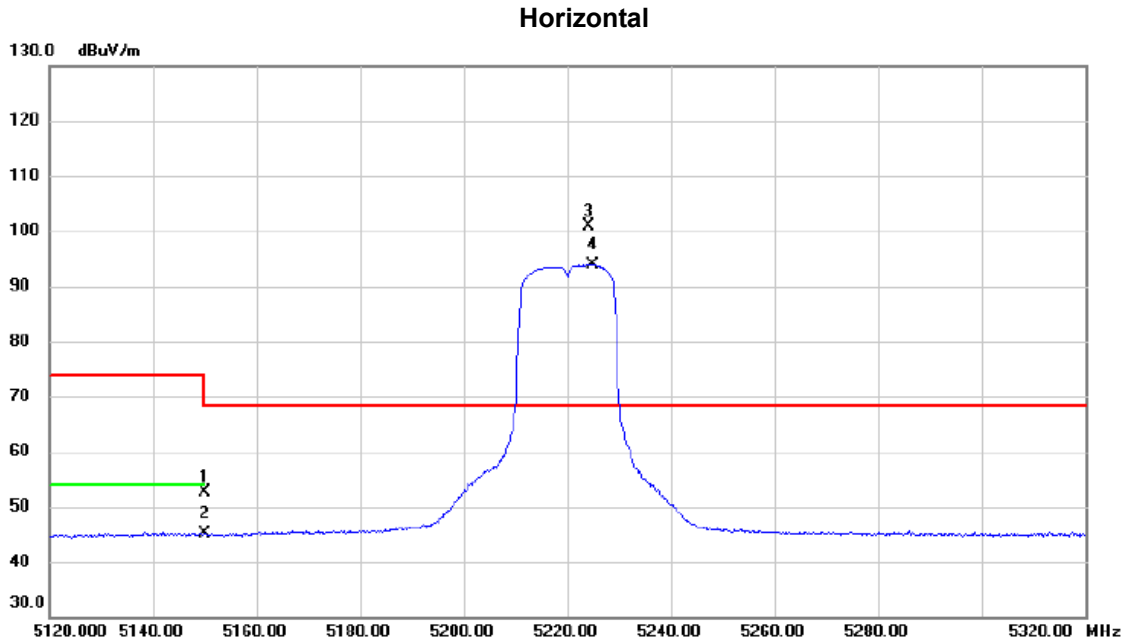

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		5150.000	36.49	16.15	52.64	74.00	-21.36	peak	
2		5150.000	29.01	16.15	45.16	54.00	-8.84	AVG	
3	*	5224.000	84.59	16.33	100.92	68.30	32.62	peak	No Limit
4	X	5224.800	77.65	16.33	93.98	68.30	25.68	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Vertical

130 dBuV/m

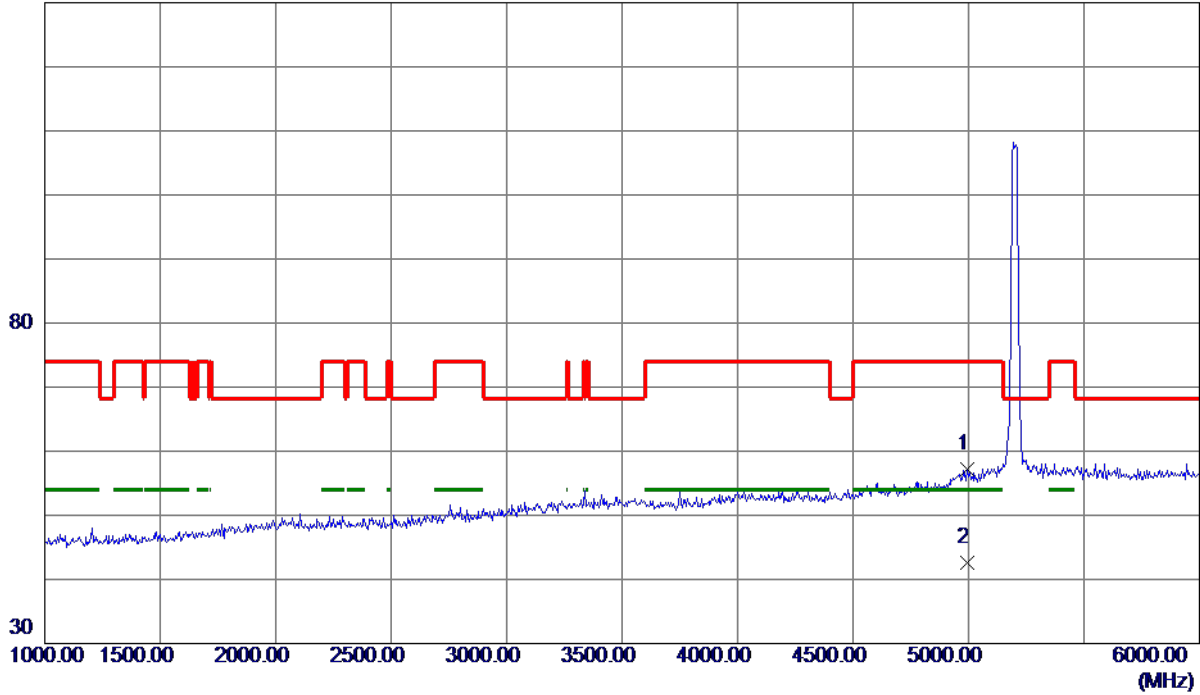

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4995.0000	41.38	15.79	57.17	74.00	-16.83	Peak	
2 *	4995.0000	26.86	15.79	42.65	54.00	-11.35	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Vertical

130 dBuV/m

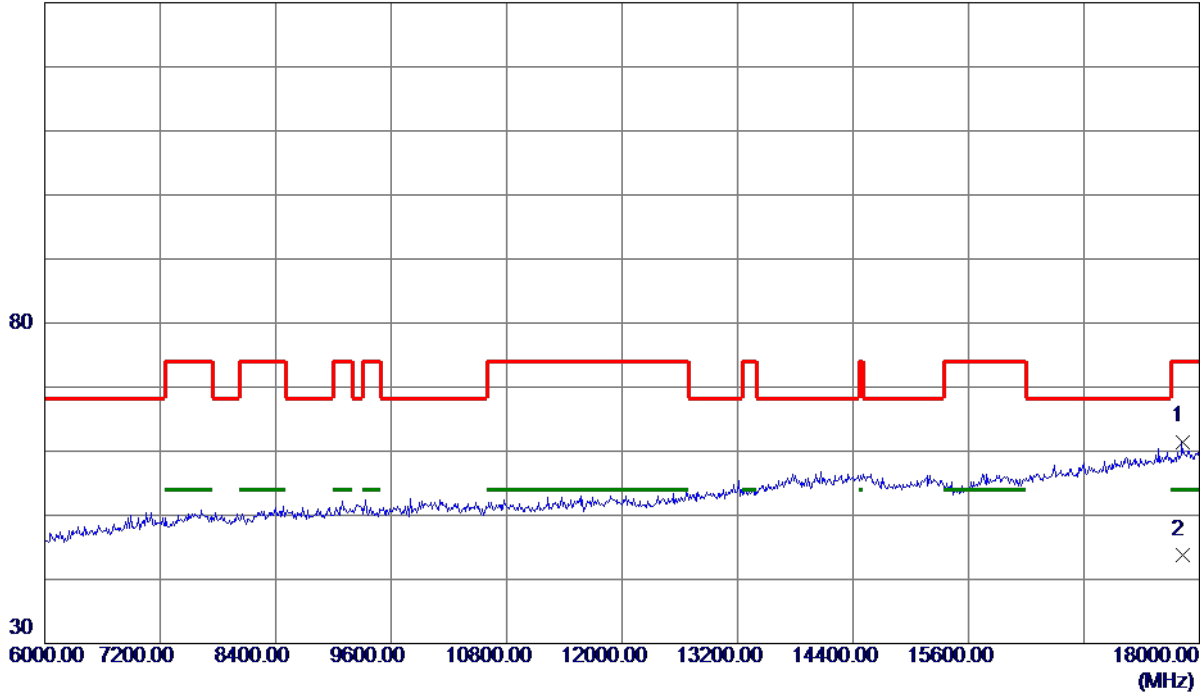

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	39.31	22.19	61.50	74.00	-12.50	Peak	
2 *	17820.0000	21.60	22.19	43.79	54.00	-10.21	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Vertical

130 dBuV/m

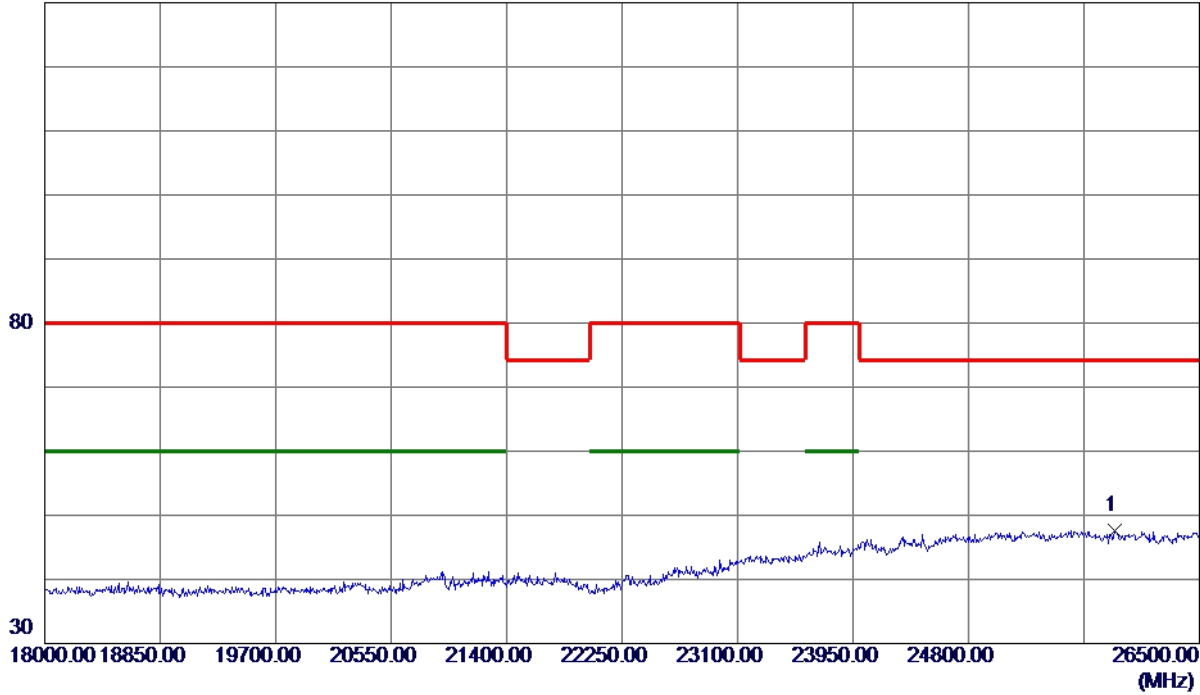


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25879.5000	27.59	20.01	47.60	74.30	-26.70	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

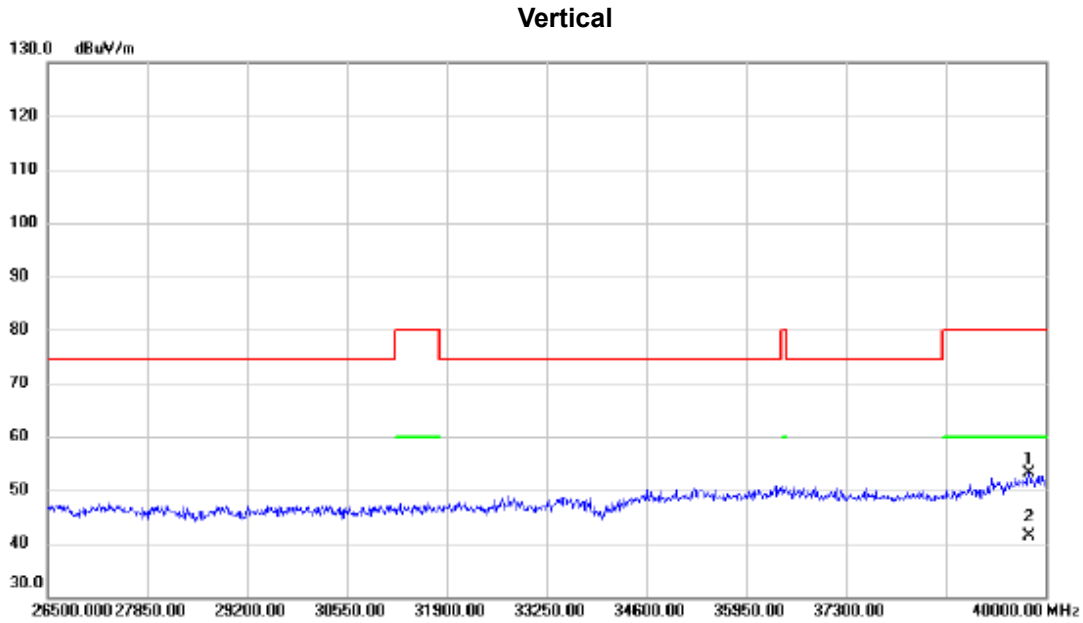

No. Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measurement dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	39770.500	37.58	15.48	53.06	80.00	-26.94	peak	
2 *	39770.500	25.78	15.48	41.26	60.00	-18.74	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

130 dBuV/m

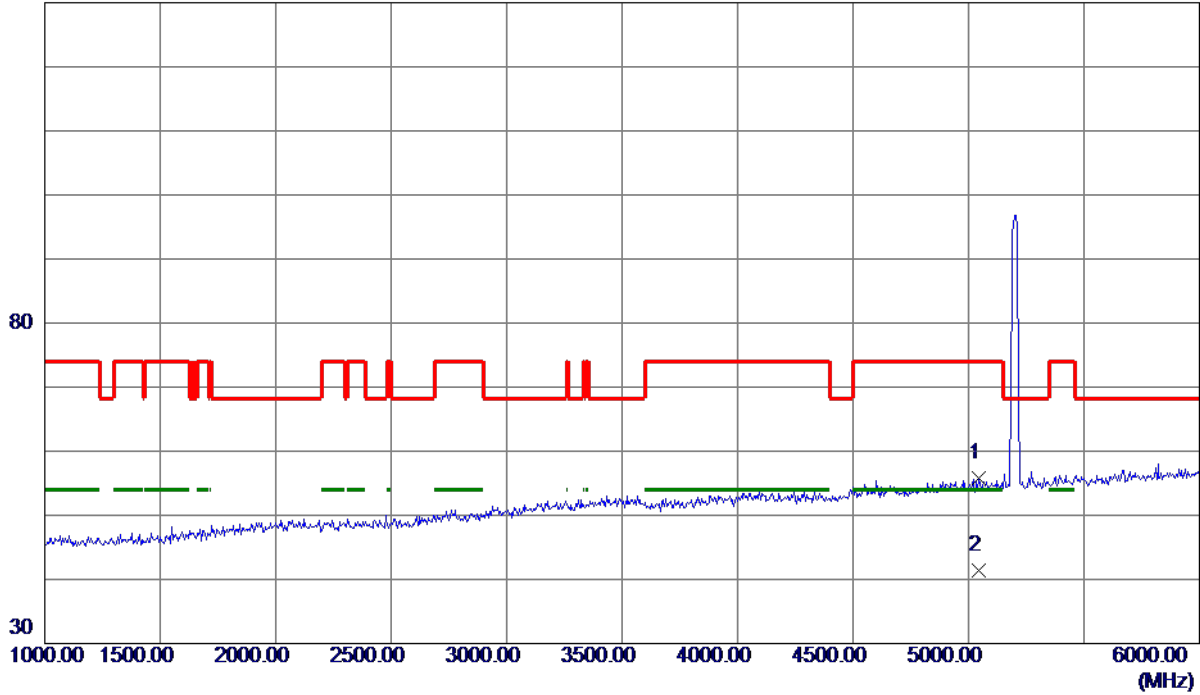

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5045.0000	39.83	15.91	55.74	74.00	-18.26	Peak	
2 *	5045.0000	25.54	15.91	41.45	54.00	-12.55	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

130 dBuV/m

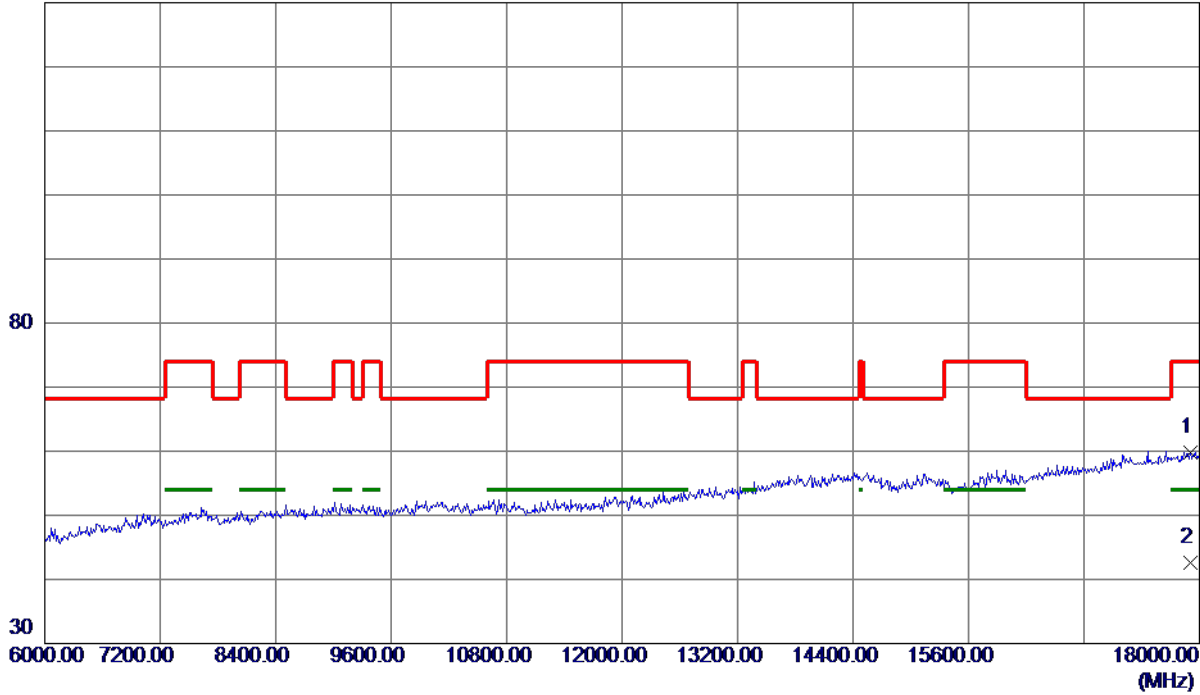

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17904.0000	37.64	22.24	59.88	74.00	-14.12	Peak	
2 *	17904.0000	20.41	22.24	42.65	54.00	-11.35	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

130 dBuV/m

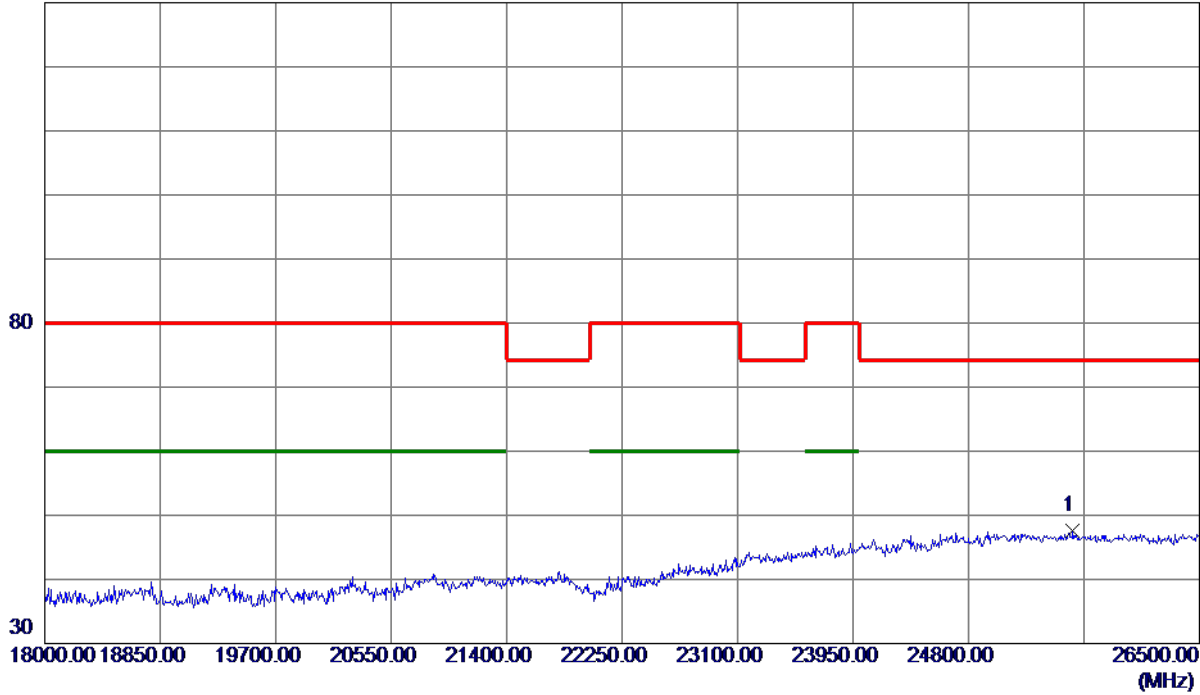


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25565.0000	27.50	20.02	47.52	74.30	-26.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

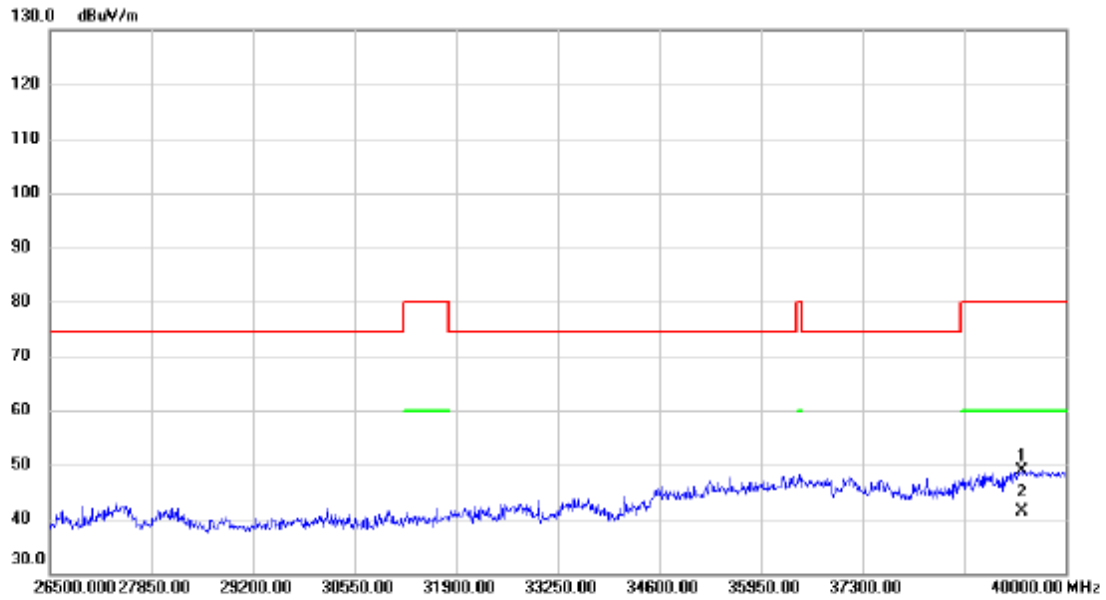

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		39406.000	33.95	14.91	48.86	80.00	-31.14	peak	
2	*	39406.000	26.45	14.91	41.36	60.00	-18.64	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz

Vertical

130 dBuV/m

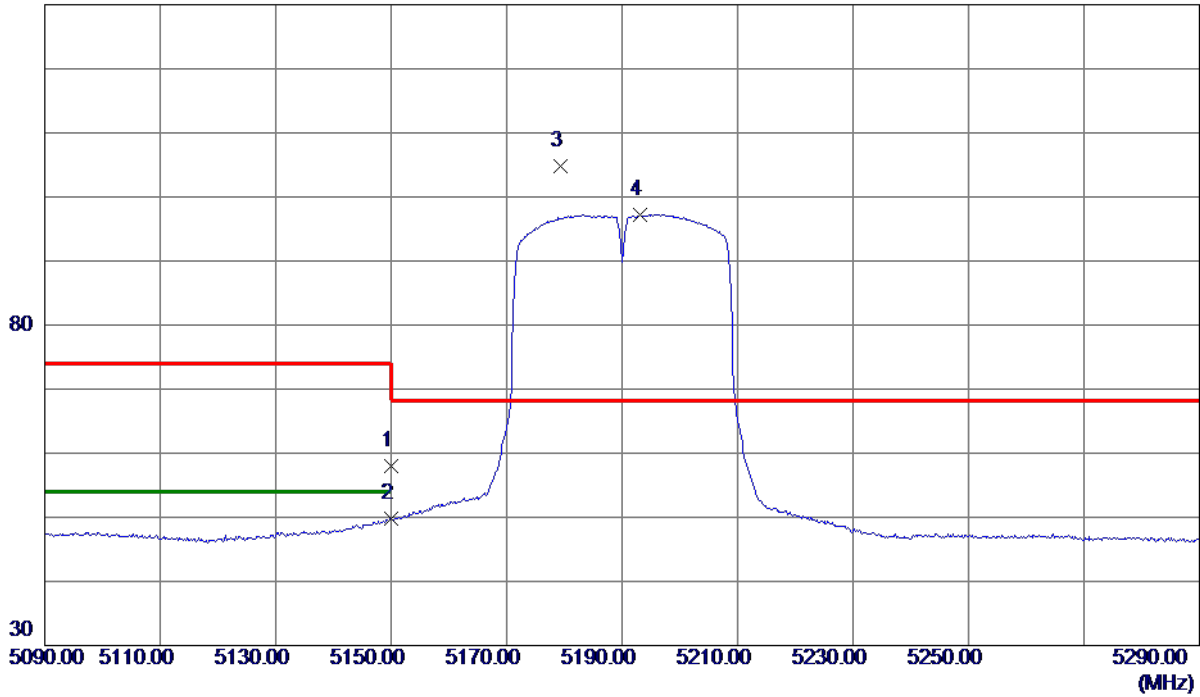

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.86	16.16	58.02	74.00	-15.98	Peak	
2	5150.0000	33.57	16.16	49.73	54.00	-4.27	AVG	
3 *	5179.4000	88.50	16.23	104.73	68.30	36.43	Peak	No Limit
4	5193.2000	81.03	16.26	97.29	999.00	-901.71	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz

Horizontal

130 dBuV/m

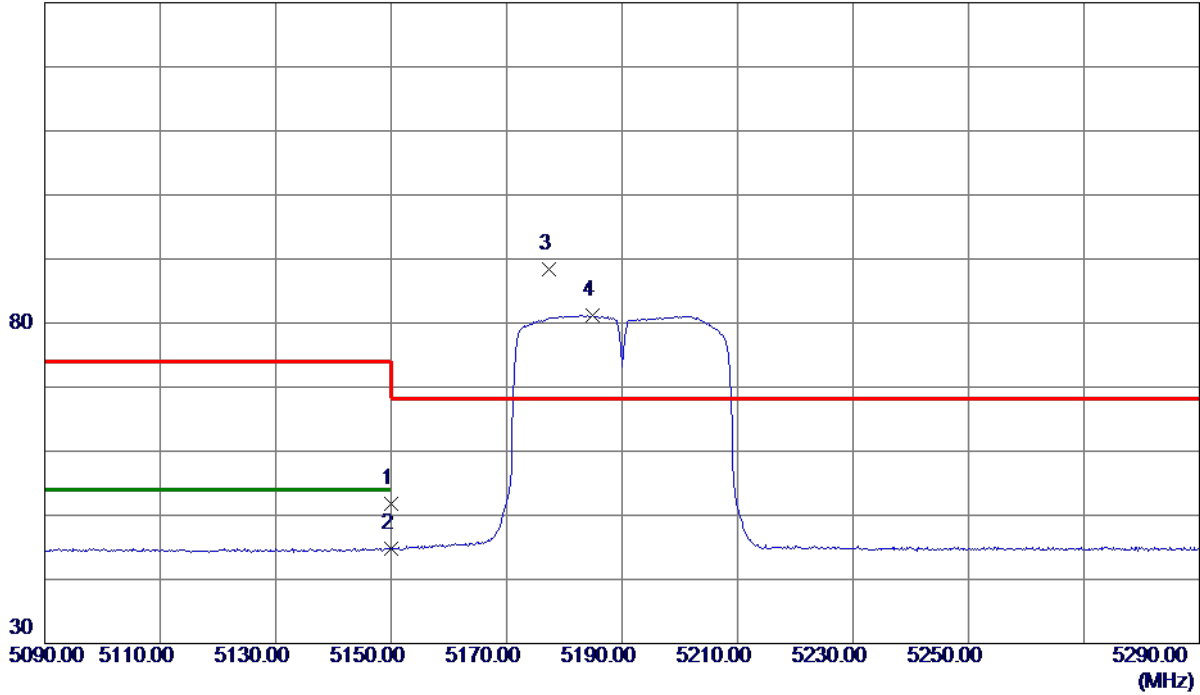

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.71	16.16	51.87	74.00	-22.13	Peak	
2	5150.0000	28.68	16.16	44.84	54.00	-9.16	AVG	
3 *	5177.4000	72.12	16.22	88.34	68.30	20.04	Peak	No Limit
4	5184.8000	64.98	16.24	81.22	999.00	-917.78	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

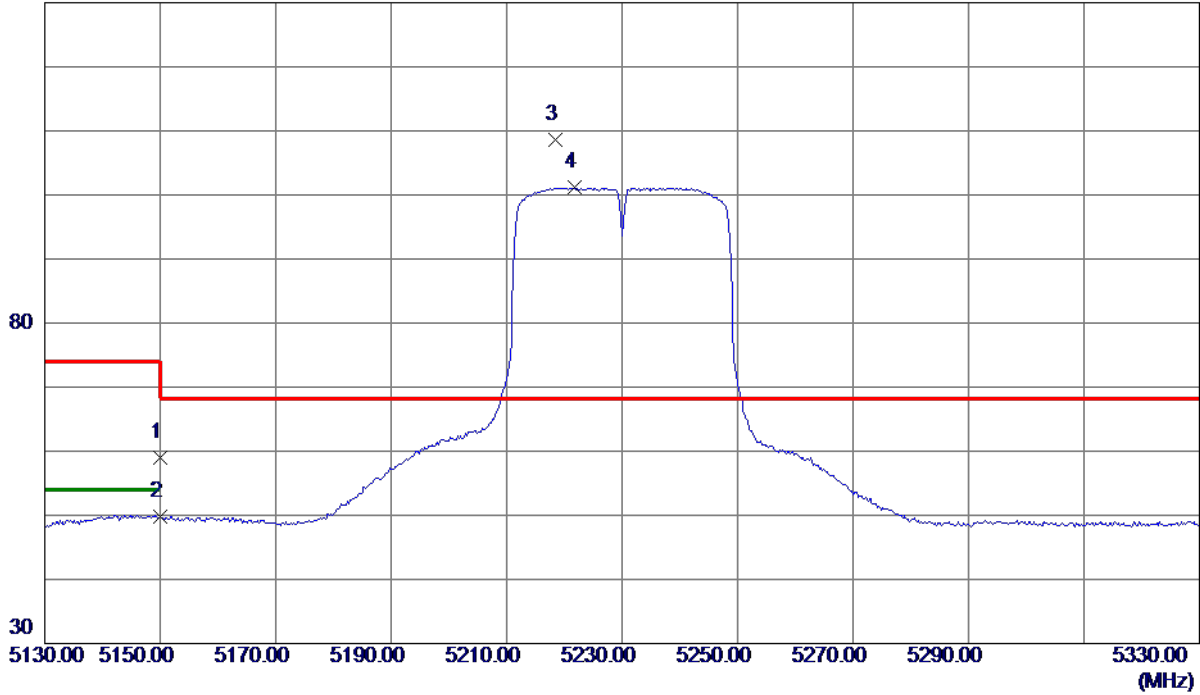

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	42.75	16.16	58.91	74.00	-15.09	Peak	
2	5150.0000	33.65	16.16	49.81	54.00	-4.19	AVG	
3 *	5218.4000	92.33	16.32	108.65	68.30	40.35	Peak	No Limit
4	5221.8000	84.82	16.33	101.15	999.00	-897.85	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

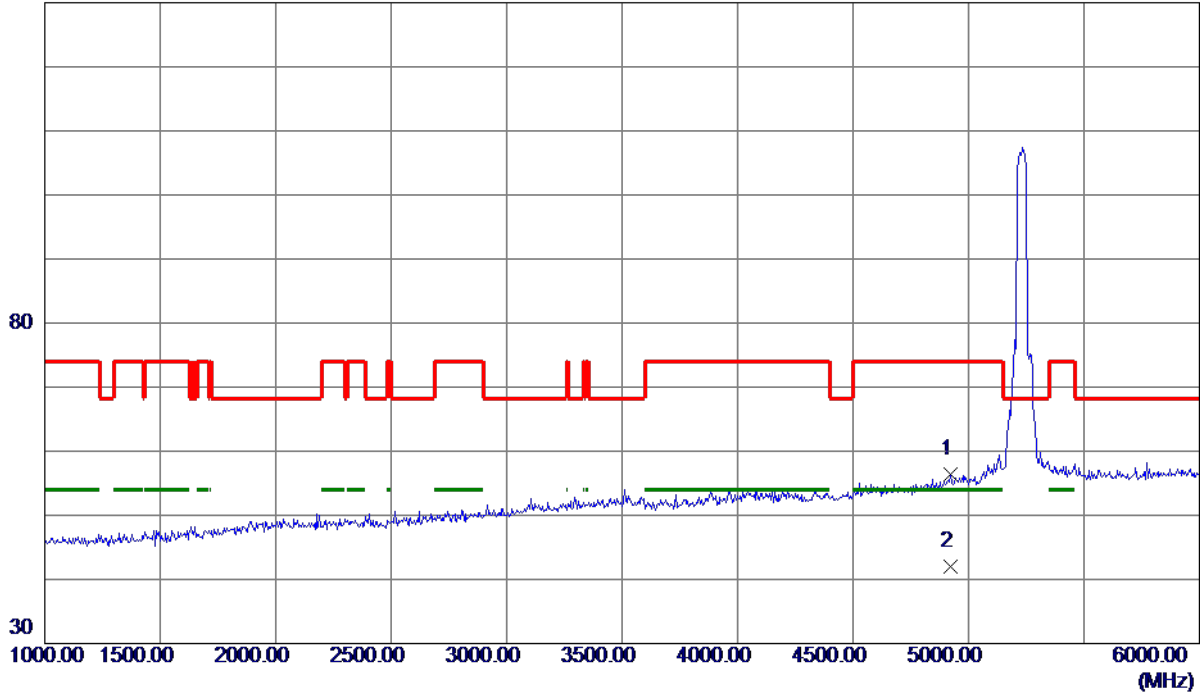

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4920.0000	40.73	15.58	56.31	74.00	-17.69	Peak	
2 *	4920.0000	26.39	15.58	41.97	54.00	-12.03	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

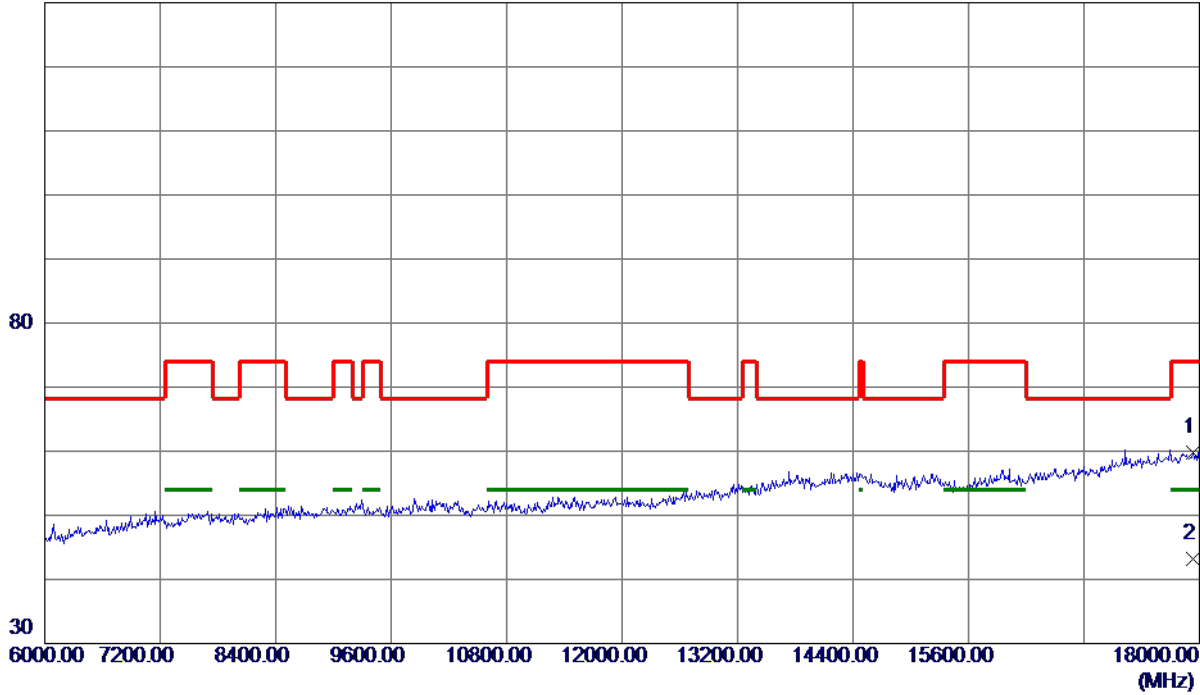

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17928.0000	37.63	22.26	59.89	74.00	-14.11	Peak	
2 *	17928.0000	20.86	22.26	43.12	54.00	-10.88	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

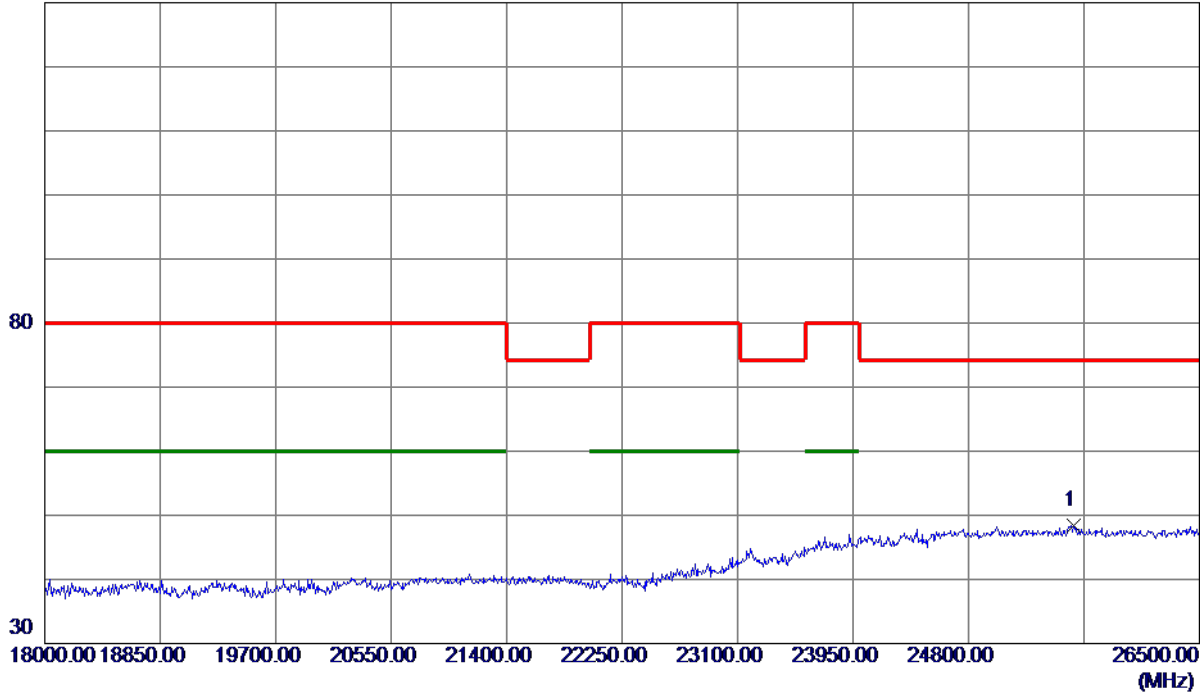


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25577.7500	28.37	20.02	48.39	74.30	-25.91	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

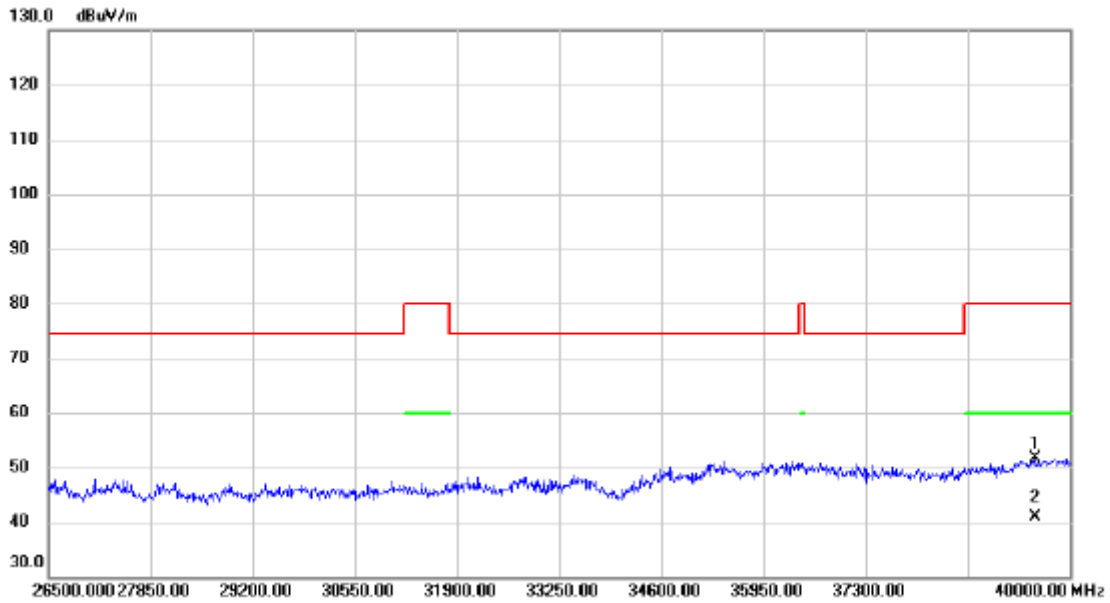

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39534.250	36.36	15.33	51.69	80.00	-28.31	peak	
2	*	39534.250	25.46	15.33	40.79	60.00	-19.21	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

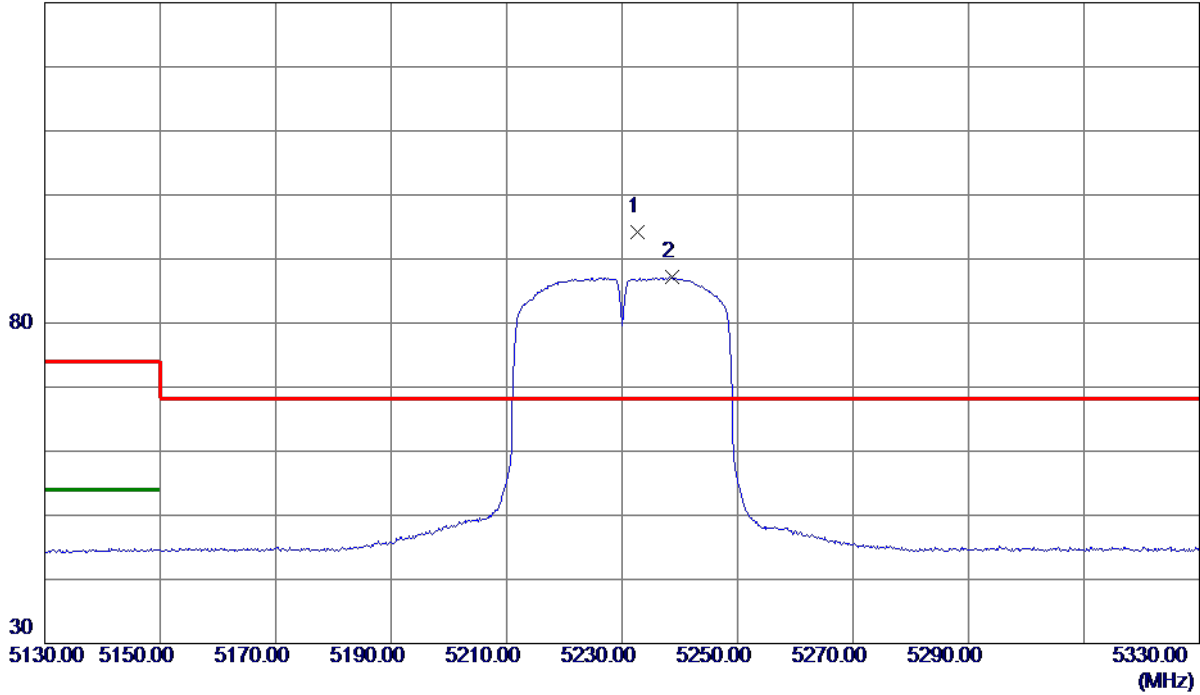

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5232.6000	77.88	16.35	94.23	68.30	25.93	Peak	No Limit
2	5238.6000	70.83	16.37	87.20	999.00	-911.80	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

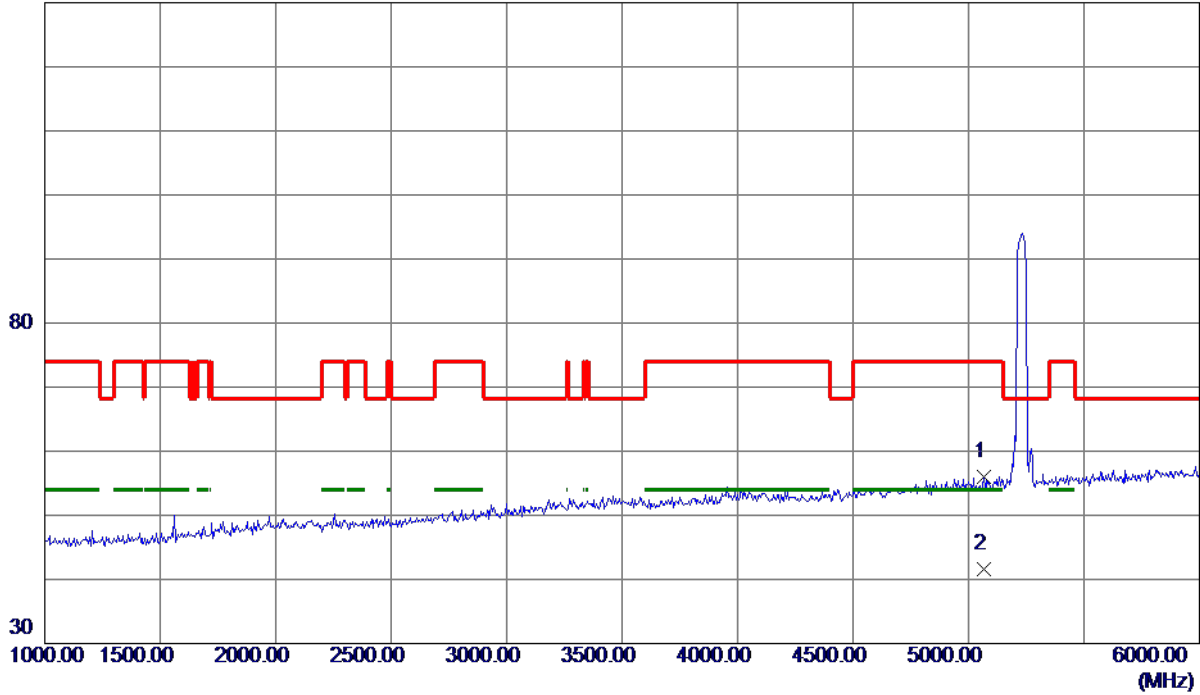

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5065.0000	39.97	15.95	55.92	74.00	-18.08	Peak	
2 *	5065.0000	25.72	15.95	41.67	54.00	-12.33	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

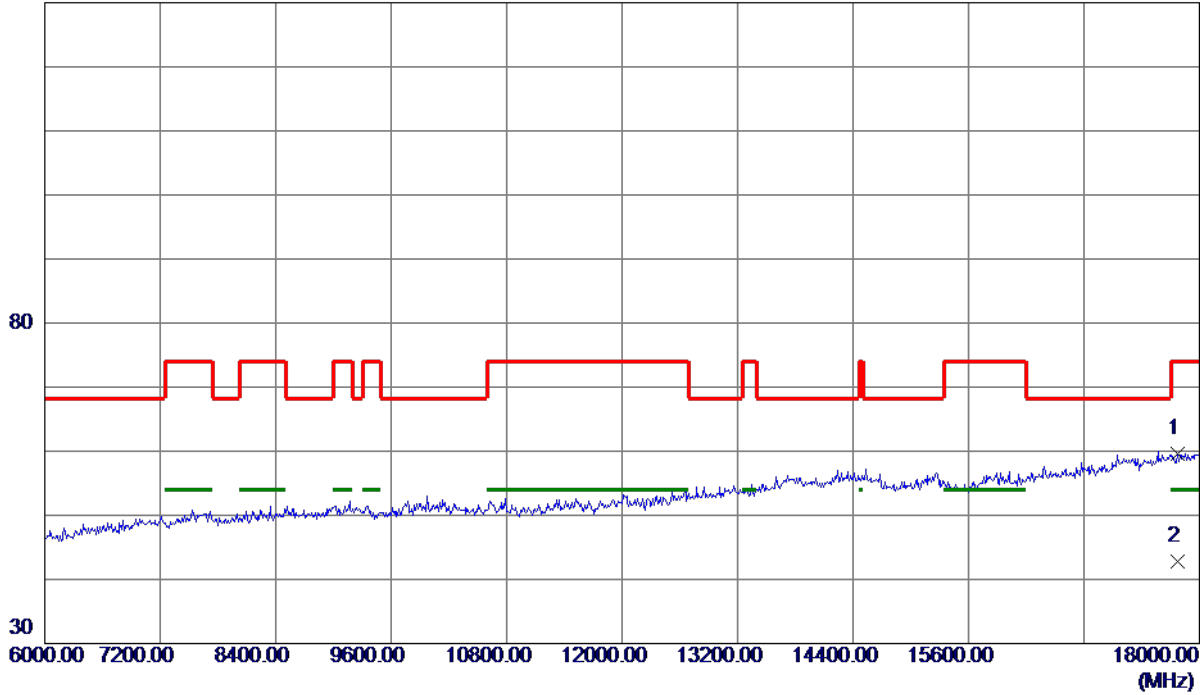

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17772.0000	37.47	22.16	59.63	74.00	-14.37	Peak	
2 *	17772.0000	20.68	22.16	42.84	54.00	-11.16	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

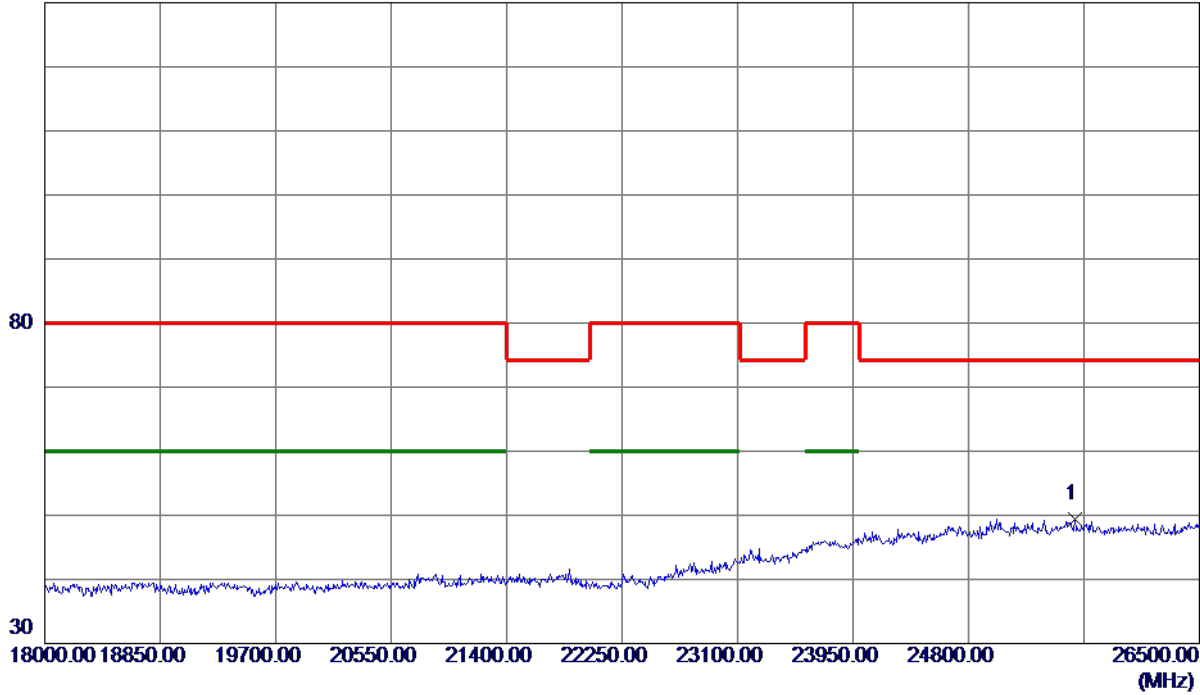


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25582.0000	29.46	20.02	49.48	74.30	-24.82	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

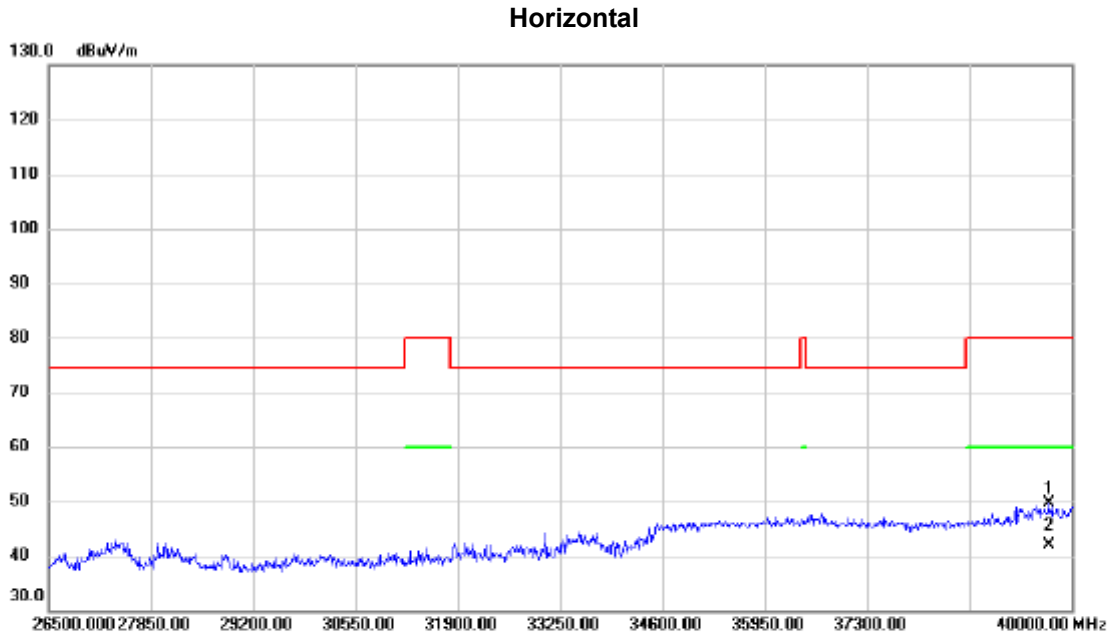

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		39696.250	34.22	15.43	49.65	80.00	-30.35	peak	
2	*	39696.250	26.45	15.43	41.88	60.00	-18.12	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5745 MHz

Vertical

130 dBuV/m

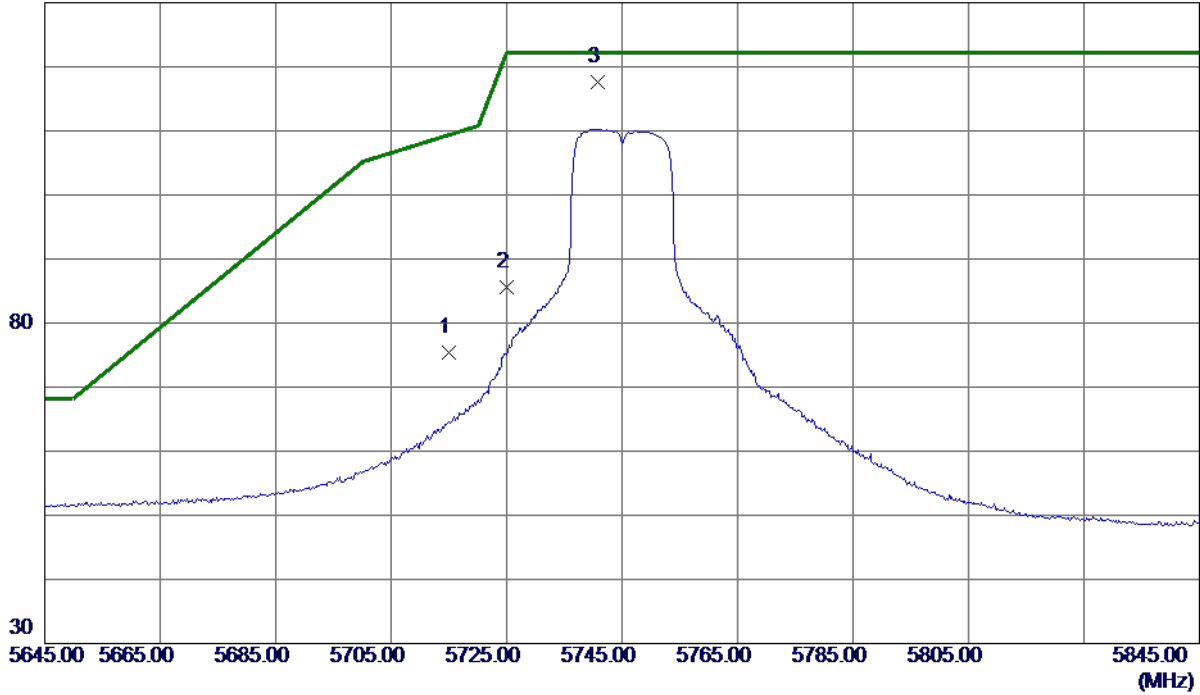

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	57.73	17.62	75.35	109.40	-34.05	Peak	
2	5725.0000	67.95	17.65	85.60	122.20	-36.60	Peak	
3 *	5740.8000	99.89	17.70	117.59	122.20	-4.61	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5745 MHz

Horizontal

130 dBuV/m

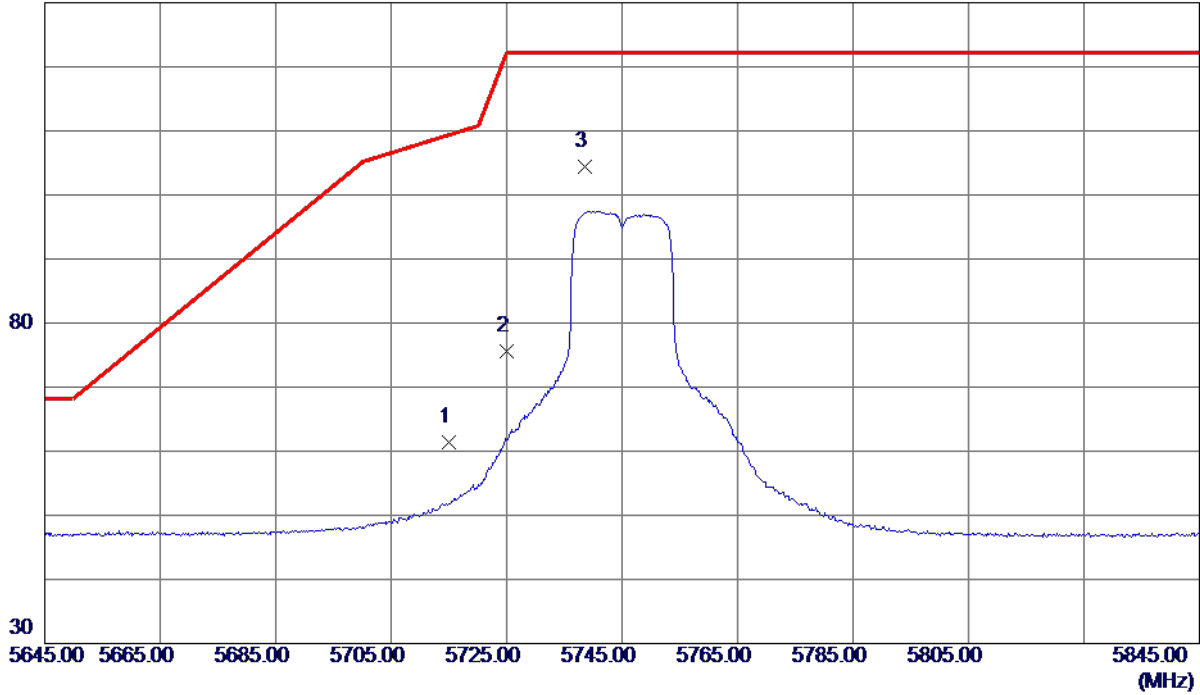

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	43.85	17.62	61.47	109.40	-47.93	Peak	
2	5725.0000	58.04	17.65	75.69	122.20	-46.51	Peak	
3 *	5738.6000	86.76	17.69	104.45	122.20	-17.75	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

130 dBuV/m

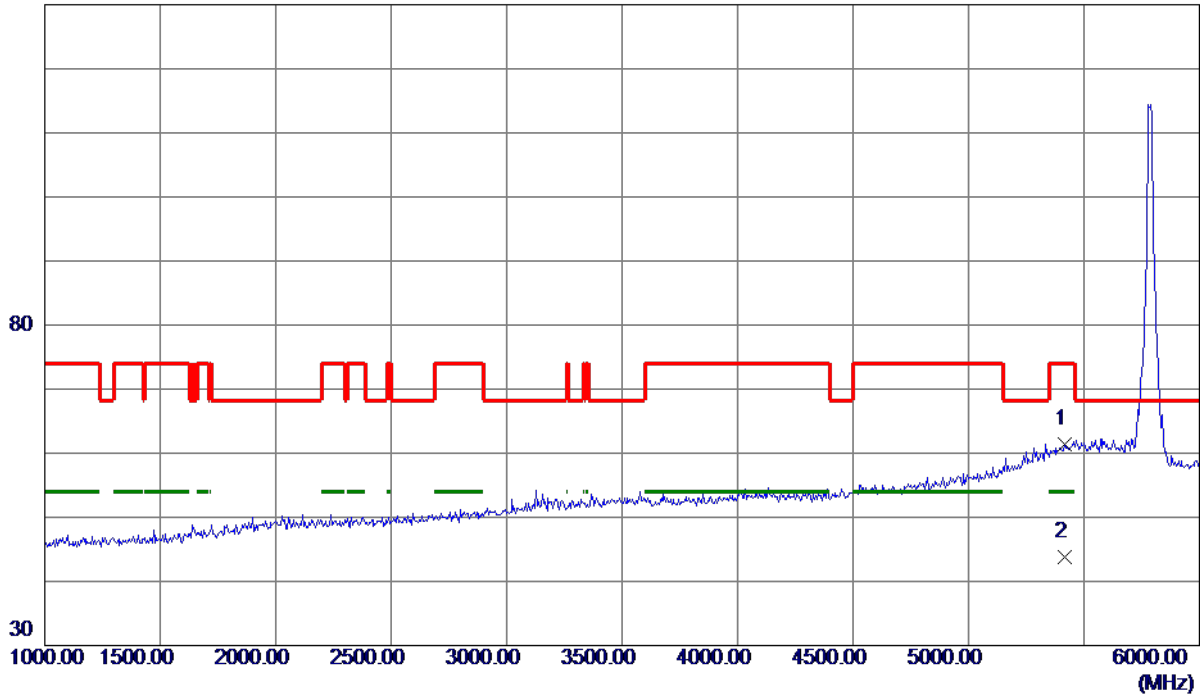

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5415.0000	44.63	16.78	61.41	74.00	-12.59	Peak	
2 *	5415.0000	27.05	16.78	43.83	54.00	-10.17	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

130 dBuV/m

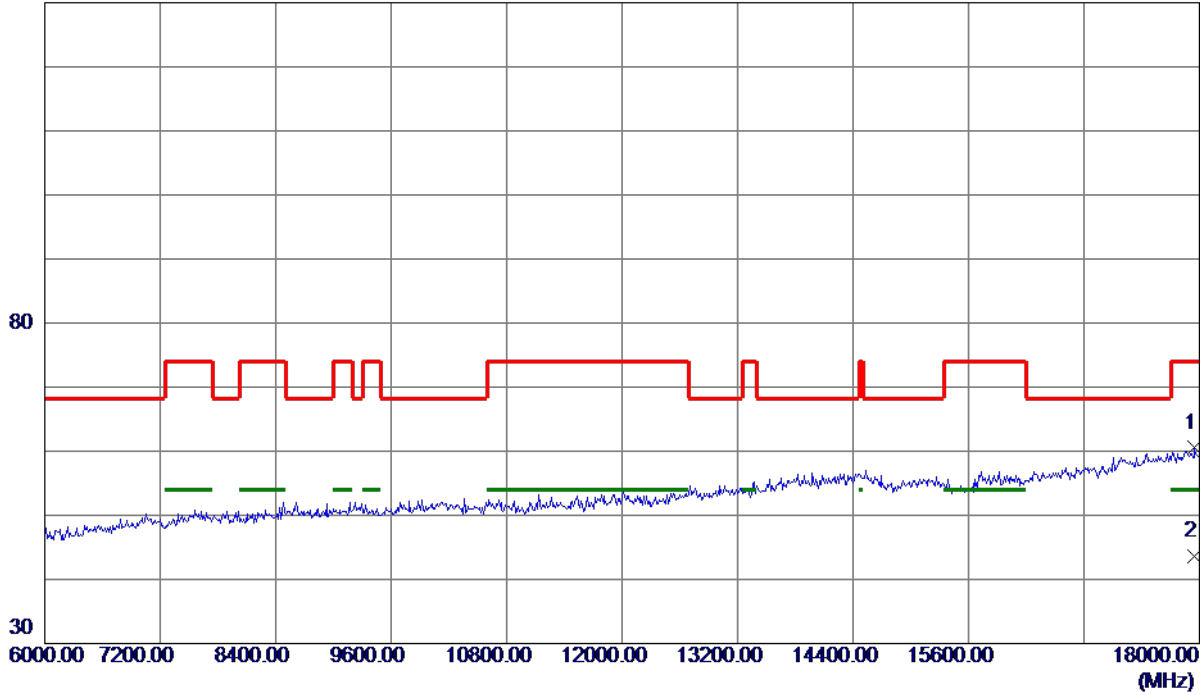

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	38.23	22.27	60.50	74.00	-13.50	Peak	
2 *	17952.0000	21.33	22.27	43.60	54.00	-10.40	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

130 dBuV/m

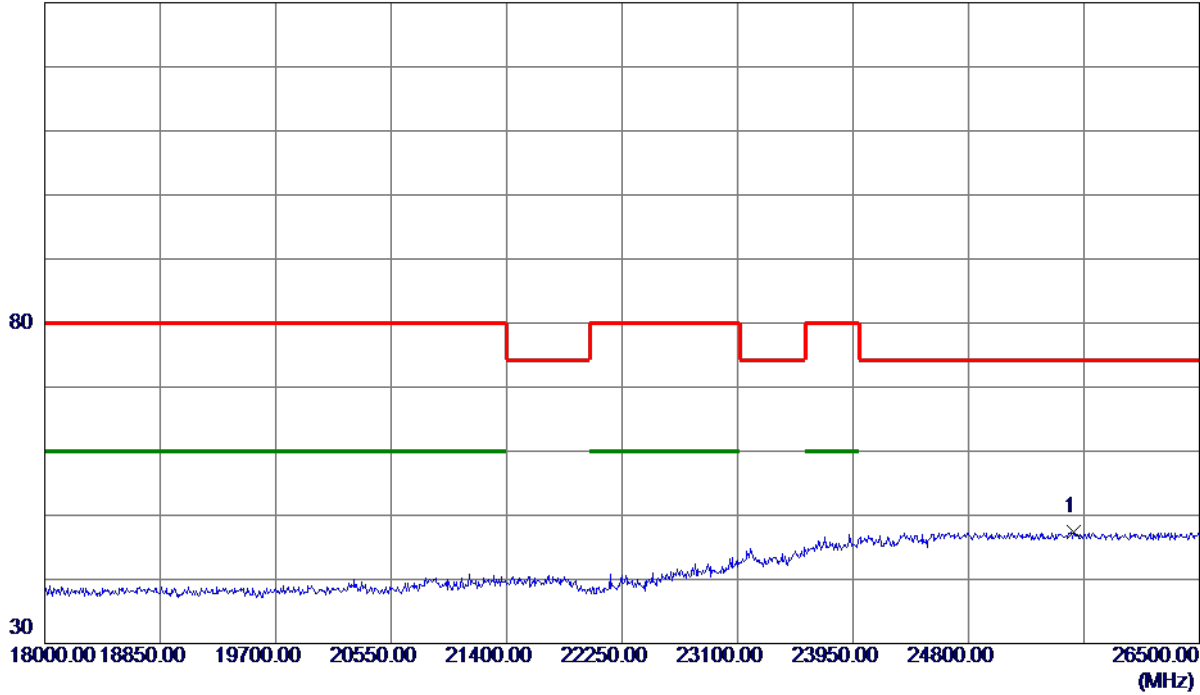


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25577.7500	27.37	20.02	47.39	74.30	-26.91	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

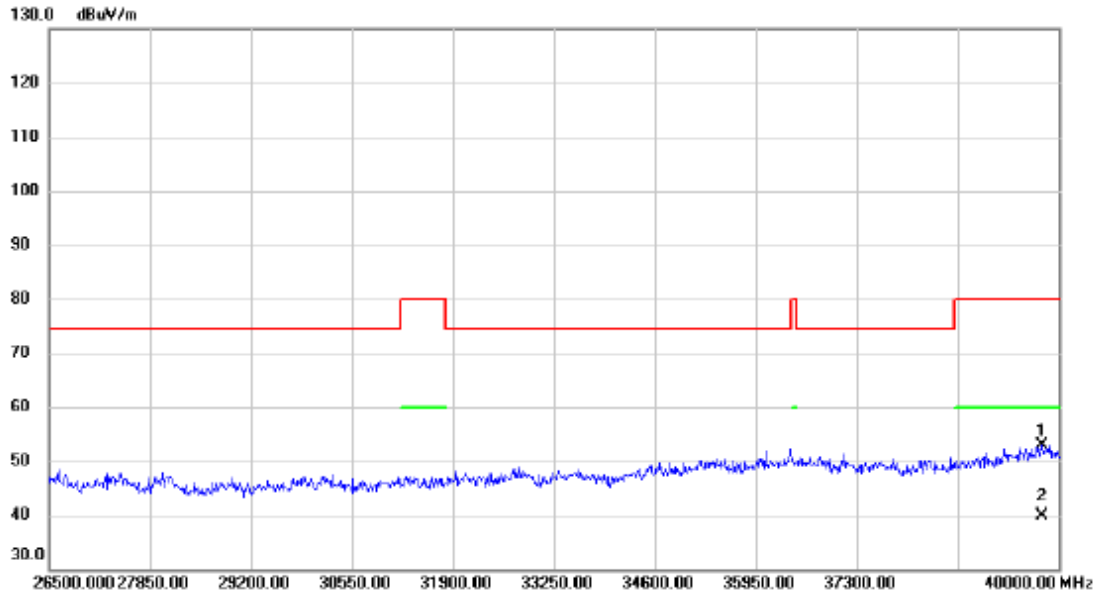

No. Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measurement dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	39777.250	37.28	15.48	52.76	80.00	-27.24	peak	
2 *	39777.250	24.35	15.48	39.83	60.00	-20.17	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Horizontal

130 dBuV/m

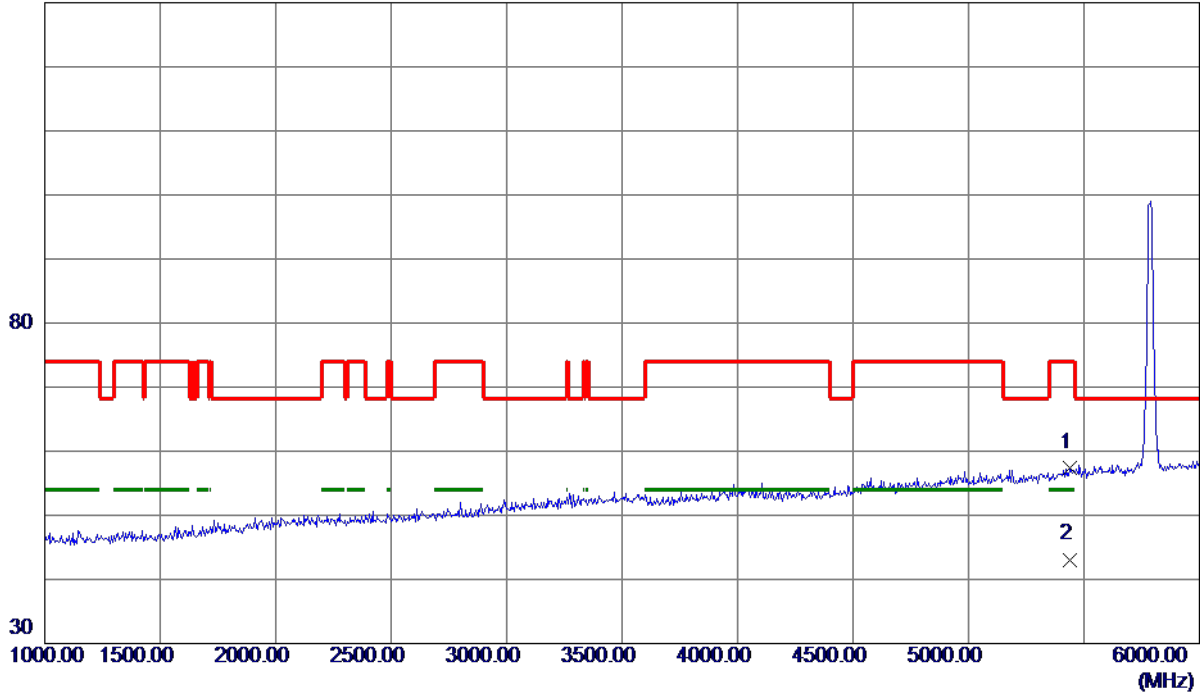

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5440.0000	40.56	16.84	57.40	74.00	-16.60	Peak	
2 *	5440.0000	26.26	16.84	43.10	54.00	-10.90	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Horizontal

130 dBuV/m

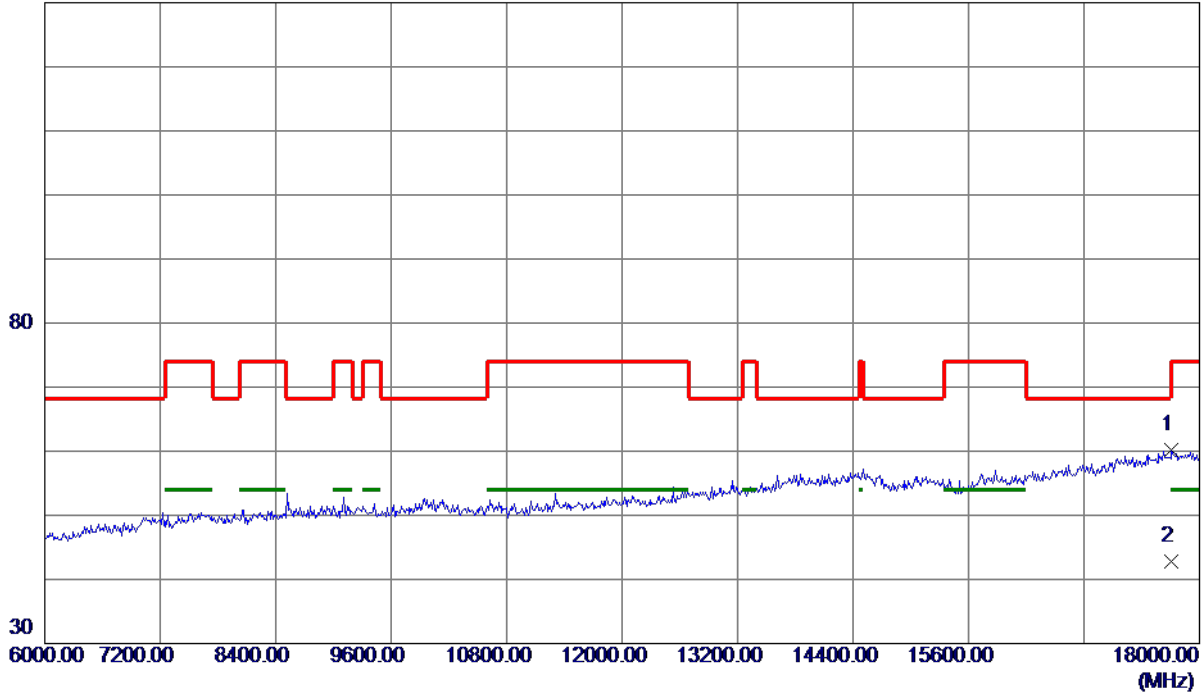

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17712.0000	38.12	22.13	60.25	74.00	-13.75	Peak	
2 *	17712.0000	20.72	22.13	42.85	54.00	-11.15	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Horizontal

130 dBuV/m

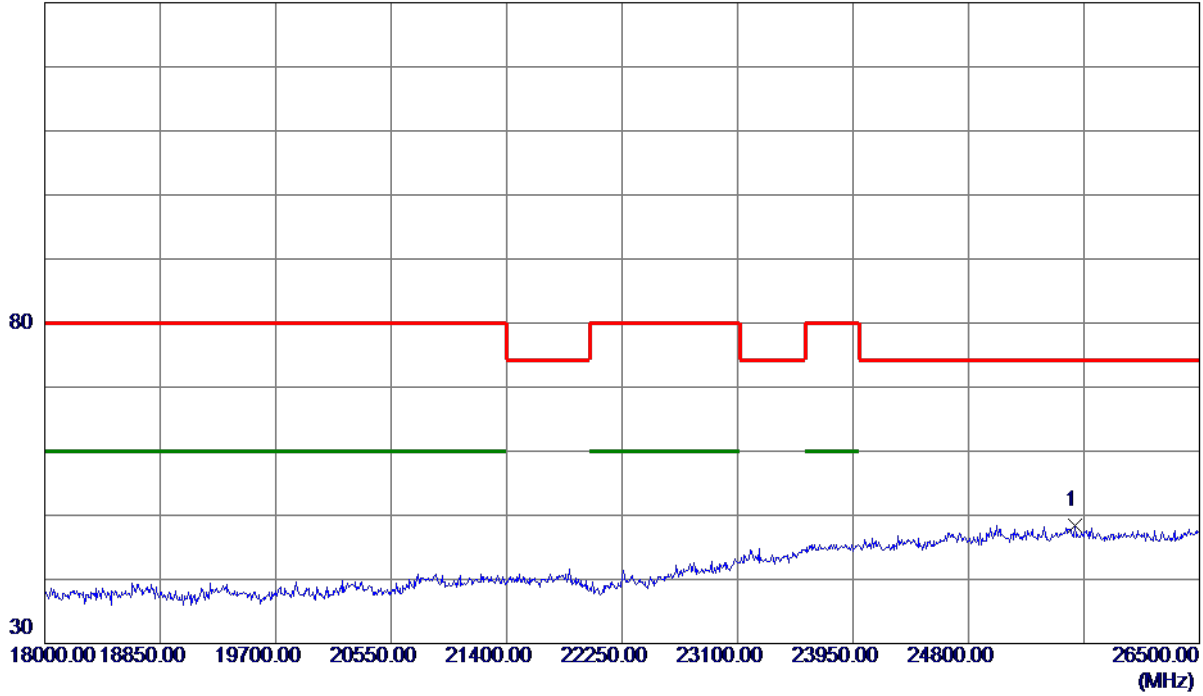


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25582.0000	28.46	20.02	48.48	74.30	-25.82	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

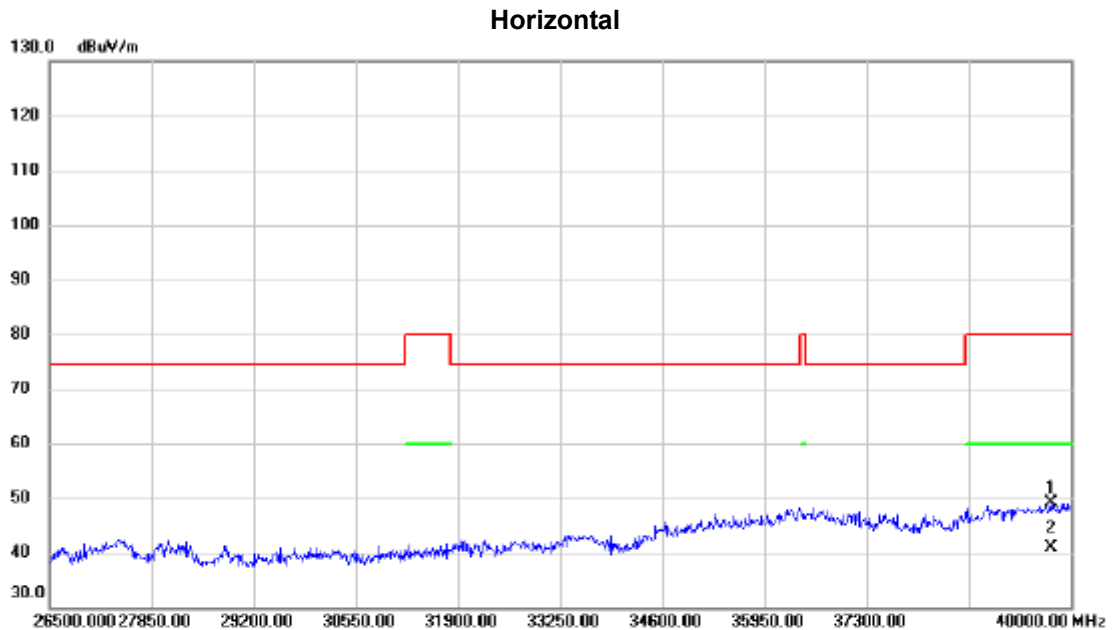

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39730.000	33.60	15.45	49.05	80.00	-30.95	peak	
2	*	39730.000	25.45	15.45	40.90	60.00	-19.10	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5825 MHz

Vertical

130 dBuV/m

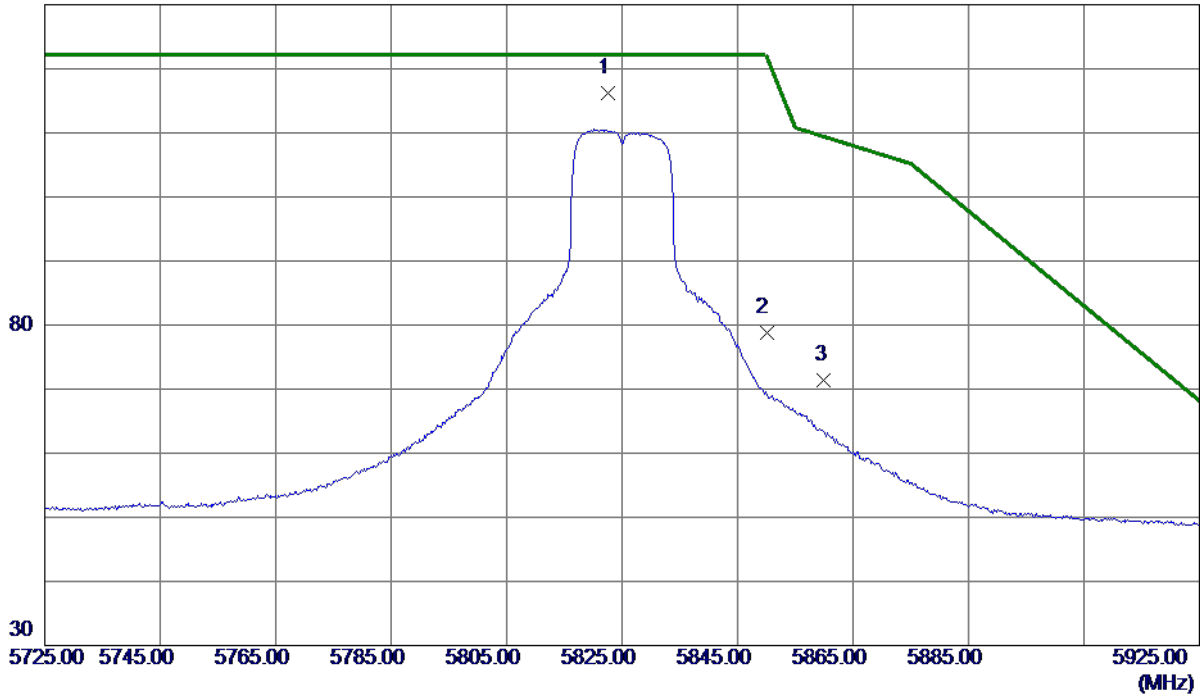


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5822.6000	98.17	17.94	116.11	122.20	-6.09	Peak	No Limit
2	5850.0000	60.82	18.02	78.84	122.20	-43.36	Peak	
3	5860.0000	53.28	18.05	71.33	109.40	-38.07	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5825 MHz

Horizontal

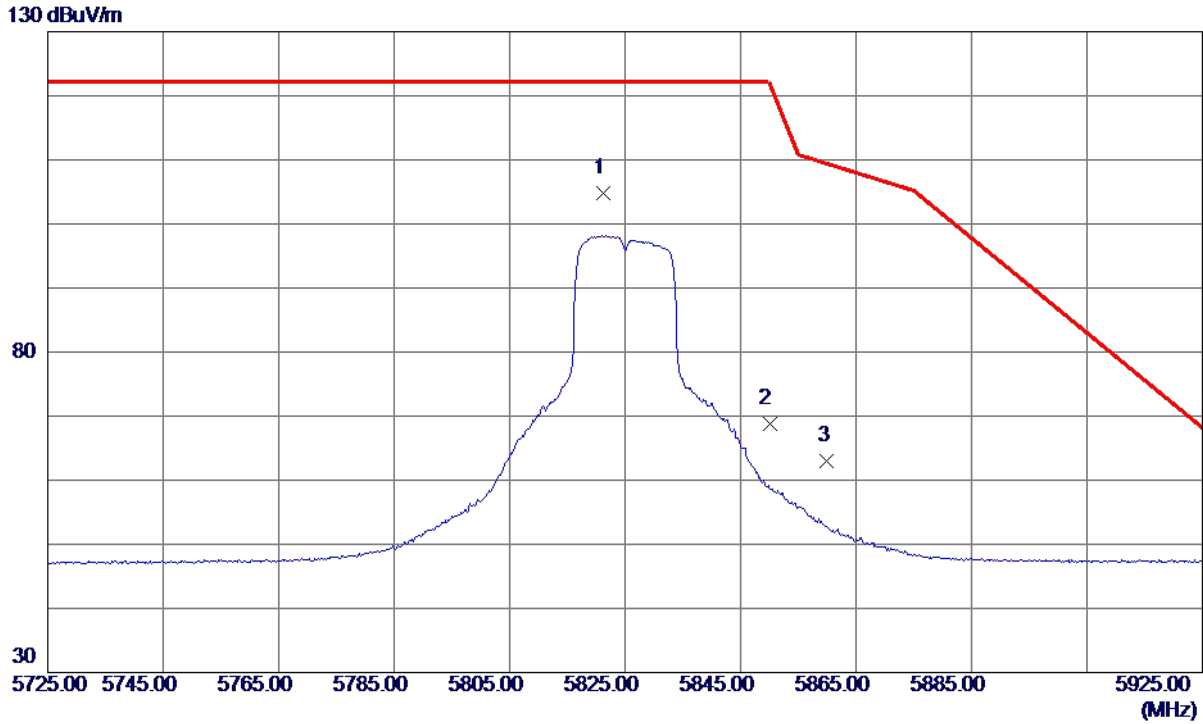

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5821.2000	86.95	17.94	104.89	122.20	-17.31	Peak	No Limit
2	5850.0000	50.80	18.02	68.82	122.20	-53.38	Peak	
3	5860.0000	44.92	18.05	62.97	109.40	-46.43	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5745 MHz

Vertical

130 dBuV/m

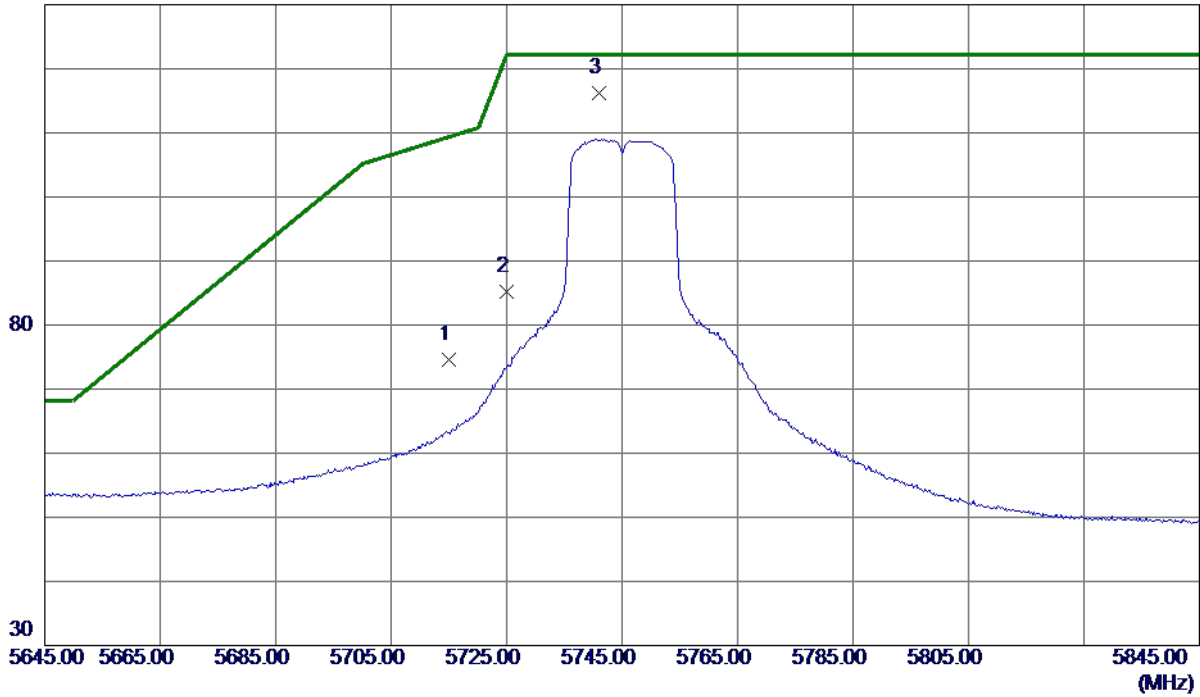

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	56.99	17.62	74.61	109.40	-34.79	Peak	
2	5725.0000	67.61	17.65	85.26	122.20	-36.94	Peak	
3 *	5741.0000	98.57	17.70	116.27	122.20	-5.93	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5745 MHz

Horizontal

130 dBuV/m

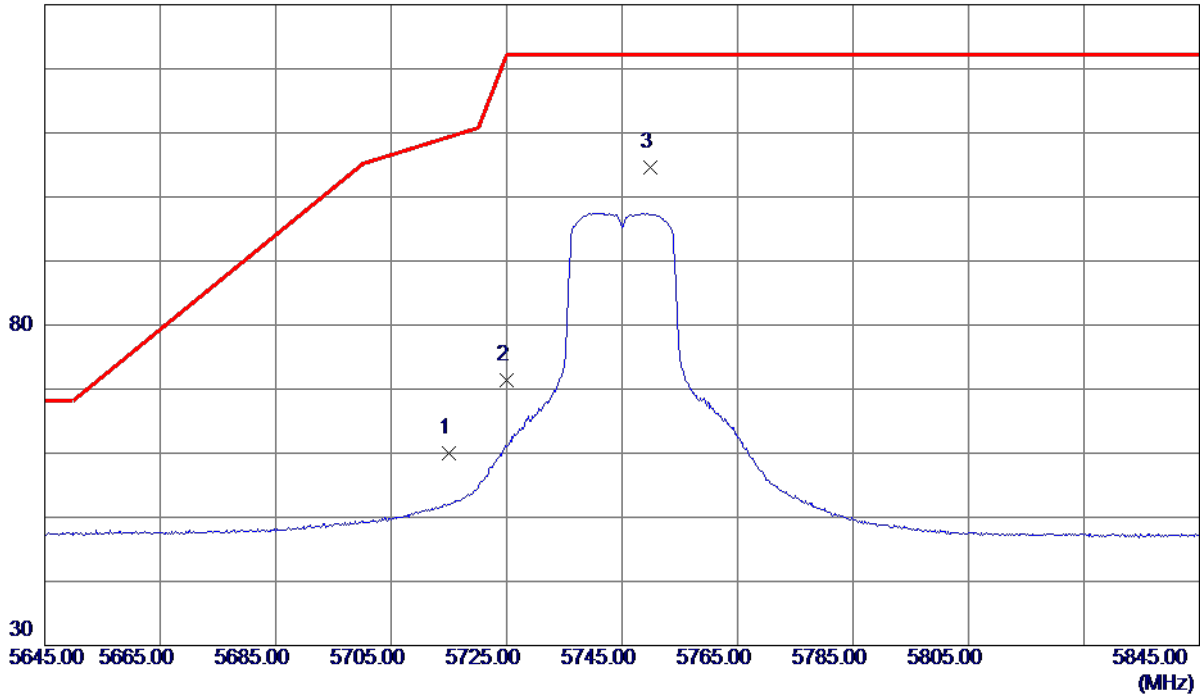

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	42.33	17.62	59.95	109.40	-49.45	Peak	
2	5725.0000	53.83	17.65	71.48	122.20	-50.72	Peak	
3 *	5749.8000	86.95	17.73	104.68	122.20	-17.52	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Vertical

130 dBuV/m

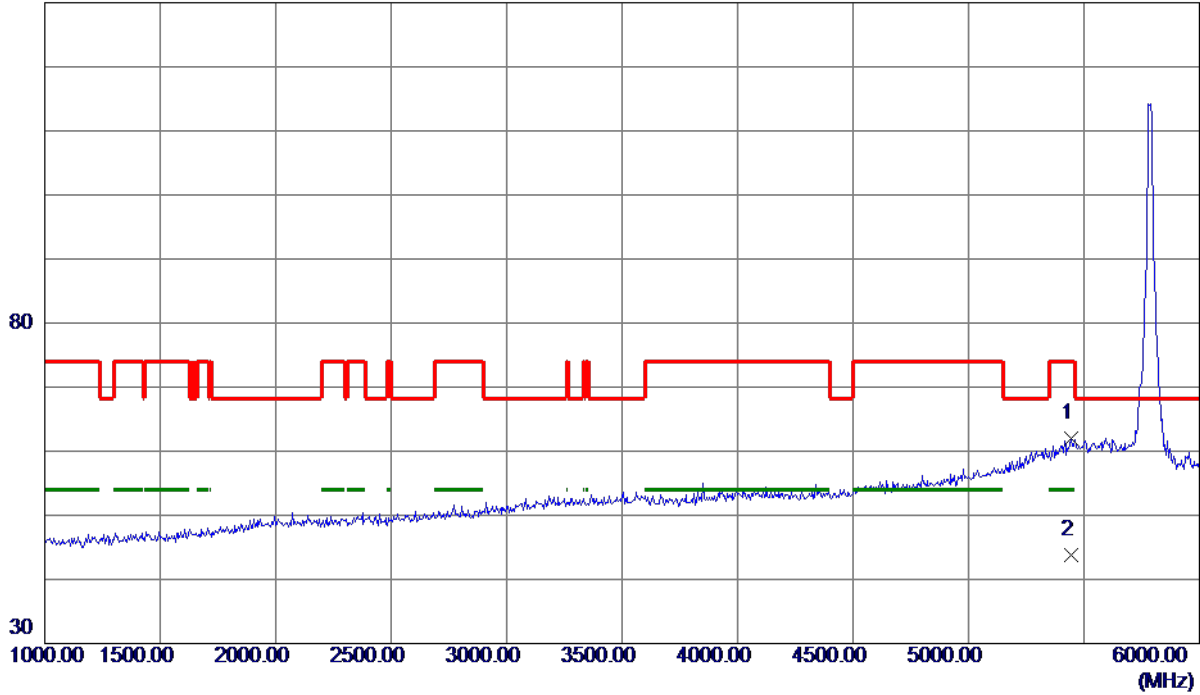

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5445.0000	45.23	16.85	62.08	74.00	-11.92	Peak	
2 *	5445.0000	27.03	16.85	43.88	54.00	-10.12	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Vertical

130 dBuV/m

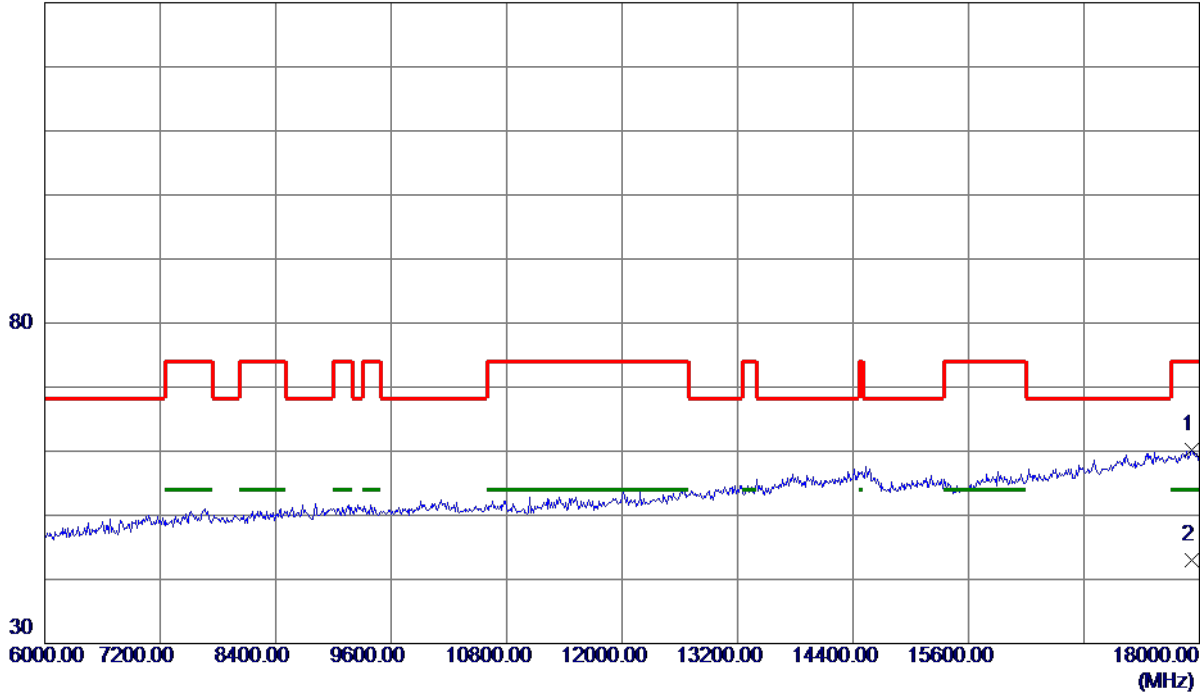

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17916.0000	37.95	22.25	60.20	74.00	-13.80	Peak	
2 *	17916.0000	20.79	22.25	43.04	54.00	-10.96	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Vertical

130 dBuV/m

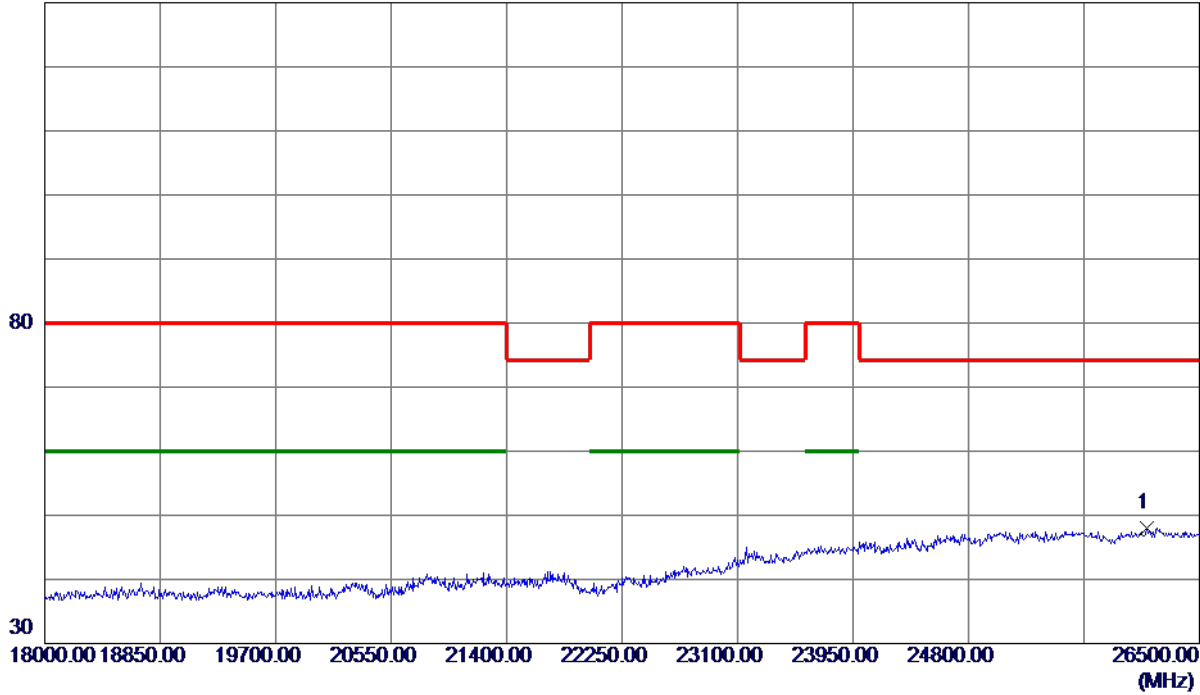


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26109.0000	27.89	20.12	48.01	74.30	-26.29	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

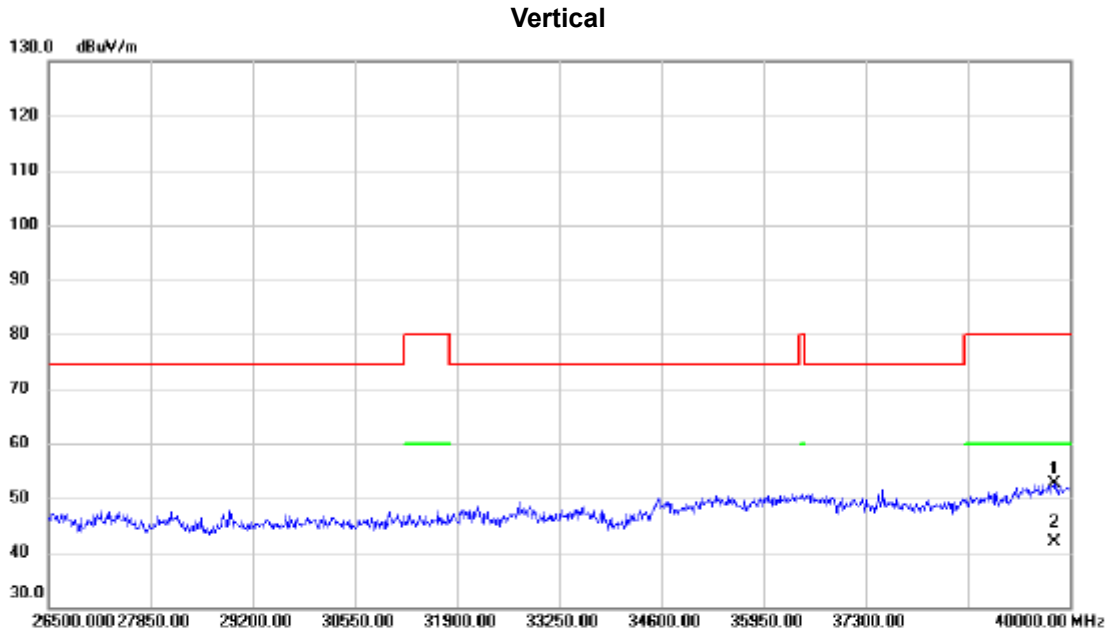

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39797.500	37.24	15.49	52.73	80.00	-27.27	peak	
2	*	39797.500	26.45	15.49	41.94	60.00	-18.06	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Horizontal

130 dBuV/m

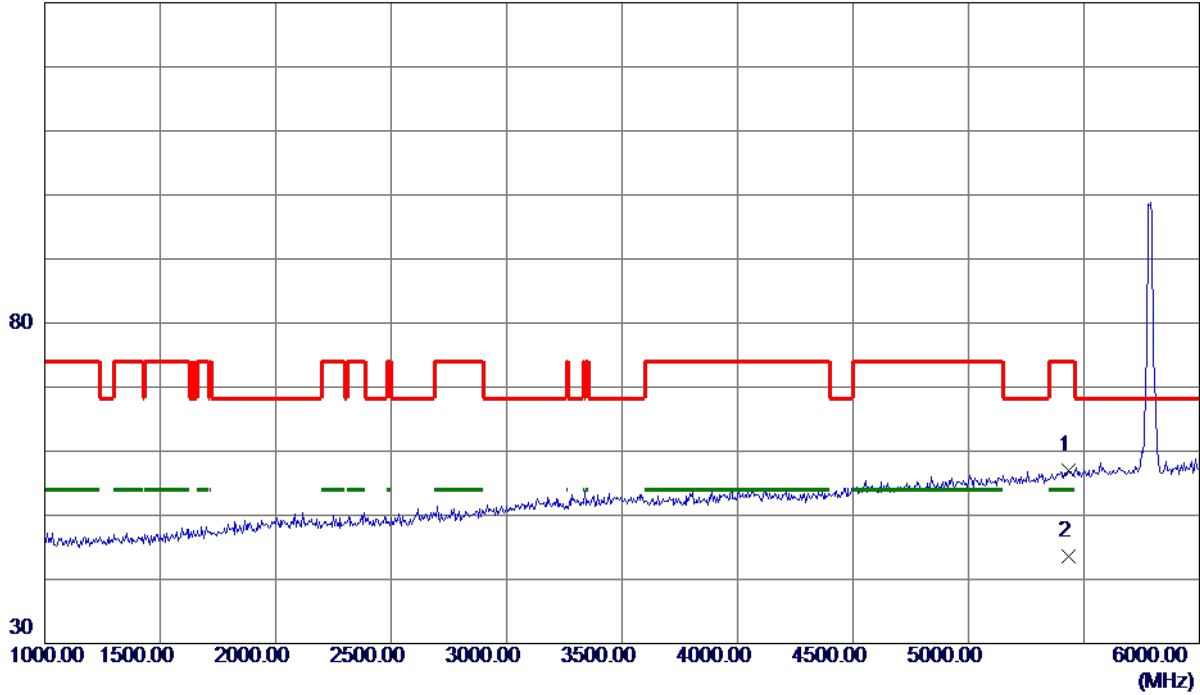

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5435.0000	40.12	16.83	56.95	74.00	-17.05	Peak	
2 *	5435.0000	26.82	16.83	43.65	54.00	-10.35	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Horizontal

130 dBuV/m

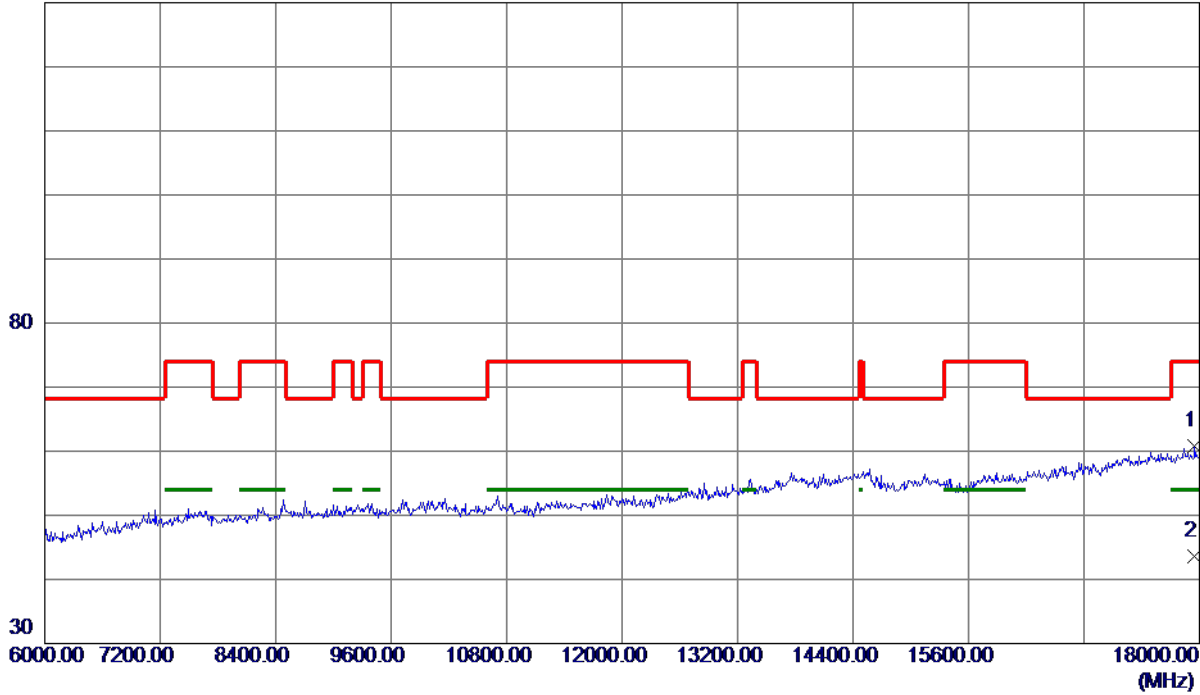

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	38.47	22.27	60.74	74.00	-13.26	Peak	
2 *	17952.0000	21.35	22.27	43.62	54.00	-10.38	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Horizontal

130 dBuV/m

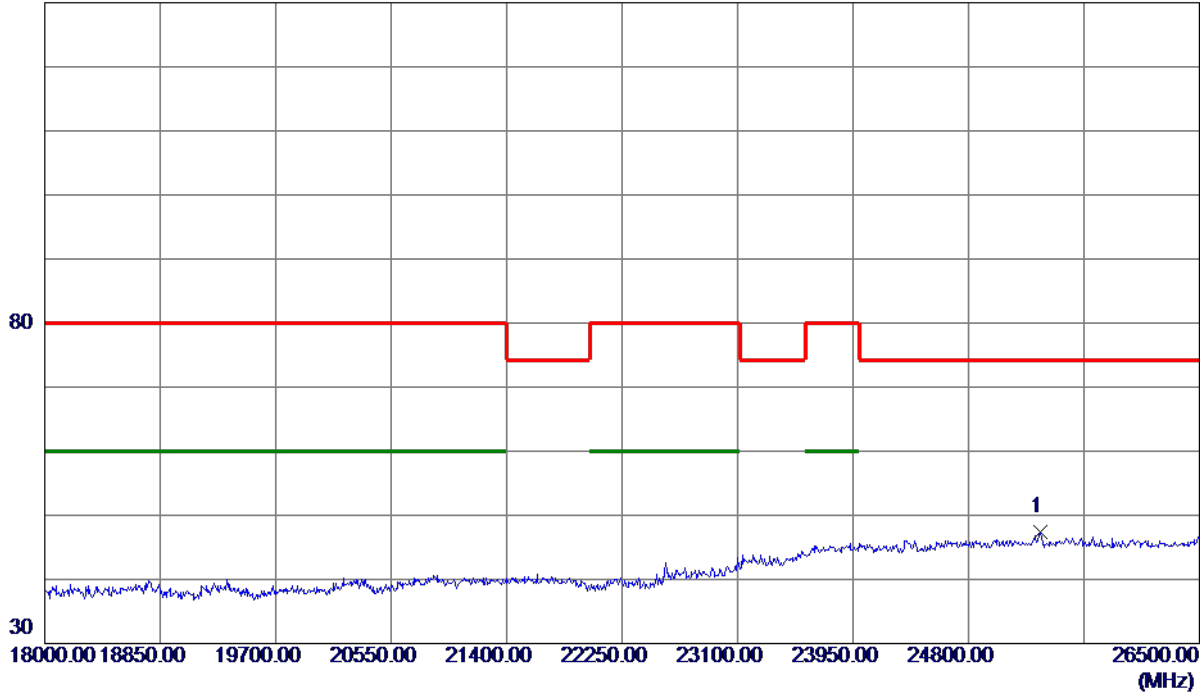


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25327.0000	27.43	20.03	47.46	74.30	-26.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

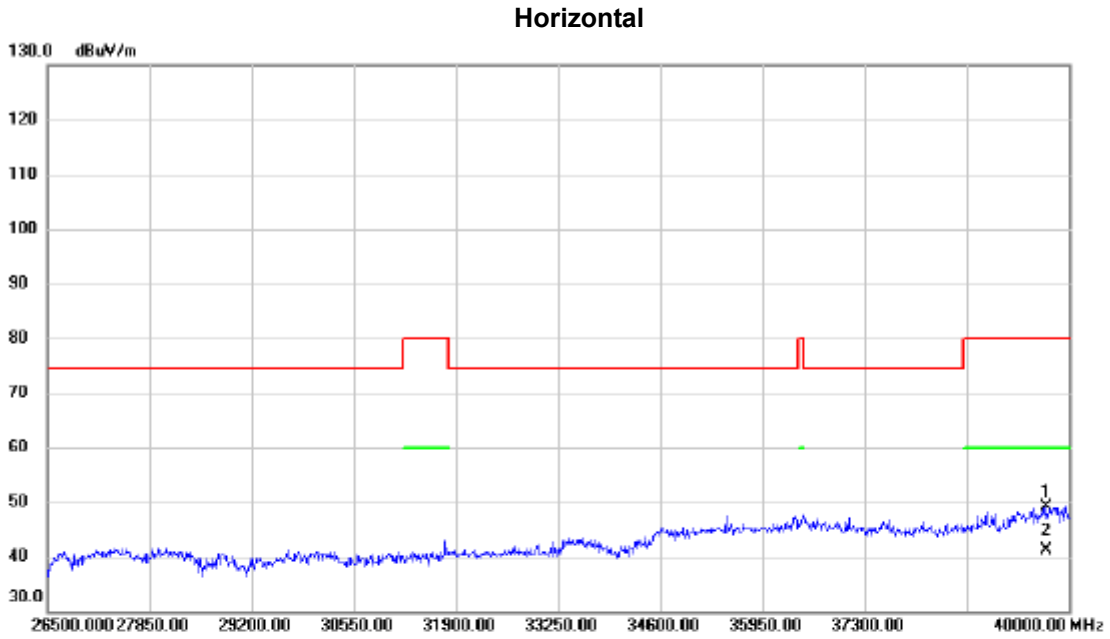

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	33.81	15.43	49.24	80.00	-30.76	peak	
2	*	39696.250	25.78	15.43	41.21	60.00	-18.79	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5825 MHz

Vertical

130 dBuV/m

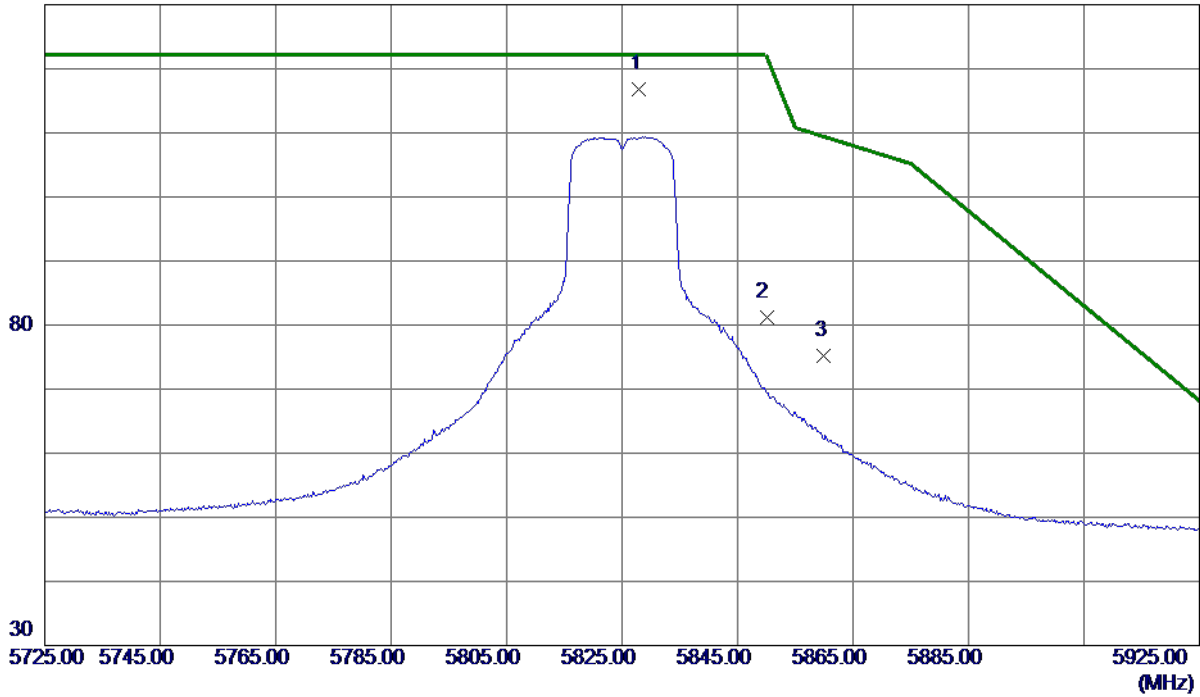

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5828.0000	98.84	17.96	116.80	122.20	-5.40	Peak	No Limit
2	5850.0000	63.22	18.02	81.24	122.20	-40.96	Peak	
3	5860.0000	57.18	18.05	75.23	109.40	-34.17	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5825 MHz

Horizontal

130 dBuV/m

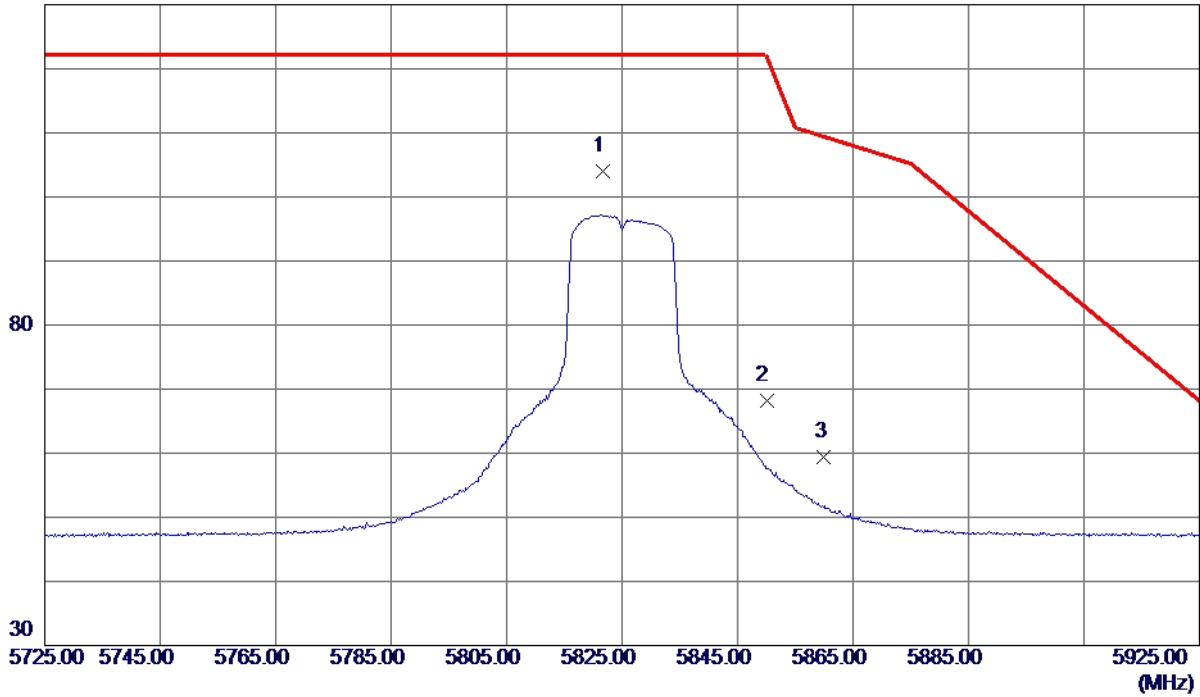


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5821.6000	86.00	17.94	103.94	122.20	-18.26	Peak	No Limit
2	5850.0000	50.17	18.02	68.19	122.20	-54.01	Peak	
3	5860.0000	41.29	18.05	59.34	109.40	-50.06	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5755 MHz

Vertical

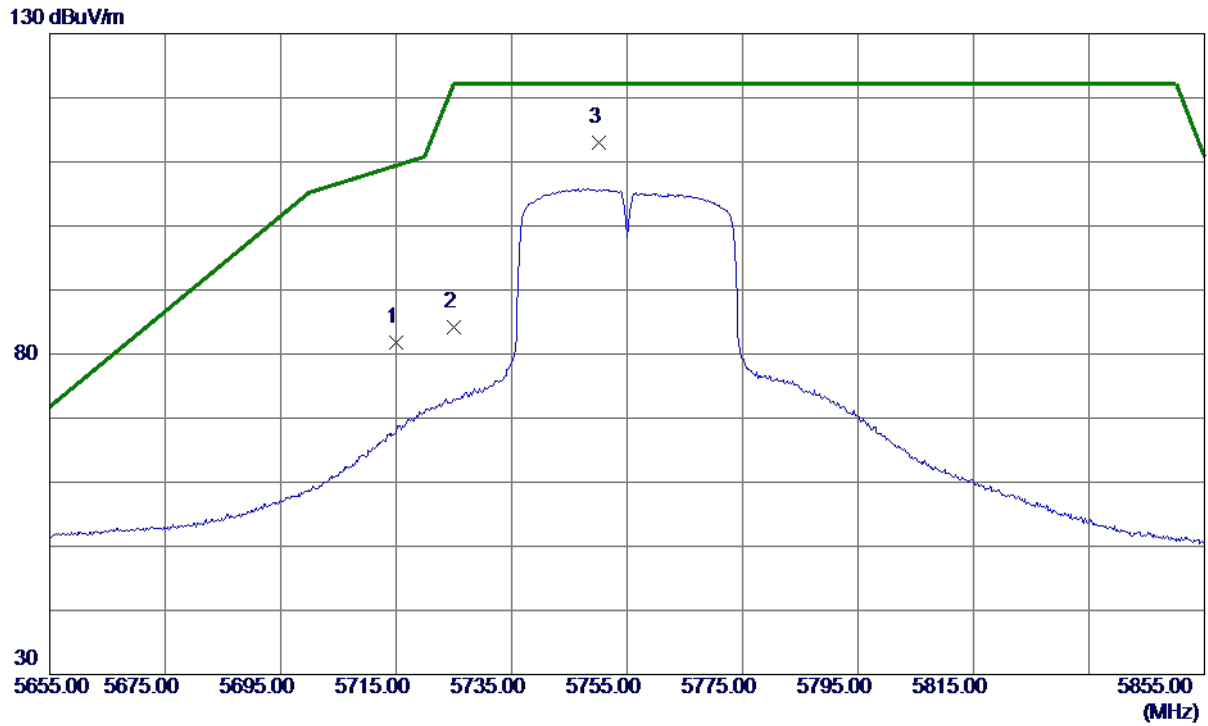


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	64.11	17.62	81.73	109.40	-27.67	Peak	
2	5725.0000	66.58	17.65	84.23	122.20	-37.97	Peak	
3 *	5750.2000	95.26	17.73	112.99	122.20	-9.21	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5755 MHz

Horizontal

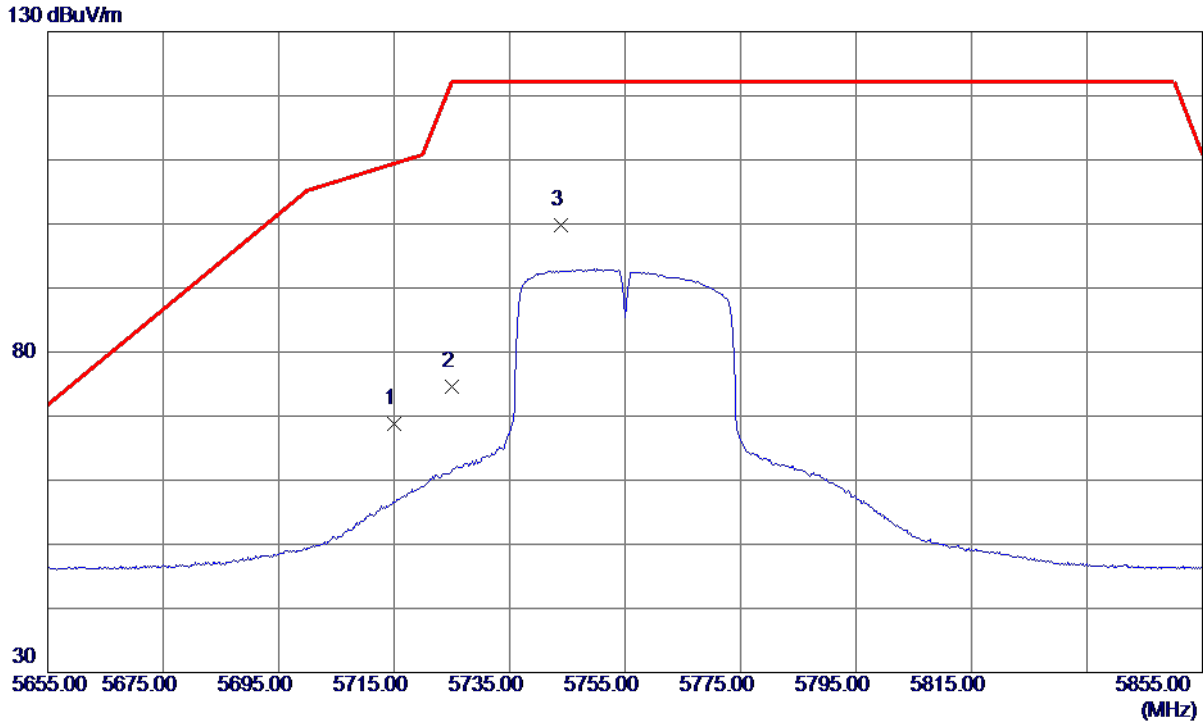

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	51.25	17.62	68.87	109.40	-40.53	Peak	
2	5725.0000	56.95	17.65	74.60	122.20	-47.60	Peak	
3 *	5743.8000	82.06	17.71	99.77	122.20	-22.43	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

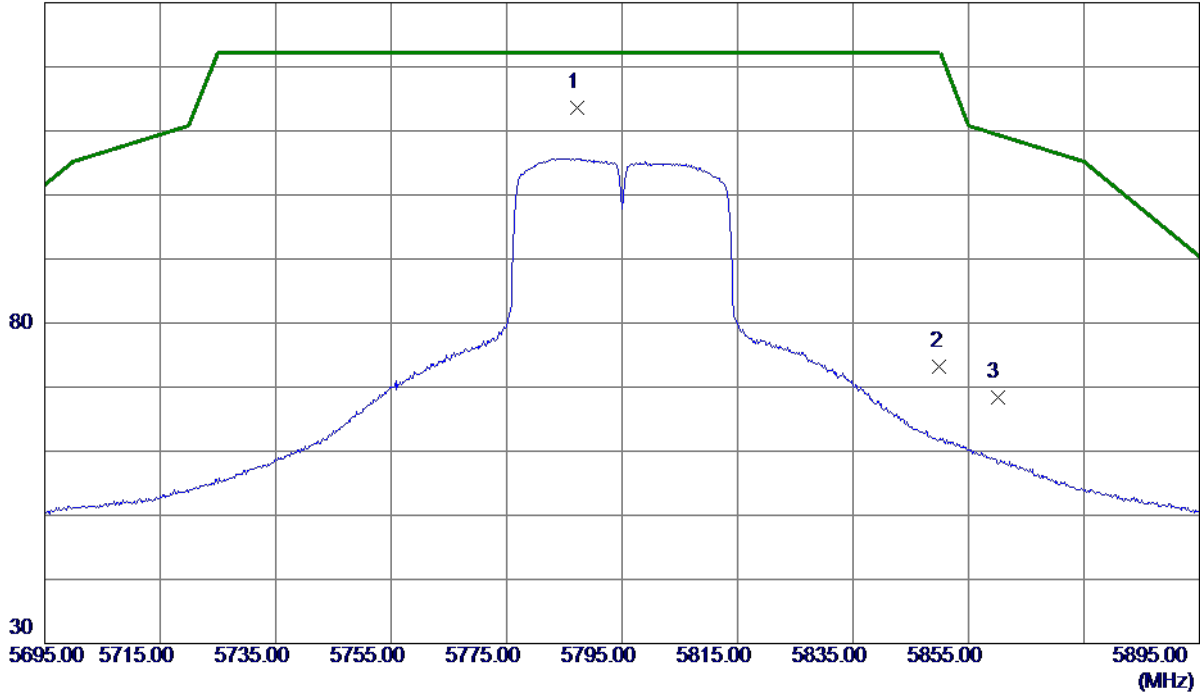

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5787.2000	95.70	17.84	113.54	122.20	-8.66	Peak	No Limit
2	5850.0000	55.16	18.02	73.18	122.20	-49.02	Peak	
3	5860.0000	50.42	18.05	68.47	109.40	-40.93	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

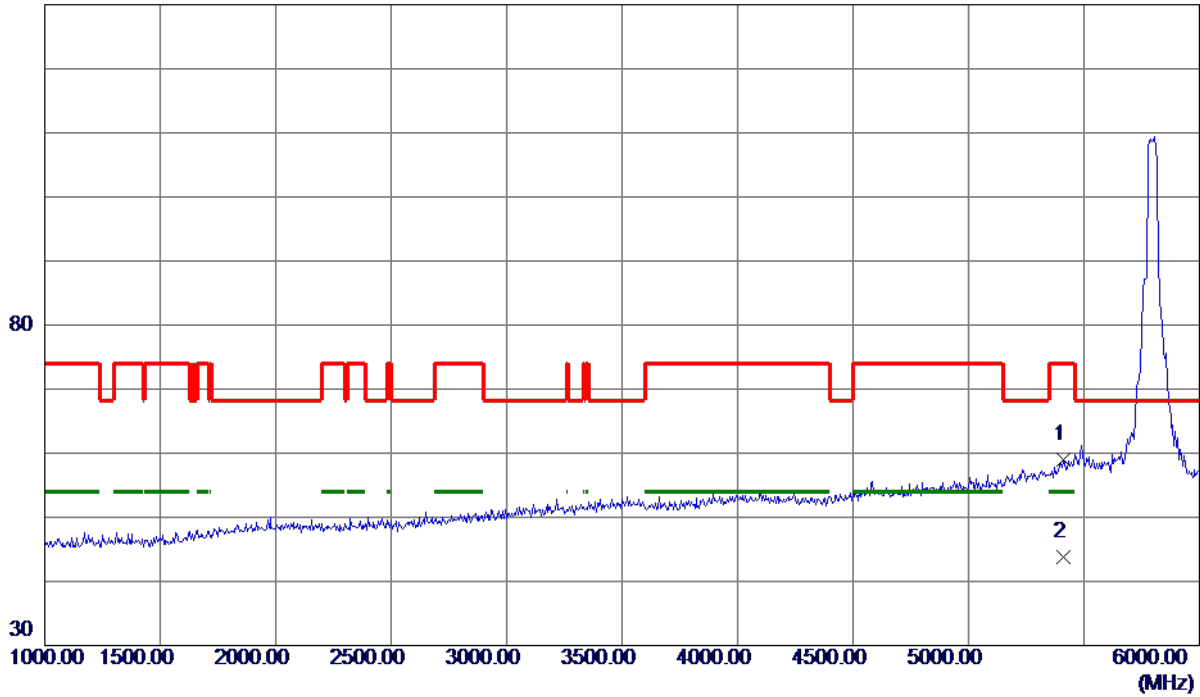

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5410.0000	42.19	16.77	58.96	74.00	-15.04	Peak	
2 *	5410.0000	27.10	16.77	43.87	54.00	-10.13	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

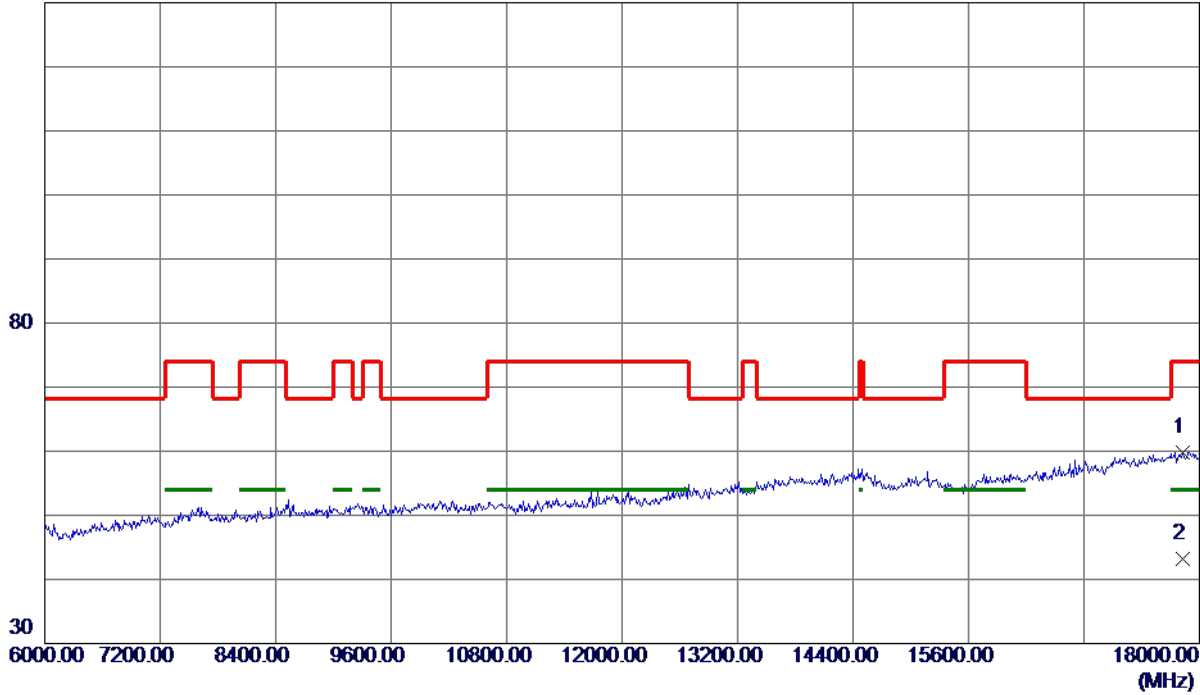

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17832.0000	37.69	22.20	59.89	74.00	-14.11	Peak	
2 *	17832.0000	20.97	22.20	43.17	54.00	-10.83	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

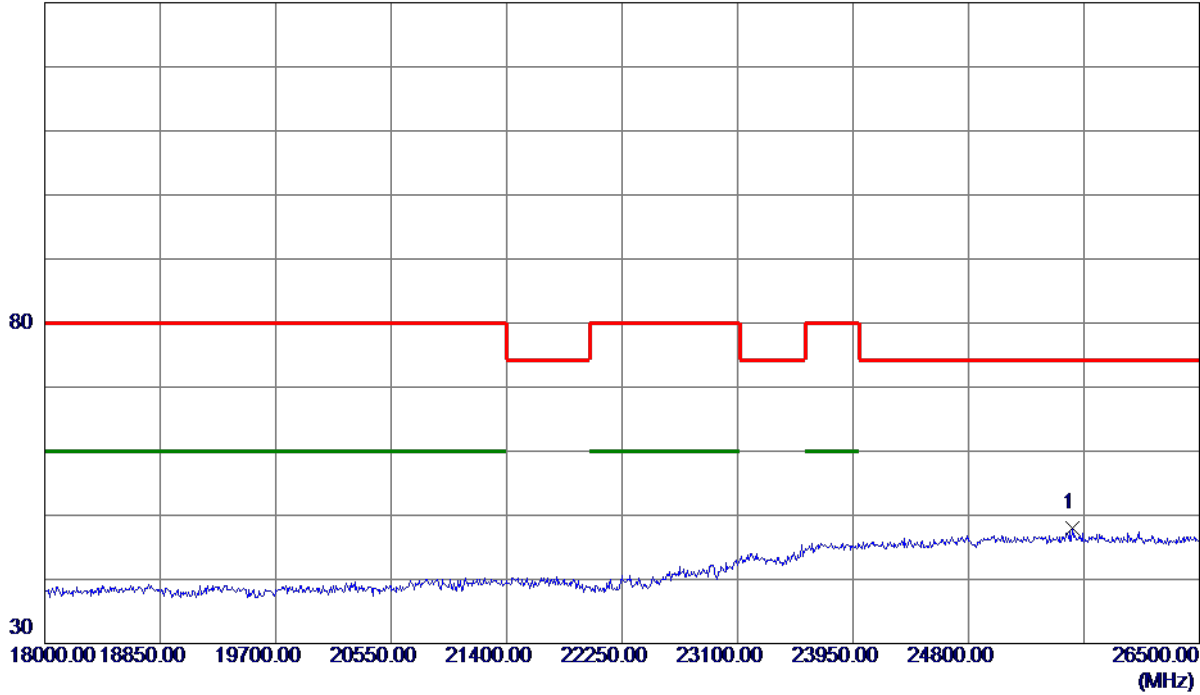


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25569.2500	28.00	20.02	48.02	74.30	-26.28	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

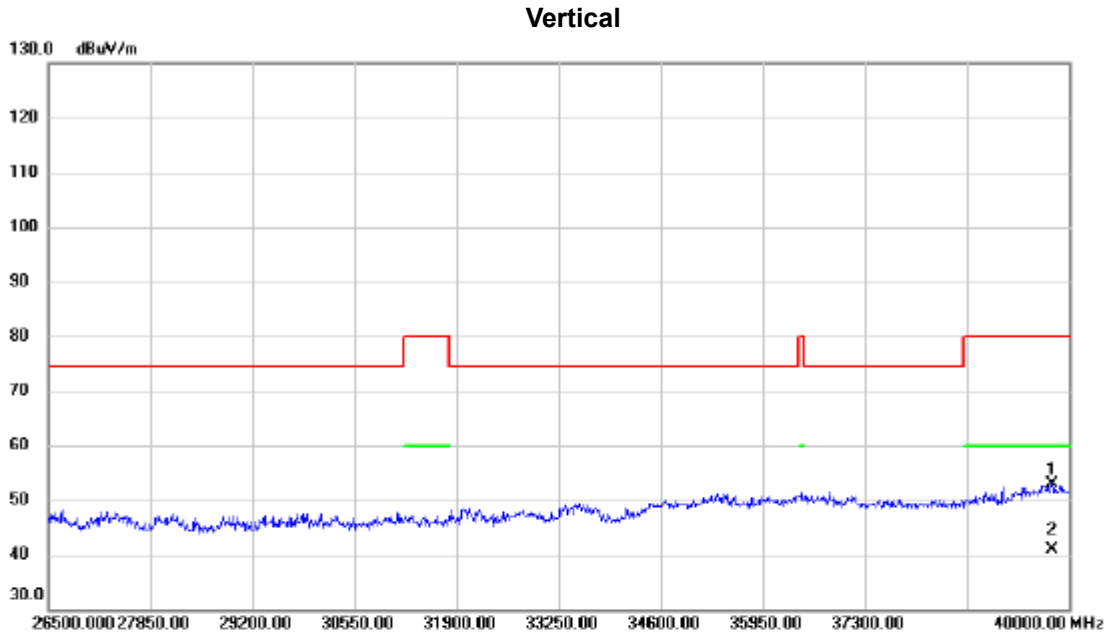

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39770.500	37.52	15.48	53.00	80.00	-27.00	peak	
2	*	39770.500	25.45	15.48	40.93	60.00	-19.07	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

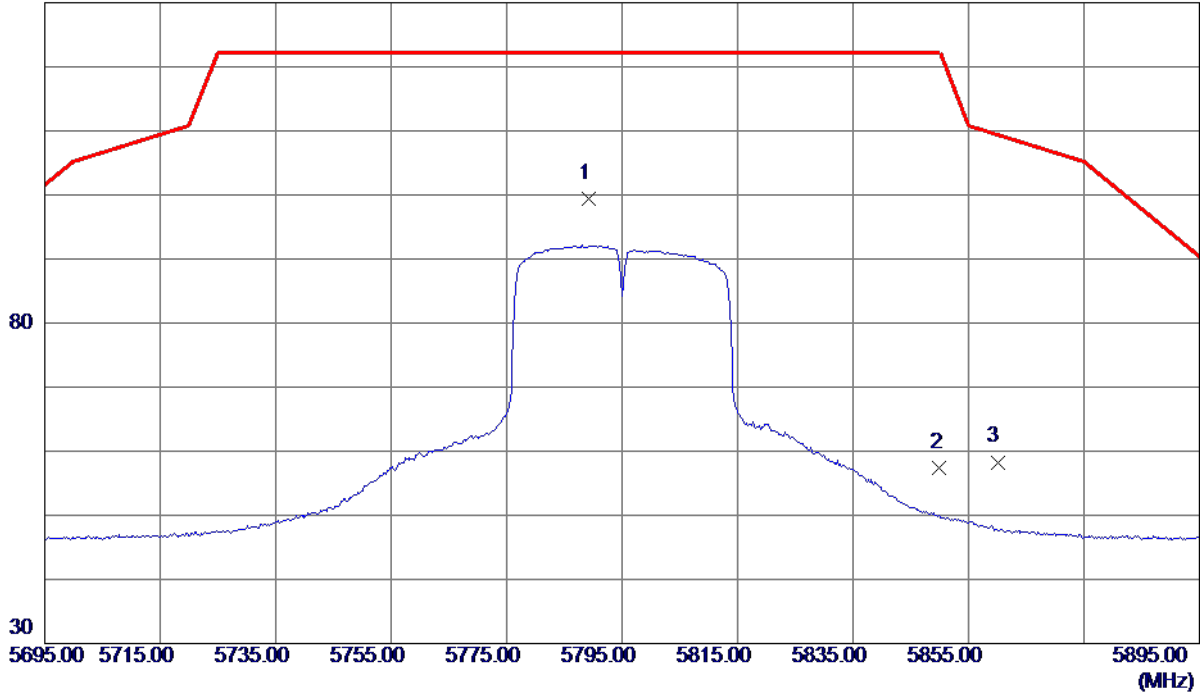

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5789.2000	81.55	17.84	99.39	122.20	-22.81	Peak	No Limit
2	5850.0000	39.38	18.02	57.40	122.20	-64.80	Peak	
3	5860.0000	40.25	18.05	58.30	109.40	-51.10	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

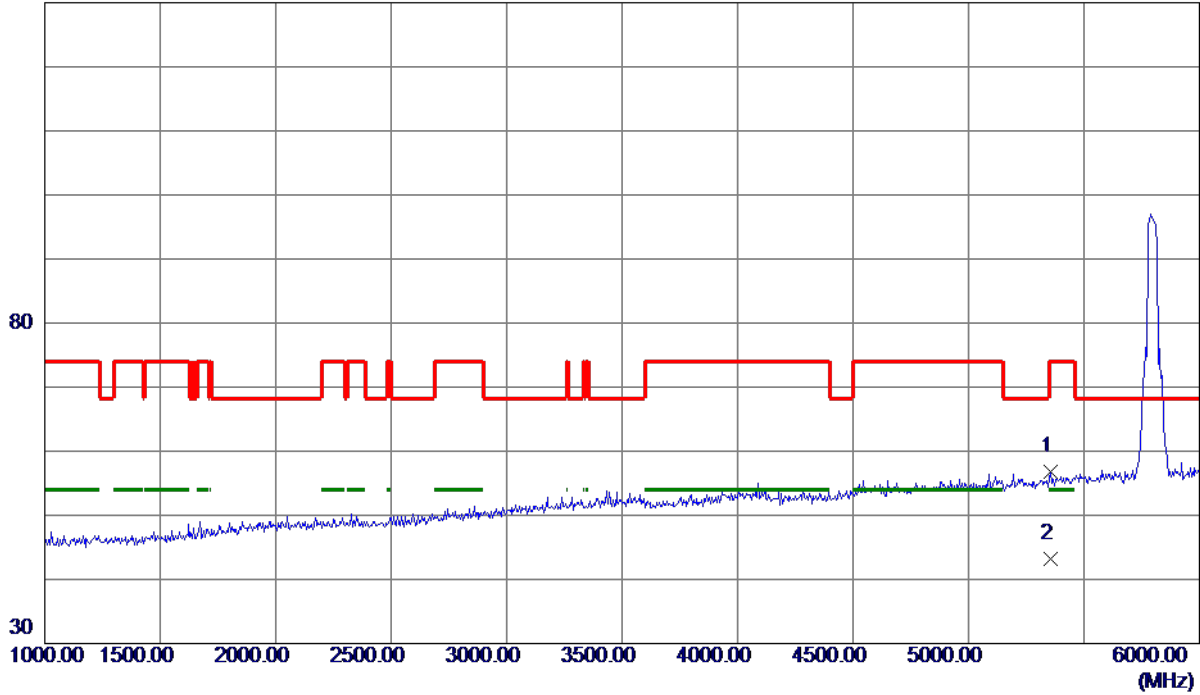

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5355.0000	40.24	16.64	56.88	74.00	-17.12	Peak	
2 *	5355.0000	26.55	16.64	43.19	54.00	-10.81	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

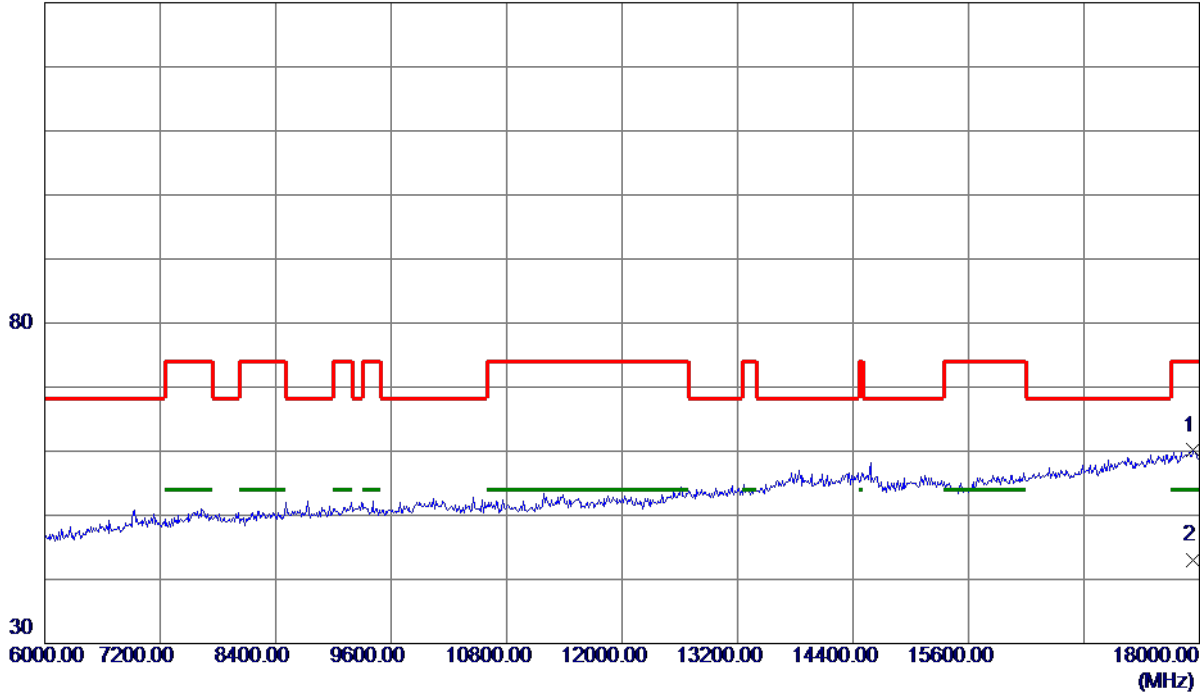

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17928.0000	37.84	22.26	60.10	74.00	-13.90	Peak	
2 *	17928.0000	20.82	22.26	43.08	54.00	-10.92	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

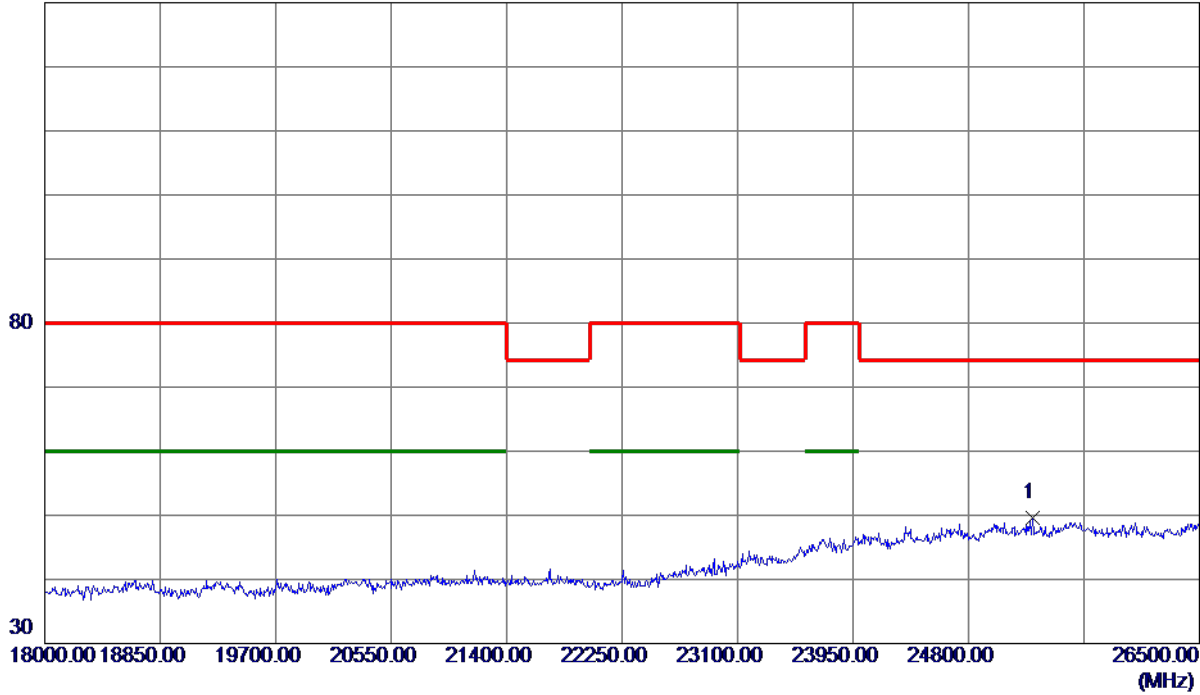


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25271.7500	29.54	20.04	49.58	74.30	-24.72	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

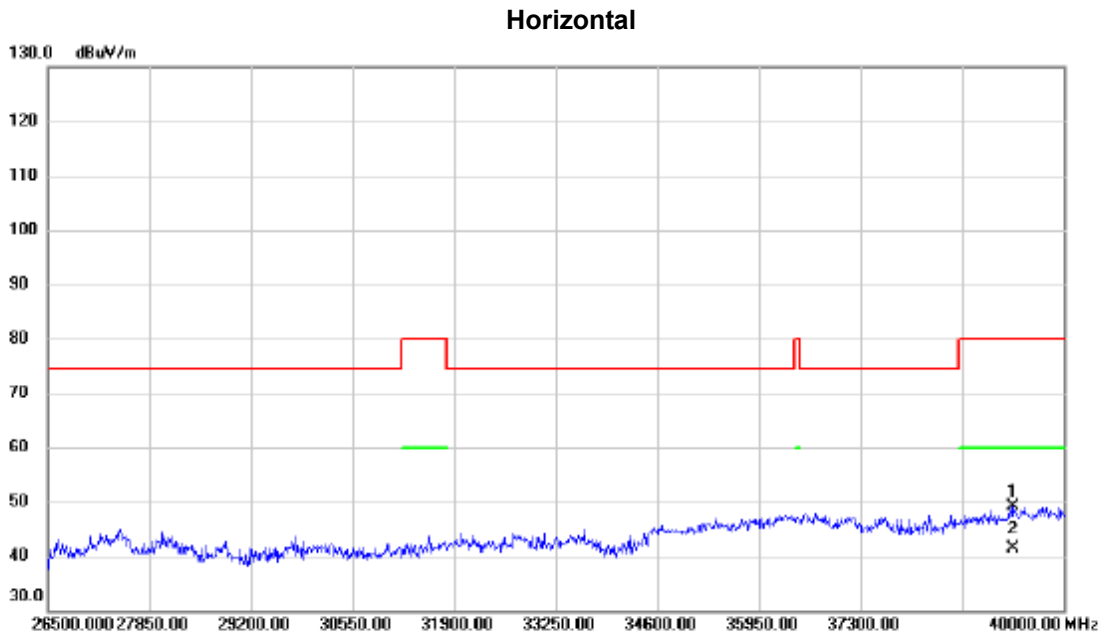

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39318.250	34.65	14.54	49.19	80.00	-30.81	peak	
2	*	39318.250	26.78	14.54	41.32	60.00	-18.68	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

Vertical

130 dBuV/m

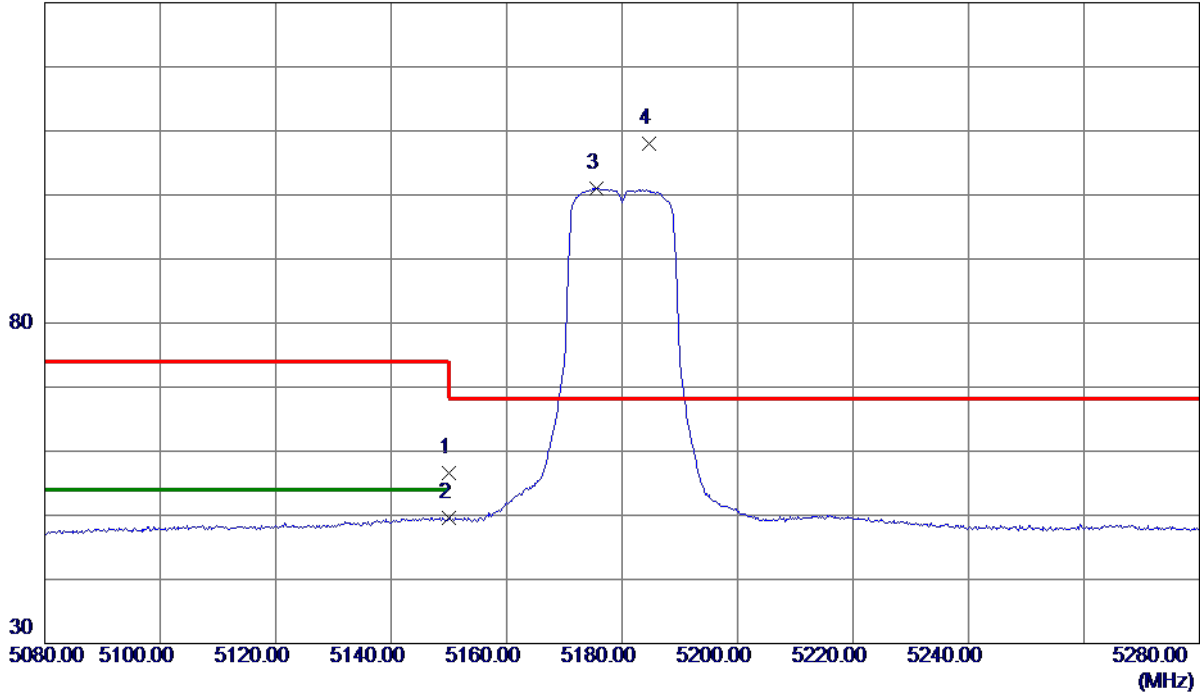

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.52	16.16	56.68	74.00	-17.32	Peak	
2	5150.0000	33.37	16.16	49.53	54.00	-4.47	AVG	
3	5175.6000	84.83	16.22	101.05	999.00	-897.95	AVG	No Limit
4 *	5184.6000	91.85	16.24	108.09	68.30	39.79	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

Horizontal

130 dBuV/m

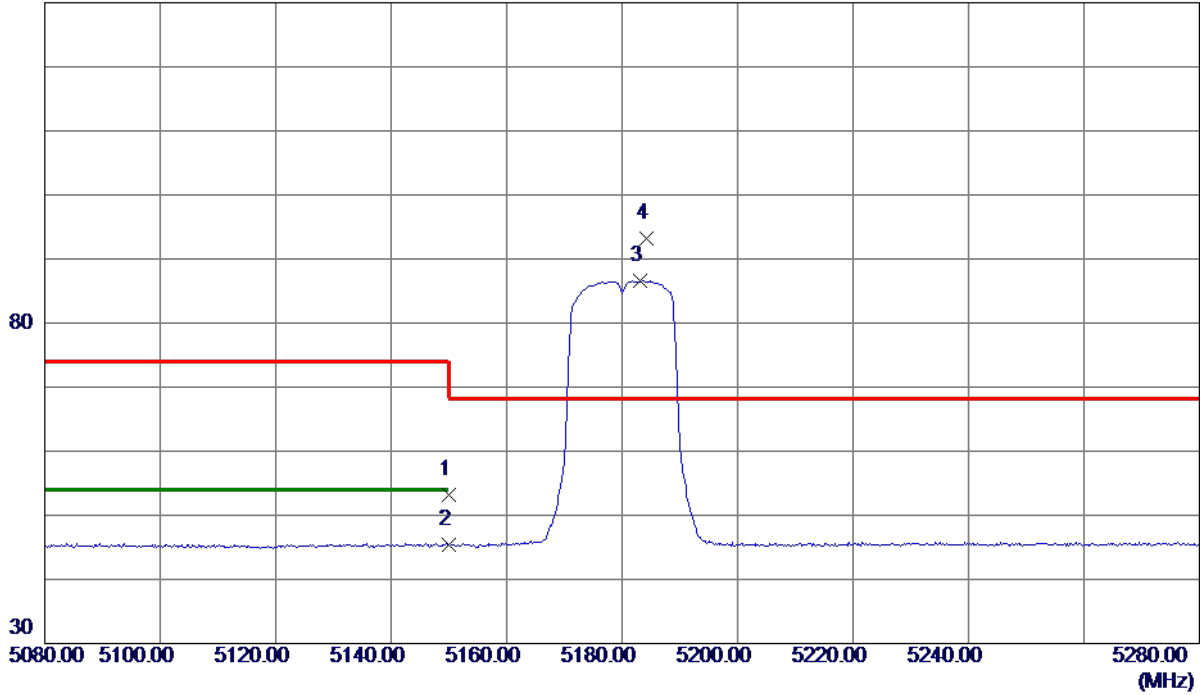

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.04	16.16	53.20	74.00	-20.80	Peak	
2	5150.0000	29.17	16.16	45.33	54.00	-8.67	AVG	
3	5183.2000	70.37	16.23	86.60	999.00	-912.40	AVG	No Limit
4 *	5184.2000	77.03	16.24	93.27	68.30	24.97	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

Vertical

130 dBuV/m

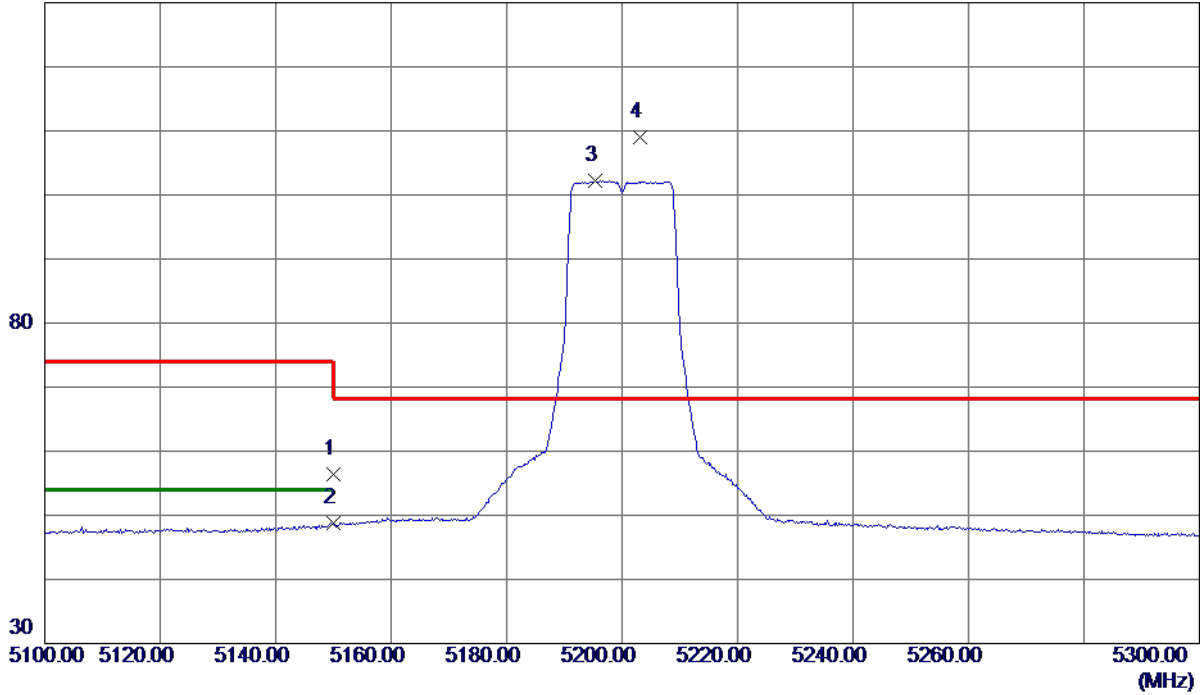

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.19	16.16	56.35	74.00	-17.65	Peak	
2	5150.0000	32.56	16.16	48.72	54.00	-5.28	AVG	
3	5195.4000	85.88	16.26	102.14	999.00	-896.86	AVG	No Limit
4 *	5203.2000	92.74	16.28	109.02	68.30	40.72	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

Horizontal

130 dBuV/m

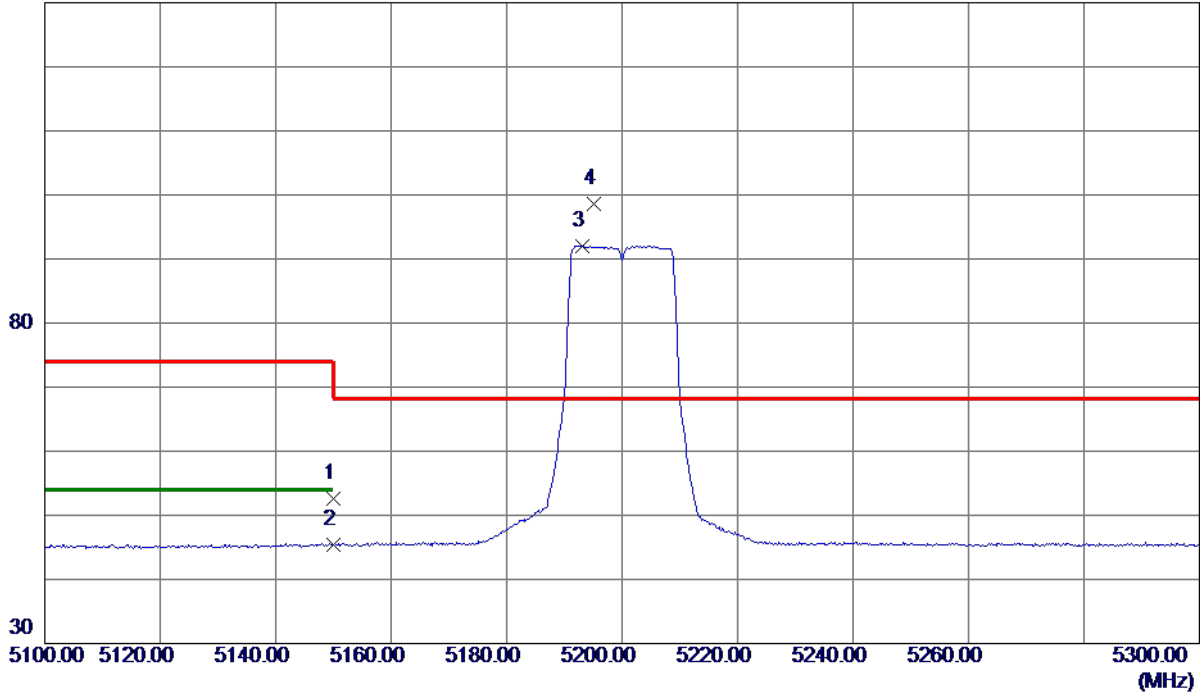


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.35	16.16	52.51	74.00	-21.49	Peak	
2	5150.0000	29.22	16.16	45.38	54.00	-8.62	AVG	
3	5193.2000	75.76	16.26	92.02	999.00	-906.98	AVG	No Limit
4 *	5195.2000	82.29	16.26	98.55	68.30	30.25	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5220 MHz

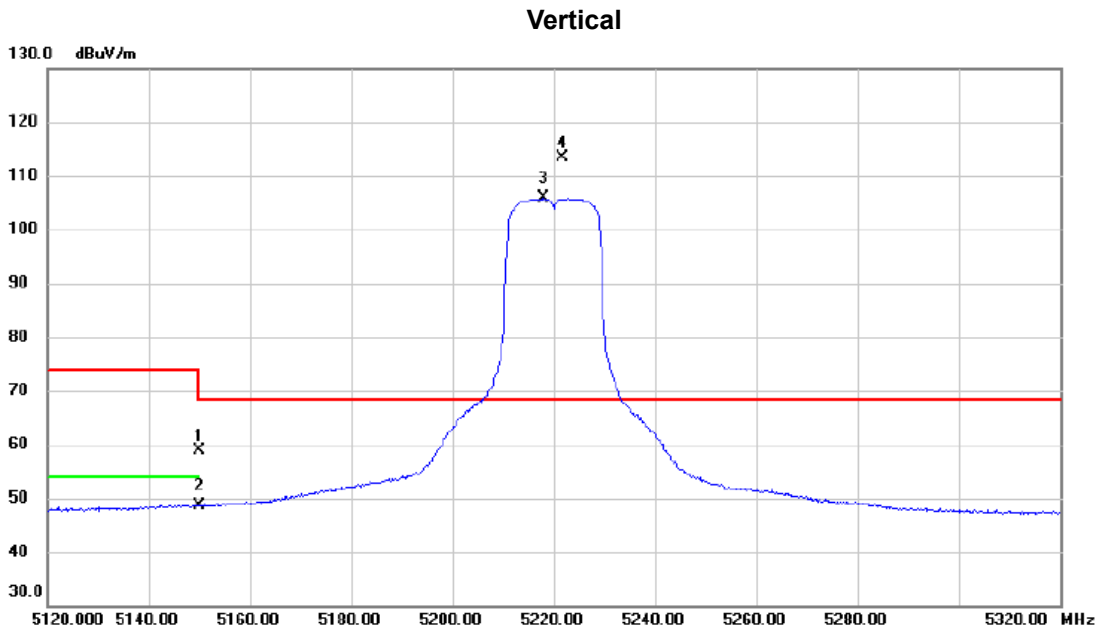


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	42.74	16.15	58.89	74.00	-15.11	peak	
2		5150.000	32.39	16.15	48.54	54.00	-5.46	AVG	
3	X	5218.000	89.49	16.32	105.81	68.30	37.51	AVG	No Limit
4	*	5221.600	97.16	16.33	113.49	68.30	45.19	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5220 MHz

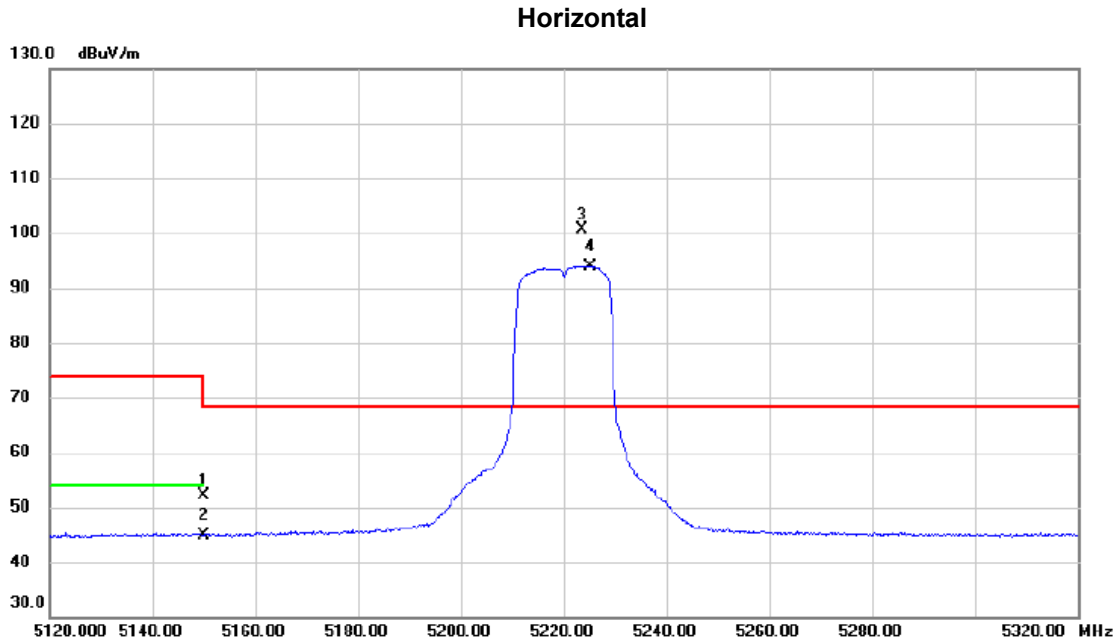

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.95	16.15	52.10	74.00	-21.90	peak	
2		5150.000	28.81	16.15	44.96	54.00	-9.04	AVG	
3	*	5223.600	84.31	16.33	100.64	68.30	32.34	peak	No Limit
4	X	5225.200	77.64	16.34	93.98	68.30	25.68	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

130 dBuV/m

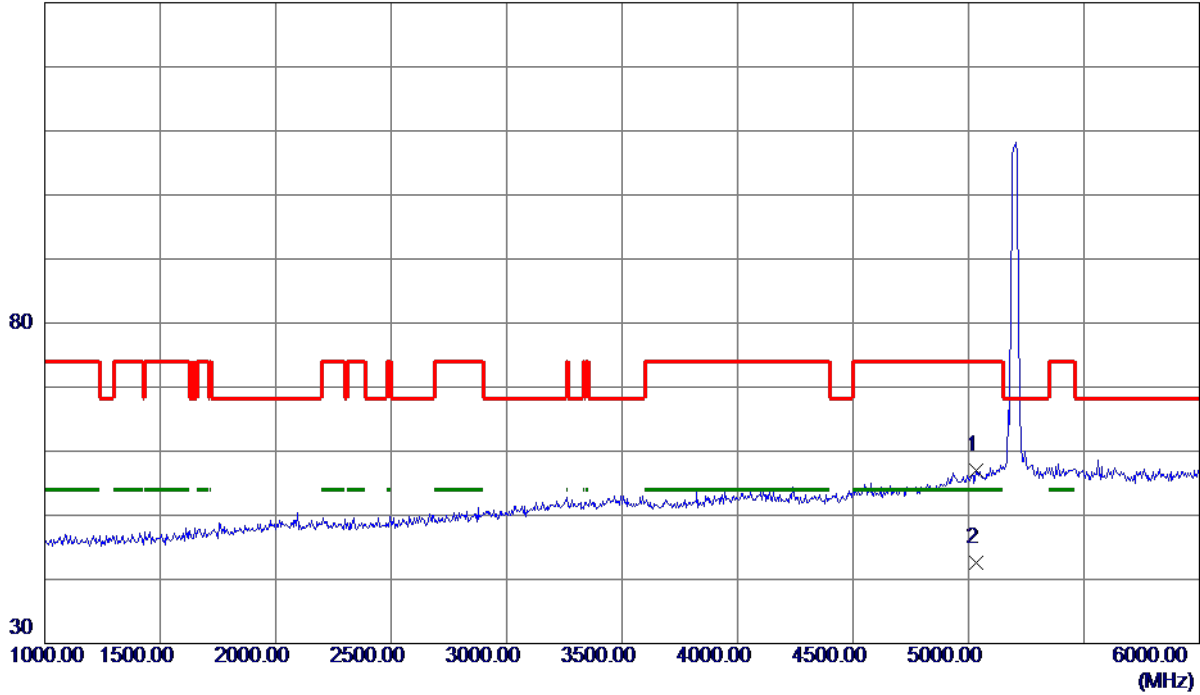

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5035.0000	41.05	15.88	56.93	74.00	-17.07	Peak	
2 *	5035.0000	26.81	15.88	42.69	54.00	-11.31	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17832.0000	38.00	22.20	60.20	74.00	-13.80	Peak	
2 *	17832.0000	21.07	22.20	43.27	54.00	-10.73	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

130 dBuV/m

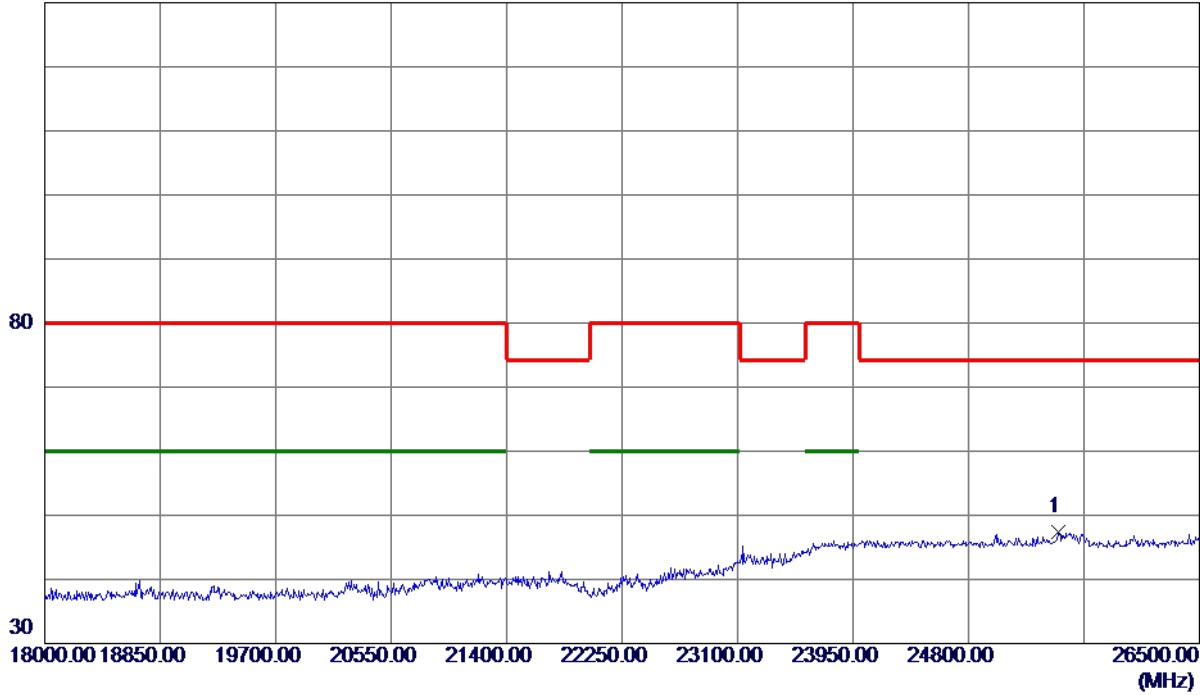


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25463.0000	27.43	20.03	47.46	74.30	-26.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

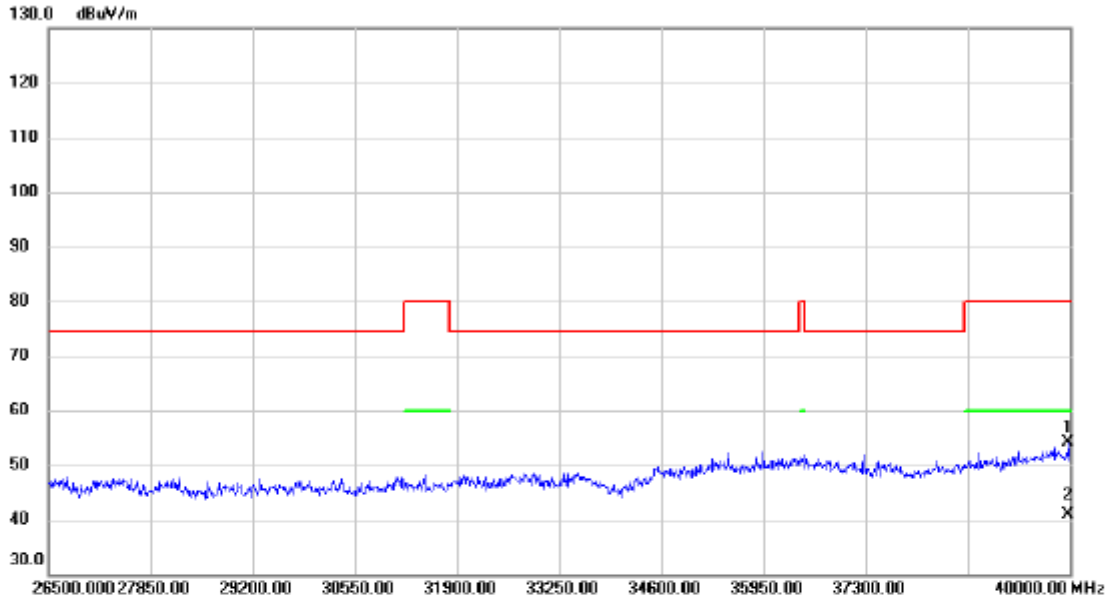

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39979.750	38.52	15.60	54.12	80.00	-25.88	peak	
2	*	39979.750	25.34	15.60	40.94	60.00	-19.06	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

130 dBuV/m

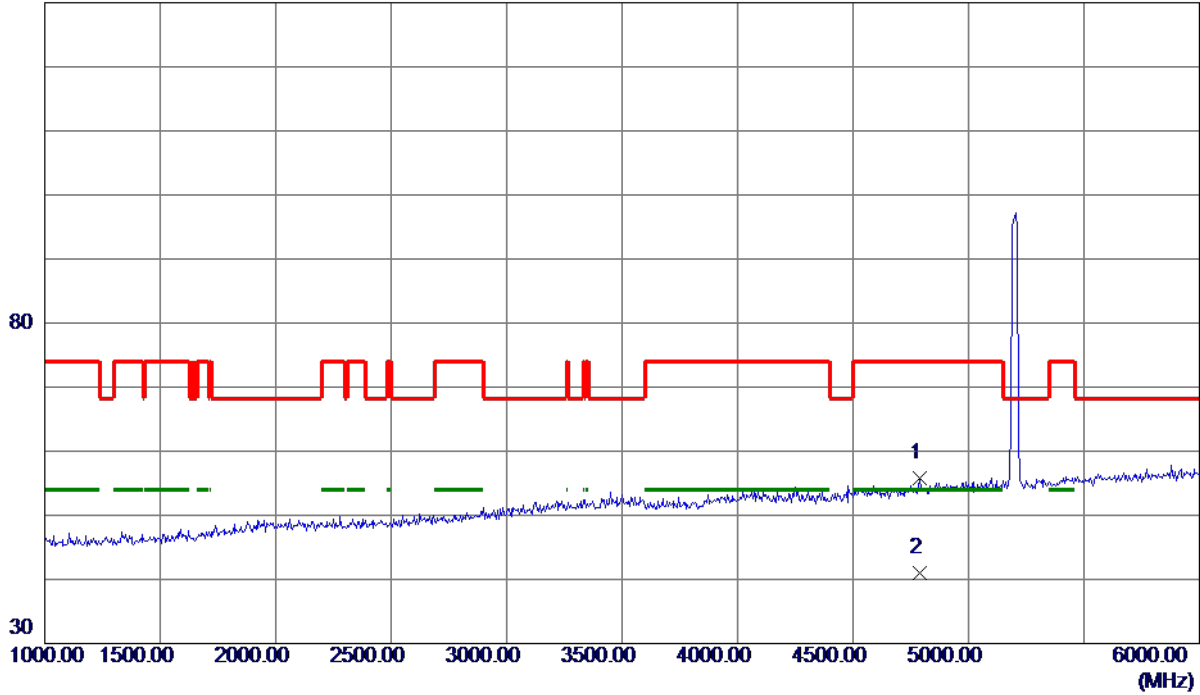

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4790.0000	40.50	15.23	55.73	74.00	-18.27	Peak	
2 *	4790.0000	25.79	15.23	41.02	54.00	-12.98	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

130 dBuV/m

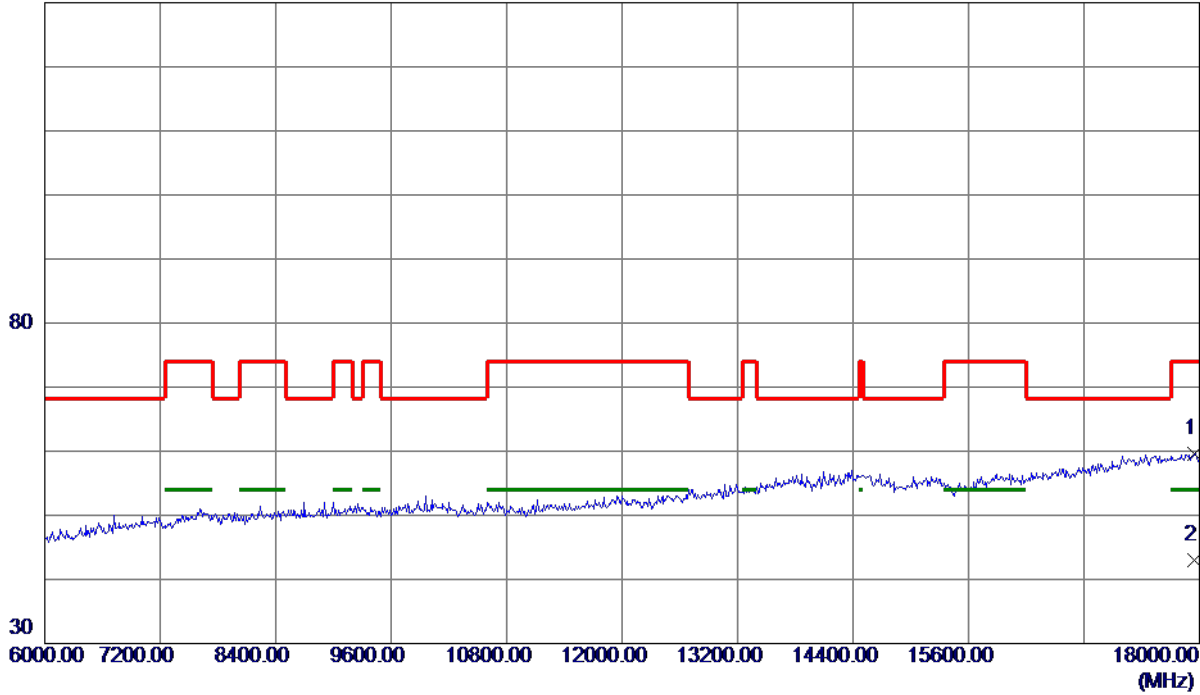

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	37.41	22.27	59.68	74.00	-14.32	Peak	
2 *	17952.0000	20.71	22.27	42.98	54.00	-11.02	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

130 dBuV/m

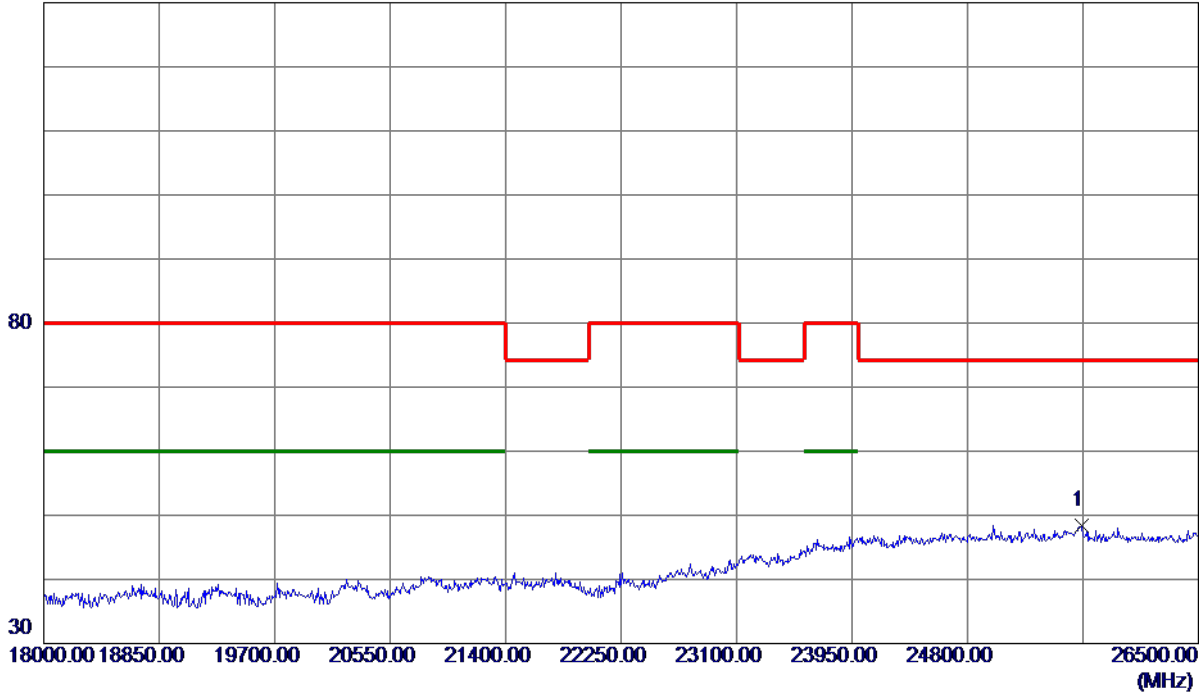


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25637.2500	28.41	20.02	48.43	74.30	-25.87	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

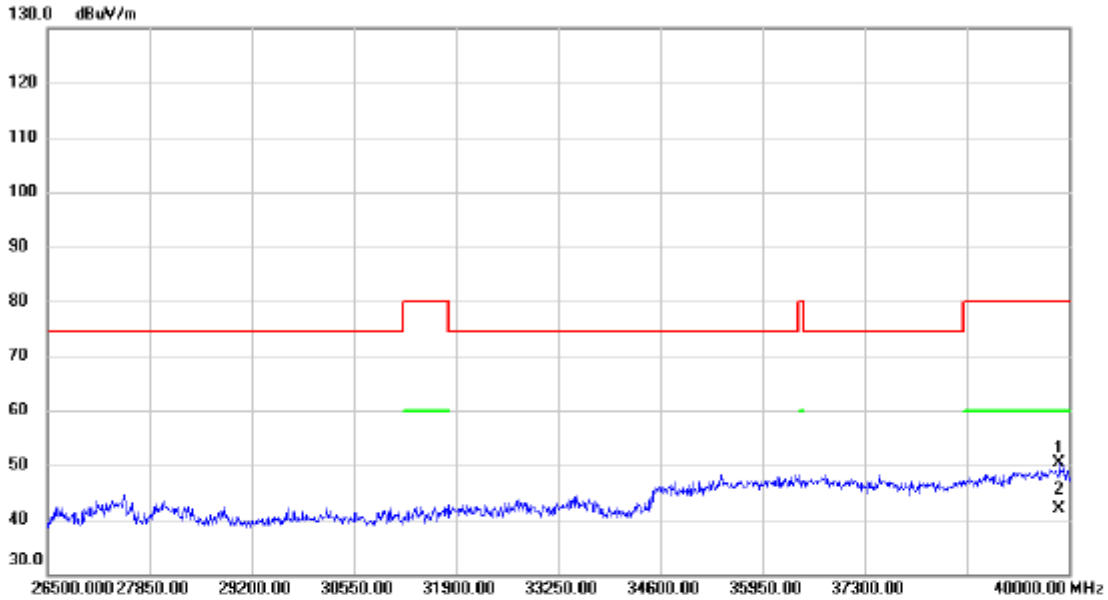

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39865.000	34.76	15.54	50.30	80.00	-29.70	peak	
2	*	39865.000	26.45	15.54	41.99	60.00	-18.01	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

Vertical

130 dBuV/m

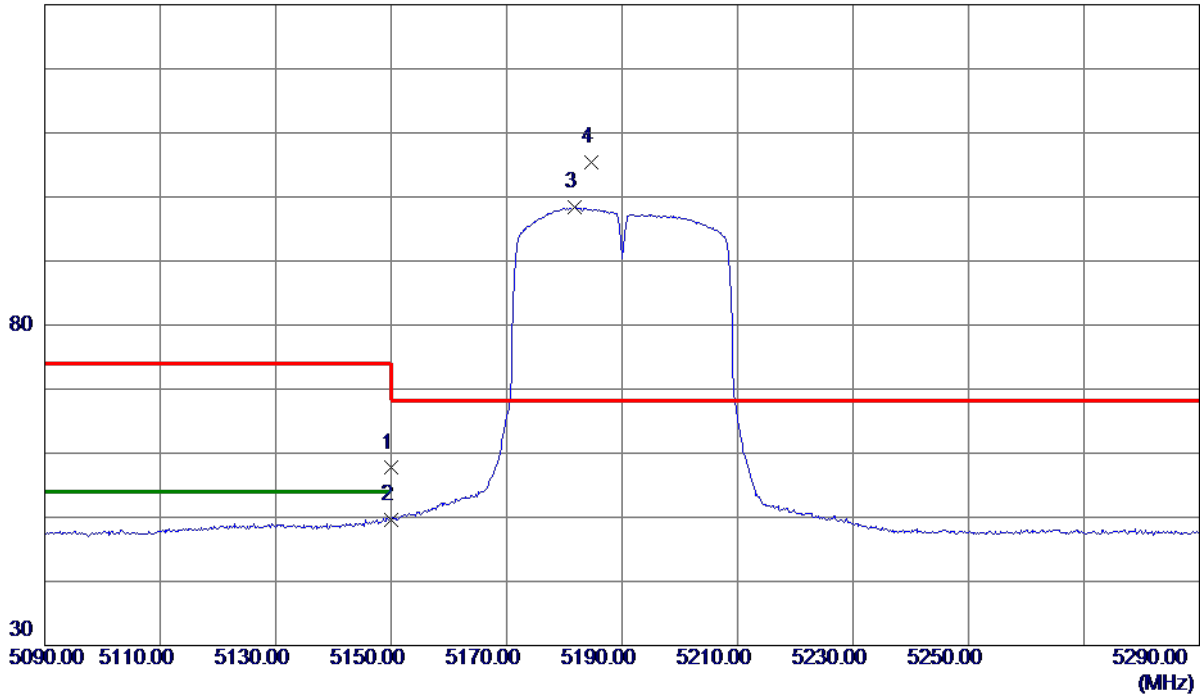

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.54	16.16	57.70	74.00	-16.30	Peak	
2	5150.0000	33.36	16.16	49.52	54.00	-4.48	AVG	
3	5181.8000	82.11	16.23	98.34	999.00	-900.66	AVG	No Limit
4 *	5184.6000	89.23	16.24	105.47	68.30	37.17	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

Horizontal

130 dBuV/m

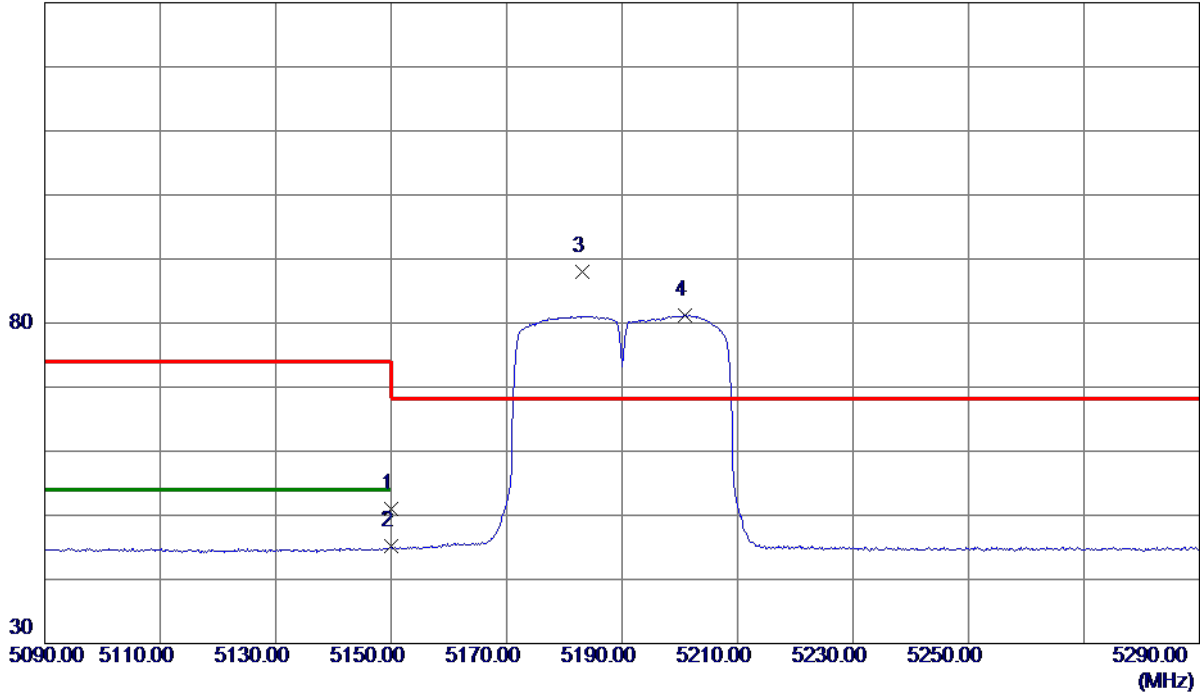

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	34.89	16.16	51.05	74.00	-22.95	Peak	
2	5150.0000	28.96	16.16	45.12	54.00	-8.88	AVG	
3 *	5183.2000	71.71	16.23	87.94	68.30	19.64	Peak	No Limit
4	5200.8000	64.87	16.28	81.15	999.00	-917.85	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

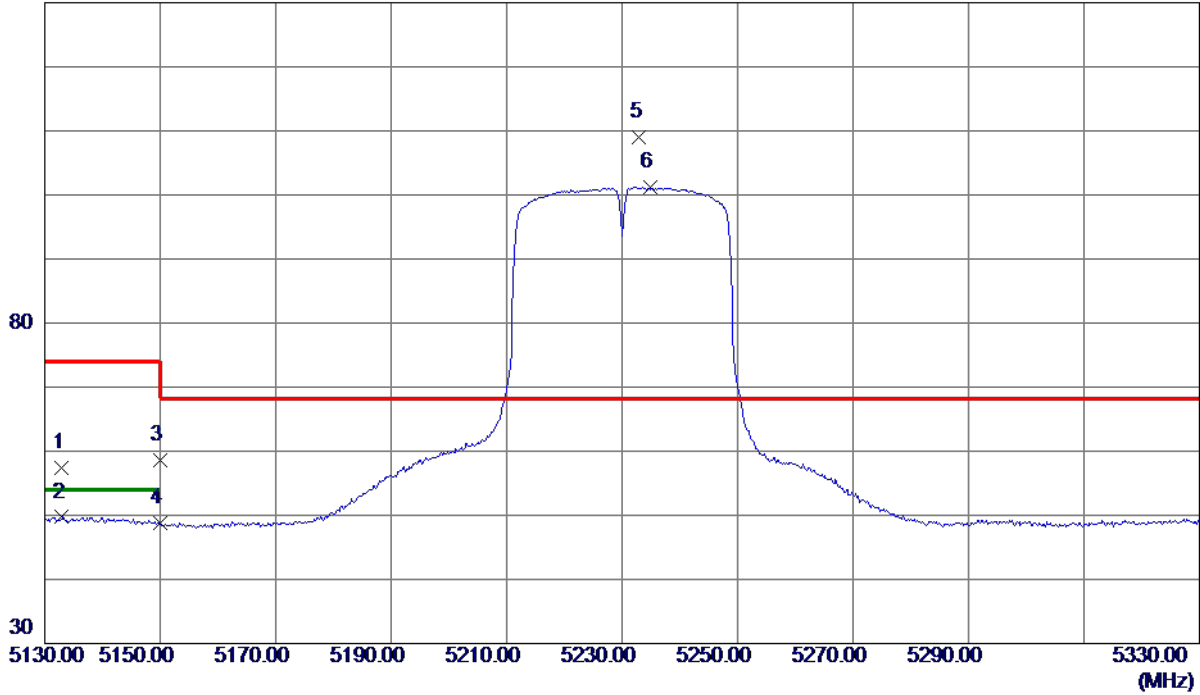

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5133.0000	41.32	16.12	57.44	74.00	-16.56	Peak	
2	5133.0000	33.58	16.12	49.70	54.00	-4.30	AVG	
3	5150.0000	42.37	16.16	58.53	74.00	-15.47	Peak	
4	5150.0000	32.65	16.16	48.81	54.00	-5.19	AVG	
5 *	5233.0000	92.60	16.35	108.95	68.30	40.65	Peak	No Limit
6	5234.8000	84.83	16.36	101.19	999.00	-897.81	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

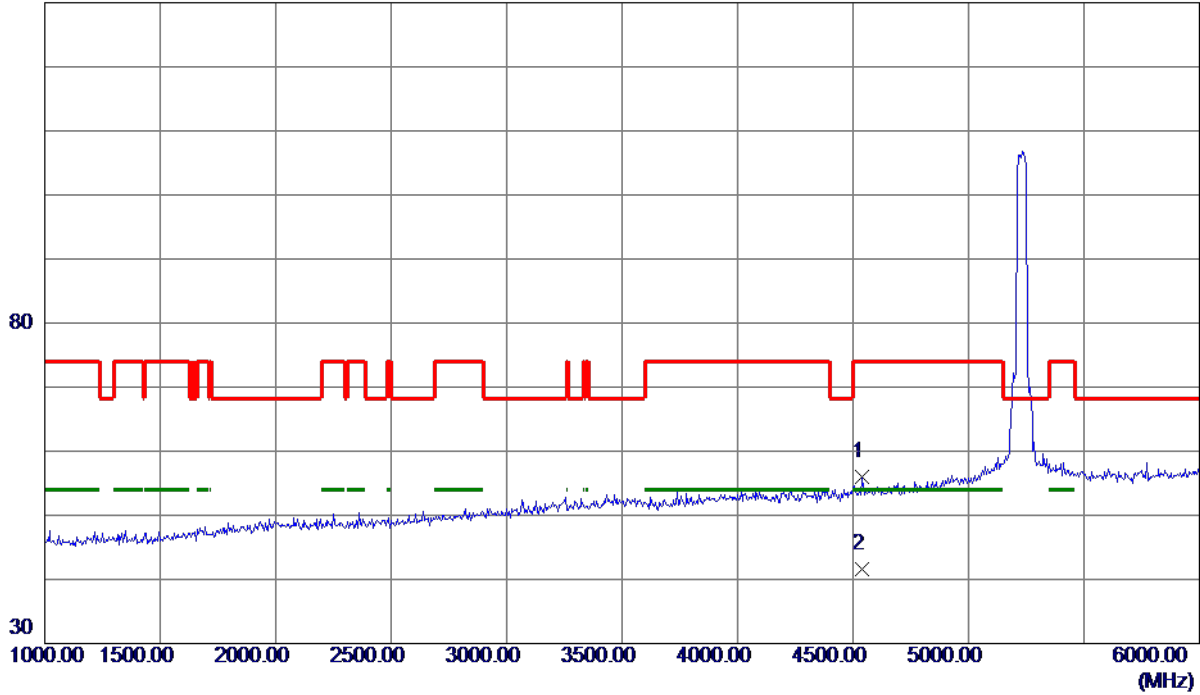

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4540.0000	41.54	14.55	56.09	74.00	-17.91	Peak	
2 *	4540.0000	27.14	14.55	41.69	54.00	-12.31	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

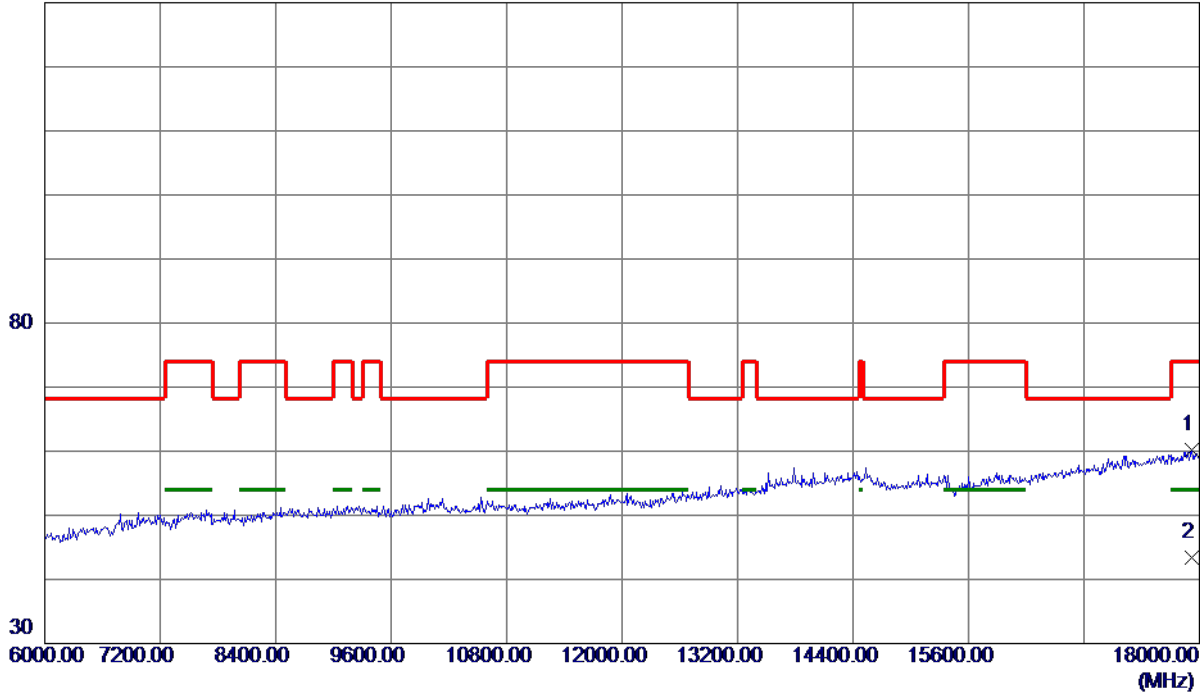

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17916.0000	38.01	22.25	60.26	74.00	-13.74	Peak	
2 *	17916.0000	21.10	22.25	43.35	54.00	-10.65	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

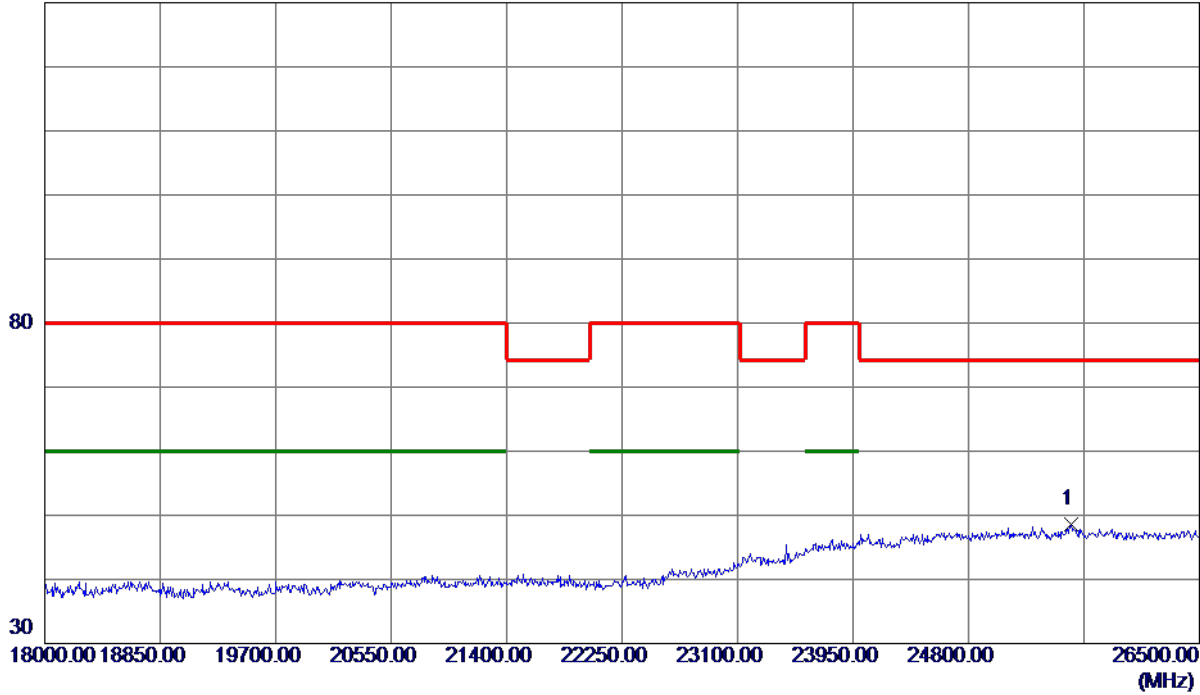


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	28.51	20.02	48.53	74.30	-25.77	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

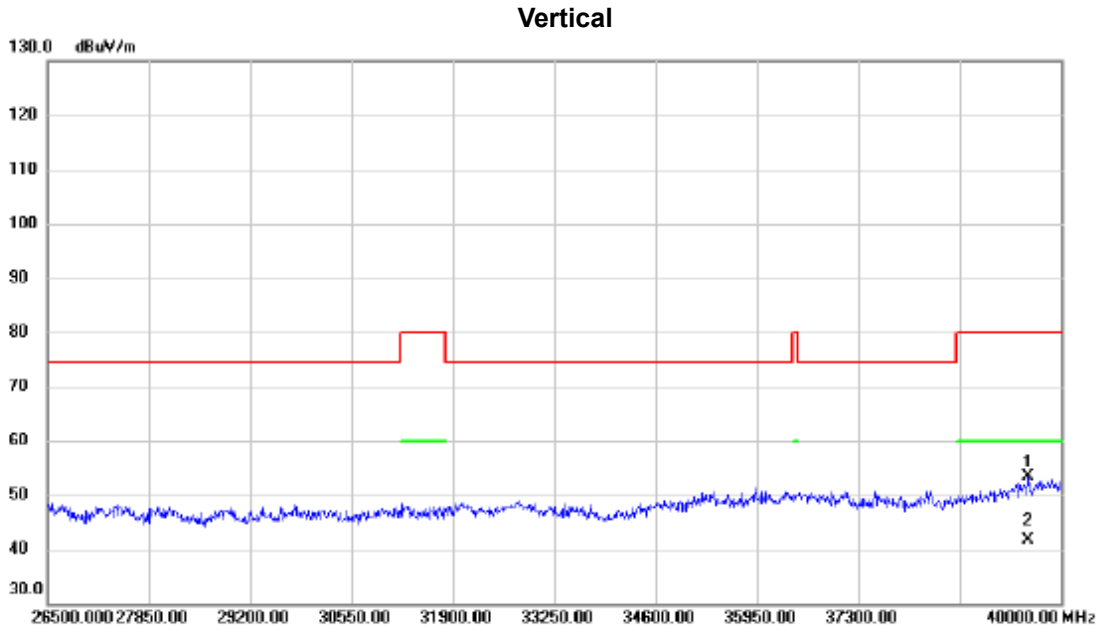

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39561.250	37.98	15.34	53.32	80.00	-26.68	peak	
2	*	39561.250	26.18	15.34	41.52	60.00	-18.48	AVG	

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

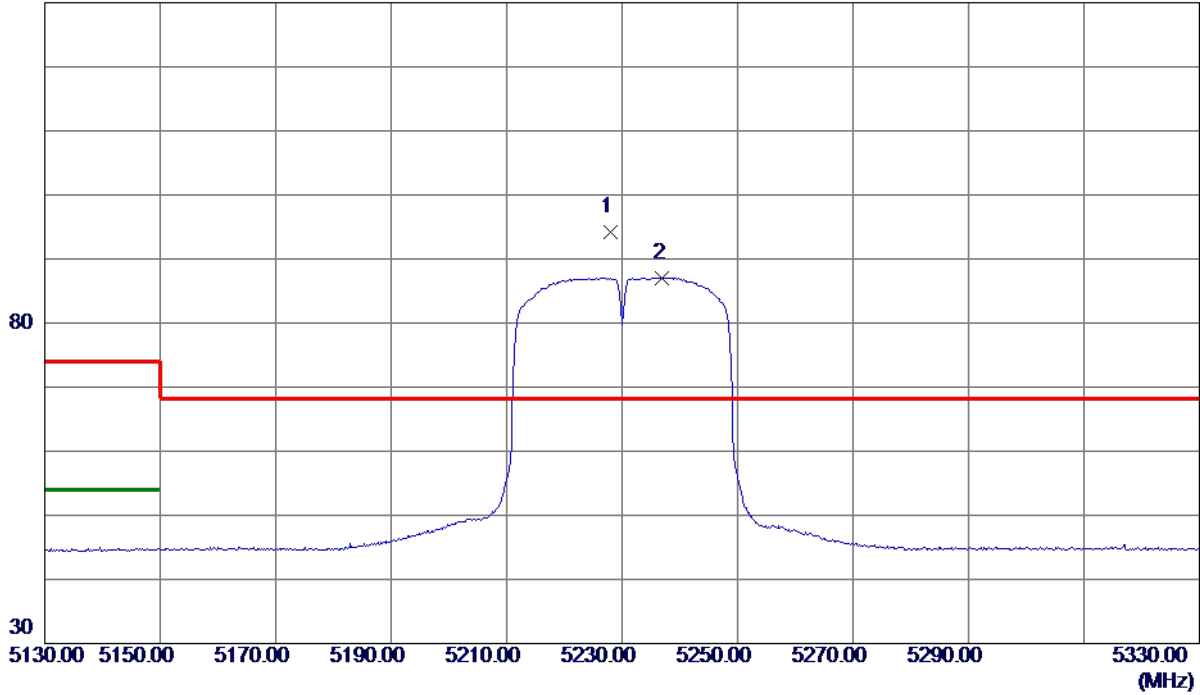

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5228.0000	77.89	16.34	94.23	68.30	25.93	Peak	No Limit
2	5237.0000	70.71	16.36	87.07	999.00	-911.93	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

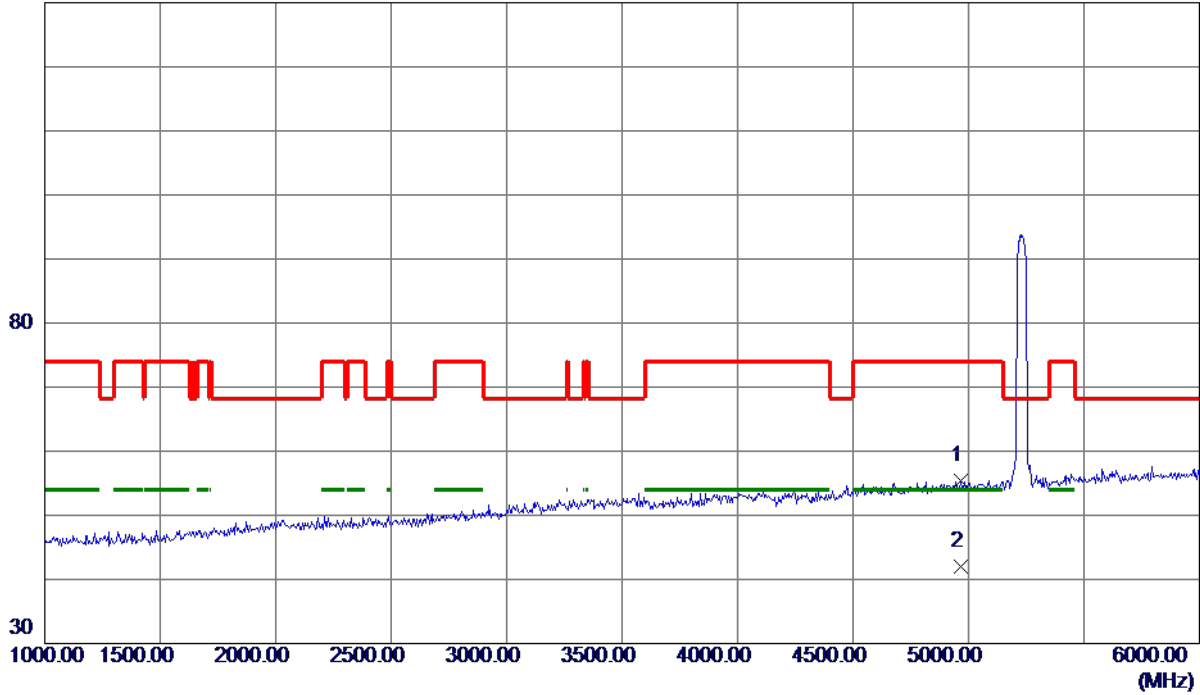

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4965.0000	39.70	15.71	55.41	74.00	-18.59	Peak	
2 *	4965.0000	26.24	15.71	41.95	54.00	-12.05	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

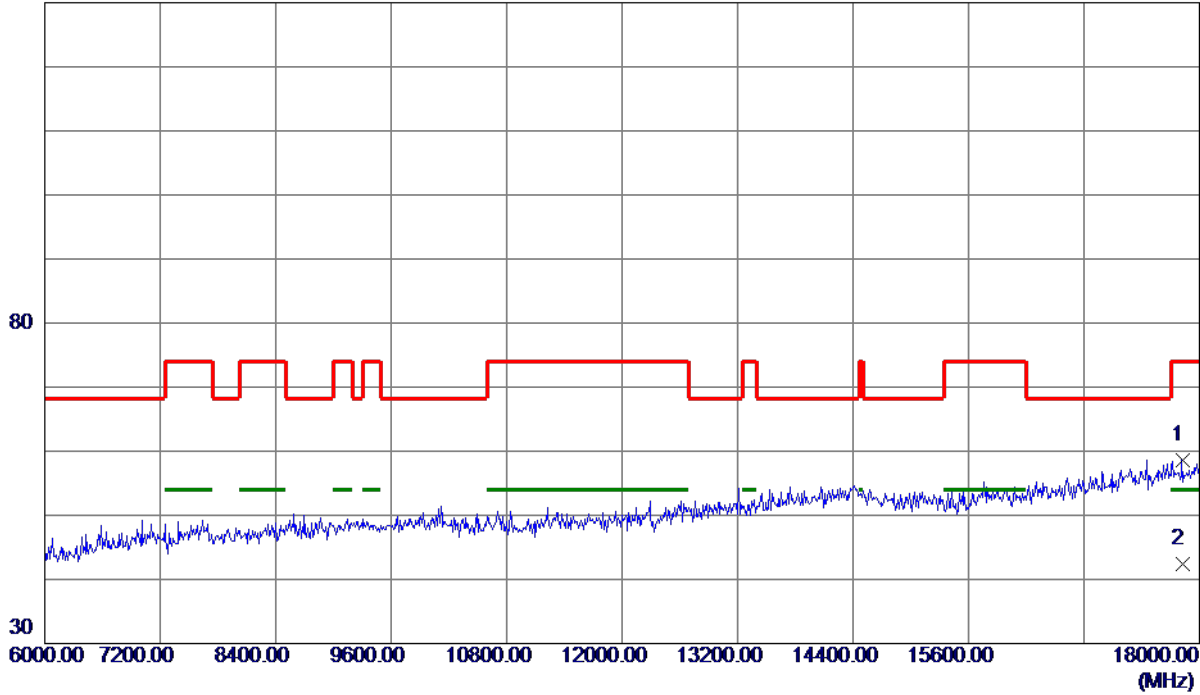

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	36.44	22.19	58.63	74.00	-15.37	Peak	
2 *	17820.0000	20.16	22.19	42.35	54.00	-11.65	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

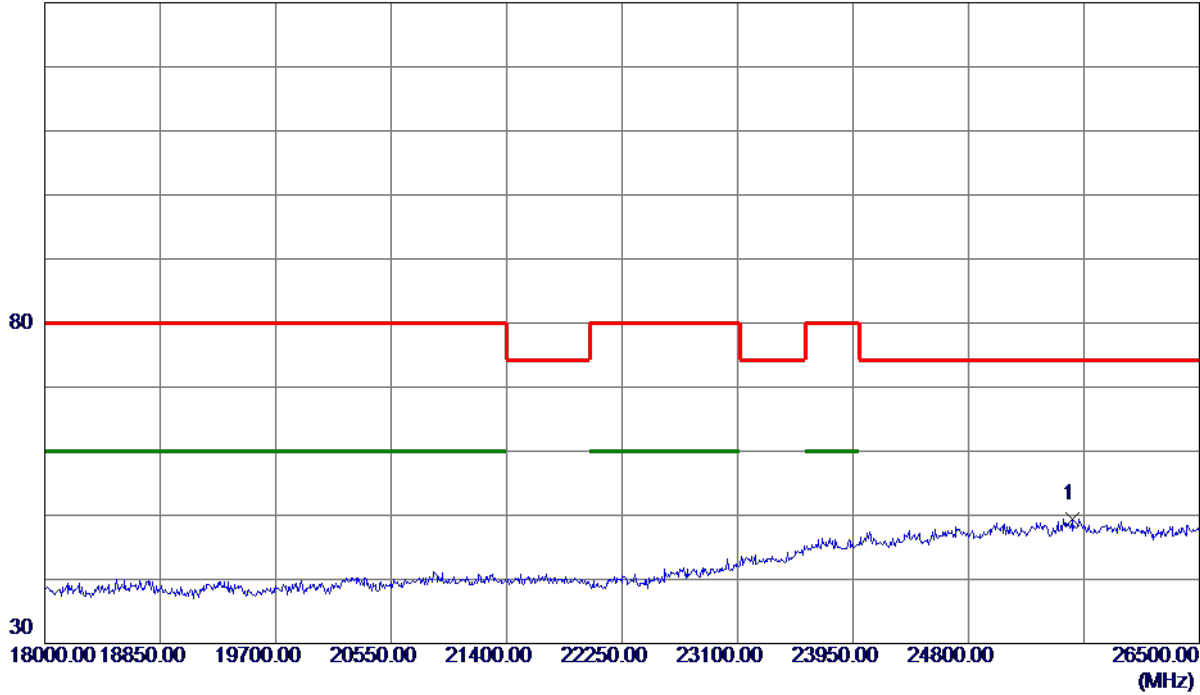


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25560.7500	29.43	20.02	49.45	74.30	-24.85	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

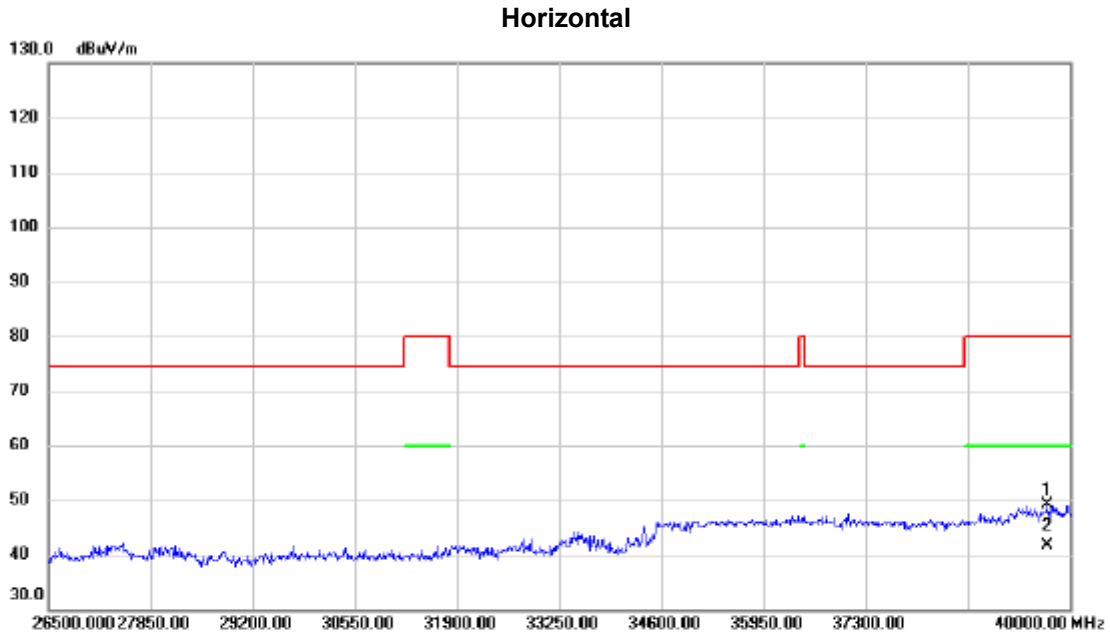

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39709.750	33.78	15.43	49.21	80.00	-30.79	peak	
2	*	39709.750	26.18	15.43	41.61	60.00	-18.39	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

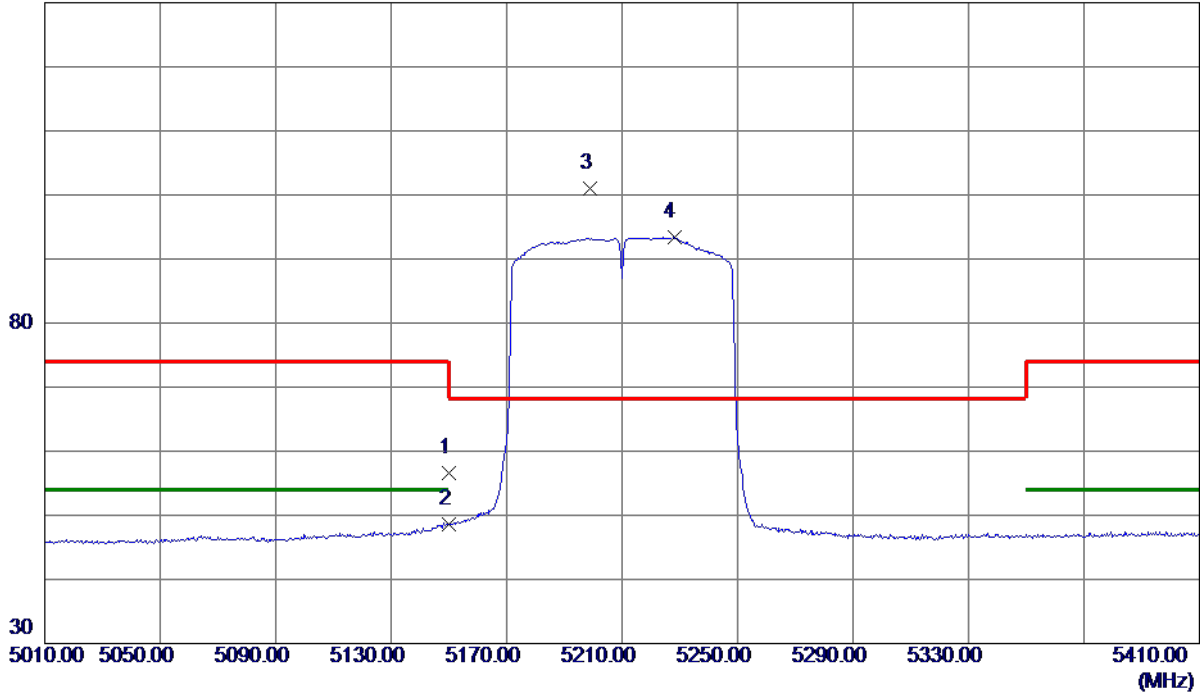

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.52	16.16	56.68	74.00	-17.32	Peak	
2	5150.0000	32.42	16.16	48.58	54.00	-5.42	AVG	
3 *	5198.8000	84.64	16.27	100.91	68.30	32.61	Peak	No Limit
4	5228.0000	76.98	16.34	93.32	999.00	-905.68	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

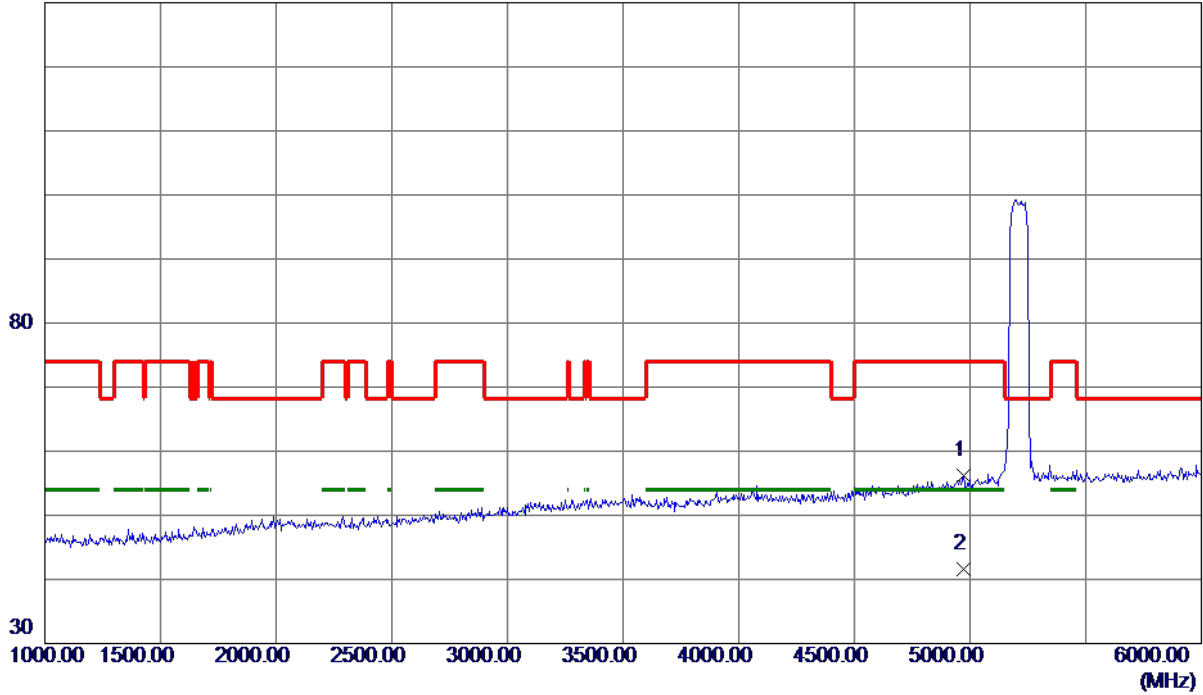

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4970.0000	40.42	15.72	56.14	74.00	-17.86	Peak	
2 *	4970.0000	25.95	15.72	41.67	54.00	-12.33	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

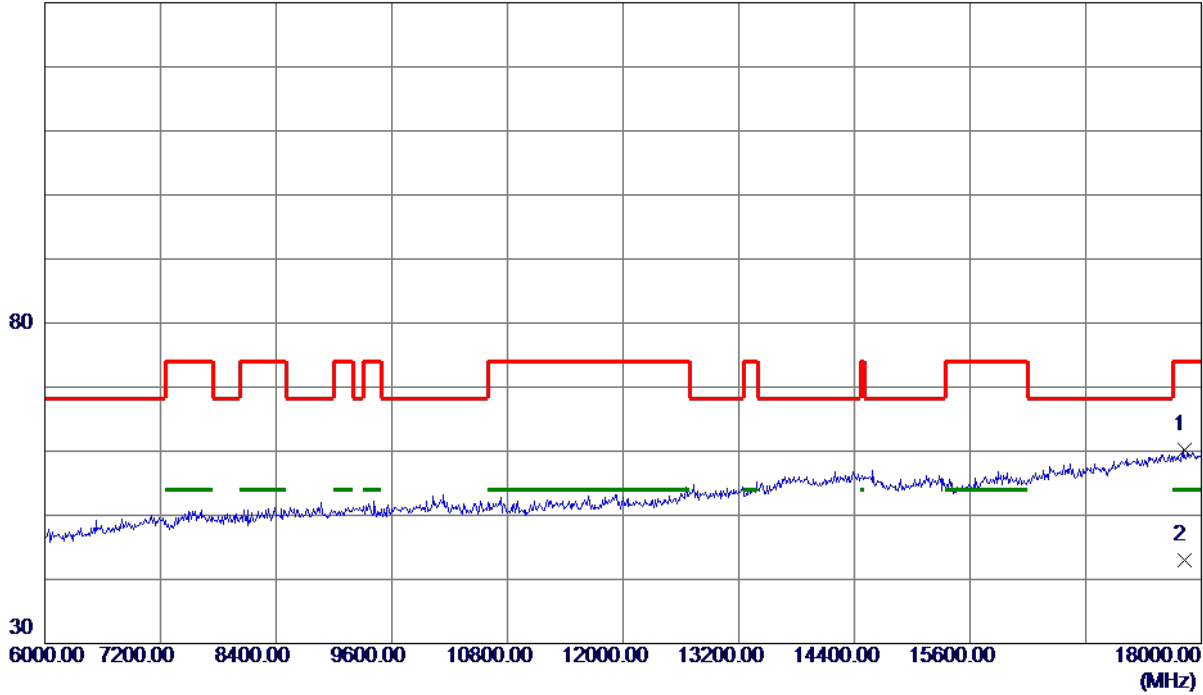

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	38.01	22.19	60.20	74.00	-13.80	Peak	
2 *	17820.0000	20.88	22.19	43.07	54.00	-10.93	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

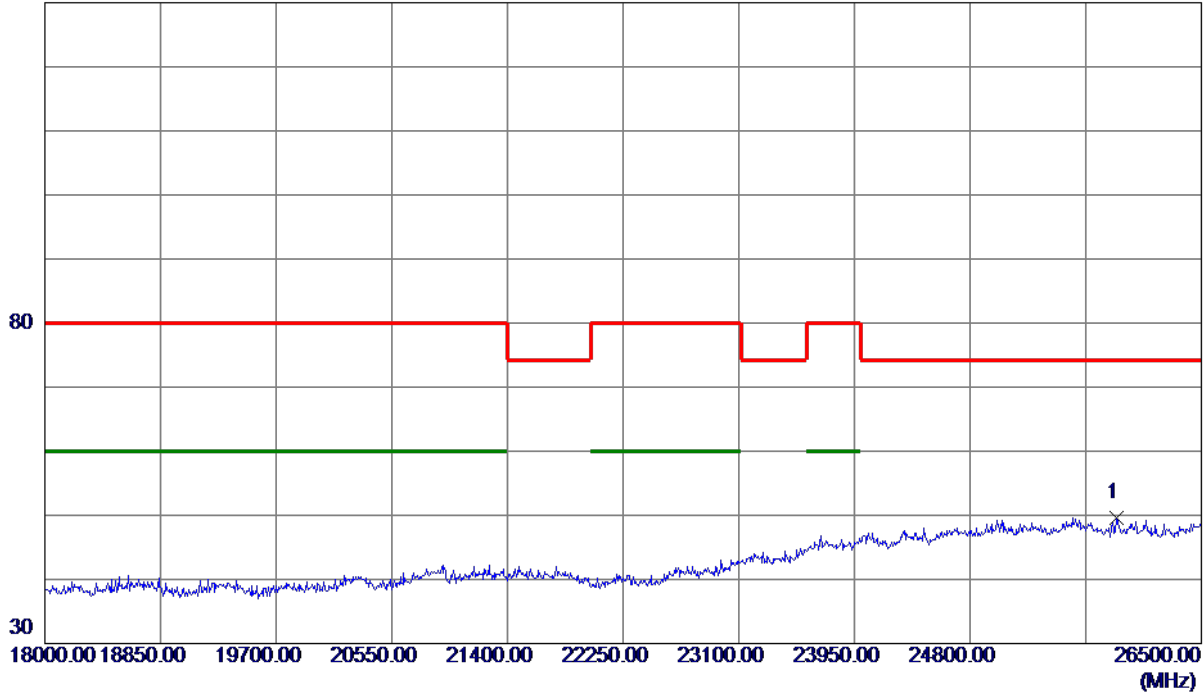


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25879.5000	29.59	20.01	49.60	74.30	-24.70	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

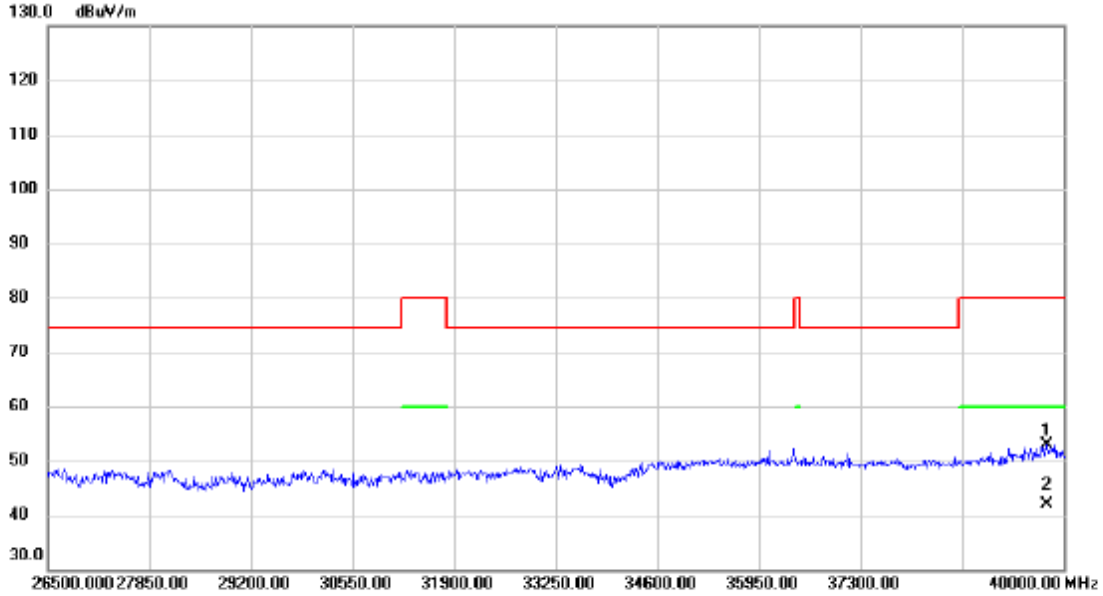

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39777.250	37.28	15.48	52.76	80.00	-27.24	peak	
2	*	39777.250	26.39	15.48	41.87	60.00	-18.13	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

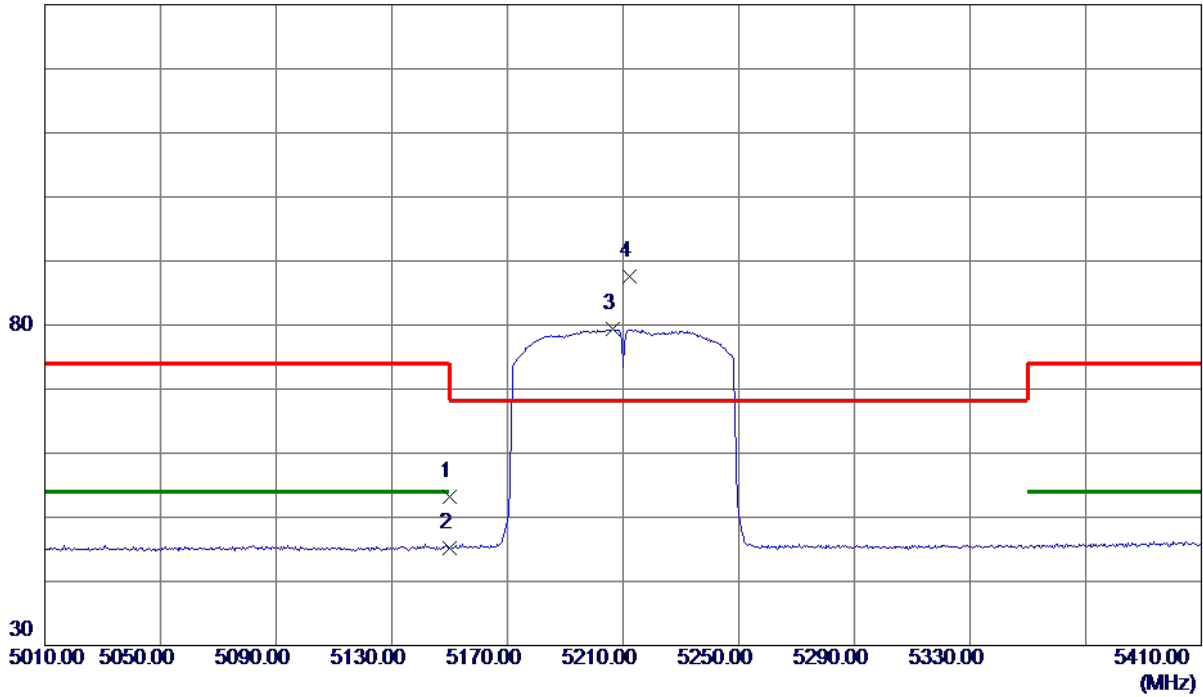

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.08	16.16	53.24	74.00	-20.76	Peak	
2	5150.0000	29.09	16.16	45.25	54.00	-8.75	AVG	
3	5206.4000	63.05	16.29	79.34	999.00	-919.66	AVG	No Limit
4 *	5212.4000	71.31	16.30	87.61	68.30	19.31	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

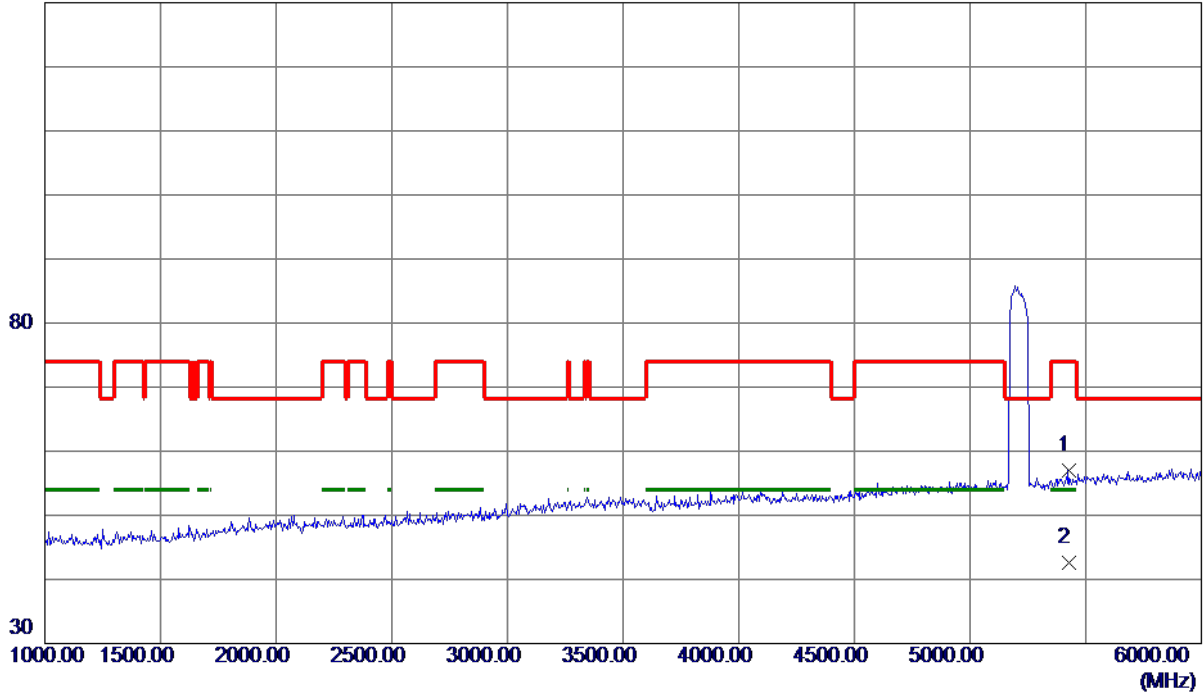

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5425.0000	40.13	16.81	56.94	74.00	-17.06	Peak	
2 *	5425.0000	25.84	16.81	42.65	54.00	-11.35	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

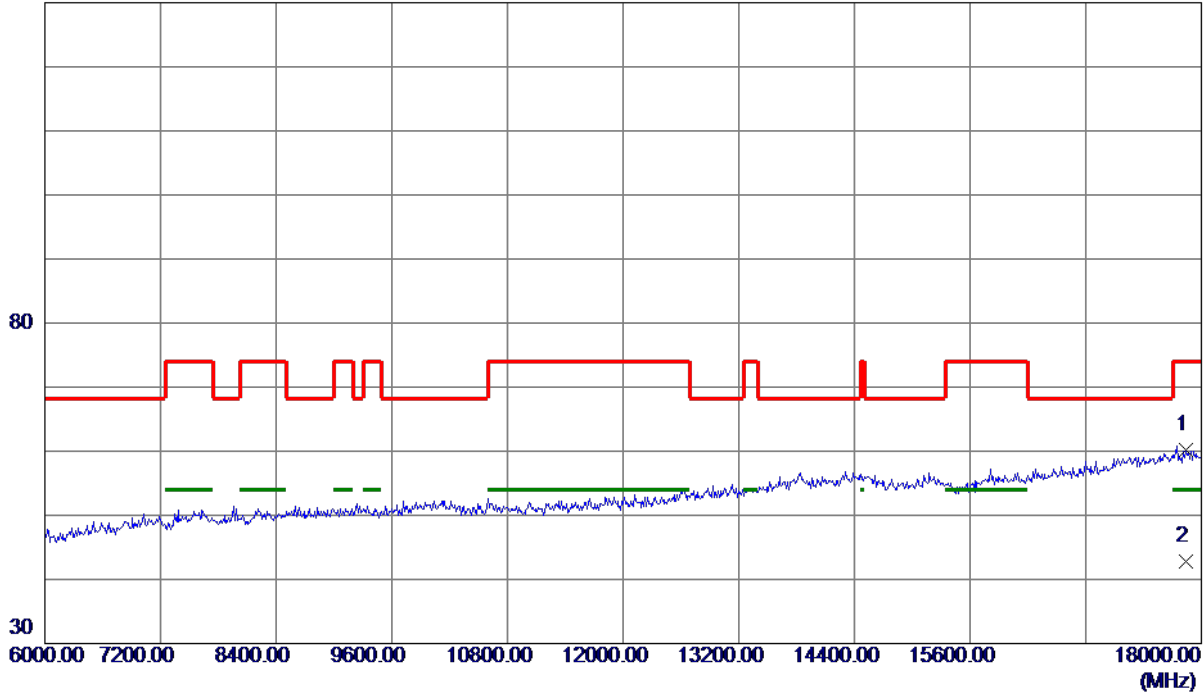

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17844.0000	37.90	22.21	60.11	74.00	-13.89	Peak	
2 *	17844.0000	20.67	22.21	42.88	54.00	-11.12	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

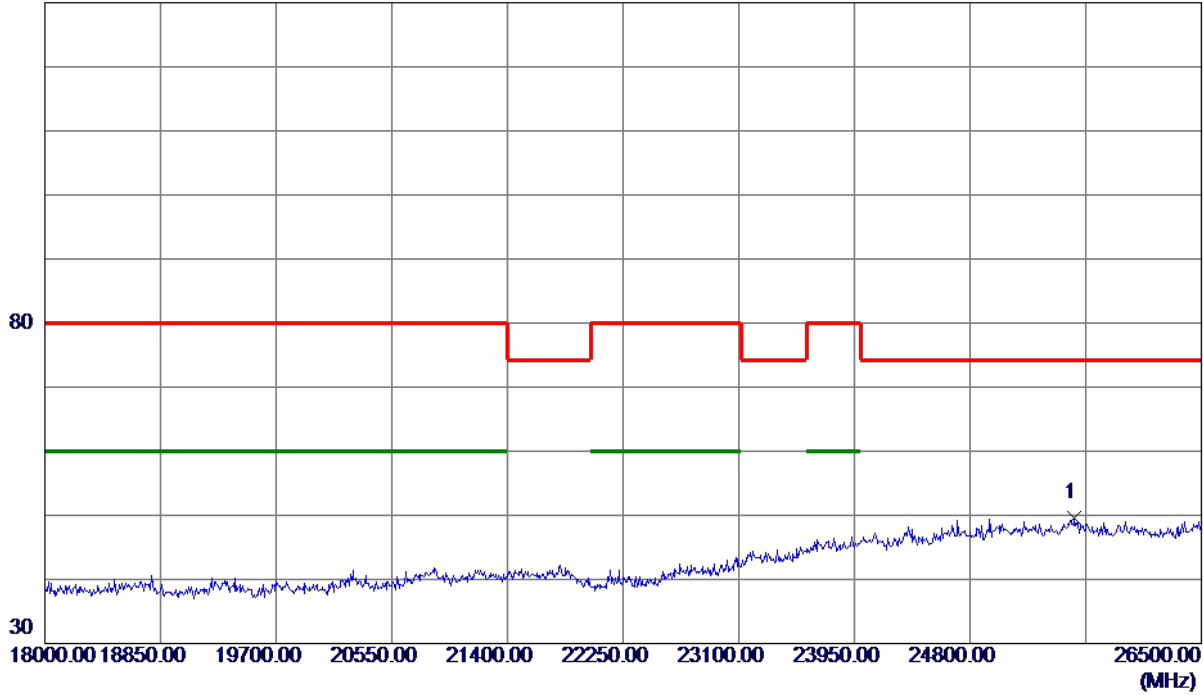


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25565.0000	29.50	20.02	49.52	74.30	-24.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

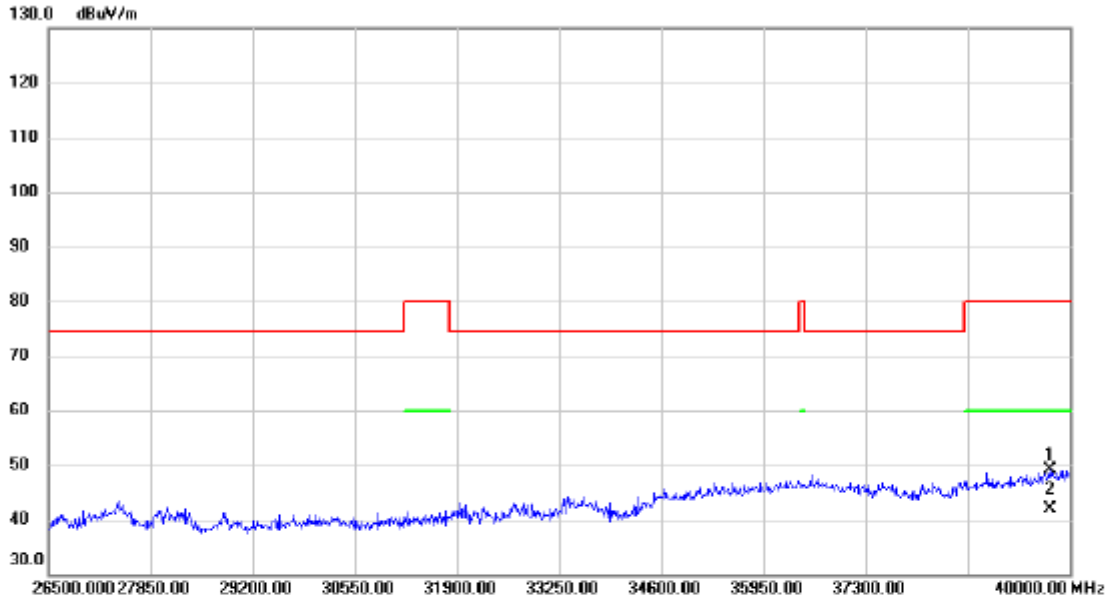

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39730.000	33.60	15.45	49.05	80.00	-30.95	peak	
2	*	39730.000	26.34	15.45	41.79	60.00	-18.21	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

Vertical

130 dBuV/m

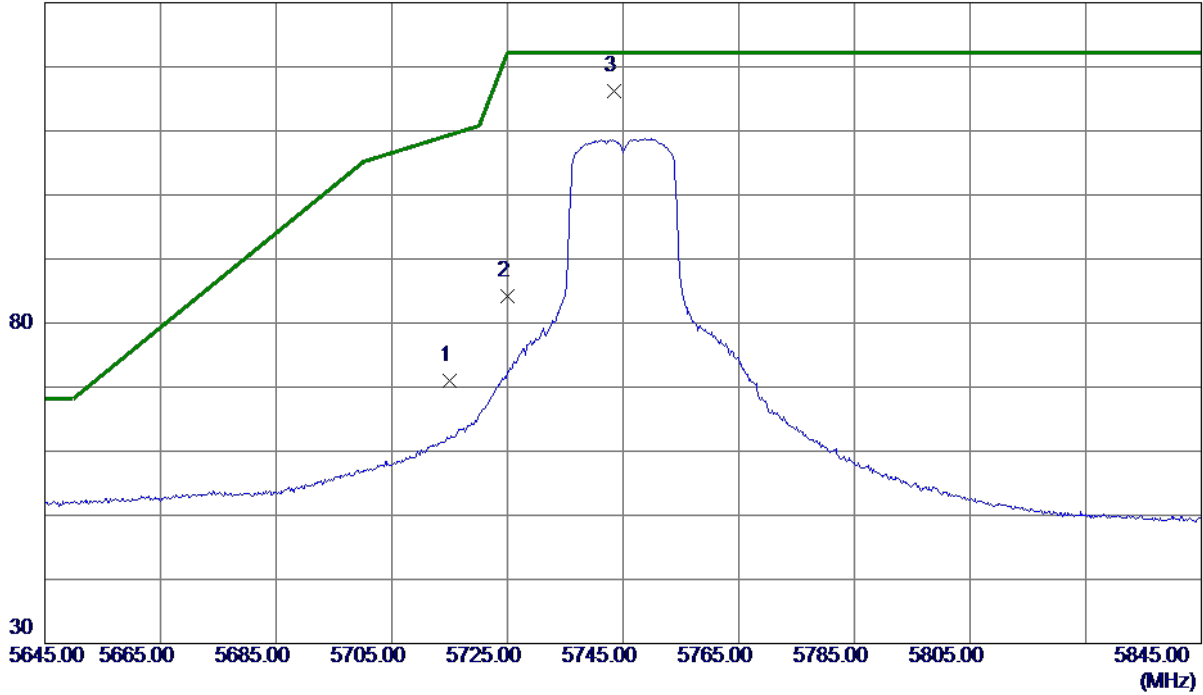

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	53.47	17.62	71.09	109.40	-38.31	Peak	
2	5725.0000	66.49	17.65	84.14	122.20	-38.06	Peak	
3 *	5743.4000	98.41	17.71	116.12	122.20	-6.08	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

Horizontal

130 dBuV/m

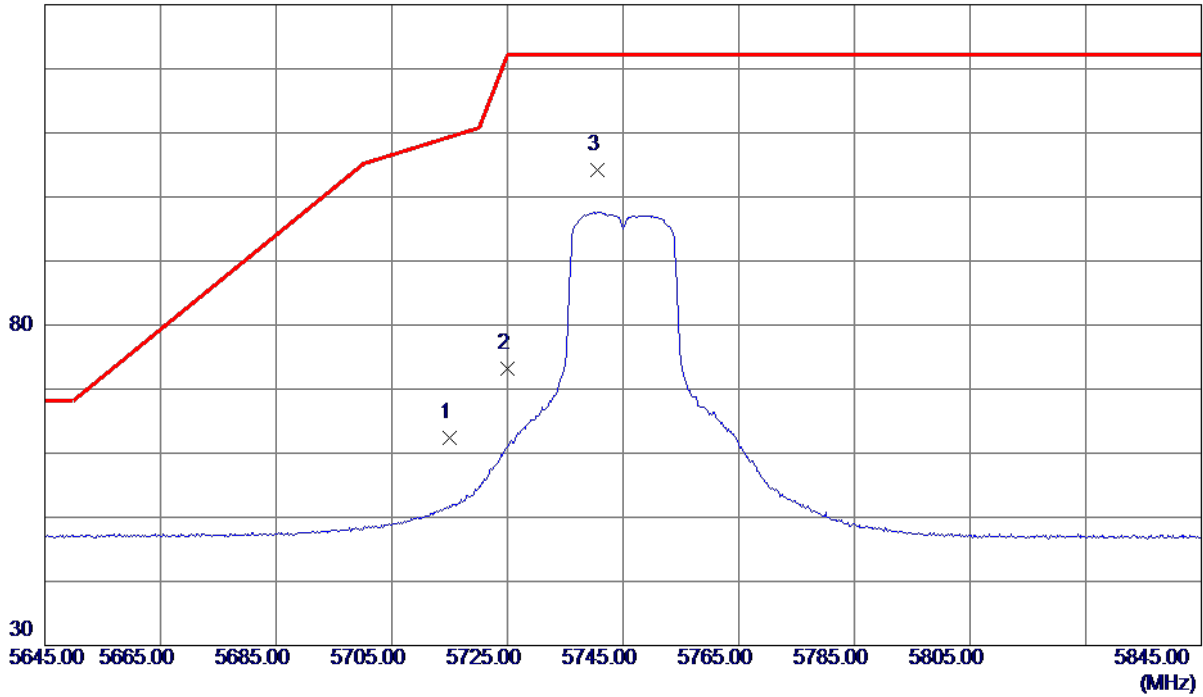

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	44.72	17.62	62.34	109.40	-47.06	Peak	
2	5725.0000	55.52	17.65	73.17	122.20	-49.03	Peak	
3 *	5740.6000	86.53	17.70	104.23	122.20	-17.97	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Vertical

130 dBuV/m

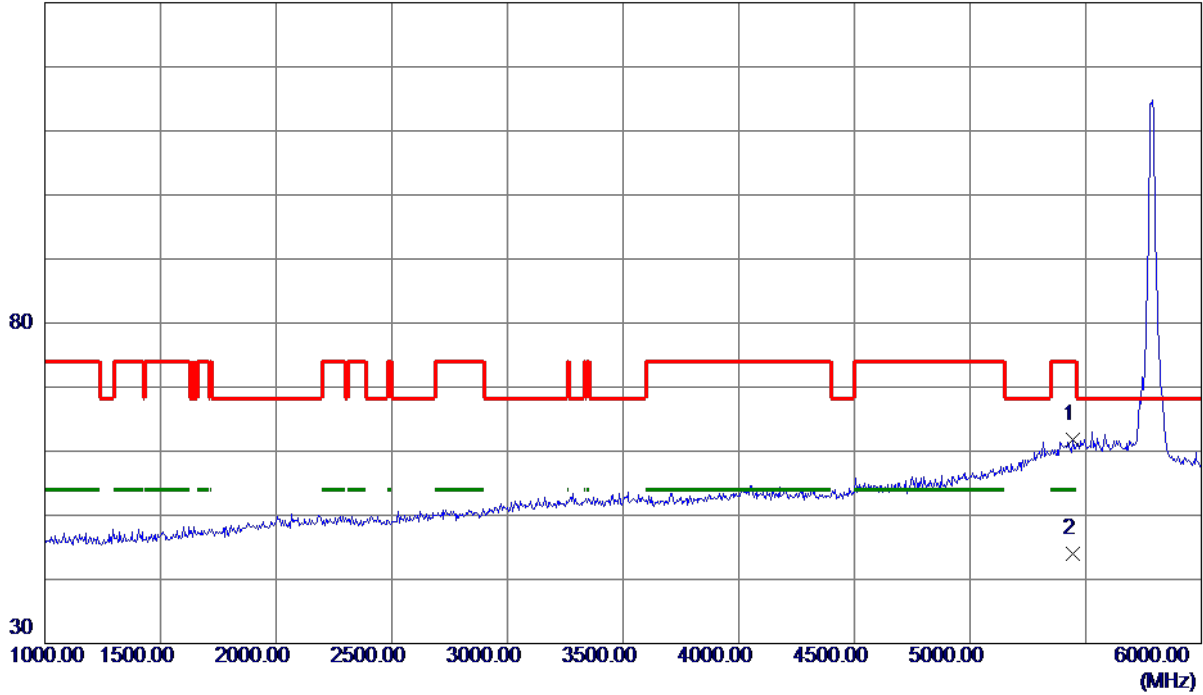

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5445.0000	44.86	16.85	61.71	74.00	-12.29	Peak	
2 *	5445.0000	27.12	16.85	43.97	54.00	-10.03	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Vertical

130 dBuV/m

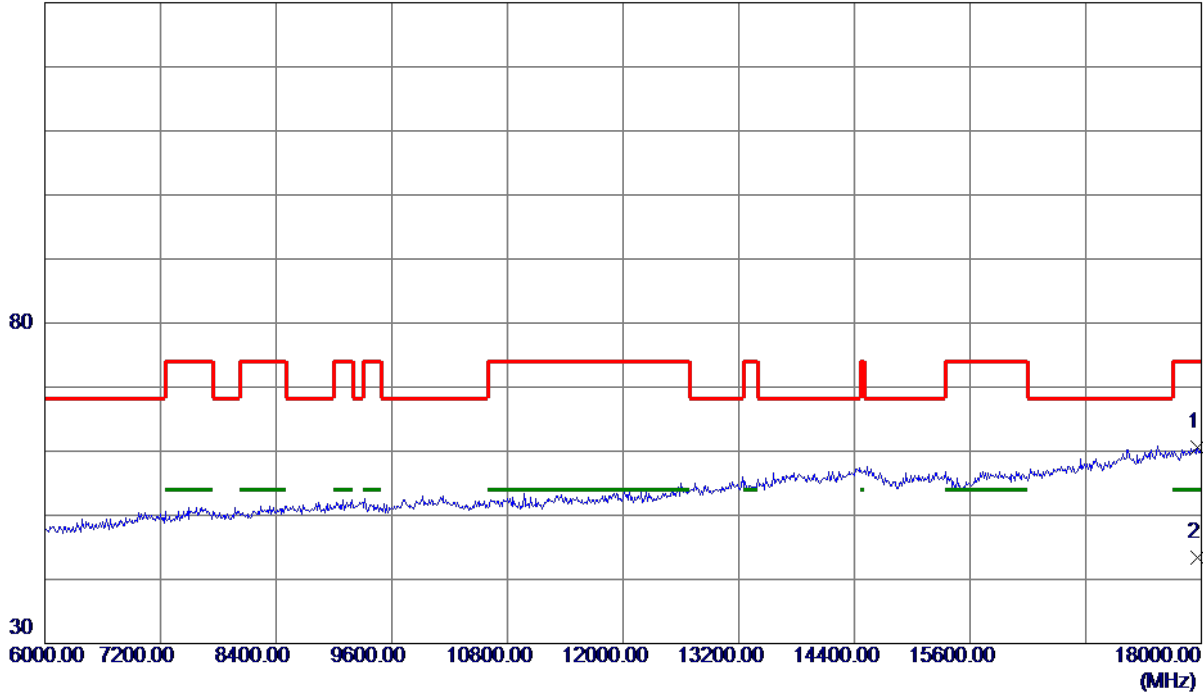

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17964.0000	38.27	22.28	60.55	74.00	-13.45	Peak	
2 *	17964.0000	21.13	22.28	43.41	54.00	-10.59	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Vertical

130 dBuV/m

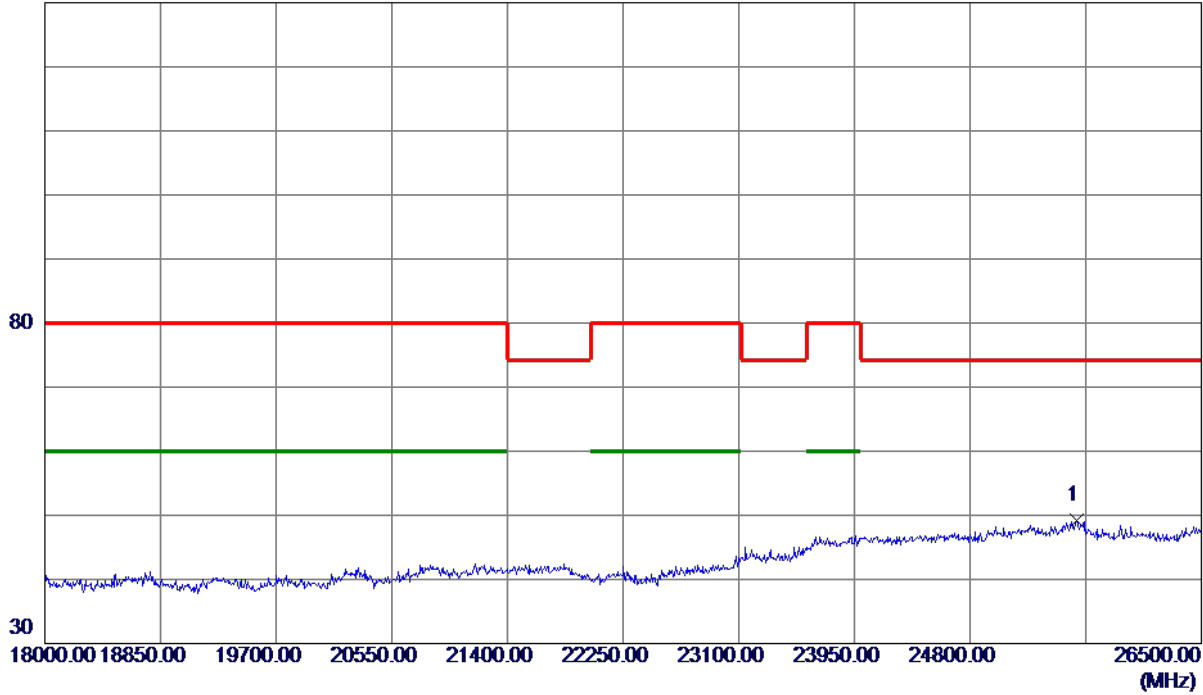


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25586.2500	29.20	20.02	49.22	74.30	-25.08	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

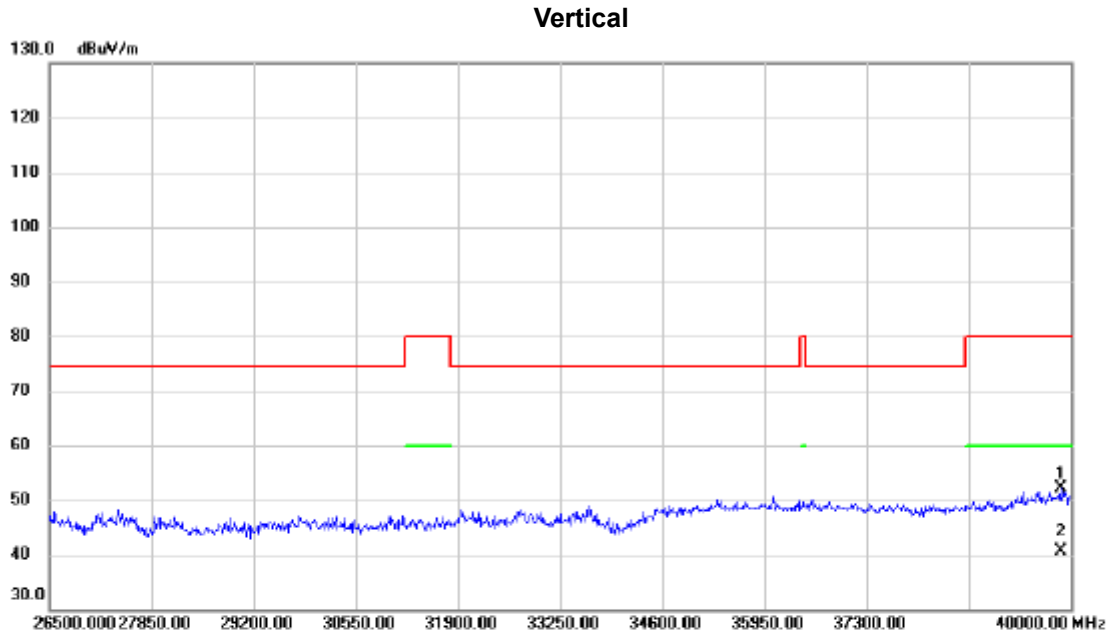

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39858.250	36.65	15.53	52.18	80.00	-27.82	peak	
2	*	39858.250	25.18	15.53	40.71	60.00	-19.29	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

130 dBuV/m

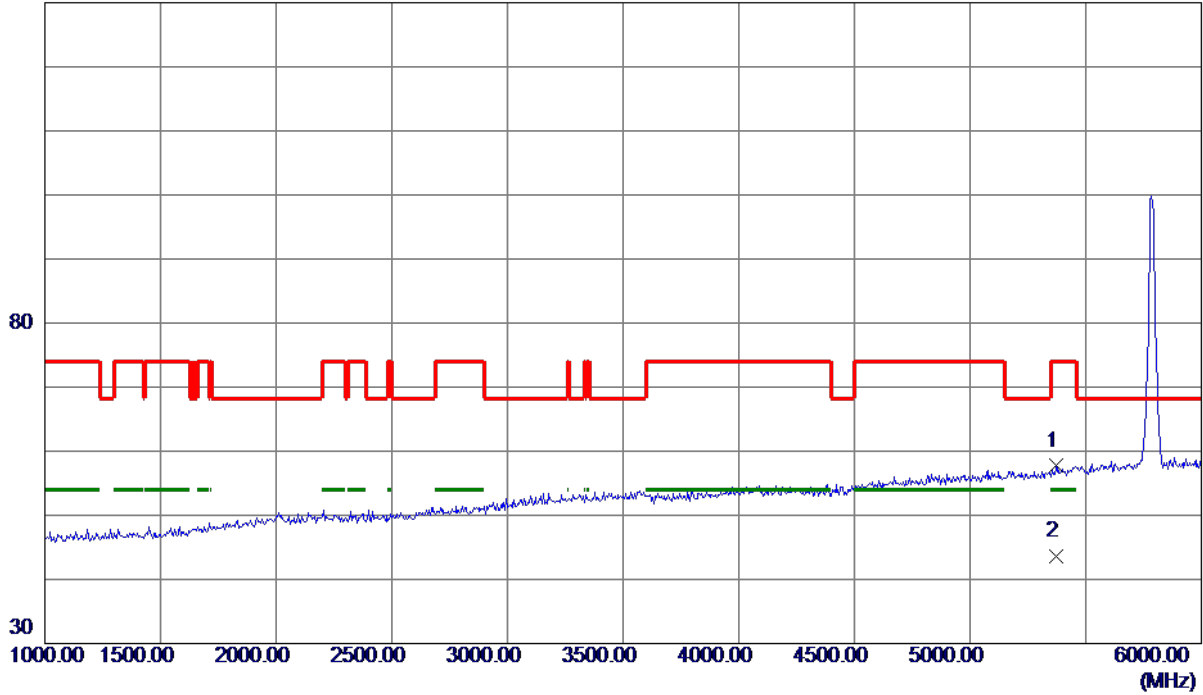

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5370.0000	41.02	16.68	57.70	74.00	-16.30	Peak	
2 *	5370.0000	26.92	16.68	43.60	54.00	-10.40	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17856.0000	38.31	22.21	60.52	74.00	-13.48	Peak	
2 *	17856.0000	21.20	22.21	43.41	54.00	-10.59	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

130 dBuV/m

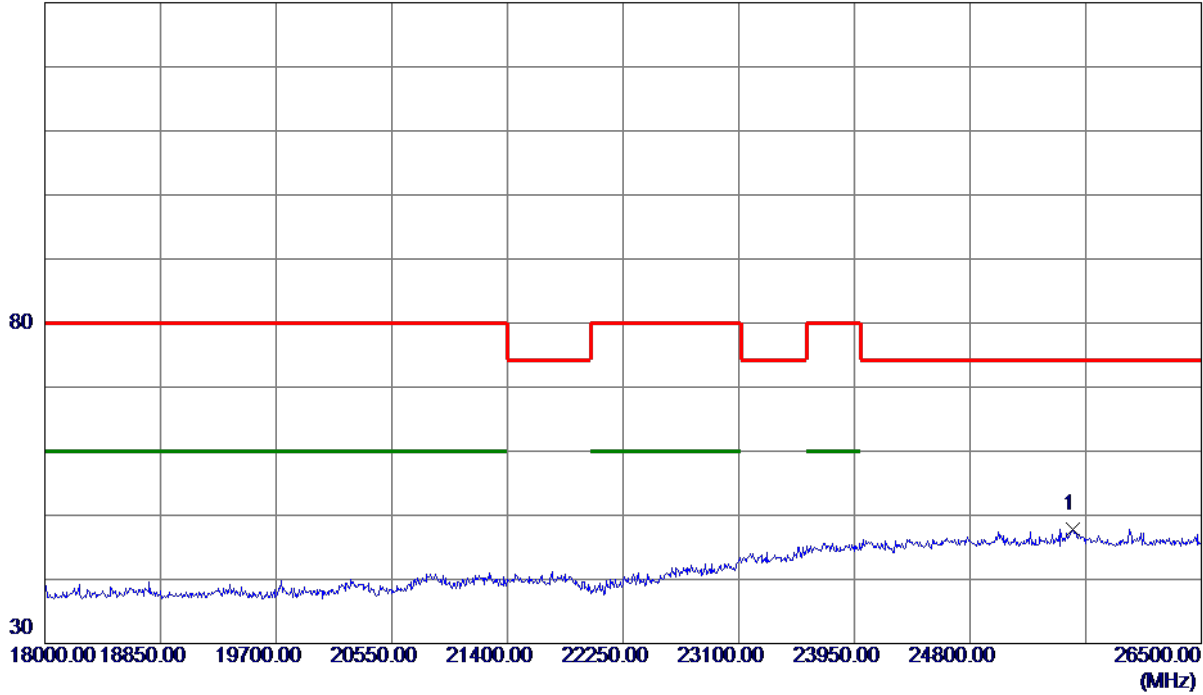


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25552.2500	27.87	20.02	47.89	74.30	-26.41	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

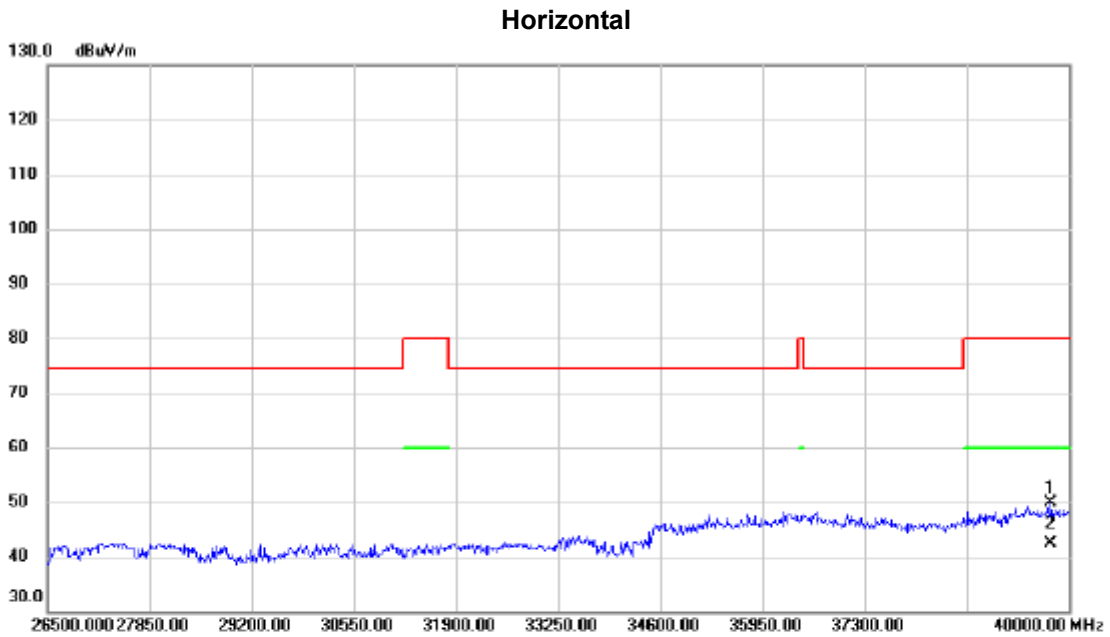

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39763.750	34.52	15.48	50.00	80.00	-30.00	peak	
2	*	39763.750	26.78	15.48	42.26	60.00	-17.74	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

Vertical

130 dBuV/m

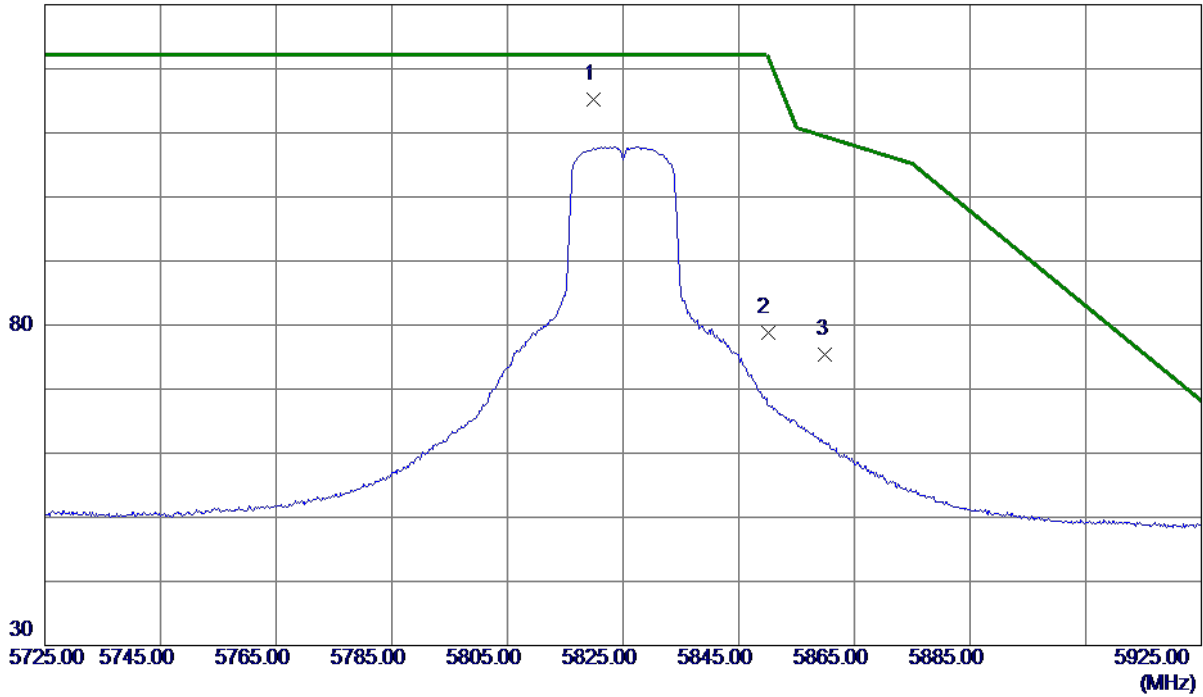

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5819.8000	97.29	17.93	115.22	122.20	-6.98	Peak	No Limit
2	5850.0000	60.73	18.02	78.75	122.20	-43.45	Peak	
3	5860.0000	57.28	18.05	75.33	109.40	-34.07	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

Horizontal

130 dBuV/m

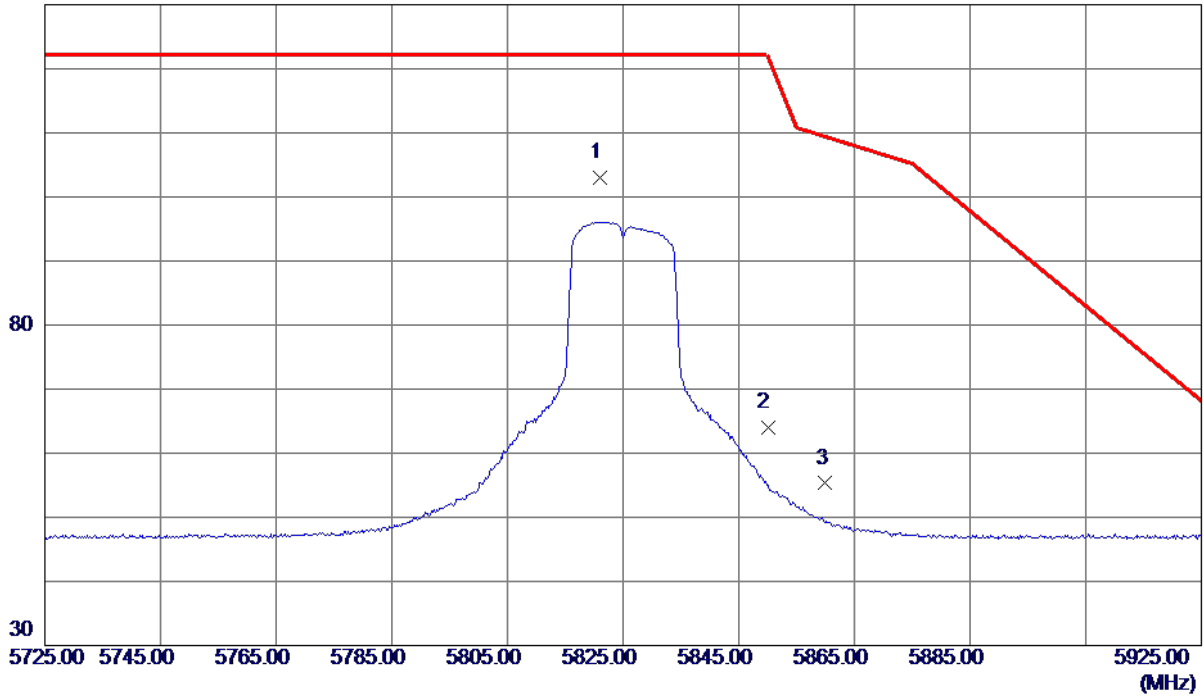


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5821.0000	84.98	17.94	102.92	122.20	-19.28	Peak	No Limit
2	5850.0000	45.97	18.02	63.99	122.20	-58.21	Peak	
3	5860.0000	37.25	18.05	55.30	109.40	-54.10	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

Vertical

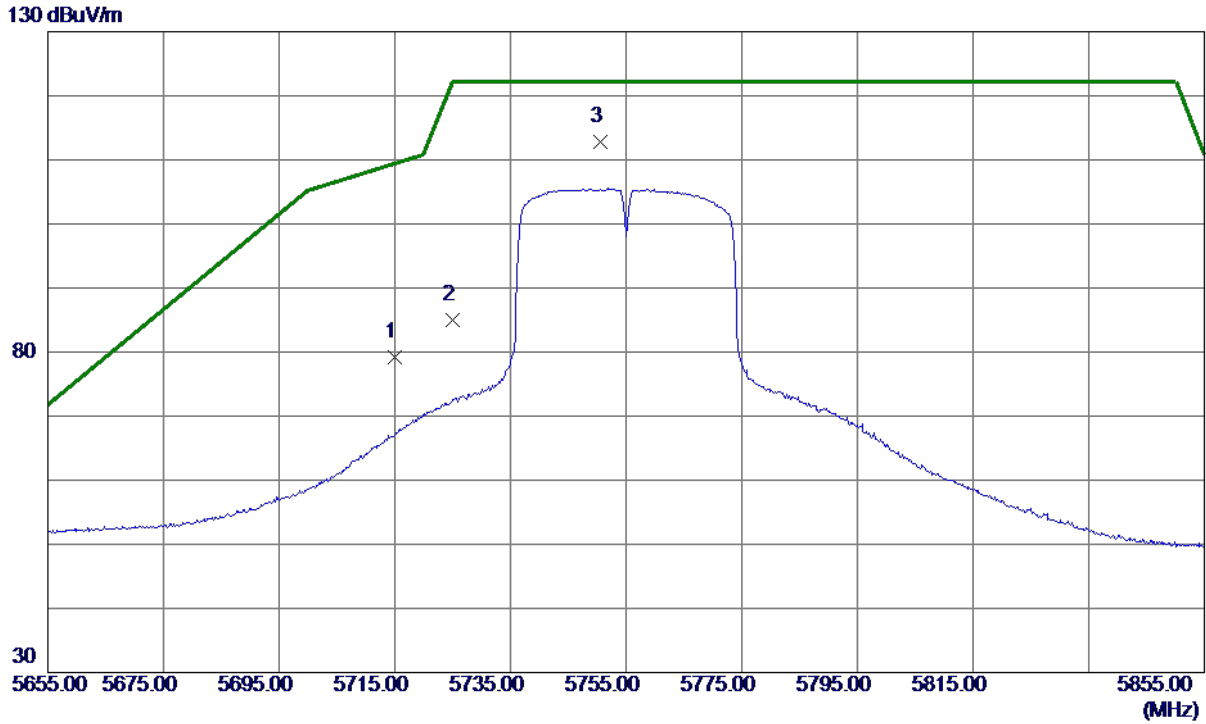


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	61.56	17.62	79.18	109.40	-30.22	Peak	
2	5725.0000	67.43	17.65	85.08	122.20	-37.12	Peak	
3 *	5750.6000	95.09	17.73	112.82	122.20	-9.38	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

Horizontal

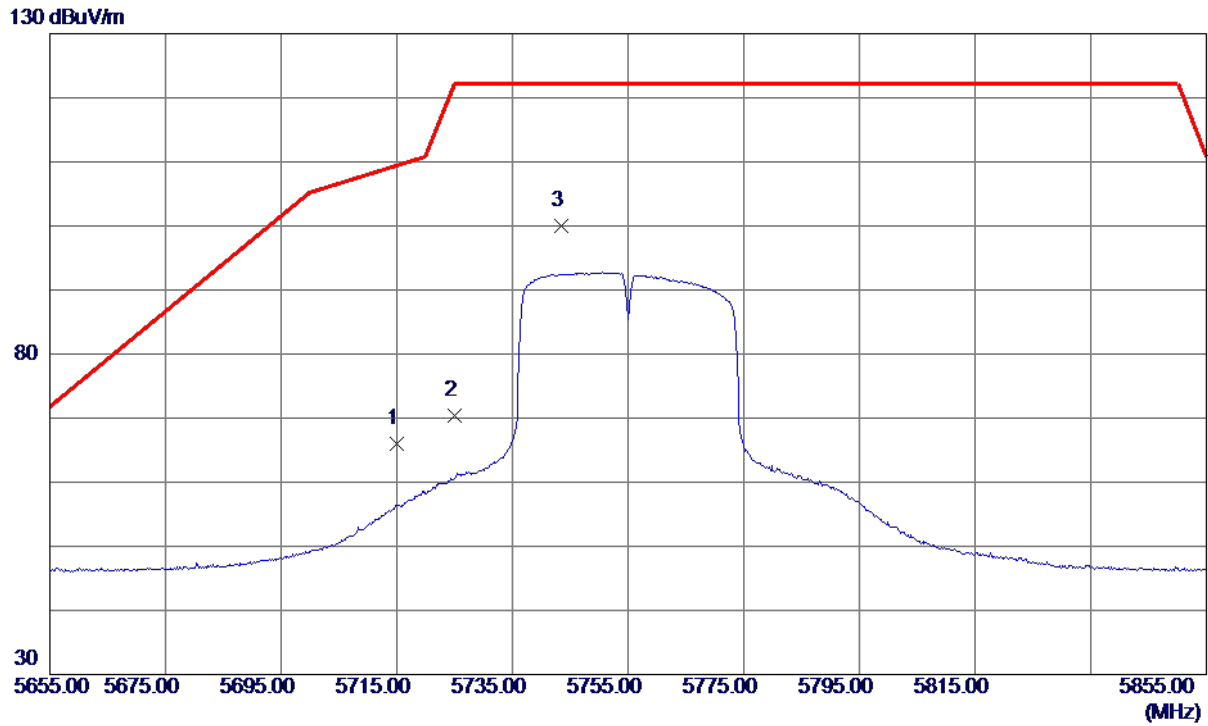

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	48.45	17.62	66.07	109.40	-43.33	Peak	
2	5725.0000	52.67	17.65	70.32	122.20	-51.88	Peak	
3 *	5743.4000	82.39	17.71	100.10	122.20	-22.10	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m

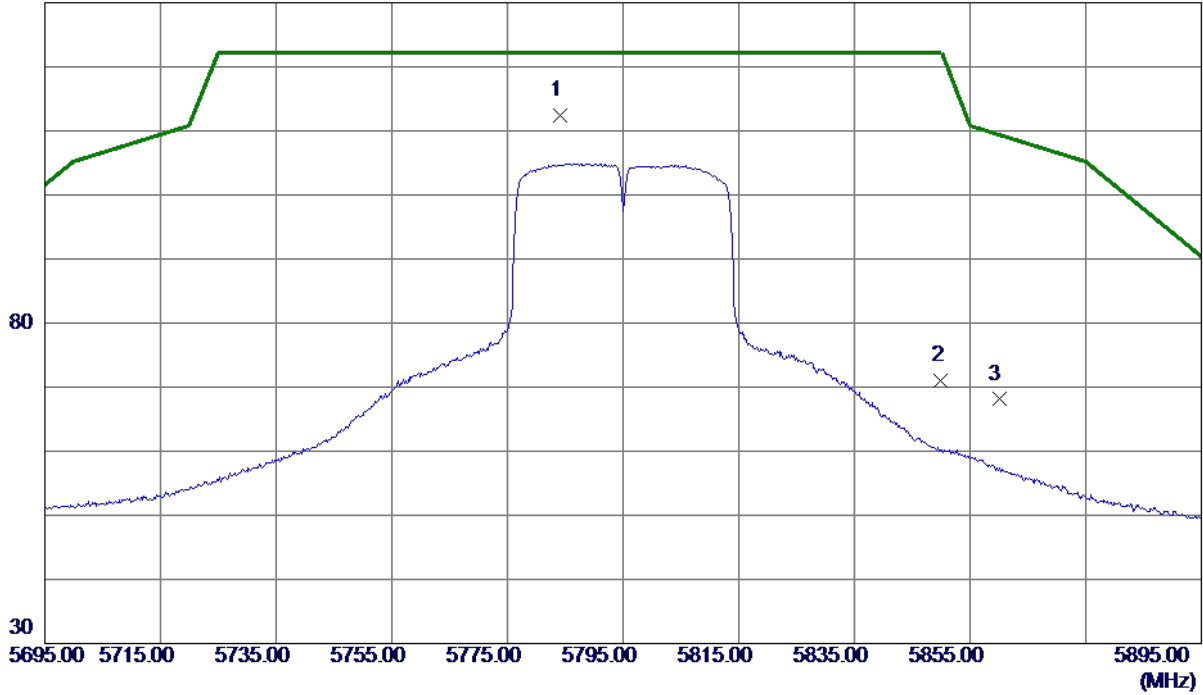

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5784.2000	94.51	17.83	112.34	122.20	-9.86	Peak	No Limit
2	5850.0000	52.89	18.02	70.91	122.20	-51.29	Peak	
3	5860.0000	50.05	18.05	68.10	109.40	-41.30	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m

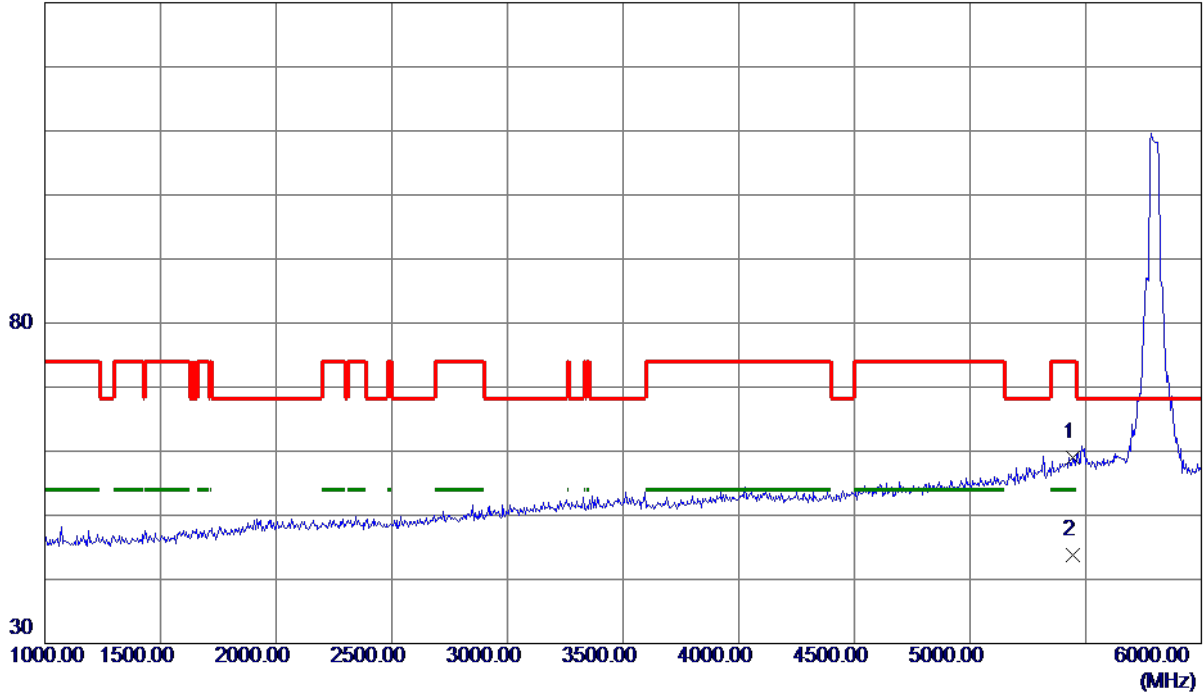

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5445.0000	42.12	16.85	58.97	74.00	-15.03	Peak	
2 *	5445.0000	27.03	16.85	43.88	54.00	-10.12	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17736.0000	38.23	22.14	60.37	74.00	-13.63	Peak	
2 *	17736.0000	21.04	22.14	43.18	54.00	-10.82	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m

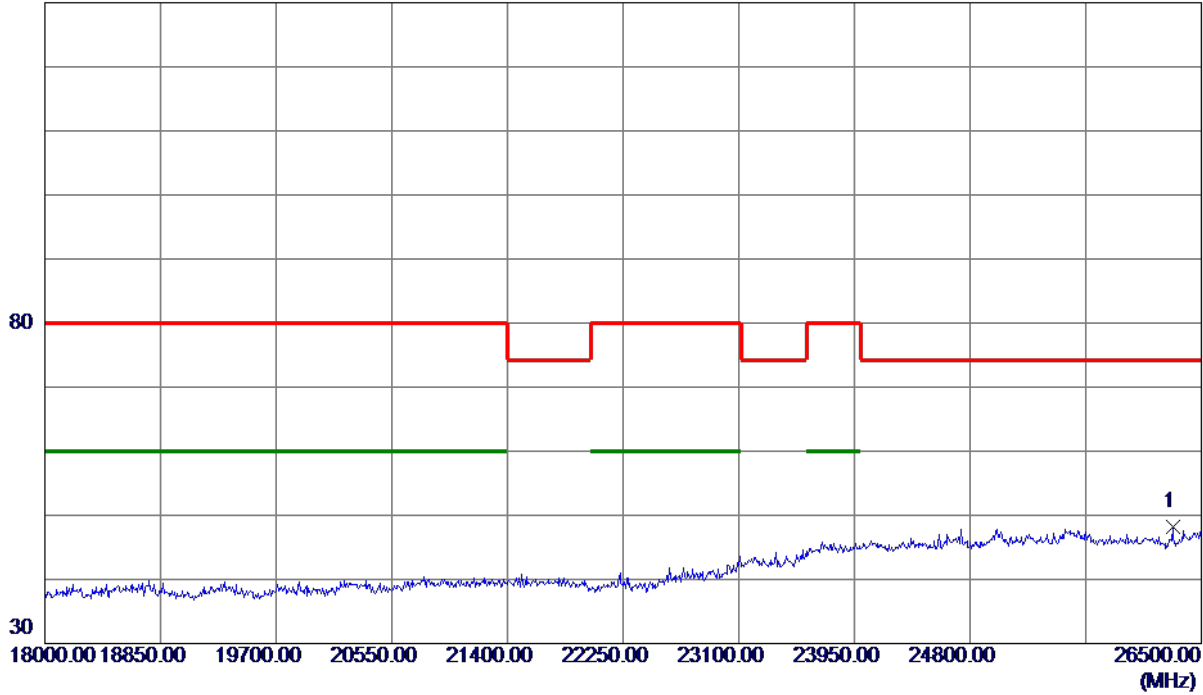


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26291.7500	27.85	20.32	48.17	74.30	-26.13	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

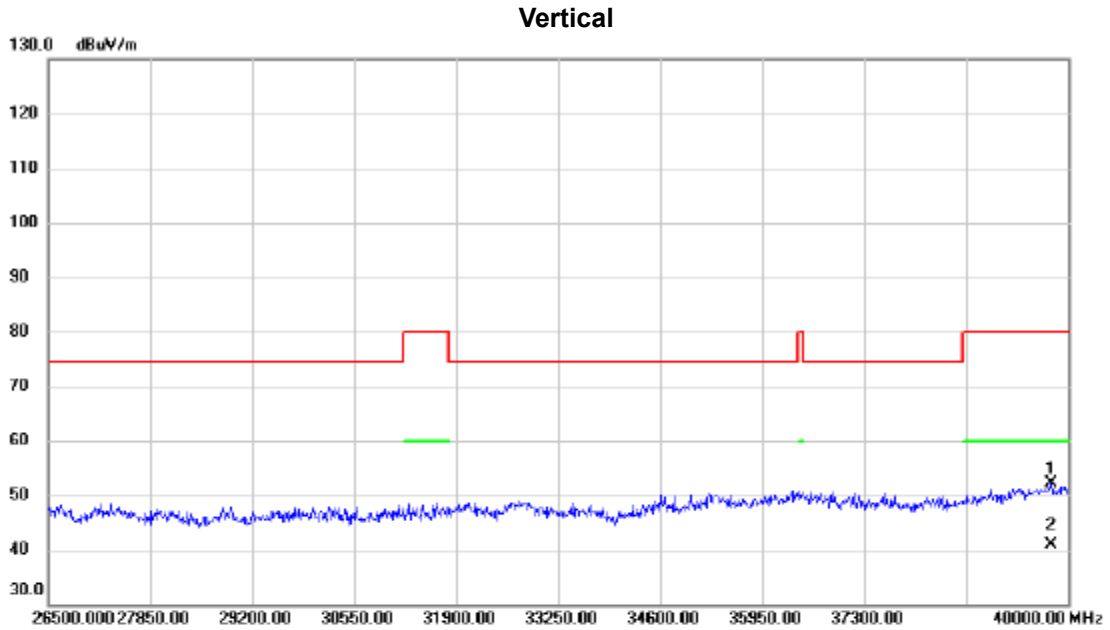

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39770.500	36.58	15.48	52.06	80.00	-27.94	peak	
2	*	39770.500	25.37	15.48	40.85	60.00	-19.15	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

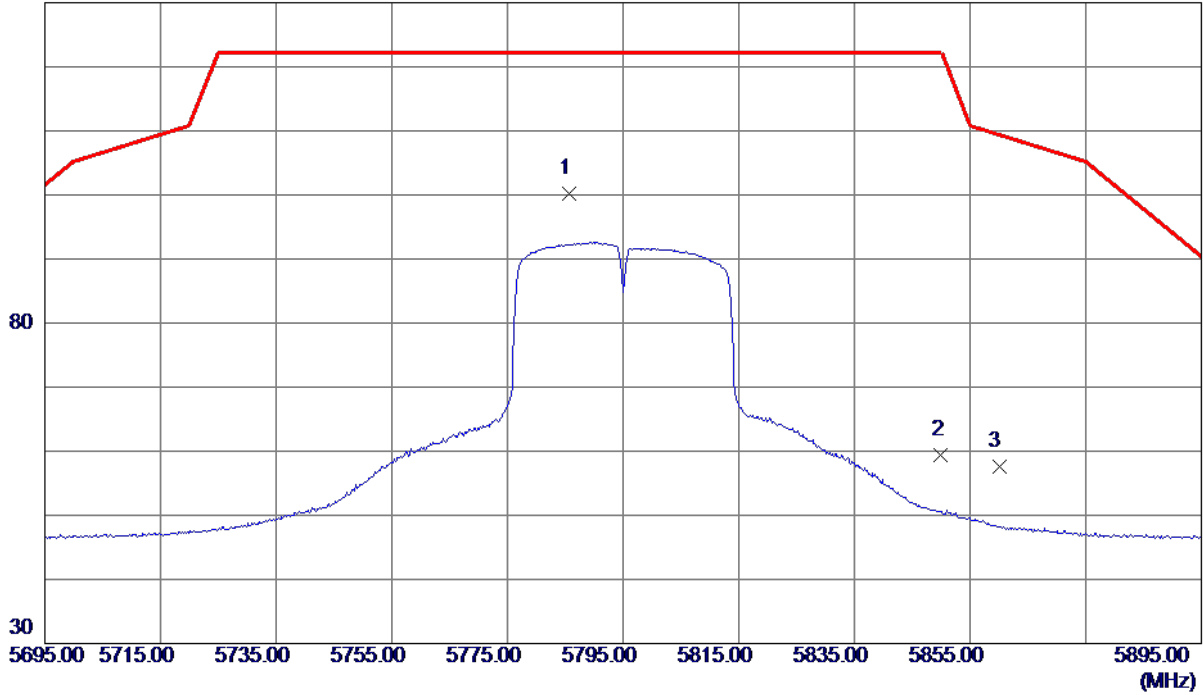

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5785.6000	82.30	17.83	100.13	122.20	-22.07	Peak	No Limit
2	5850.0000	41.39	18.02	59.41	122.20	-62.79	Peak	
3	5860.0000	39.46	18.05	57.51	109.40	-51.89	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

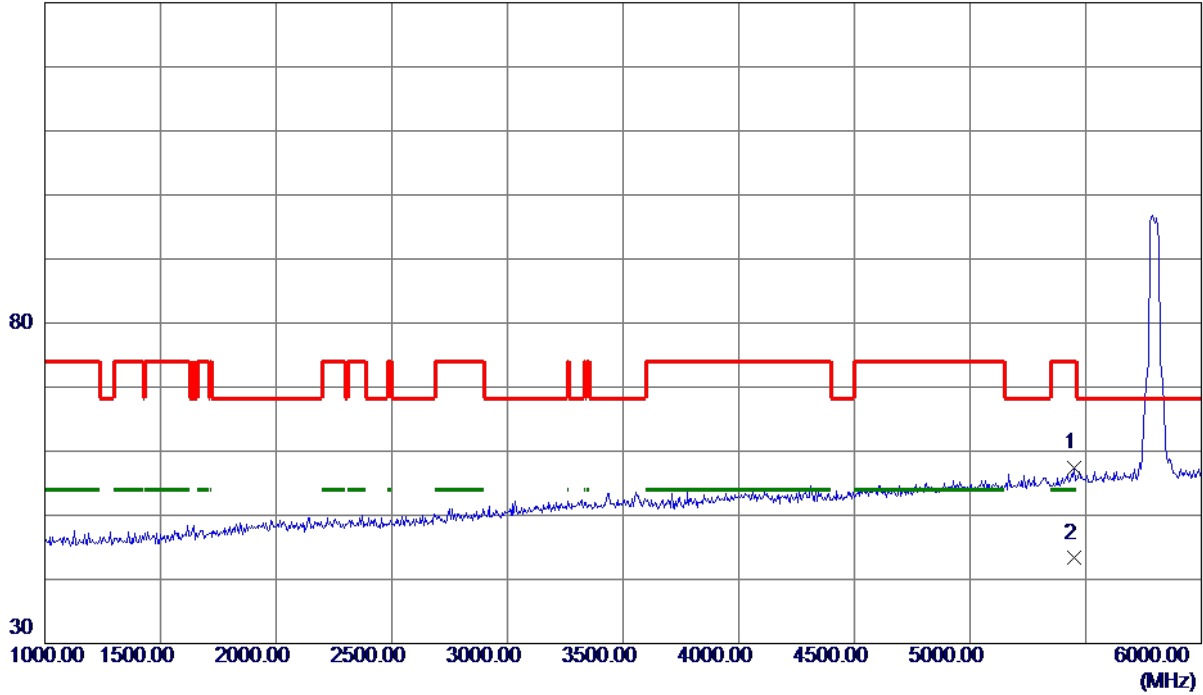

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5450.0000	40.62	16.87	57.49	74.00	-16.51	Peak	
2 *	5450.0000	26.43	16.87	43.30	54.00	-10.70	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

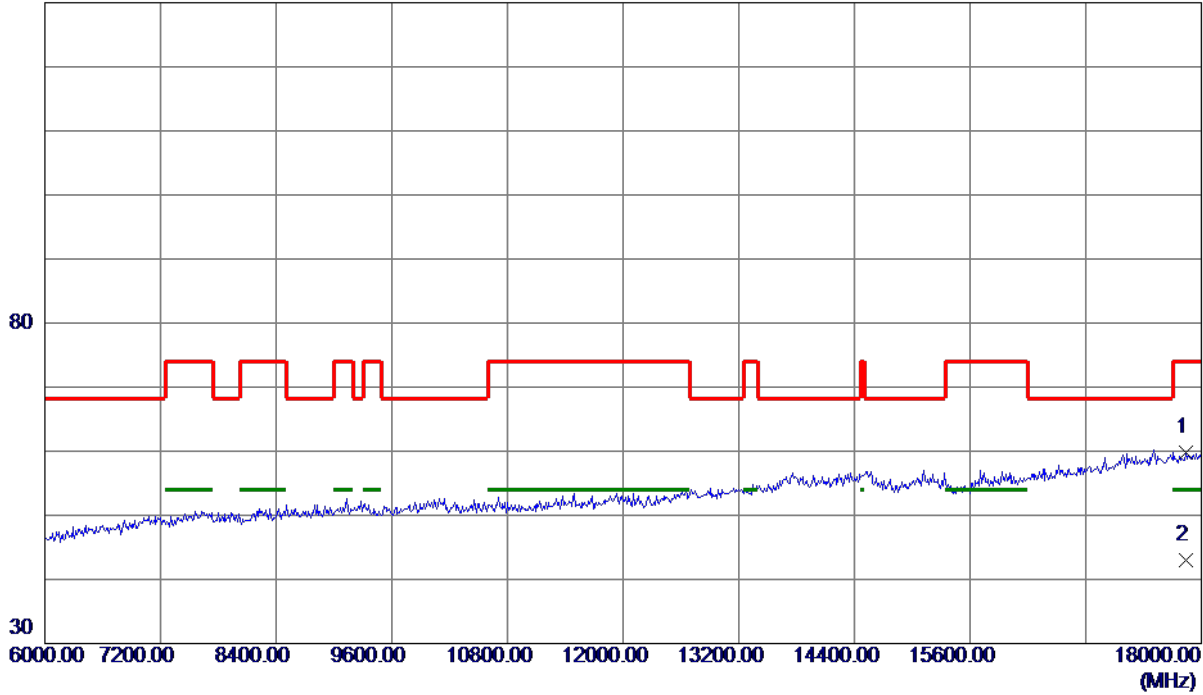

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17844.0000	37.67	22.21	59.88	74.00	-14.12	Peak	
2 *	17844.0000	20.88	22.21	43.09	54.00	-10.91	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

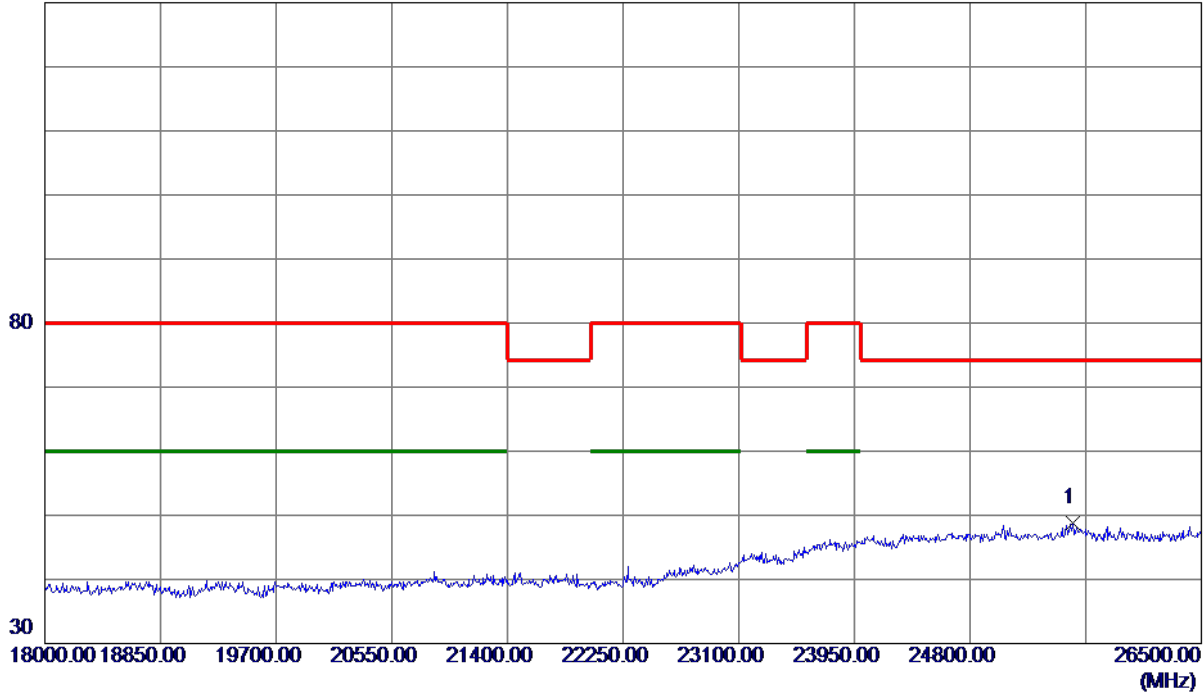


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	28.69	20.02	48.71	74.30	-25.59	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

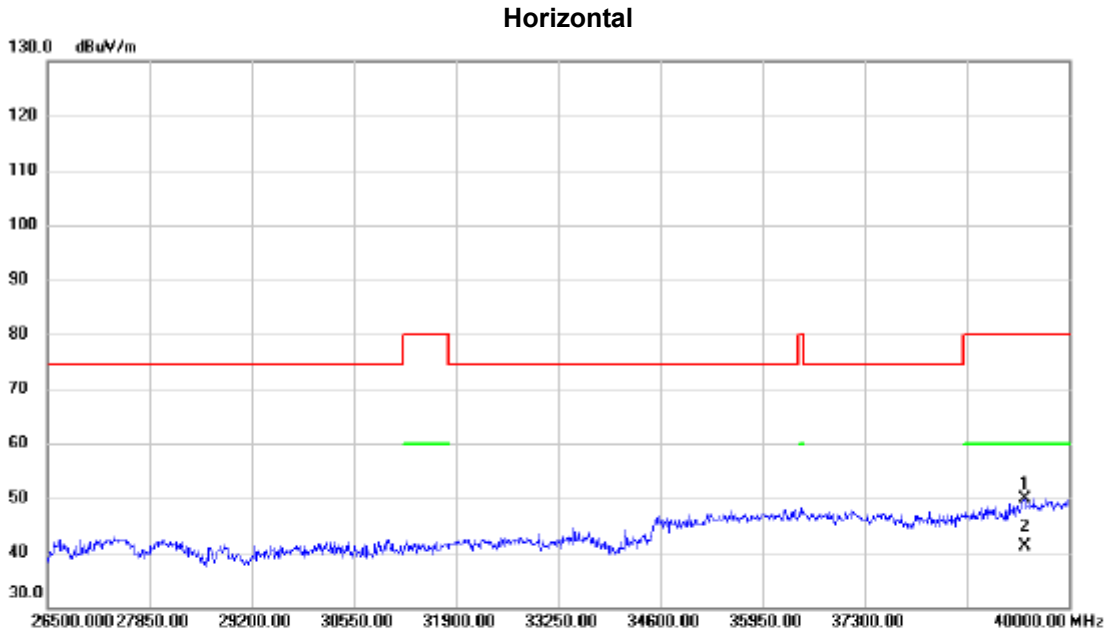

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39406.000	34.95	14.91	49.86	80.00	-30.14	peak	
2	*	39406.000	26.18	14.91	41.09	60.00	-18.91	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

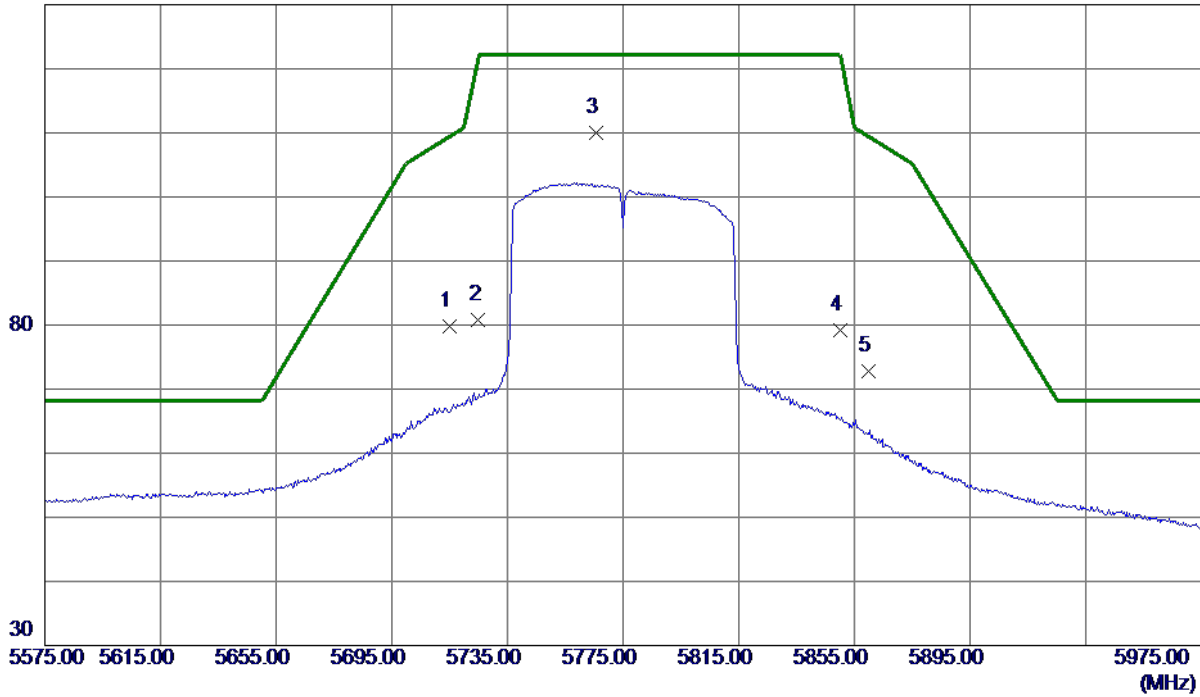

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	62.17	17.62	79.79	109.40	-29.61	Peak	
2	5725.0000	63.22	17.65	80.87	122.20	-41.33	Peak	
3 *	5765.8000	92.26	17.77	110.03	122.20	-12.17	Peak	No Limit
4	5850.0000	61.25	18.02	79.27	122.20	-42.93	Peak	
5	5860.0000	54.69	18.05	72.74	109.40	-36.66	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

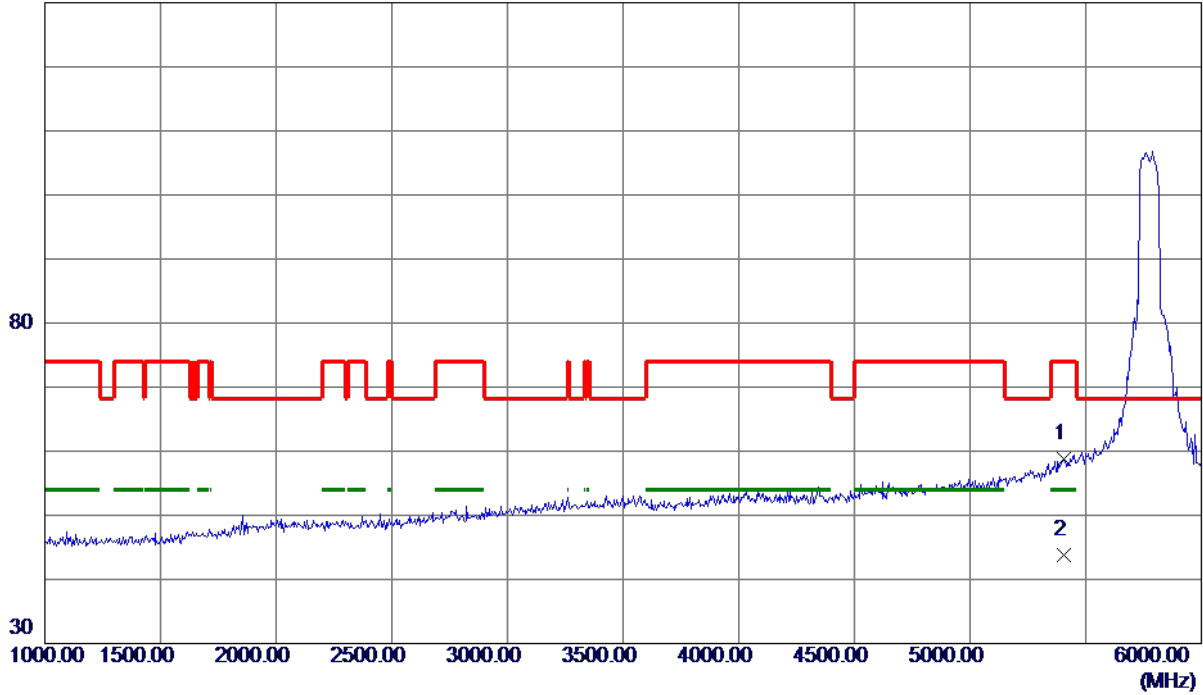

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5405.0000	42.08	16.76	58.84	74.00	-15.16	Peak	
2 *	5405.0000	26.99	16.76	43.75	54.00	-10.25	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

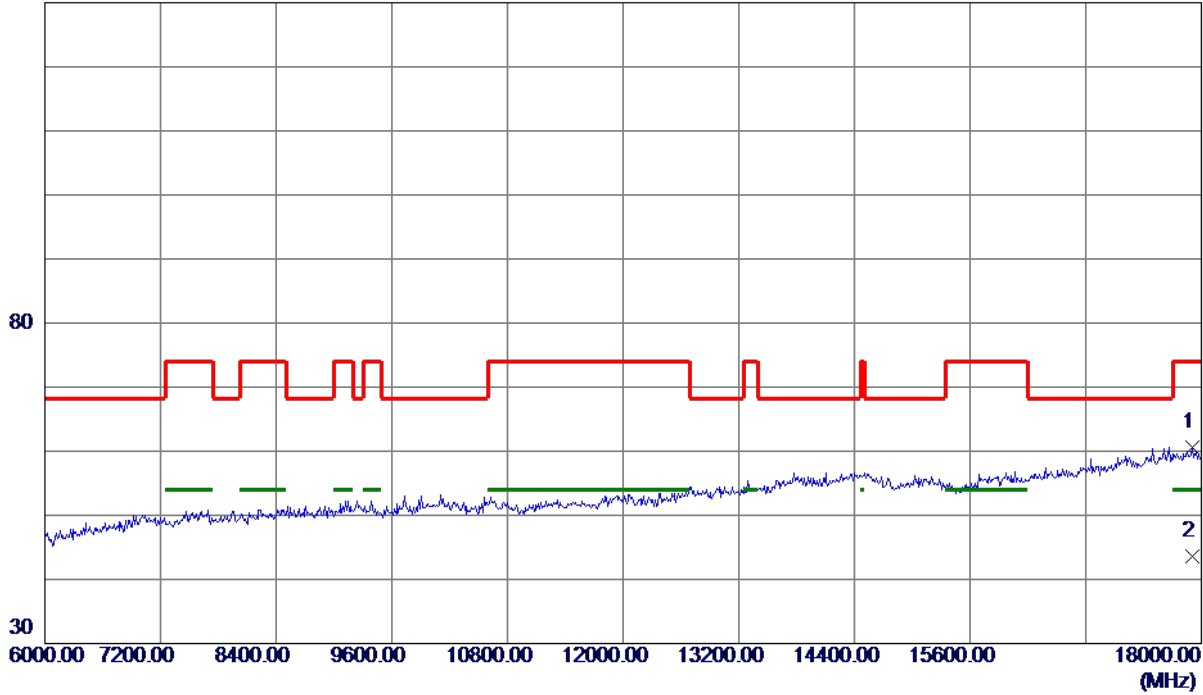

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17904.0000	38.28	22.24	60.52	74.00	-13.48	Peak	
2 *	17904.0000	21.35	22.24	43.59	54.00	-10.41	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

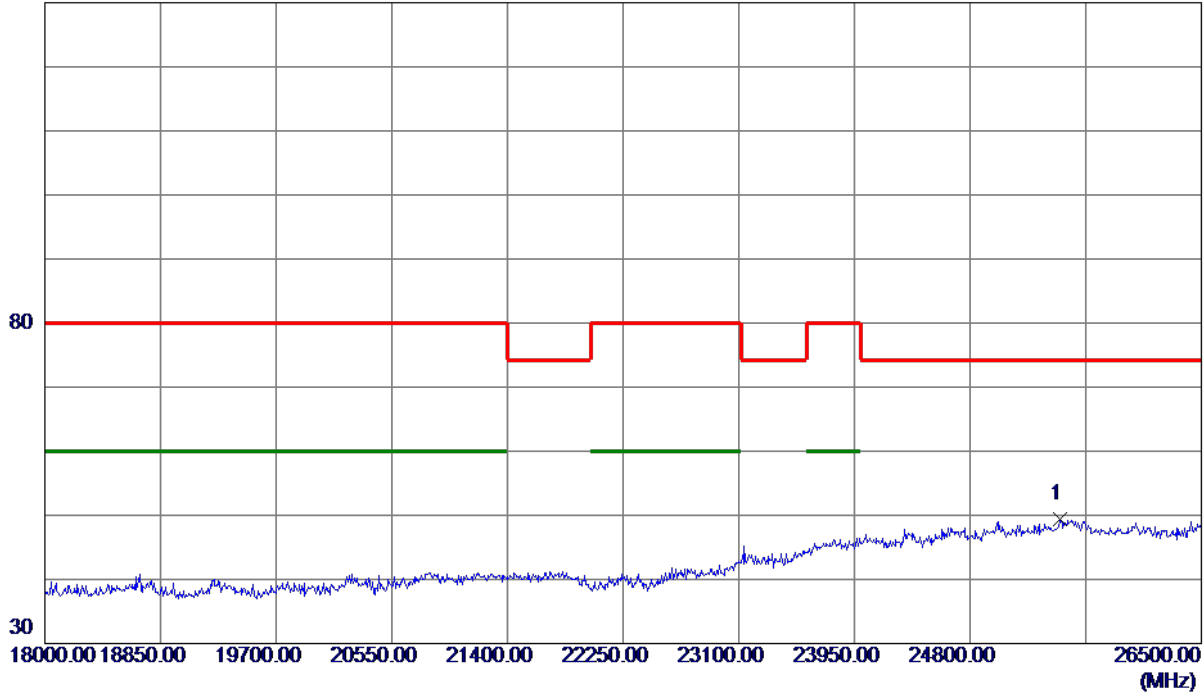


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25463.0000	29.43	20.03	49.46	74.30	-24.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

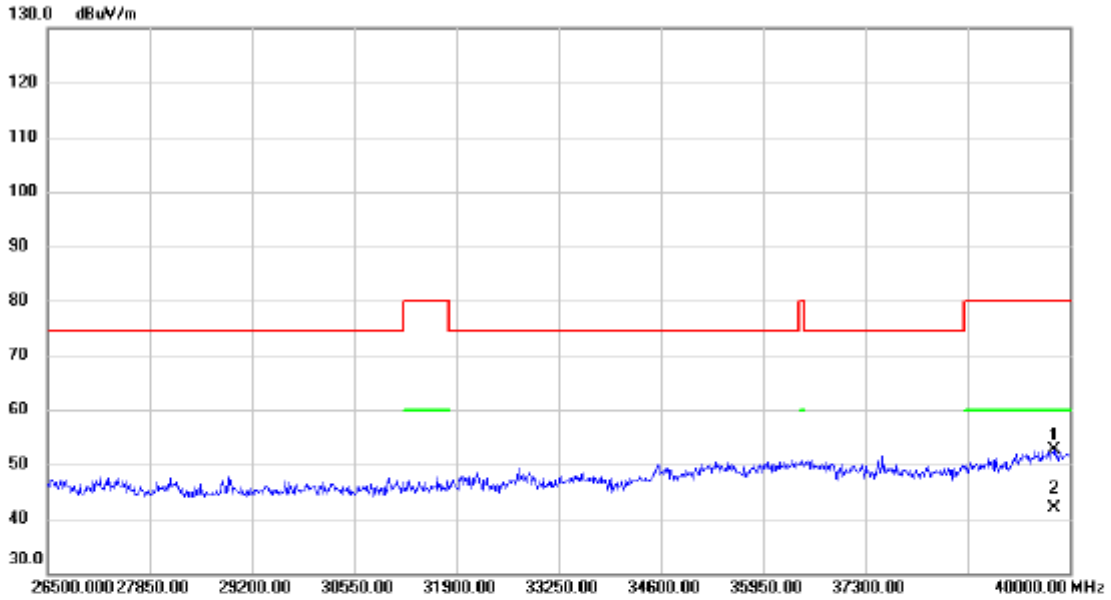

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39797.500	37.24	15.49	52.73	80.00	-27.27	peak	
2	*	39797.500	26.34	15.49	41.83	60.00	-18.17	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

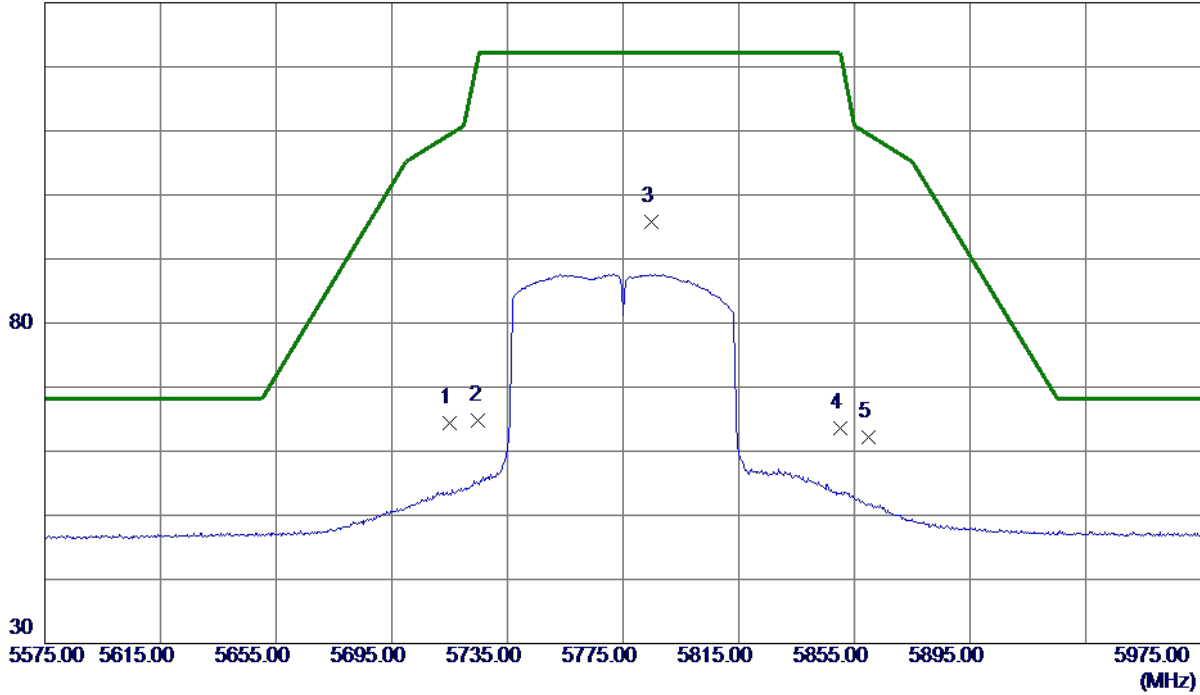

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	46.73	17.62	64.35	109.40	-45.05	Peak	
2	5725.0000	47.17	17.65	64.82	122.20	-57.38	Peak	
3 *	5784.6000	77.88	17.83	95.71	122.20	-26.49	Peak	No Limit
4	5850.0000	45.56	18.02	63.58	122.20	-58.62	Peak	
5	5860.0000	44.16	18.05	62.21	109.40	-47.19	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

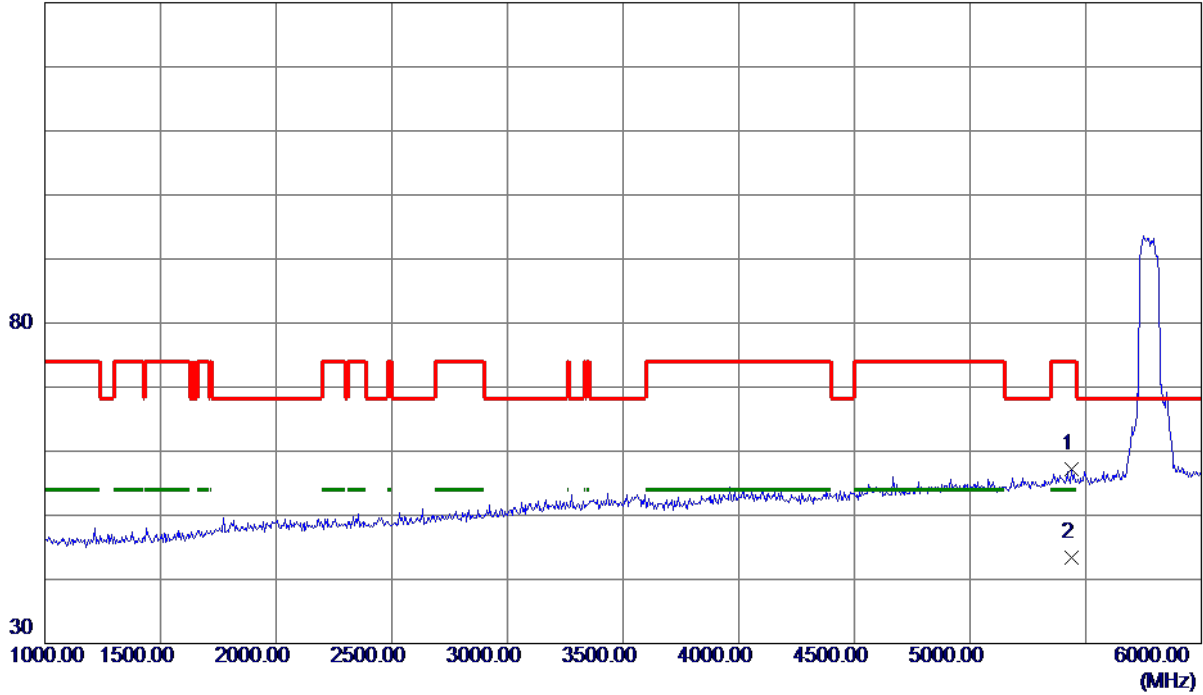

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5440.0000	40.40	16.84	57.24	74.00	-16.76	Peak	
2 *	5440.0000	26.61	16.84	43.45	54.00	-10.55	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

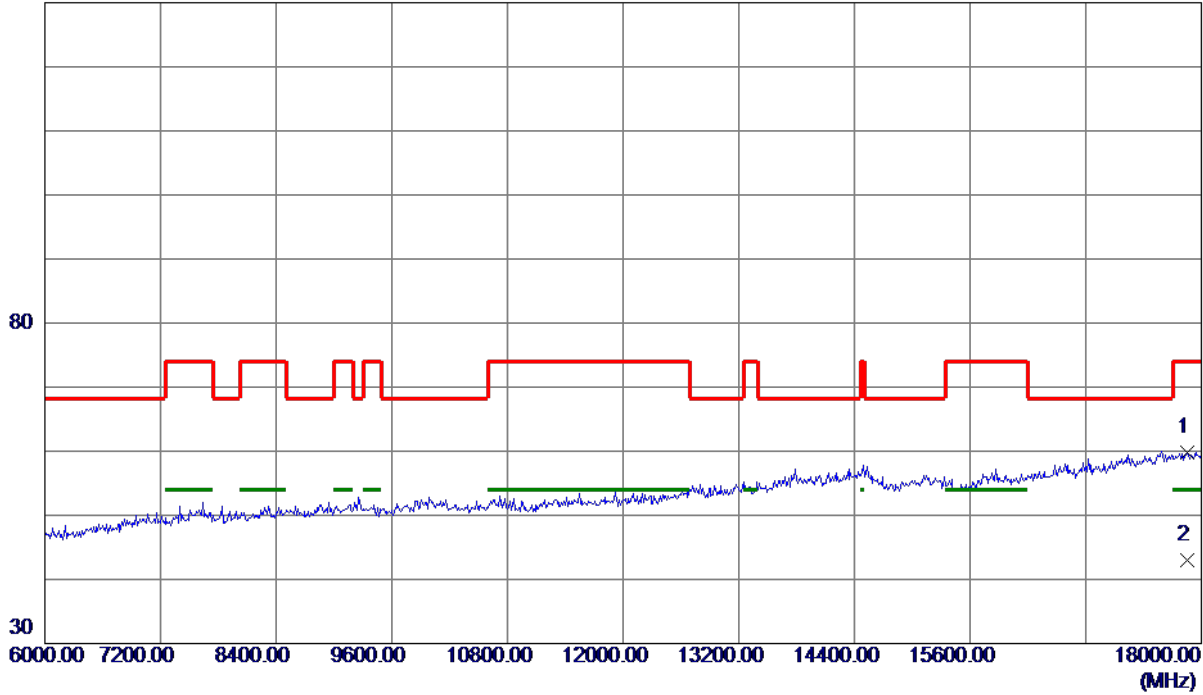

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17856.0000	37.53	22.21	59.74	74.00	-14.26	Peak	
2 *	17856.0000	20.81	22.21	43.02	54.00	-10.98	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

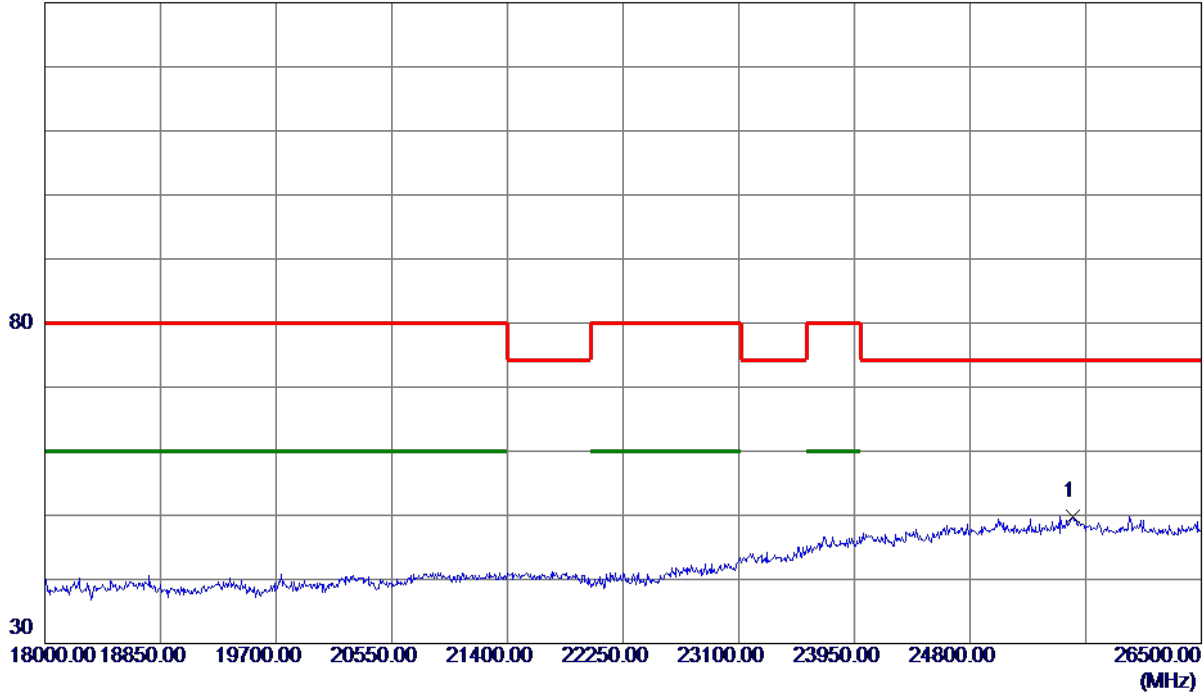


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25552.2500	29.87	20.02	49.89	74.30	-24.41	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

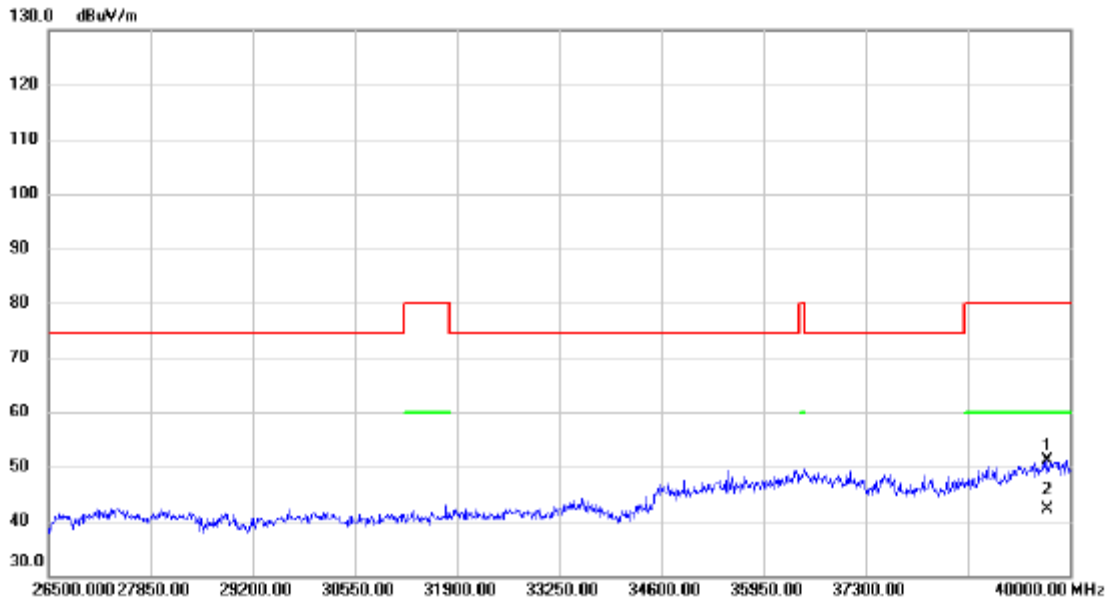

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	35.81	15.43	51.24	80.00	-28.76	peak	
2	*	39696.250	26.78	15.43	42.21	60.00	-17.79	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5180 MHz_242 Tone

Vertical

130 dBuV/m

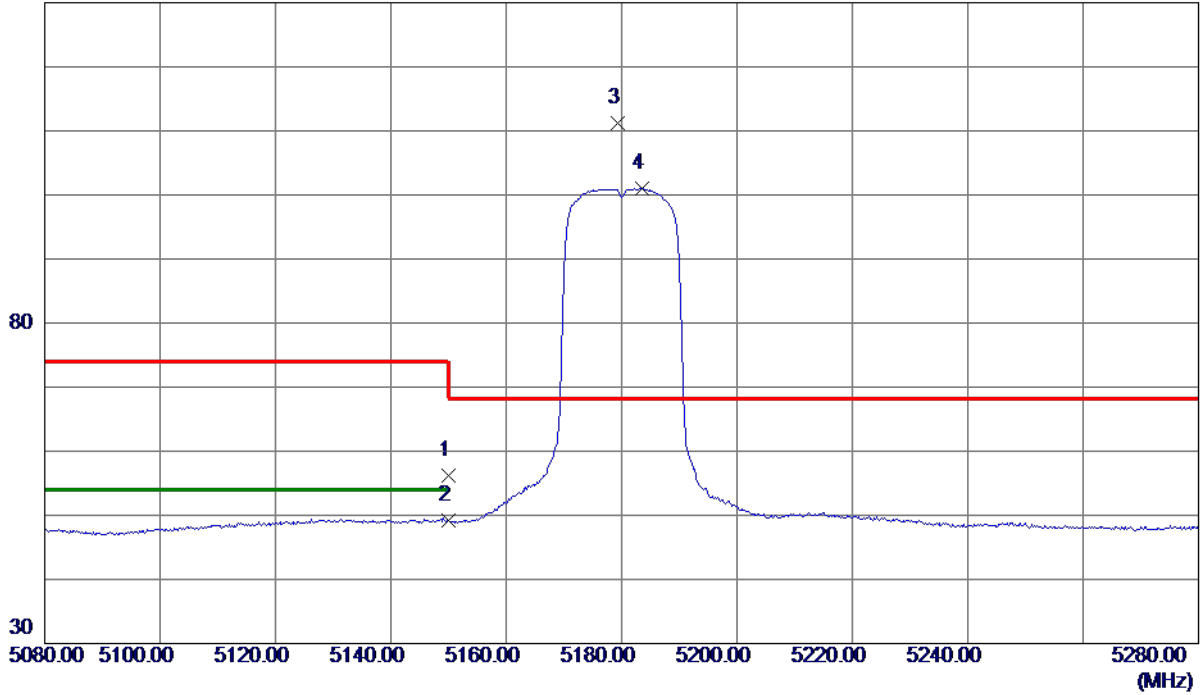

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.10	16.16	56.26	74.00	-17.74	Peak	
2	5150.0000	32.96	16.16	49.12	54.00	-4.88	AVG	
3 *	5179.4000	94.97	16.23	111.20	68.30	42.90	Peak	No Limit
4	5183.6000	84.70	16.24	100.94	999.00	-898.06	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5180 MHz_242 Tone

Horizontal

130 dBuV/m

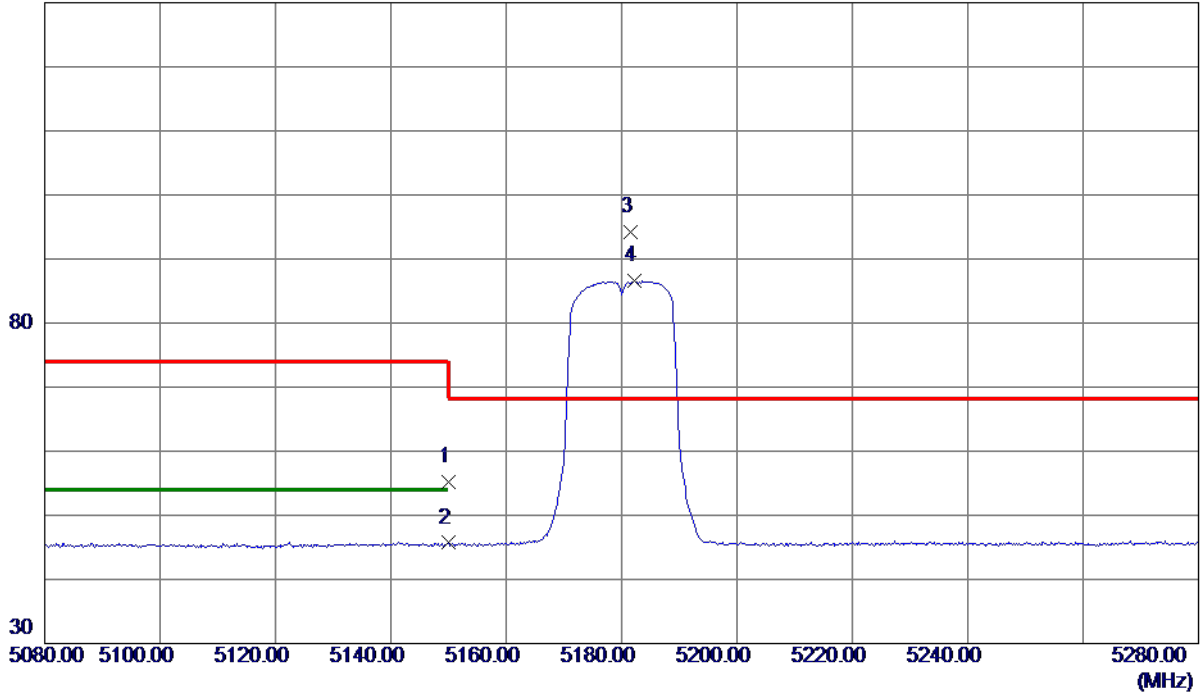

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	39.02	16.16	55.18	74.00	-18.82	Peak	
2	5150.0000	29.54	16.16	45.70	54.00	-8.30	AVG	
3 *	5181.6000	78.05	16.23	94.28	68.30	25.98	Peak	No Limit
4	5182.2000	70.42	16.23	86.65	999.00	-912.35	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5200 MHz_242 Tone

Vertical

130 dBuV/m

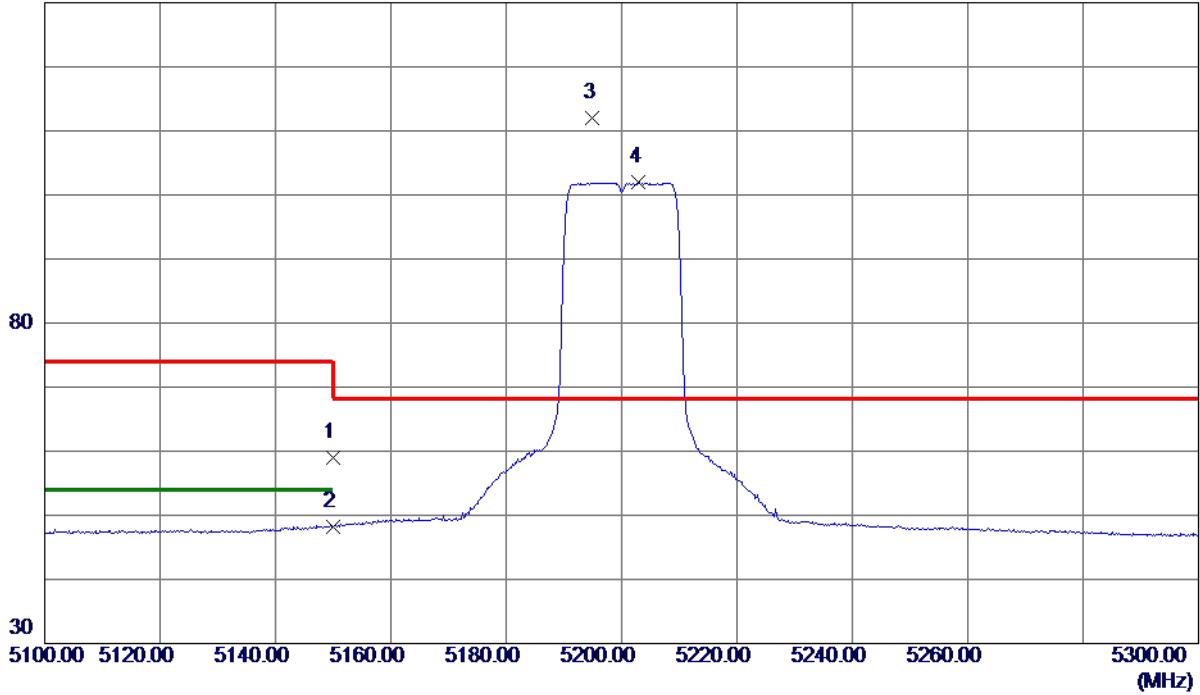

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	42.89	16.16	59.05	74.00	-14.95	Peak	
2	5150.0000	32.04	16.16	48.20	54.00	-5.80	AVG	
3 *	5195.0000	95.64	16.26	111.90	68.30	43.60	Peak	No Limit
4	5203.0000	85.66	16.28	101.94	999.00	-897.06	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5200 MHz_242 Tone

Horizontal

130 dBuV/m

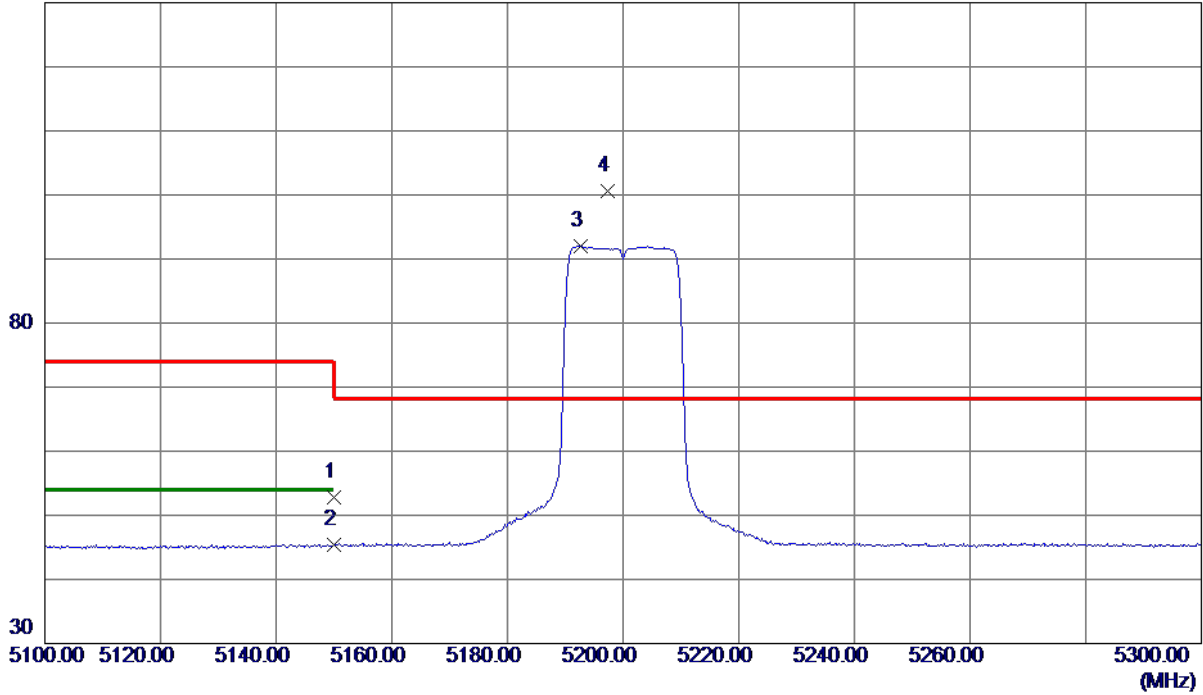


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.57	16.16	52.73	74.00	-21.27	Peak	
2	5150.0000	29.18	16.16	45.34	54.00	-8.66	AVG	
3	5192.6000	75.71	16.26	91.97	999.00	-907.03	AVG	No Limit
4 *	5197.4000	84.40	16.27	100.67	68.30	32.37	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5220 MHz_242 Tone

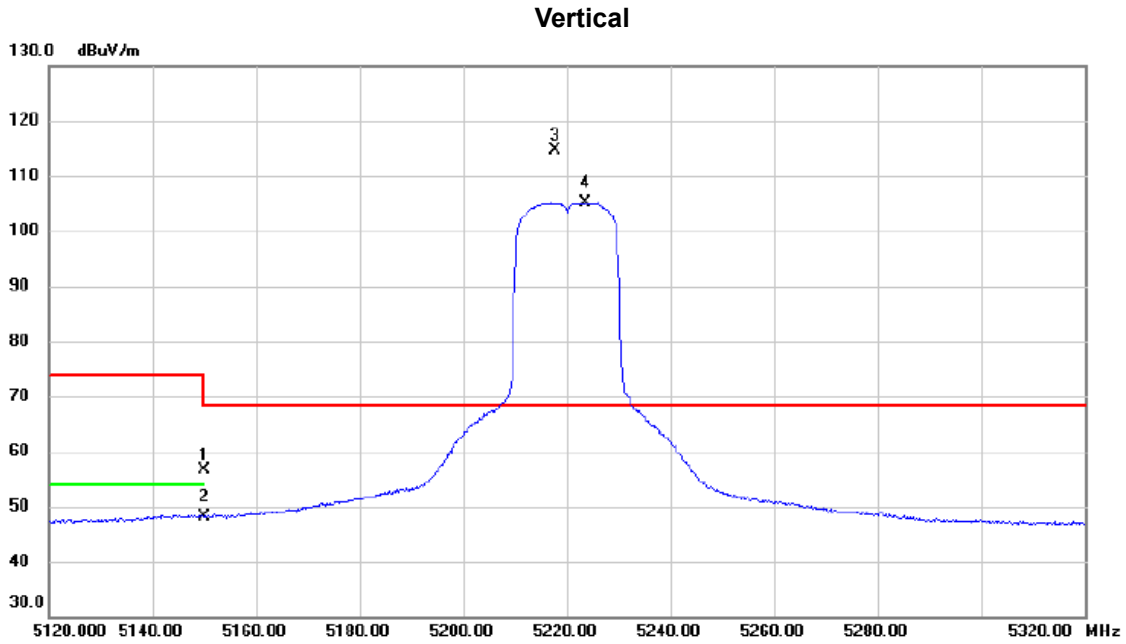


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	40.52	16.15	56.67	74.00	-17.33	peak	
2		5150.000	32.07	16.15	48.22	54.00	-5.78	AVG	
3	*	5217.800	98.31	16.32	114.63	68.30	46.33	peak	No Limit
4	X	5223.600	88.71	16.33	105.04	68.30	36.74	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5220 MHz_242 Tone

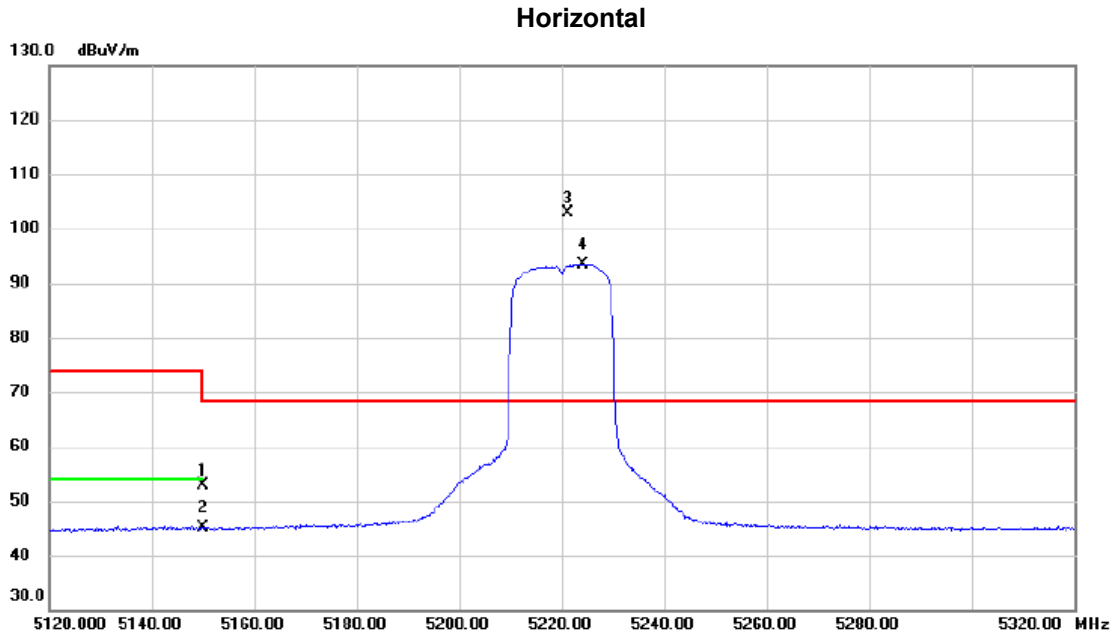

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		5150.000	36.62	16.15	52.77	74.00	-21.23	peak	
2		5150.000	28.92	16.15	45.07	54.00	-8.93	AVG	
3	*	5221.200	86.65	16.33	102.98	68.30	34.68	peak	No Limit
4	X	5224.000	77.17	16.33	93.50	68.30	25.20	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Vertical

130 dBuV/m

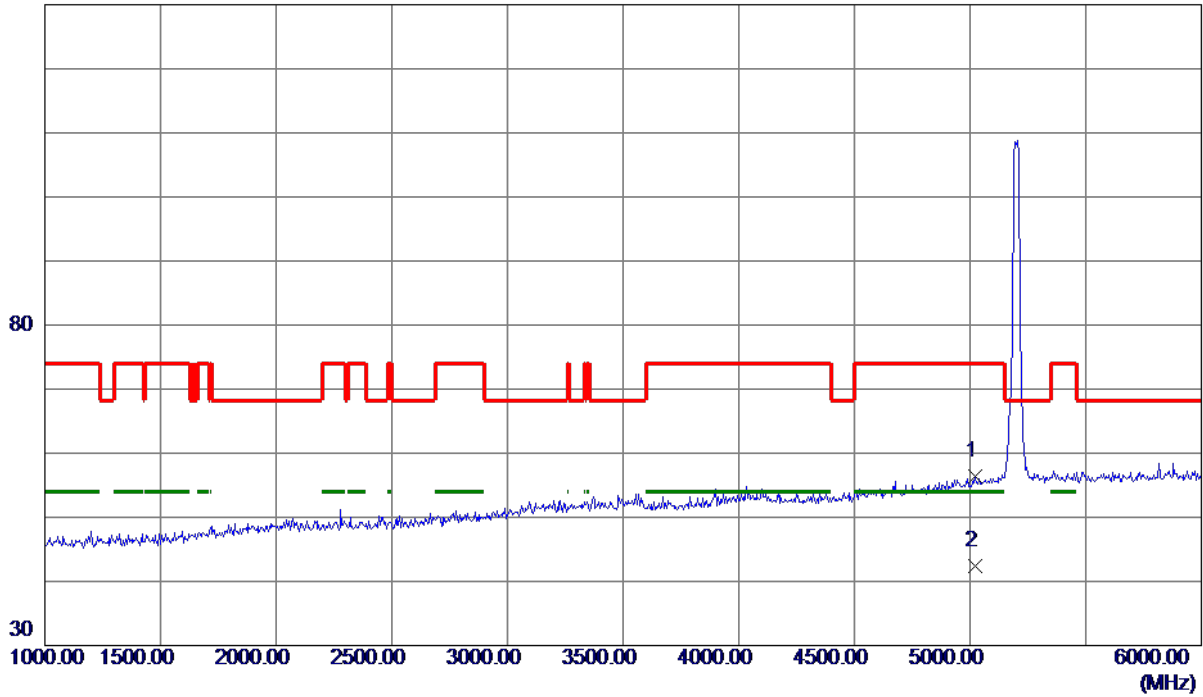

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5020.0000	40.60	15.85	56.45	74.00	-17.55	Peak	
2 *	5020.0000	26.57	15.85	42.42	54.00	-11.58	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Vertical

130 dBuV/m

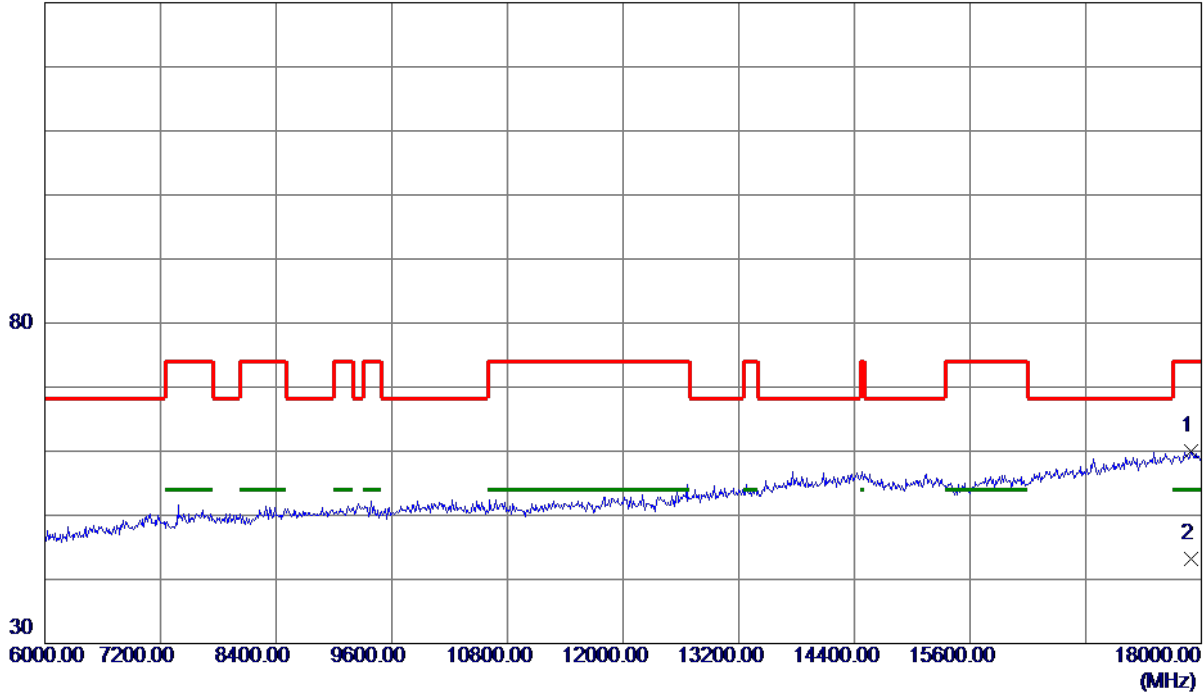

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17892.0000	37.72	22.24	59.96	74.00	-14.04	Peak	
2 *	17892.0000	20.90	22.24	43.14	54.00	-10.86	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Vertical

130 dBuV/m

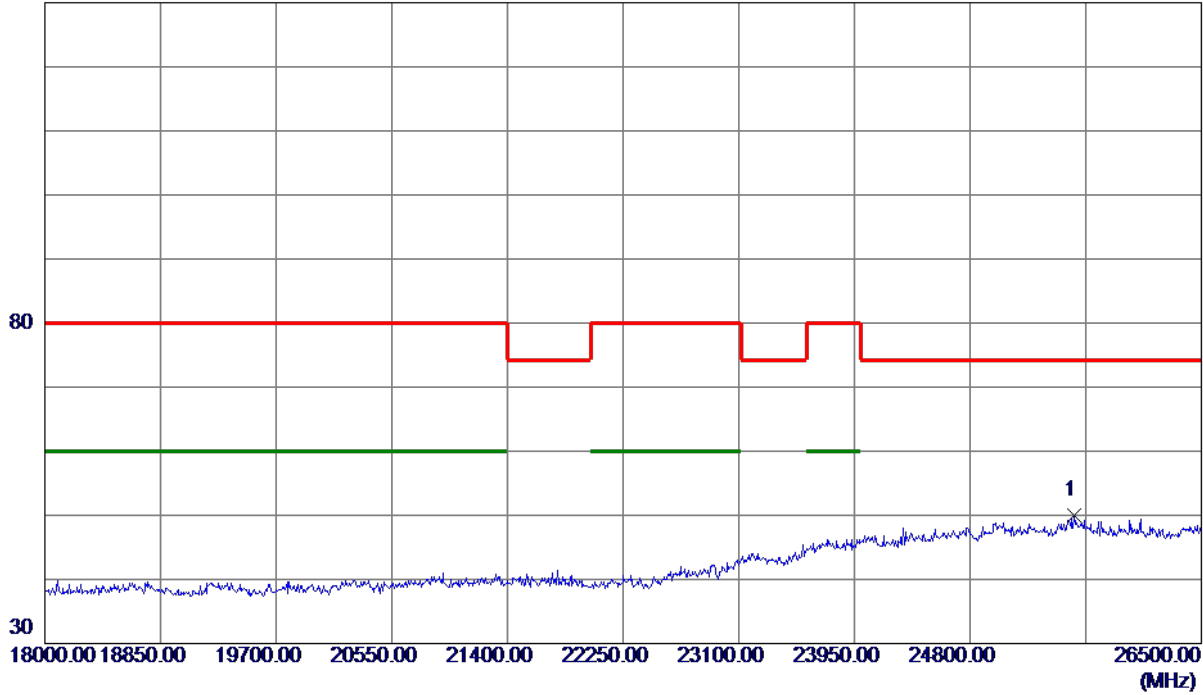


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25569.2500	30.00	20.02	50.02	74.30	-24.28	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

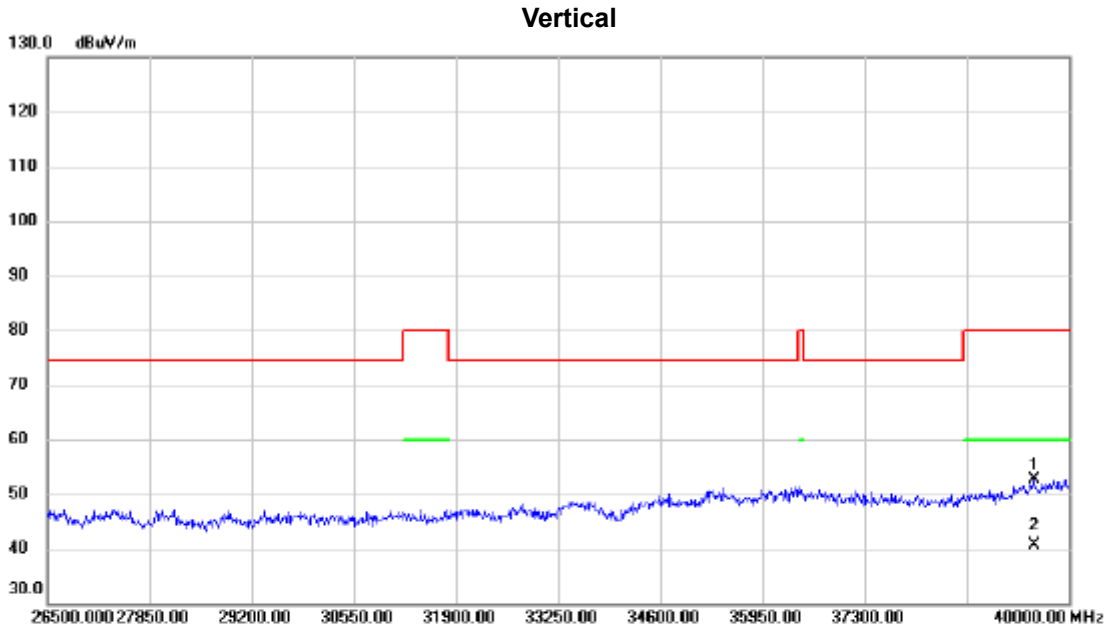

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39534.250	37.36	15.33	52.69	80.00	-27.31	peak	
2	*	39534.250	25.38	15.33	40.71	60.00	-19.29	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

130 dBuV/m

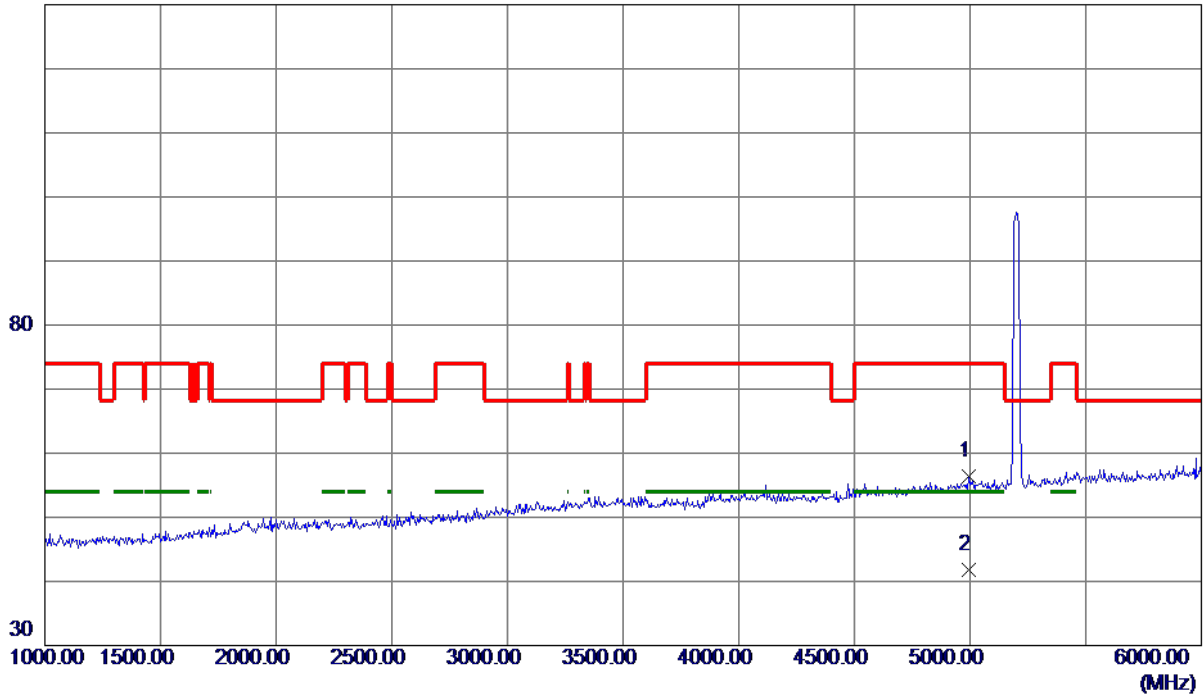

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4995.0000	40.70	15.79	56.49	74.00	-17.51	Peak	
2 *	4995.0000	25.93	15.79	41.72	54.00	-12.28	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

130 dBuV/m

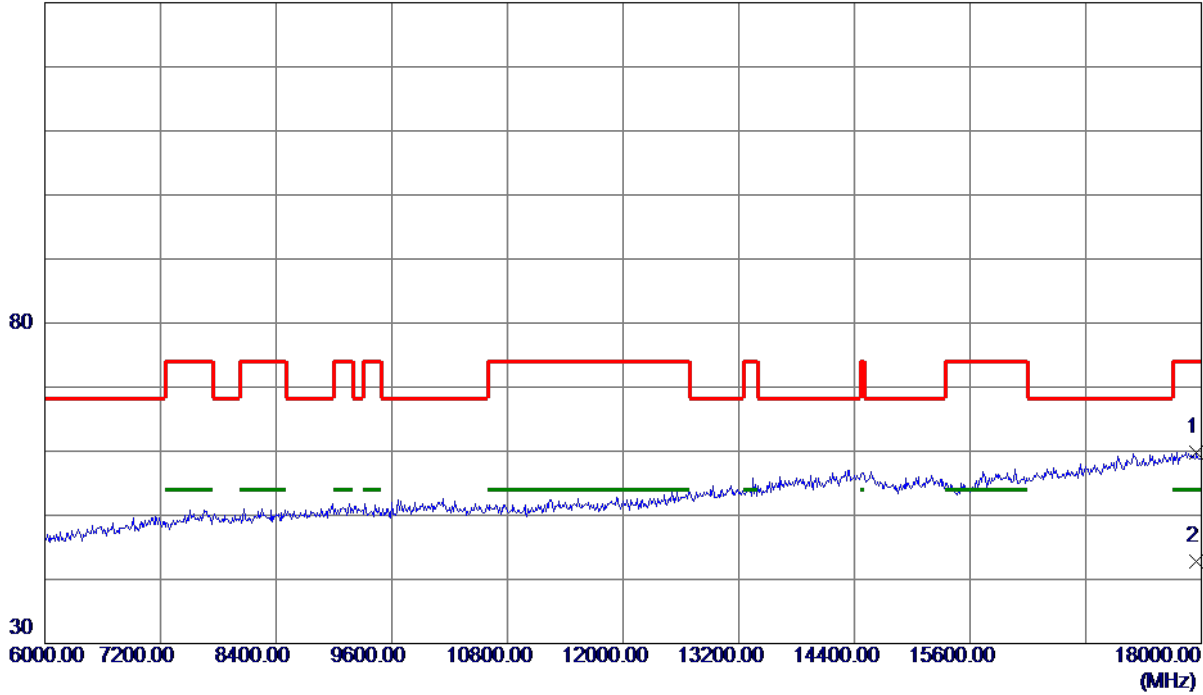

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	37.57	22.27	59.84	74.00	-14.16	Peak	
2 *	17952.0000	20.46	22.27	42.73	54.00	-11.27	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

130 dBuV/m

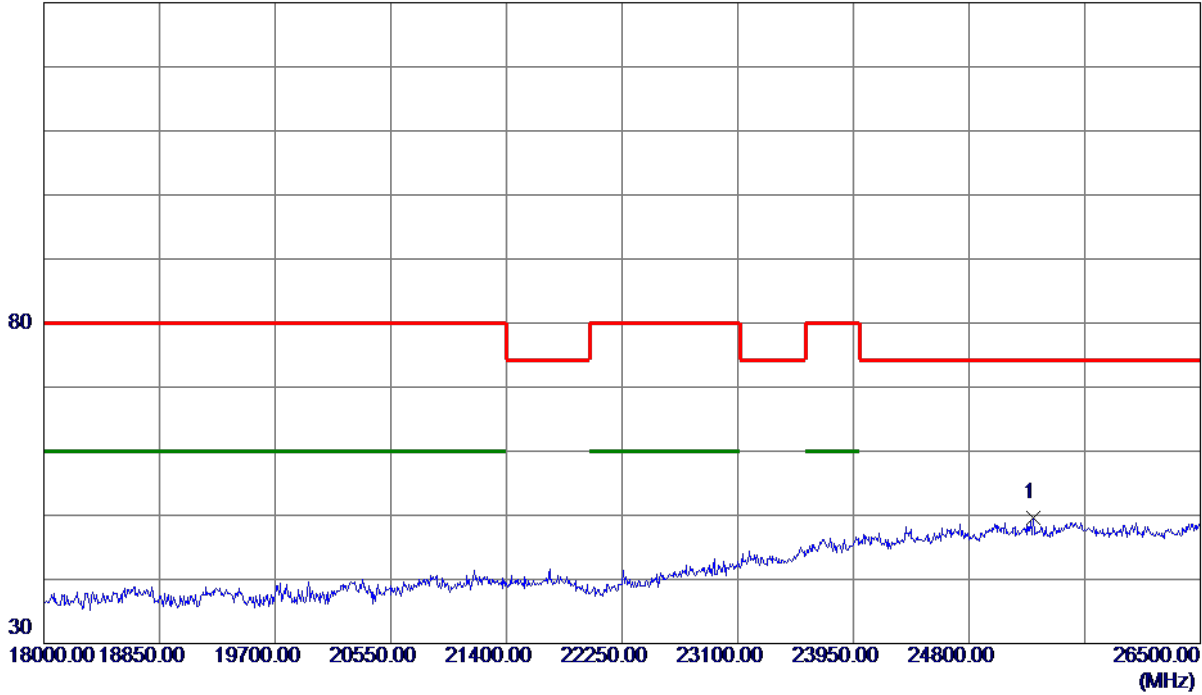


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25271.7500	29.54	20.04	49.58	74.30	-24.72	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

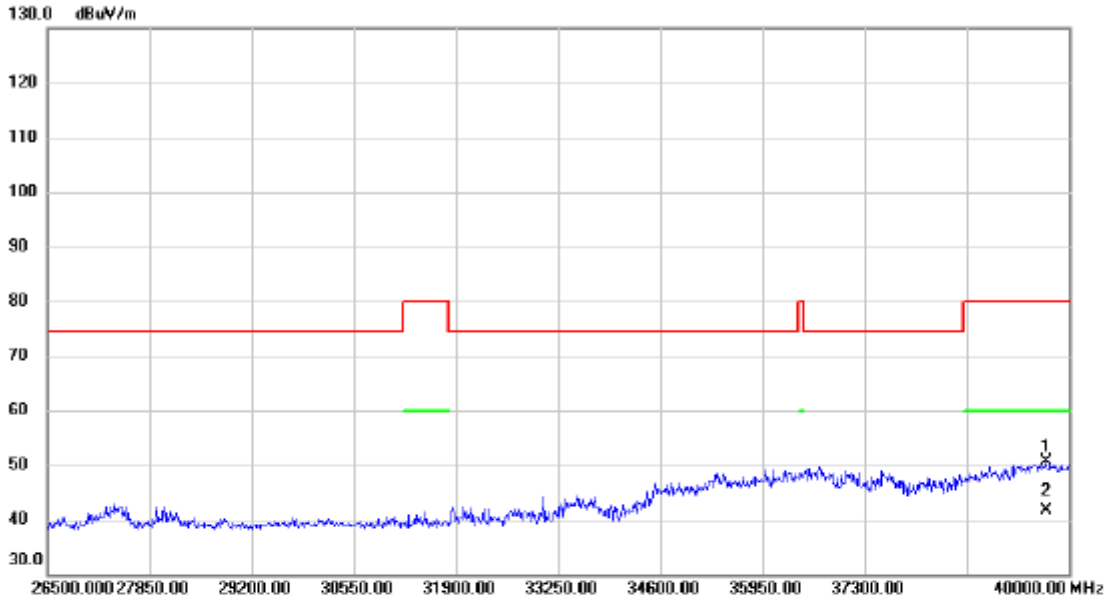

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	35.22	15.43	50.65	80.00	-29.35	peak	
2	*	39696.250	26.18	15.43	41.61	60.00	-18.39	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5190 MHz_484 Tone

Vertical

130 dBuV/m

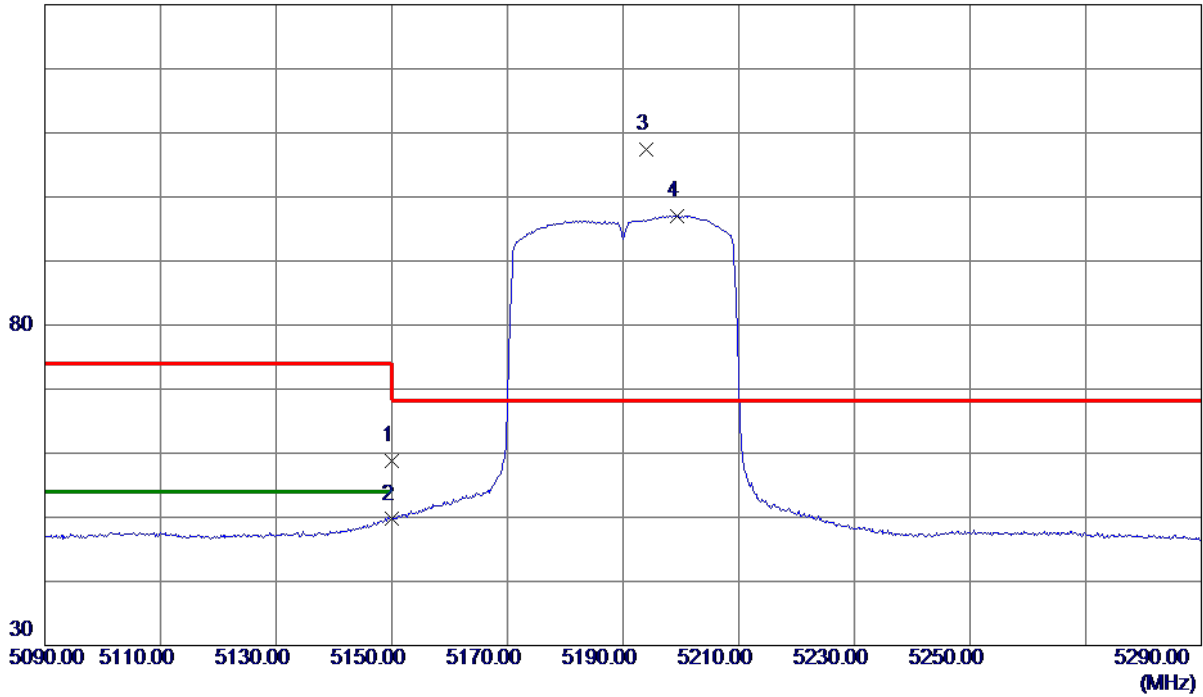

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	42.63	16.16	58.79	74.00	-15.21	Peak	
2	5150.0000	33.54	16.16	49.70	54.00	-4.30	AVG	
3 *	5194.0000	91.19	16.26	107.45	68.30	39.15	Peak	No Limit
4	5199.4000	80.82	16.27	97.09	999.00	-901.91	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5190 MHz_484 Tone

Horizontal

130 dBuV/m

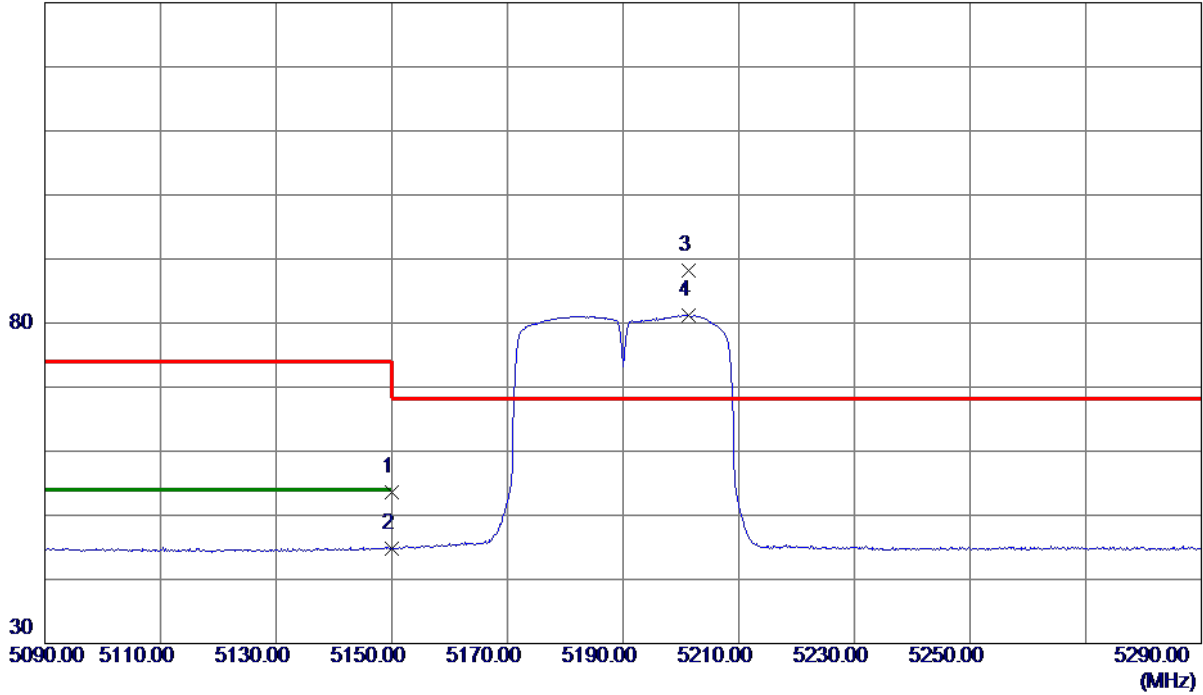

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.48	16.16	53.64	74.00	-20.36	Peak	
2	5150.0000	28.60	16.16	44.76	54.00	-9.24	AVG	
3 *	5201.4000	71.90	16.28	88.18	68.30	19.88	Peak	No Limit
4	5201.4000	64.88	16.28	81.16	999.00	-917.84	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

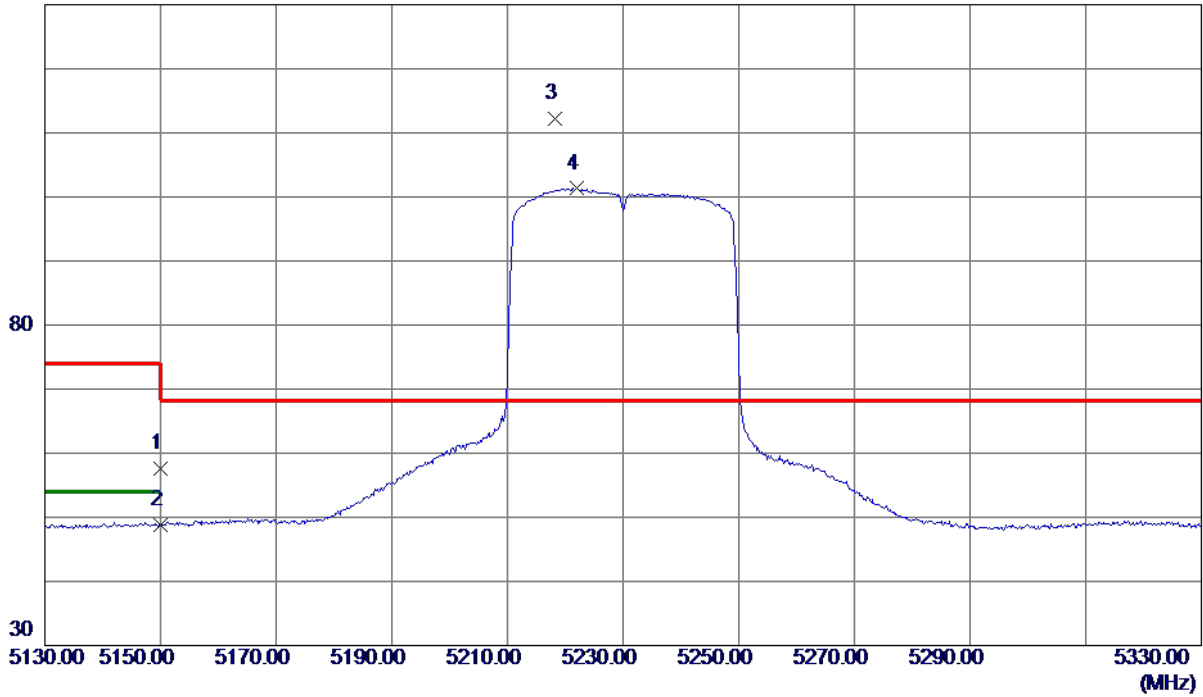

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.37	16.16	57.53	74.00	-16.47	Peak	
2	5150.0000	32.71	16.16	48.87	54.00	-5.13	AVG	
3 *	5218.2000	95.96	16.32	112.28	68.30	43.98	Peak	No Limit
4	5222.0000	84.97	16.33	101.30	999.00	-897.70	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

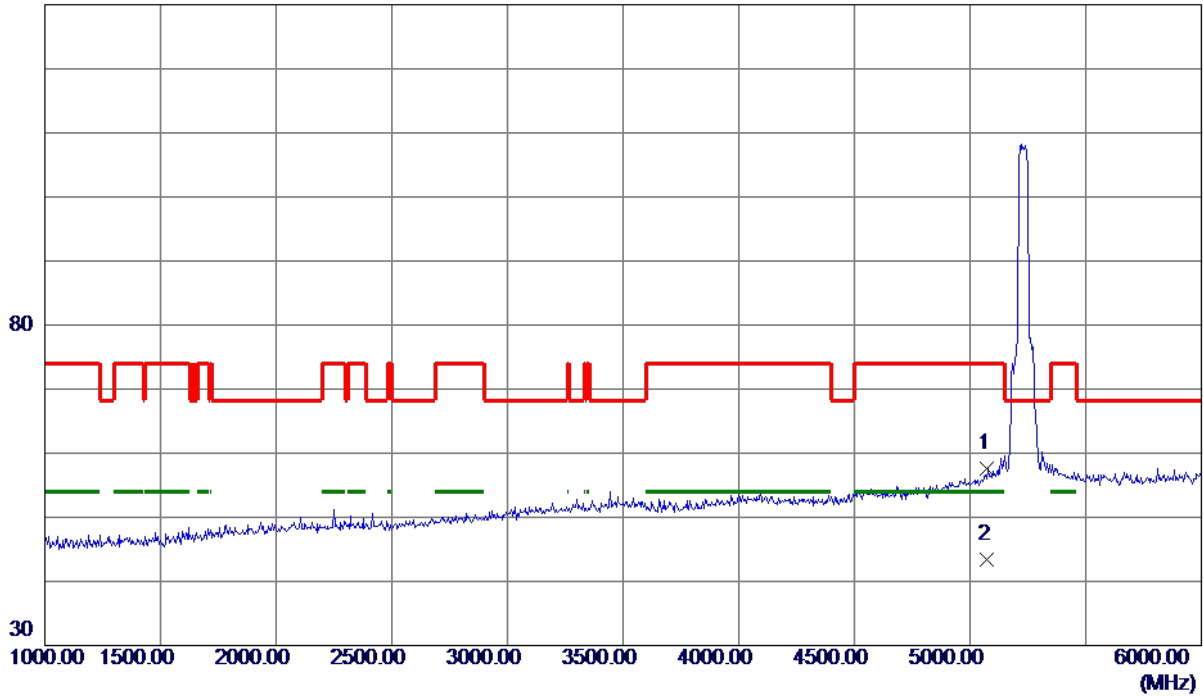

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5075.0000	41.64	15.98	57.62	74.00	-16.38	Peak	
2 *	5075.0000	27.40	15.98	43.38	54.00	-10.62	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

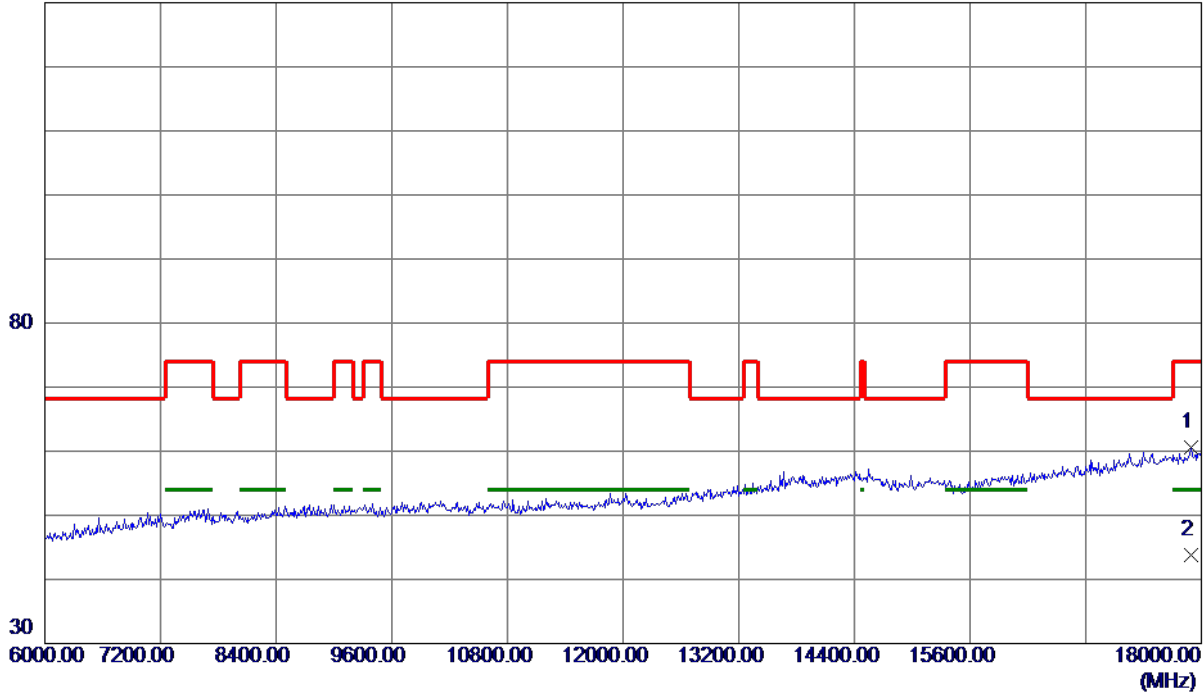

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17892.0000	38.33	22.24	60.57	74.00	-13.43	Peak	
2 *	17892.0000	21.48	22.24	43.72	54.00	-10.28	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

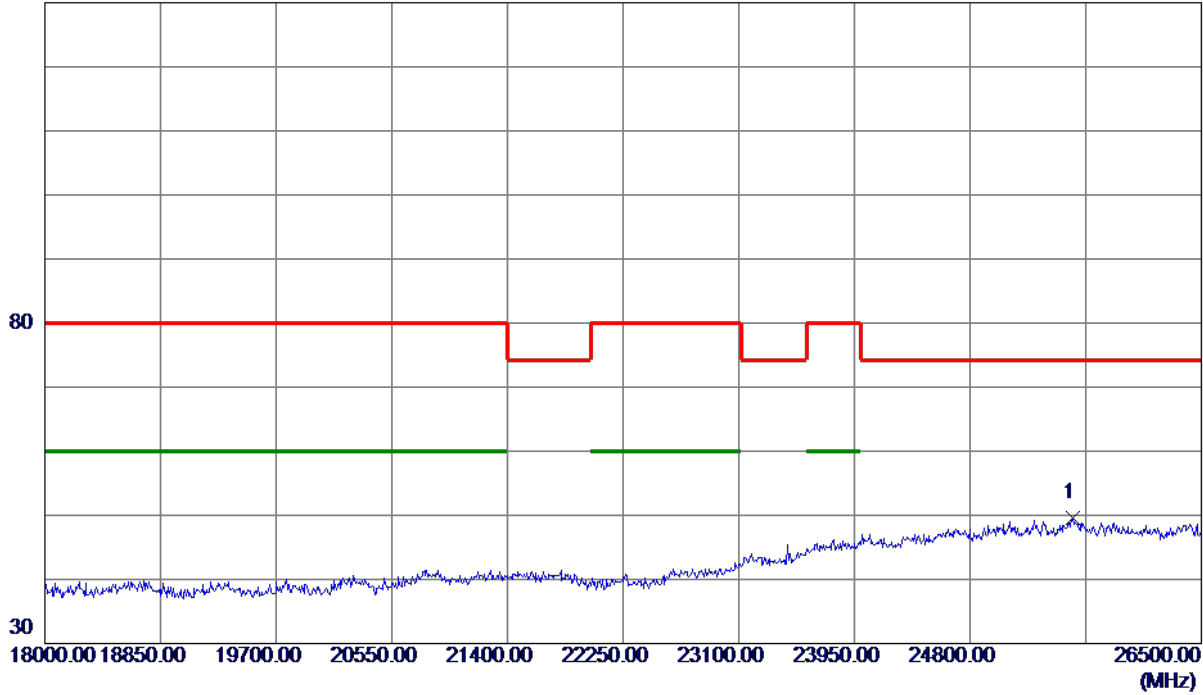


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	29.51	20.02	49.53	74.30	-24.77	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

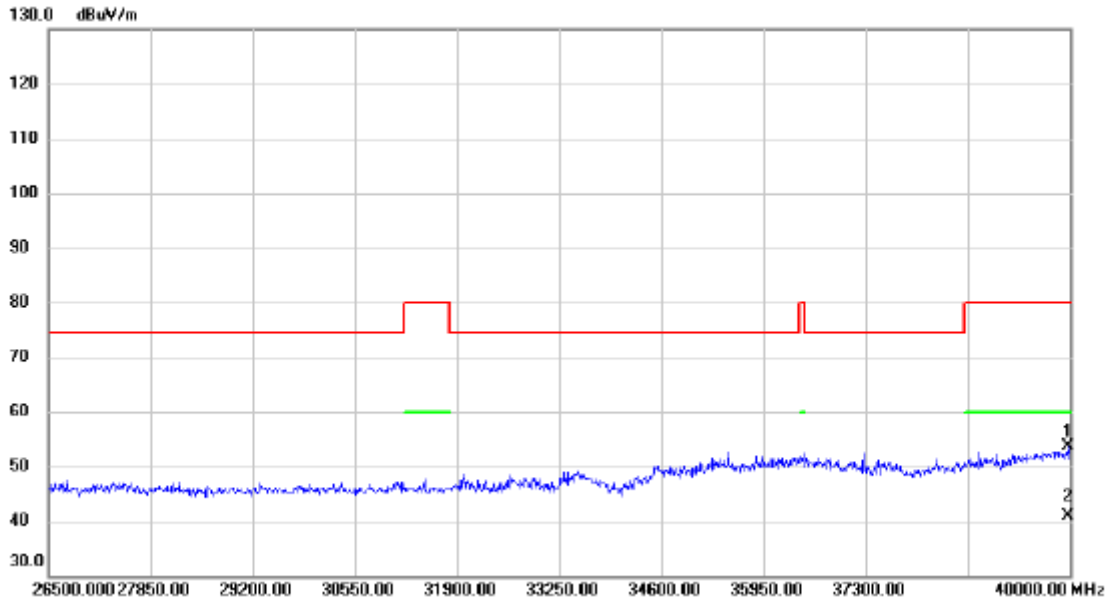

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39979.750	38.02	15.60	53.62	80.00	-26.38	peak	
2	*	39979.750	25.19	15.60	40.79	60.00	-19.21	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

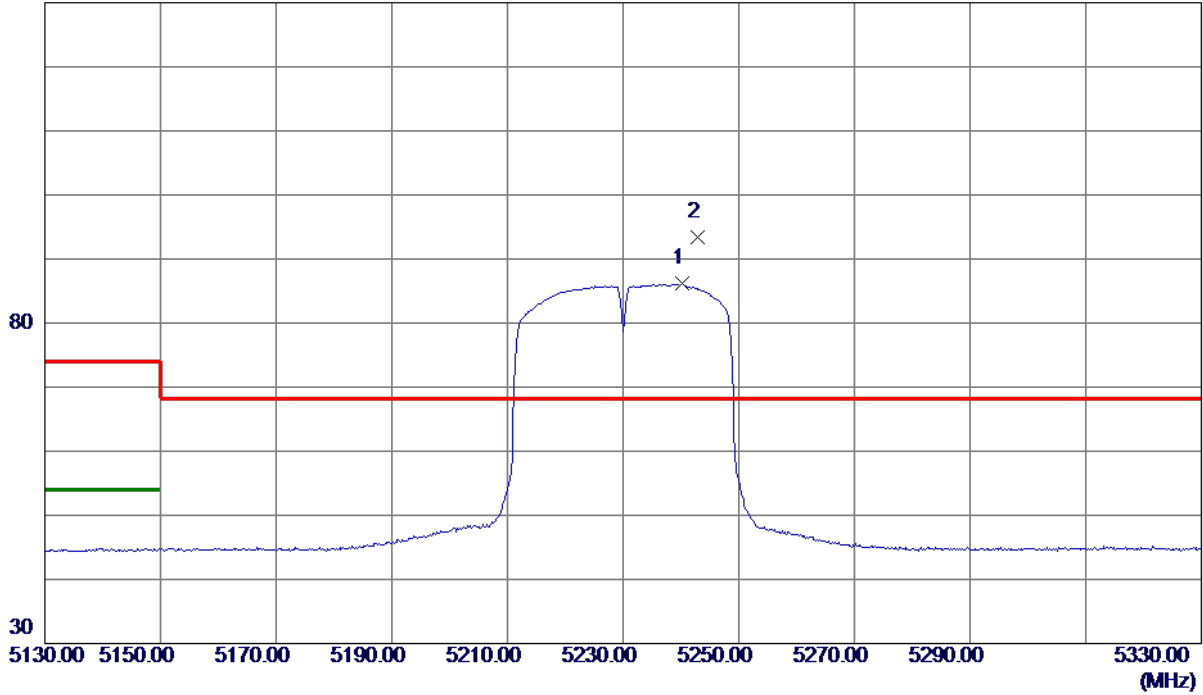

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5240.2000	69.74	16.37	86.11	999.00	-912.89	AVG	No Limit
2 *	5242.8000	76.97	16.38	93.35	68.30	25.05	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

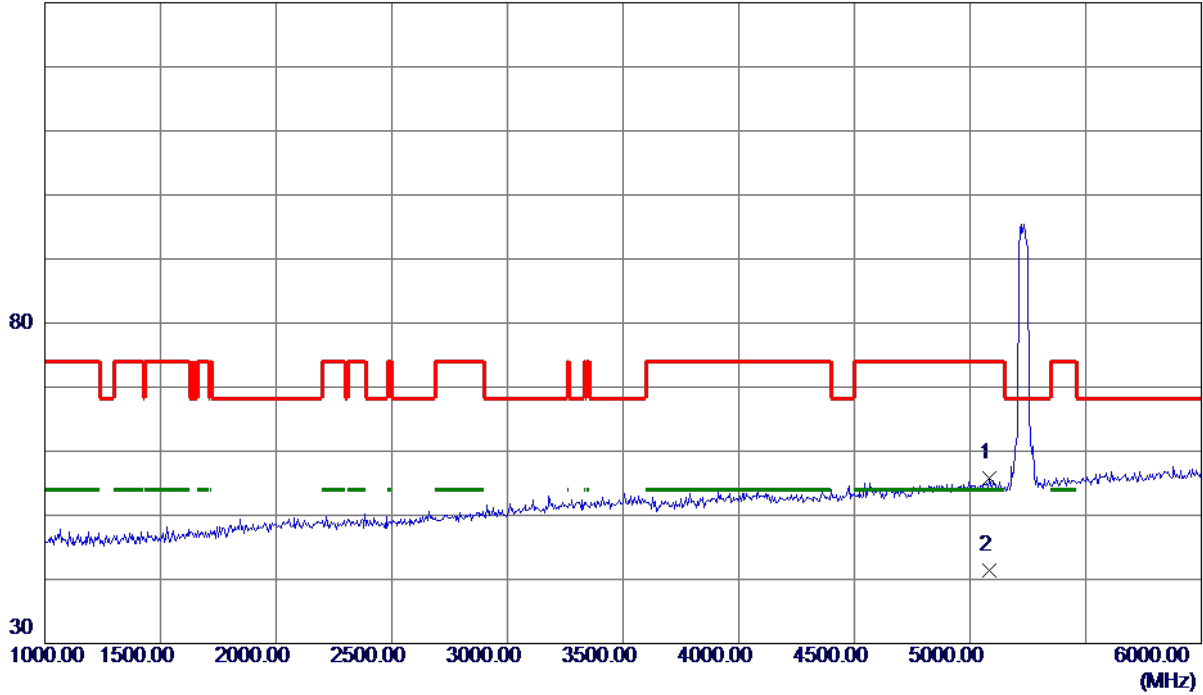

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5085.0000	39.73	16.00	55.73	74.00	-18.27	Peak	
2 *	5085.0000	25.46	16.00	41.46	54.00	-12.54	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

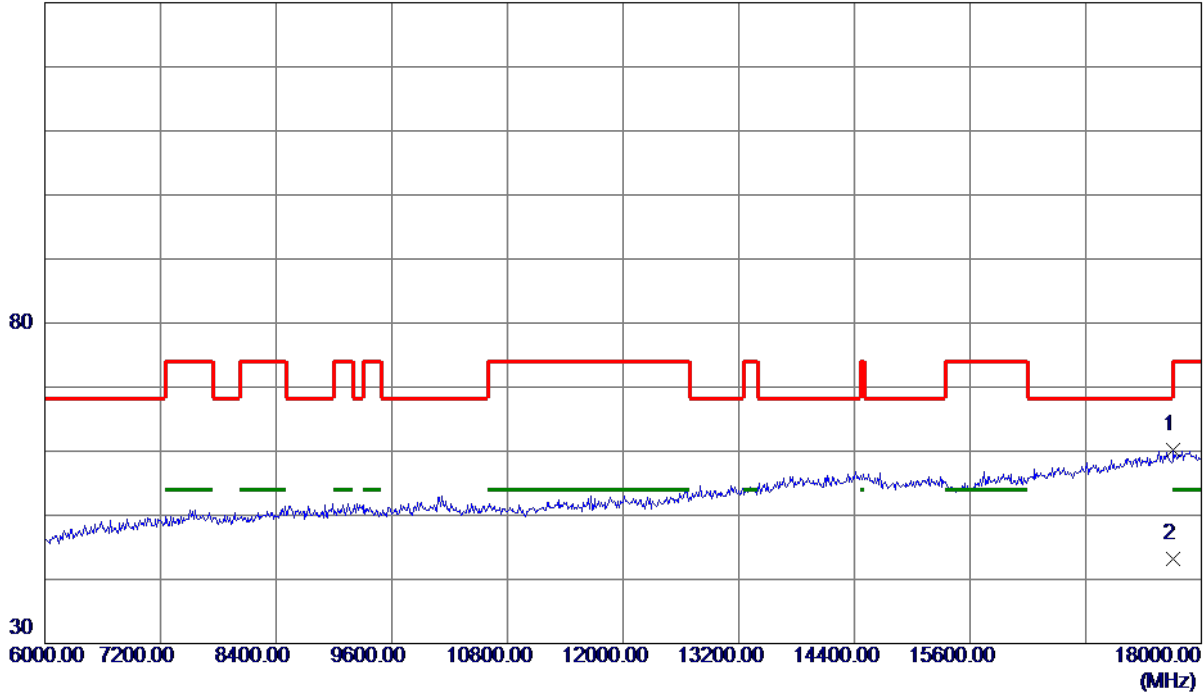

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17712.0000	38.15	22.13	60.28	74.00	-13.72	Peak	
2 *	17712.0000	20.99	22.13	43.12	54.00	-10.88	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

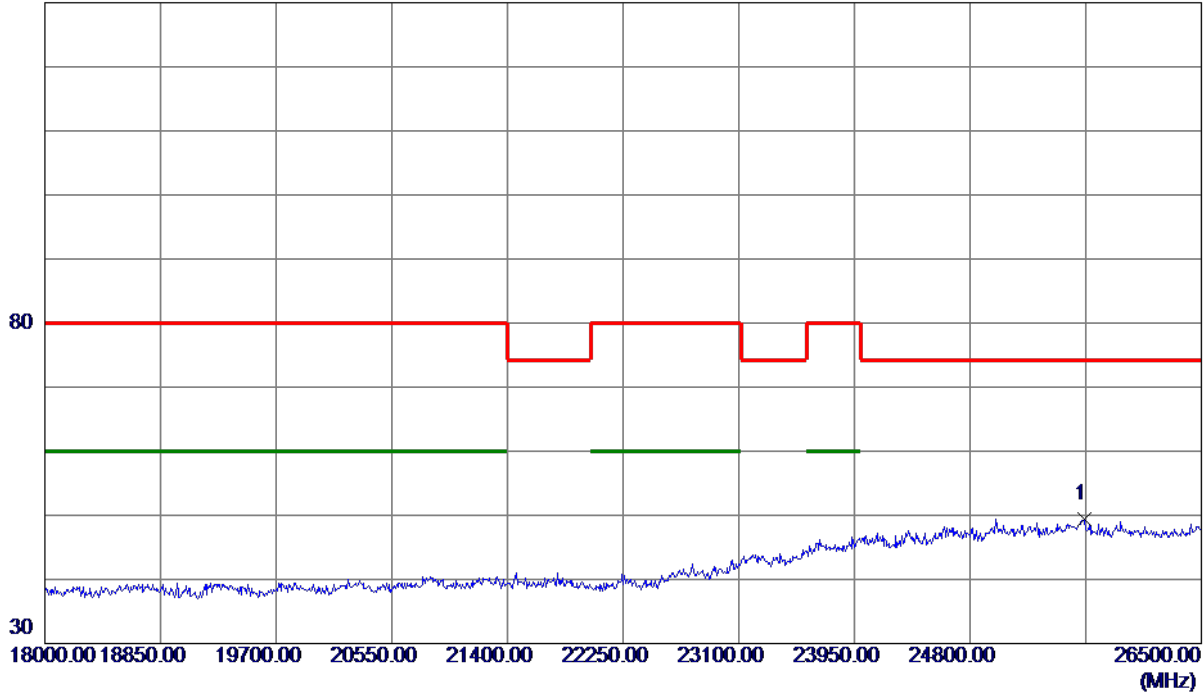


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25637.2500	29.41	20.02	49.43	74.30	-24.87	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

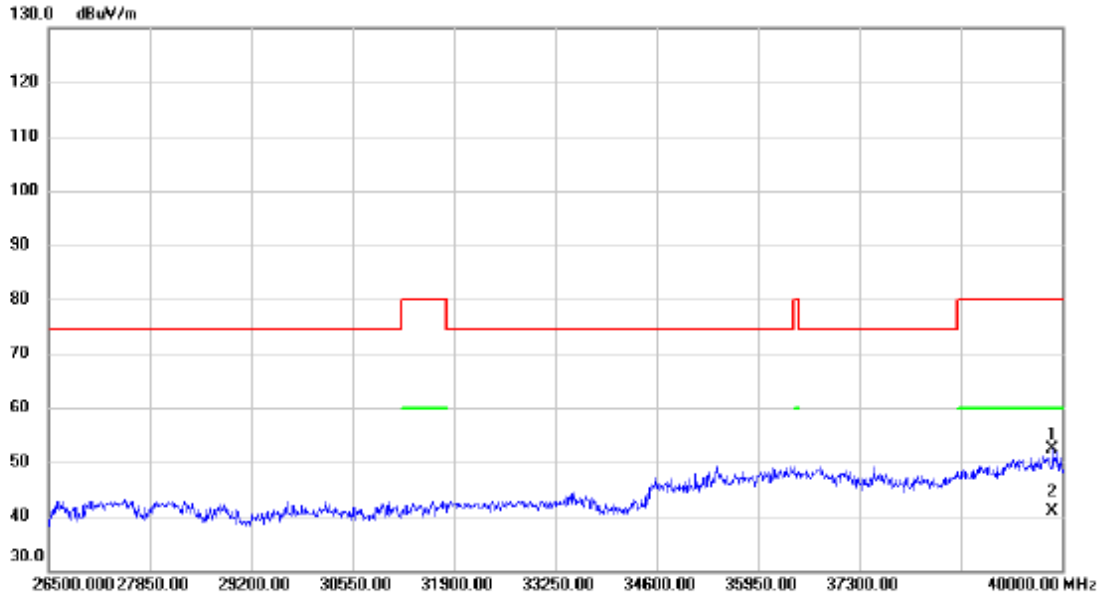

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39865.000	36.76	15.54	52.30	80.00	-27.70	peak	
2	*	39865.000	25.28	15.54	40.82	60.00	-19.18	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

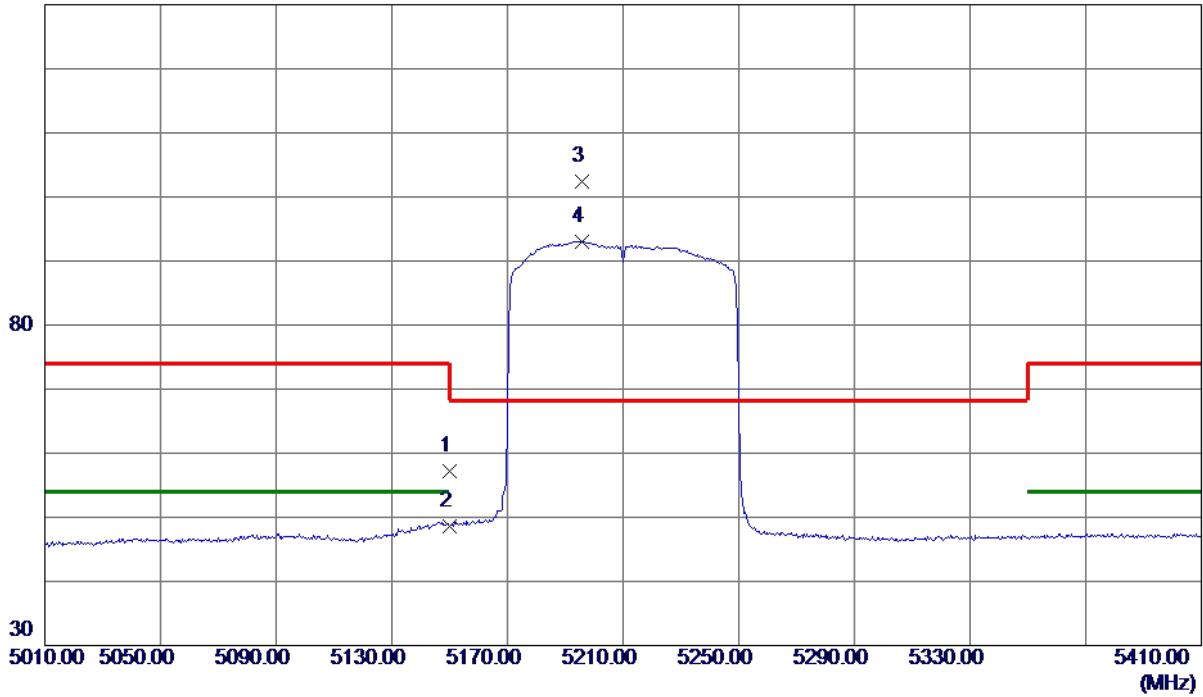

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.04	16.16	57.20	74.00	-16.80	Peak	
2	5150.0000	32.49	16.16	48.65	54.00	-5.35	AVG	
3 *	5195.6000	86.08	16.26	102.34	68.30	34.04	Peak	No Limit
4	5195.6000	76.81	16.26	93.07	999.00	-905.93	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

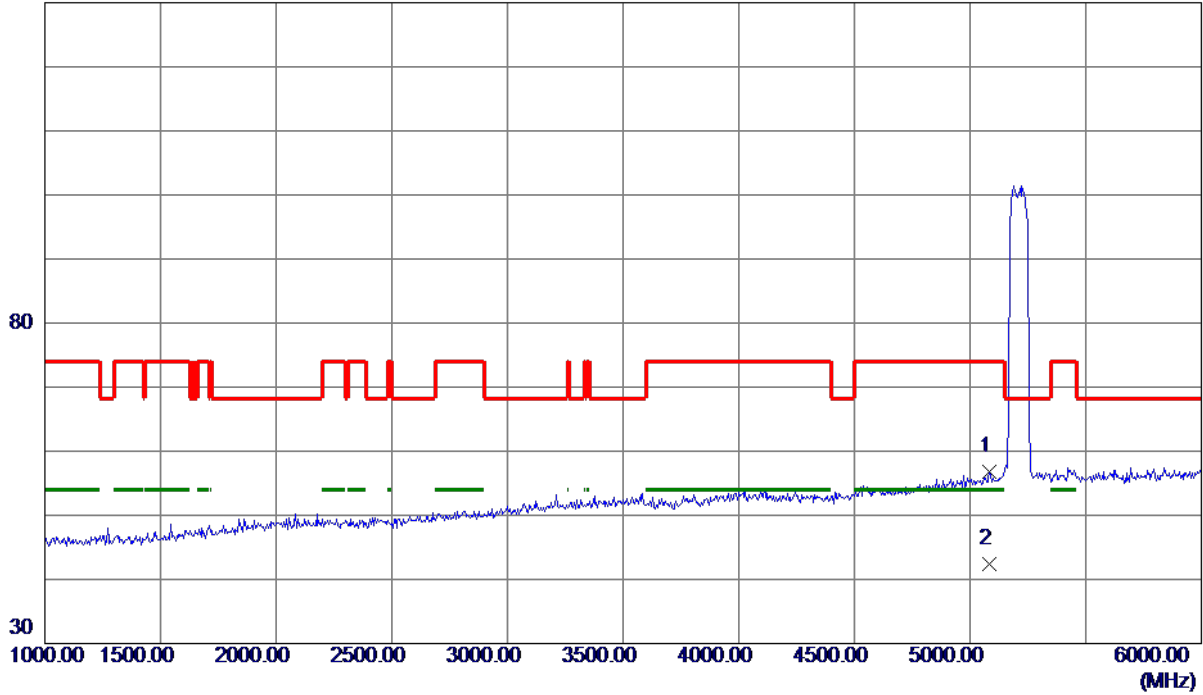

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5085.0000	40.73	16.00	56.73	74.00	-17.27	Peak	
2 *	5085.0000	26.36	16.00	42.36	54.00	-11.64	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

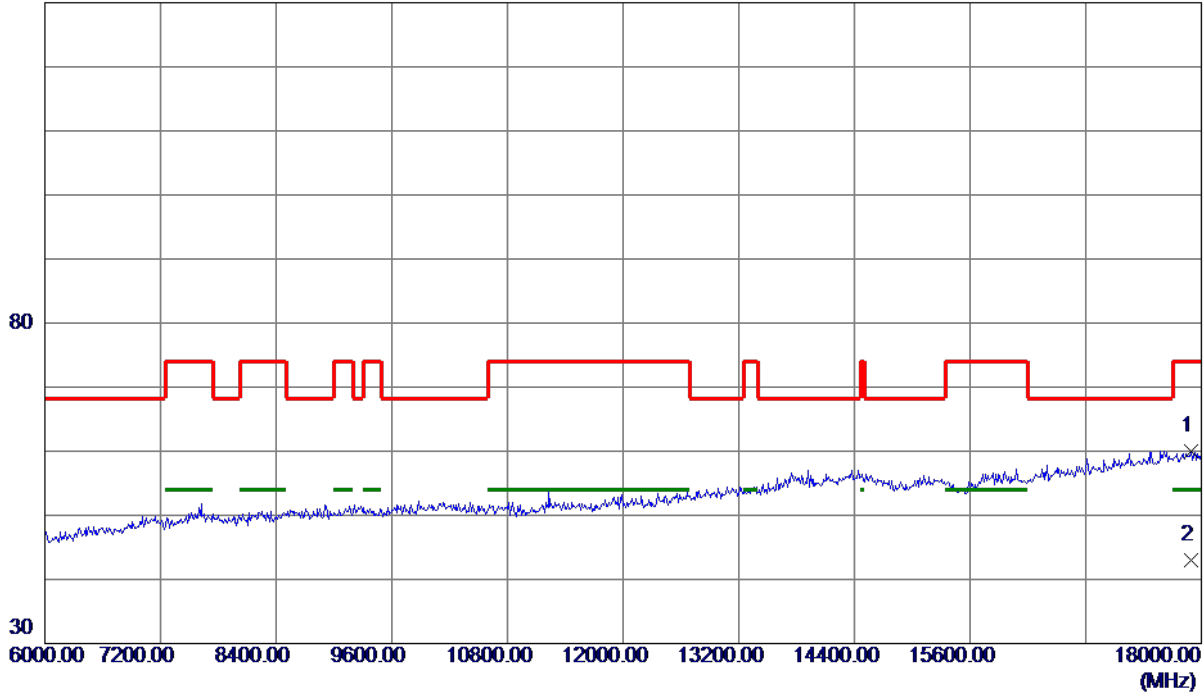

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17892.0000	37.80	22.24	60.04	74.00	-13.96	Peak	
2 *	17892.0000	20.77	22.24	43.01	54.00	-10.99	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

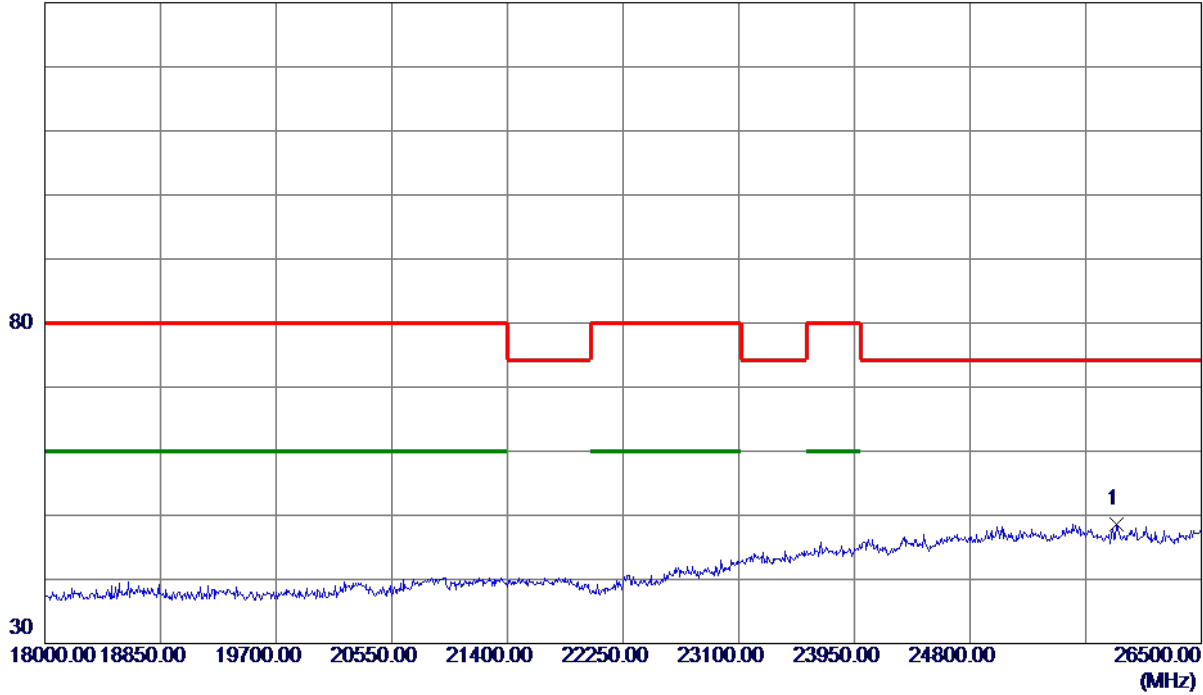


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25879.5000	28.59	20.01	48.60	74.30	-25.70	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

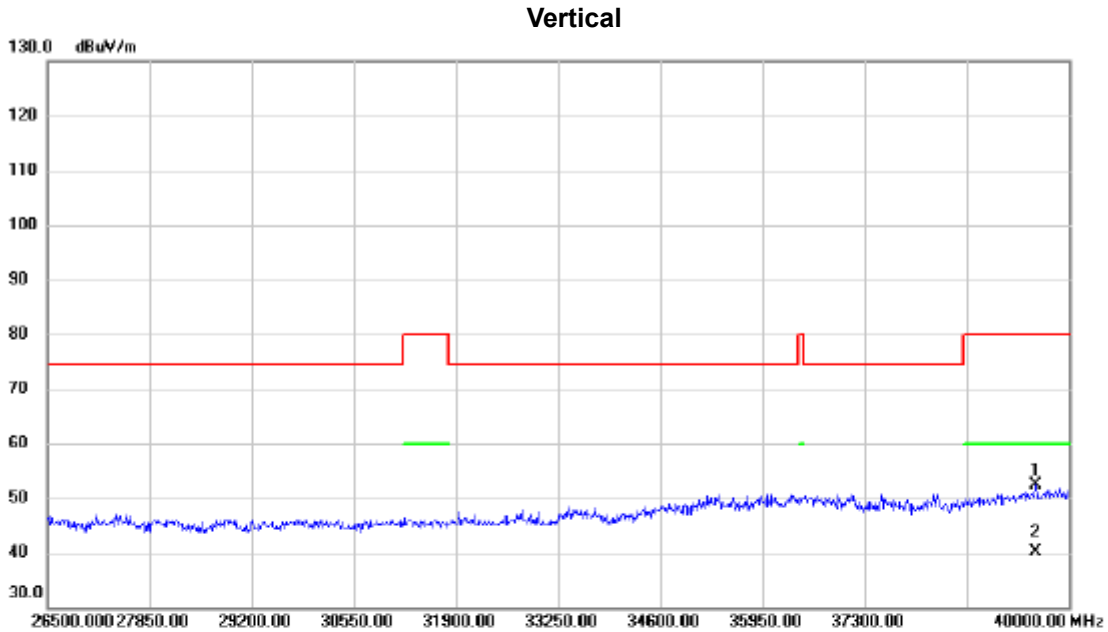

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39561.250	36.98	15.34	52.32	80.00	-27.68	peak	
2	*	39561.250	24.87	15.34	40.21	60.00	-19.79	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

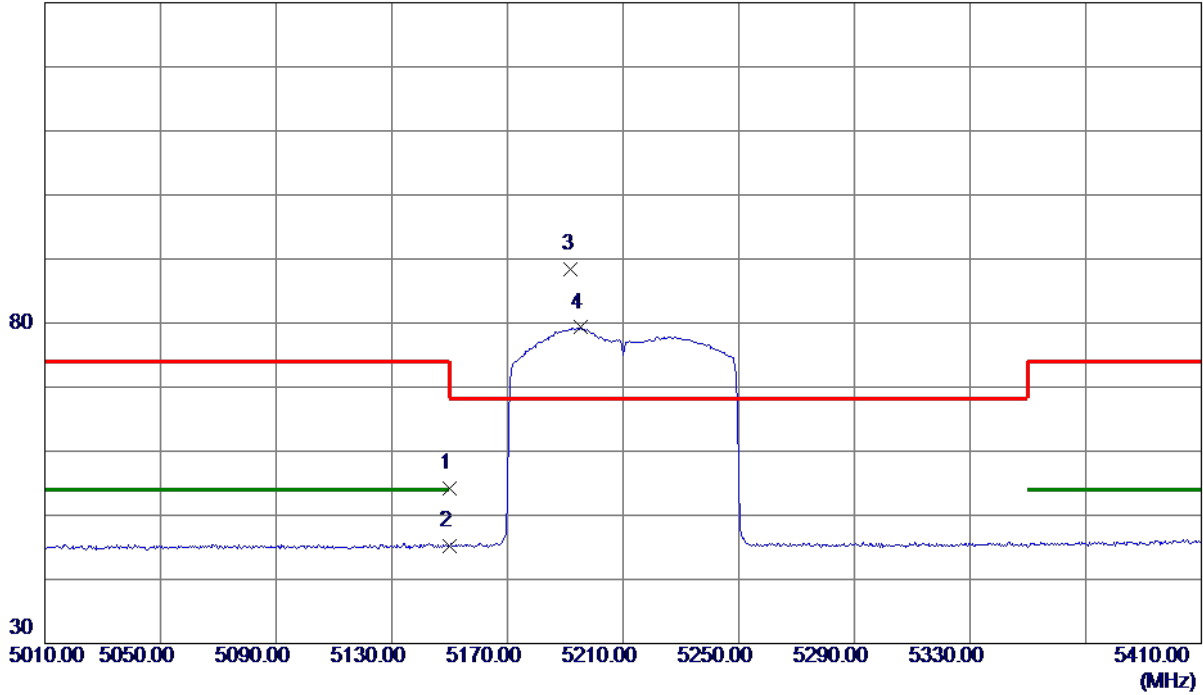

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.99	16.16	54.15	74.00	-19.85	Peak	
2	5150.0000	29.00	16.16	45.16	54.00	-8.84	AVG	
3 *	5192.0000	72.13	16.26	88.39	68.30	20.09	Peak	No Limit
4	5195.2000	63.04	16.26	79.30	999.00	-919.70	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

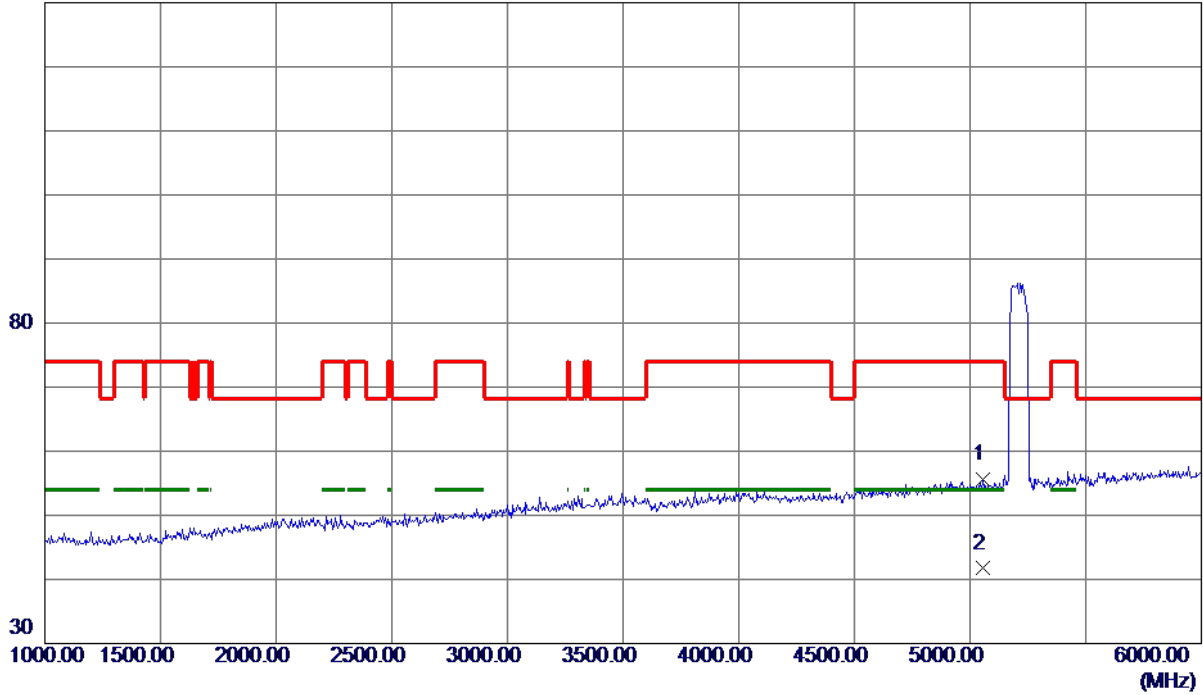

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5055.0000	39.73	15.93	55.66	74.00	-18.34	Peak	
2 *	5055.0000	25.77	15.93	41.70	54.00	-12.30	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

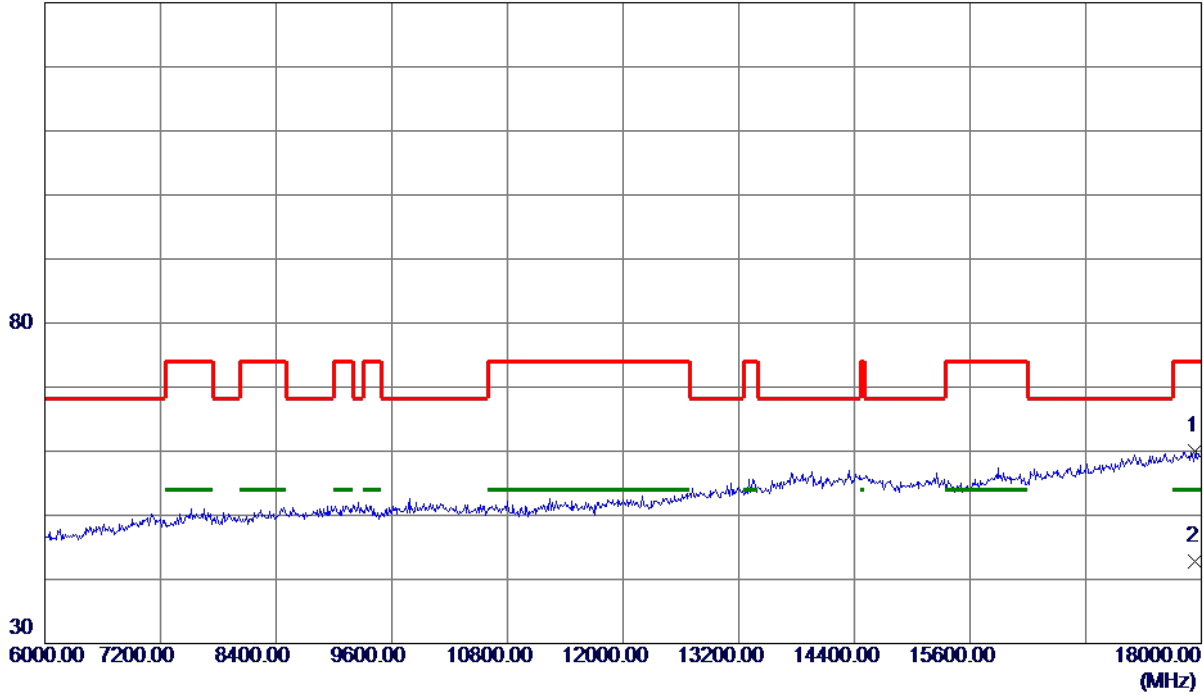

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17940.0000	37.67	22.26	59.93	74.00	-14.07	Peak	
2 *	17940.0000	20.46	22.26	42.72	54.00	-11.28	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

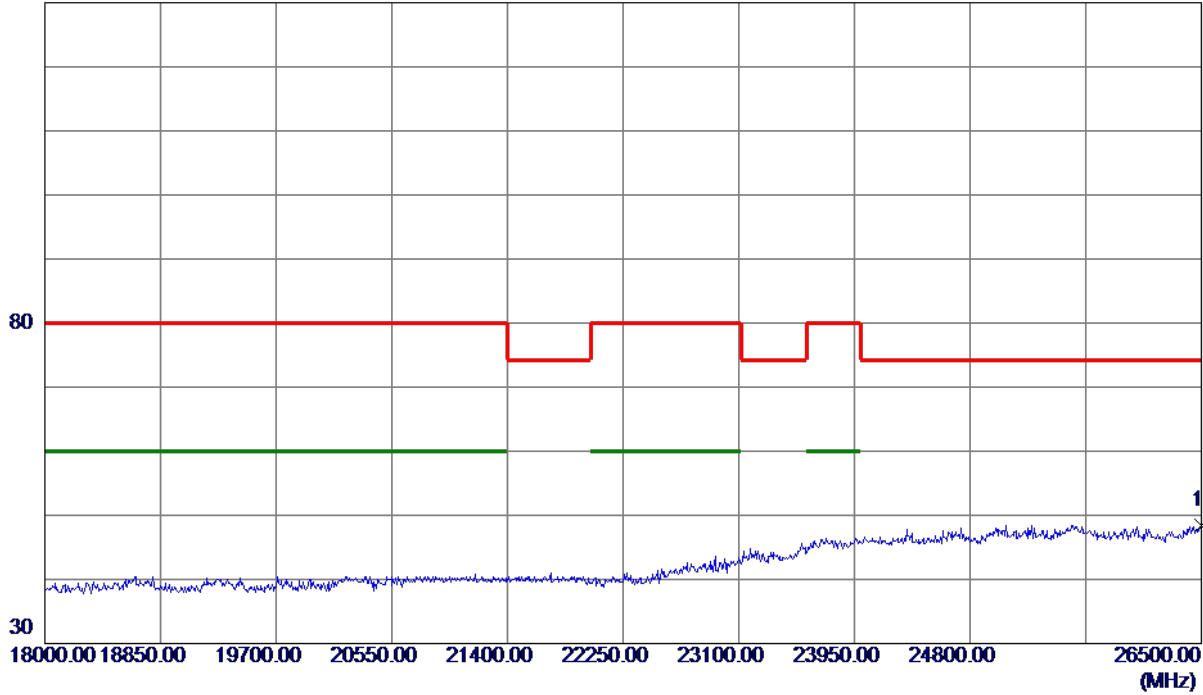


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26495.7500	27.94	20.55	48.49	74.30	-25.81	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

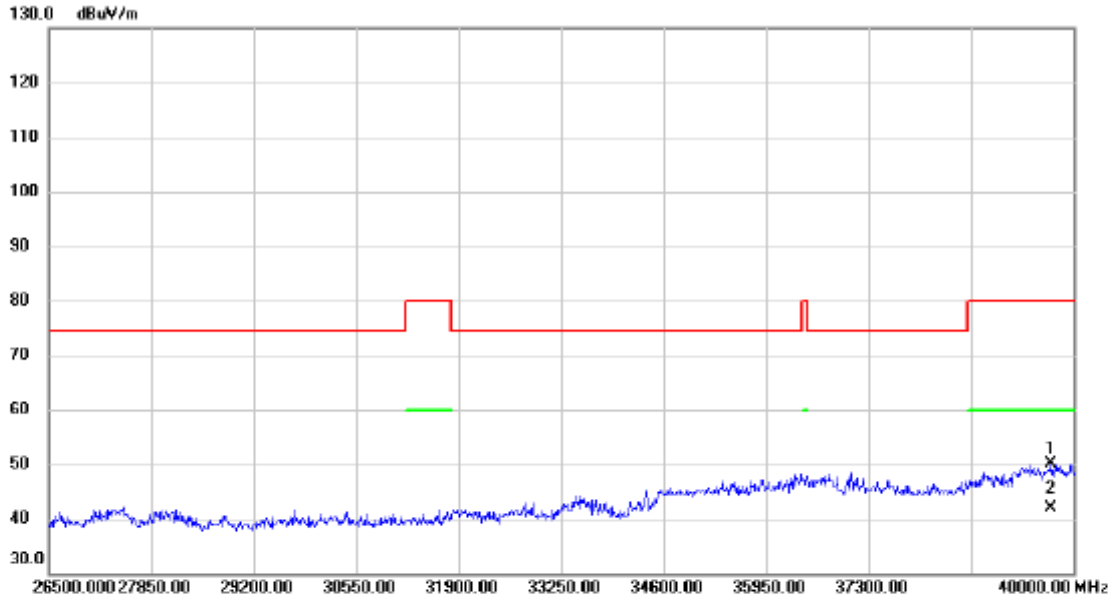


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39709.750	34.78	15.43	50.21	80.00	-29.79	peak	
2	*	39709.750	26.34	15.43	41.77	60.00	-18.23	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5745 MHz_242 Tone

Vertical

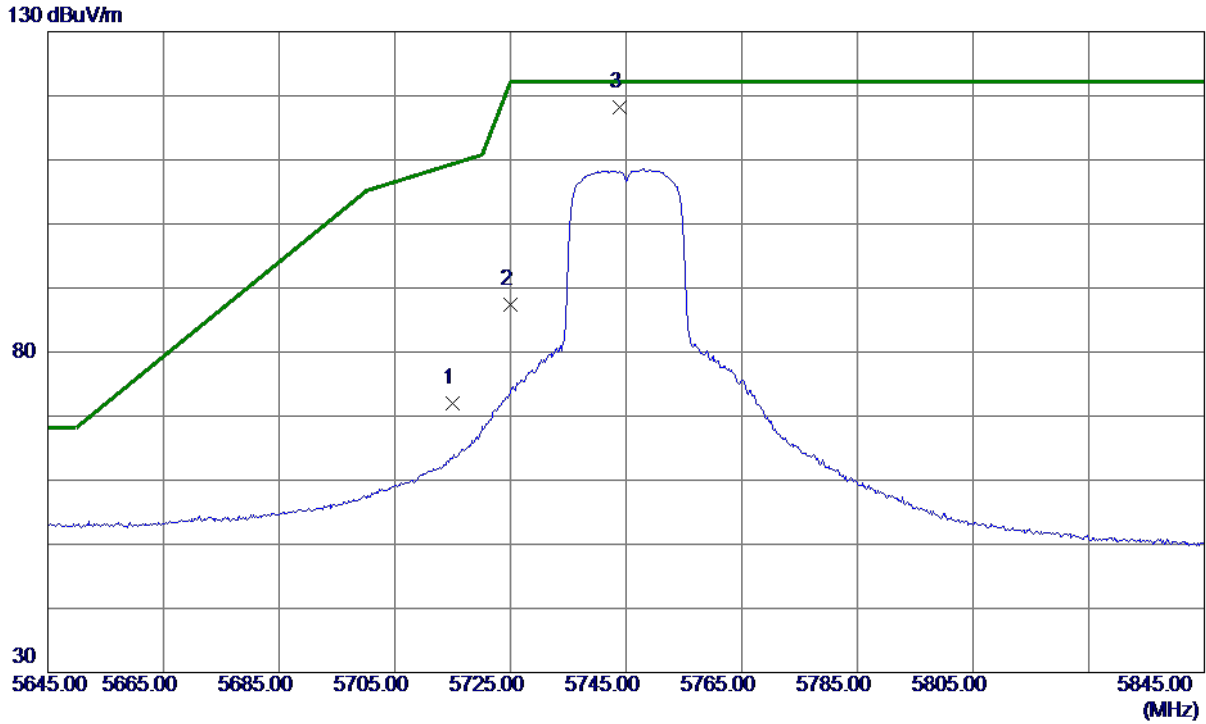

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	54.32	17.62	71.94	109.40	-37.46	Peak	
2	5725.0000	69.70	17.65	87.35	122.20	-34.85	Peak	
3 *	5743.8000	100.52	17.71	118.23	122.20	-3.97	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5745 MHz_242 Tone

Horizontal

130 dBuV/m

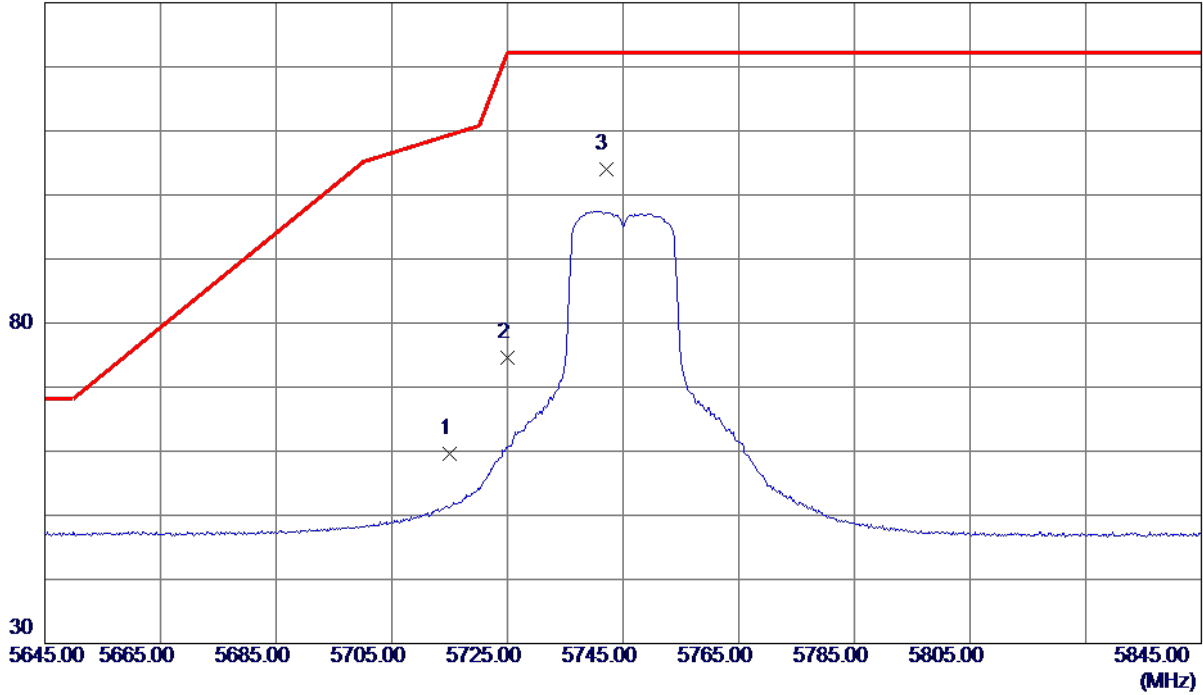

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	42.02	17.62	59.64	109.40	-49.76	Peak	
2	5725.0000	57.03	17.65	74.68	122.20	-47.52	Peak	
3 *	5742.0000	86.36	17.70	104.06	122.20	-18.14	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

130 dBuV/m

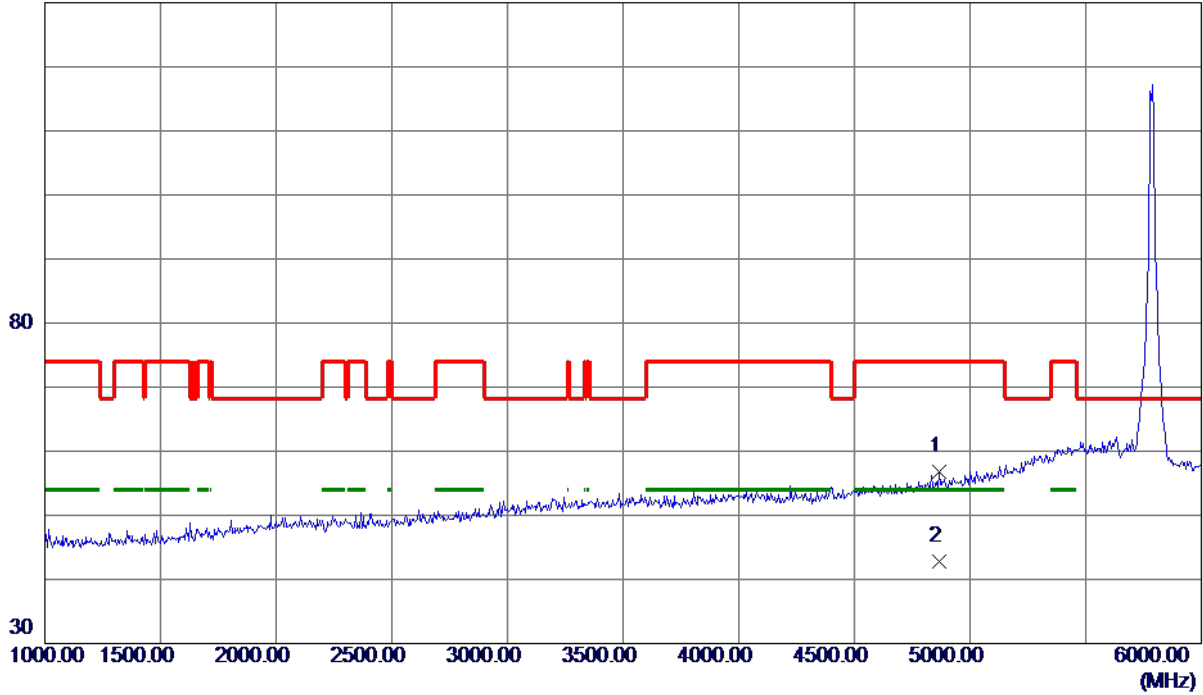

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4865.0000	41.34	15.43	56.77	74.00	-17.23	Peak	
2 *	4865.0000	27.40	15.43	42.83	54.00	-11.17	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

130 dBuV/m

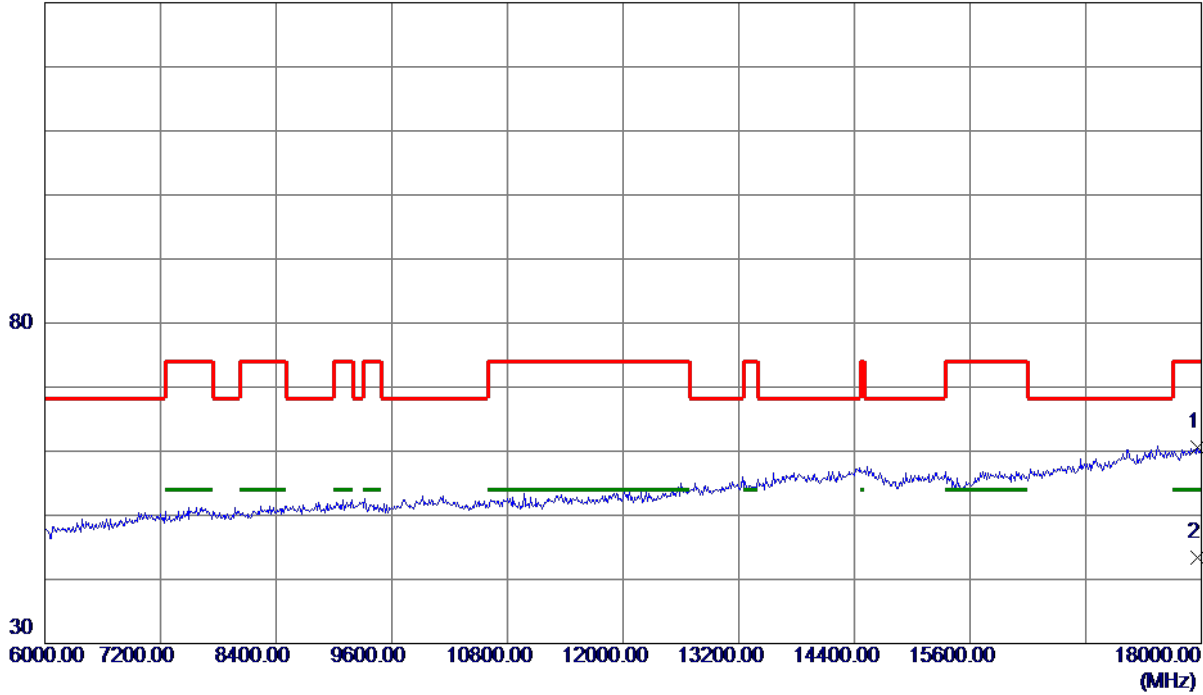

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17964.0000	38.27	22.28	60.55	74.00	-13.45	Peak	
2 *	17964.0000	21.09	22.28	43.37	54.00	-10.63	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

130 dBuV/m

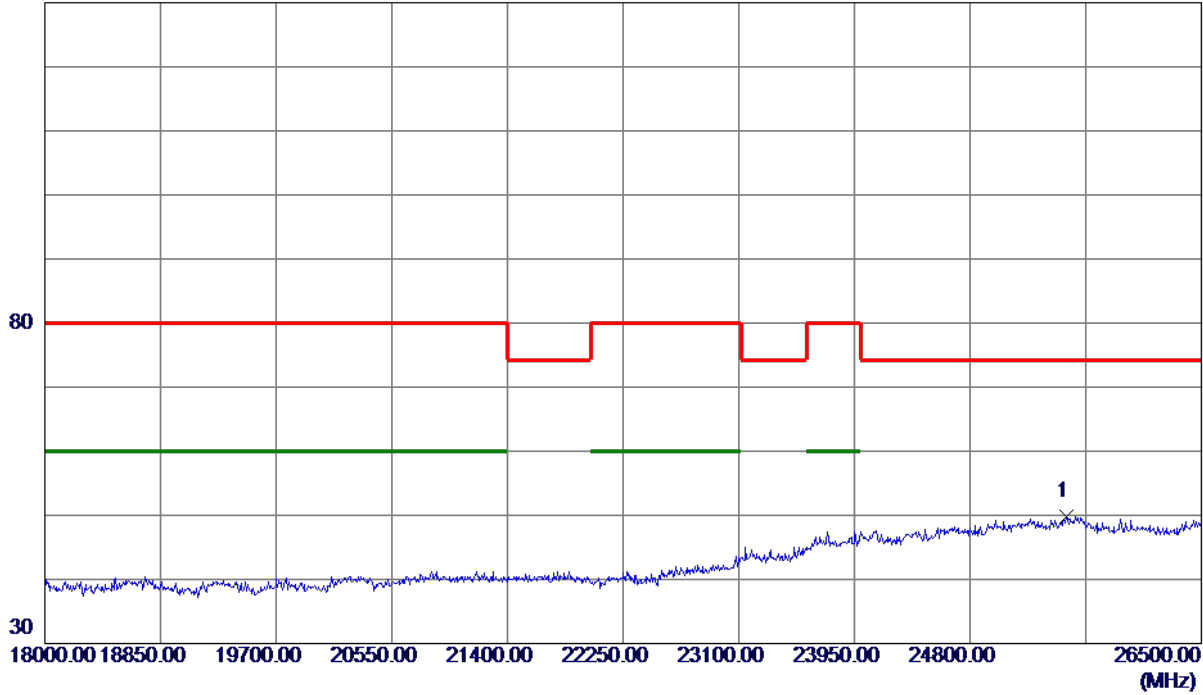


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25509.7500	29.72	20.02	49.74	74.30	-24.56	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

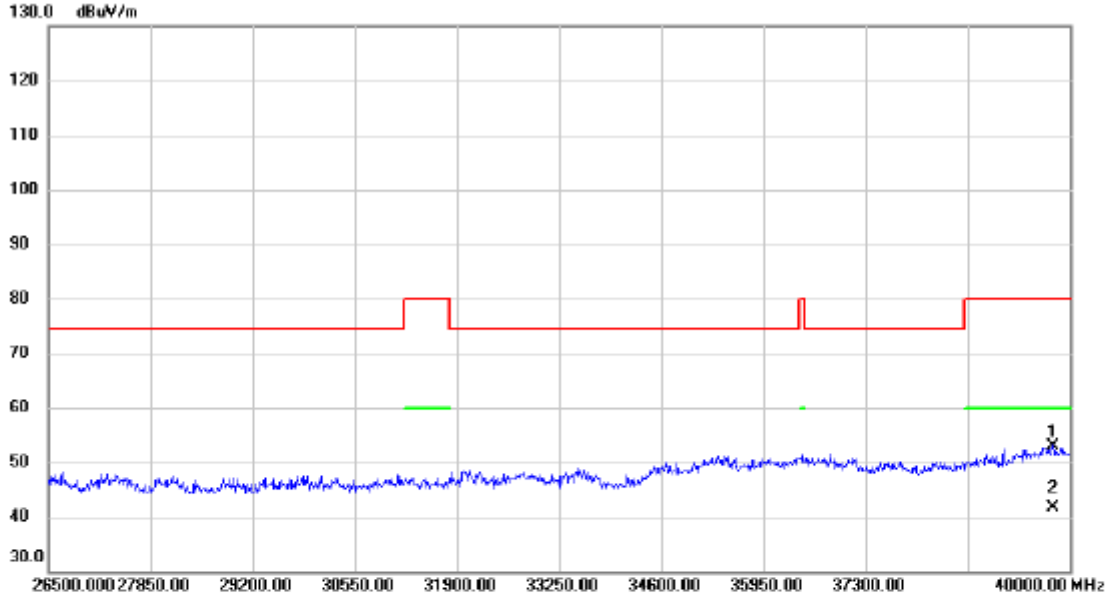

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		39770.500	37.52	15.48	53.00	80.00	-27.00	peak	
2	*	39770.500	26.03	15.48	41.51	60.00	-18.49	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

130 dBuV/m

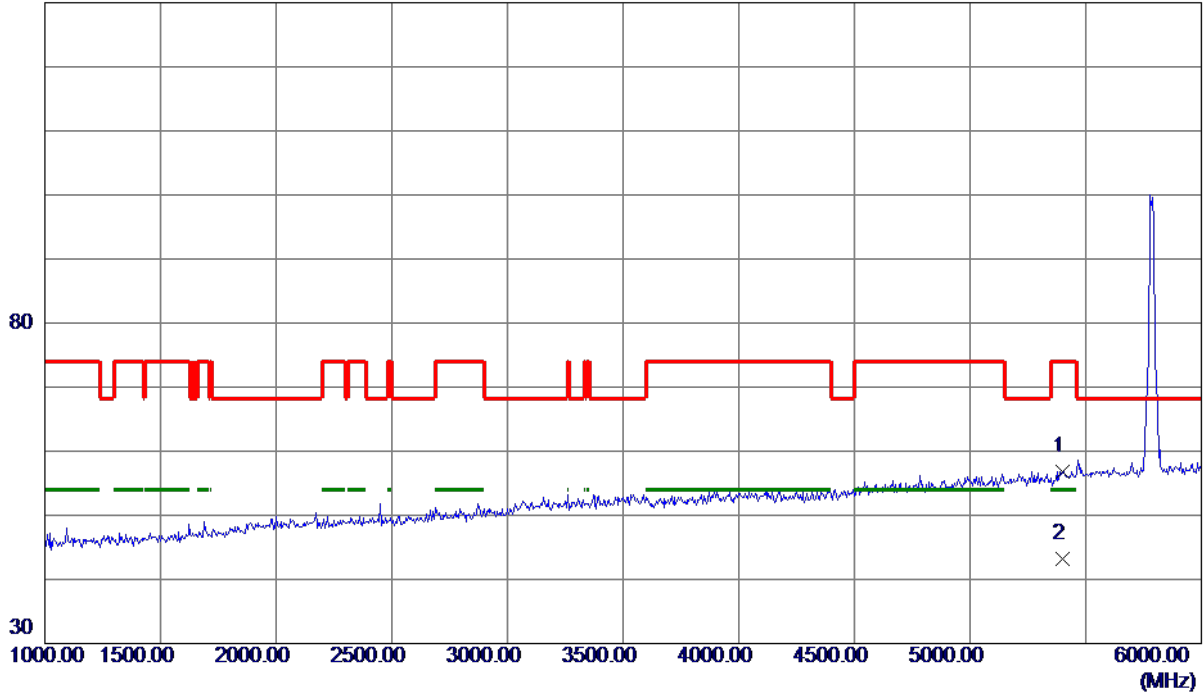

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5400.0000	40.10	16.75	56.85	74.00	-17.15	Peak	
2 *	5400.0000	26.44	16.75	43.19	54.00	-10.81	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

130 dBuV/m

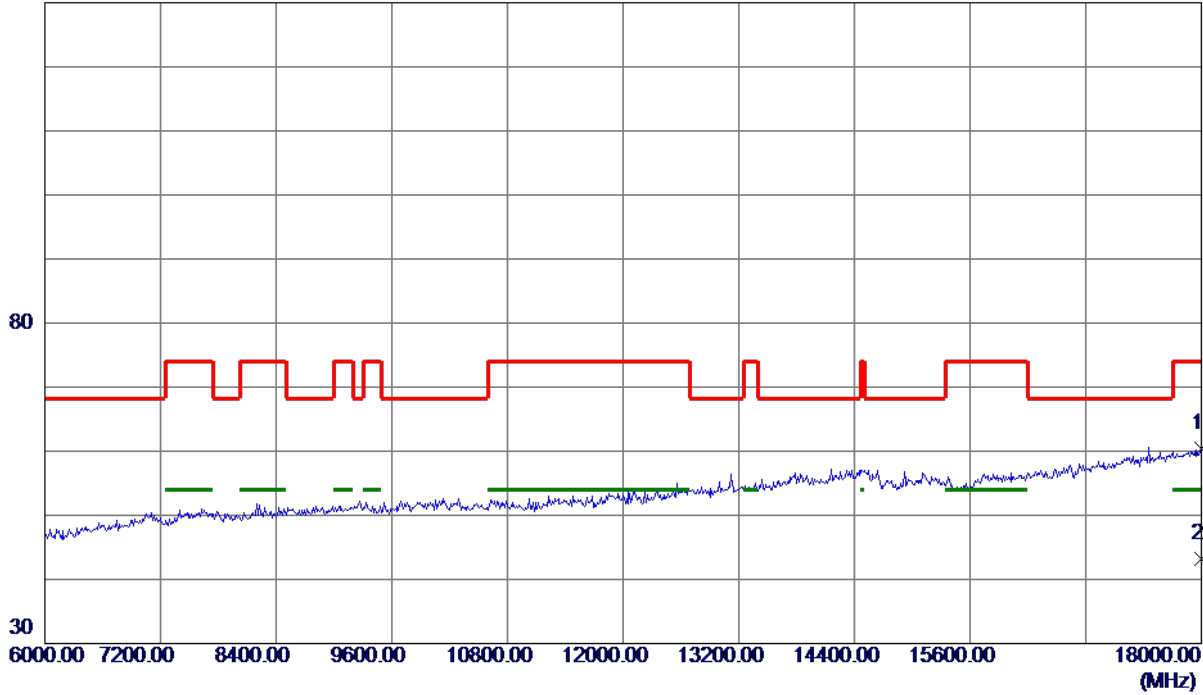

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	18000.0000	38.01	22.30	60.31	74.00	-13.69	Peak	
2 *	18000.0000	20.86	22.30	43.16	54.00	-10.84	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

130 dBuV/m

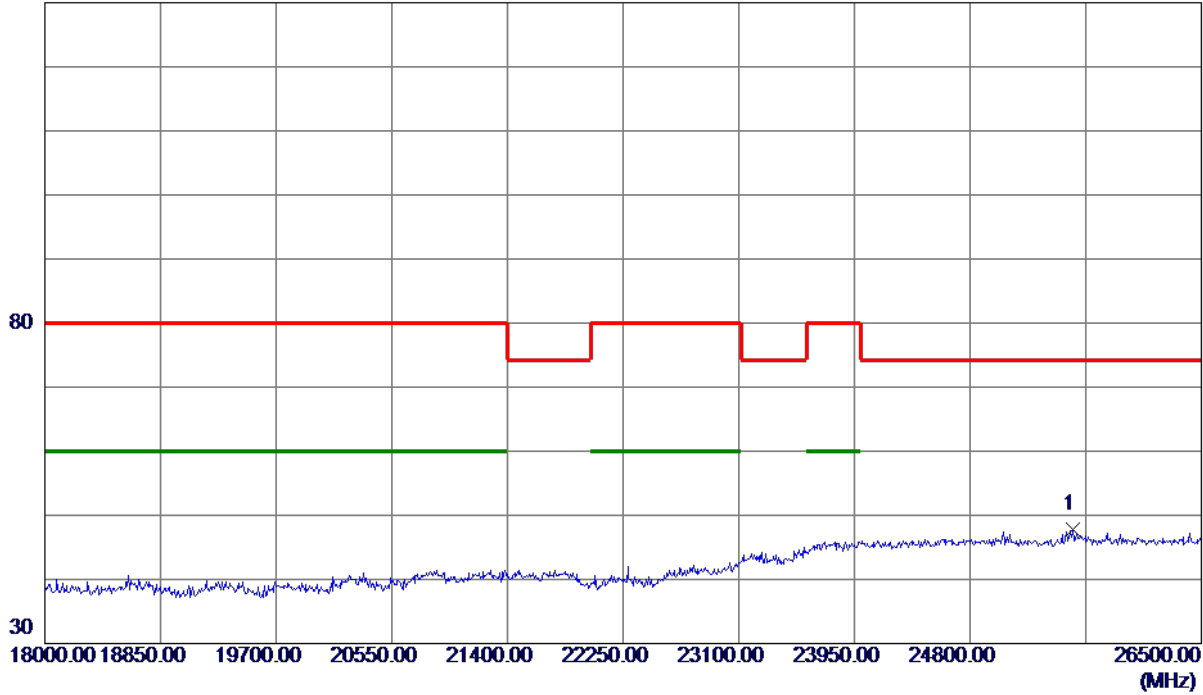


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	27.69	20.02	47.71	74.30	-26.59	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

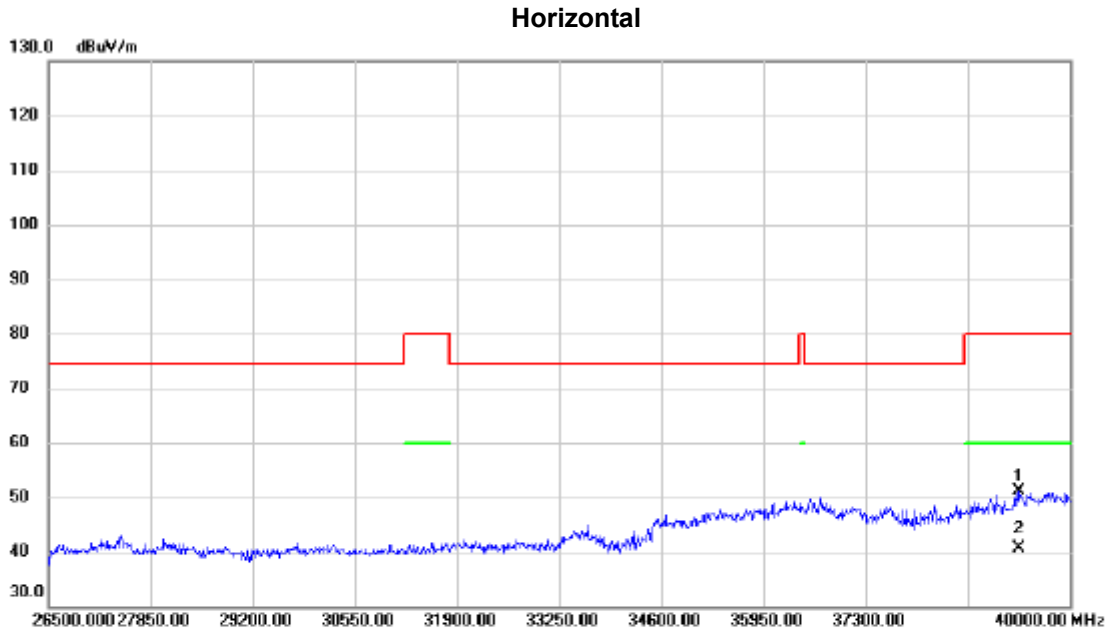

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39318.250	36.65	14.54	51.19	80.00	-28.81	peak	
2	*	39318.250	26.17	14.54	40.71	60.00	-19.29	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5825 MHz_242 Tone

Vertical

130 dBuV/m

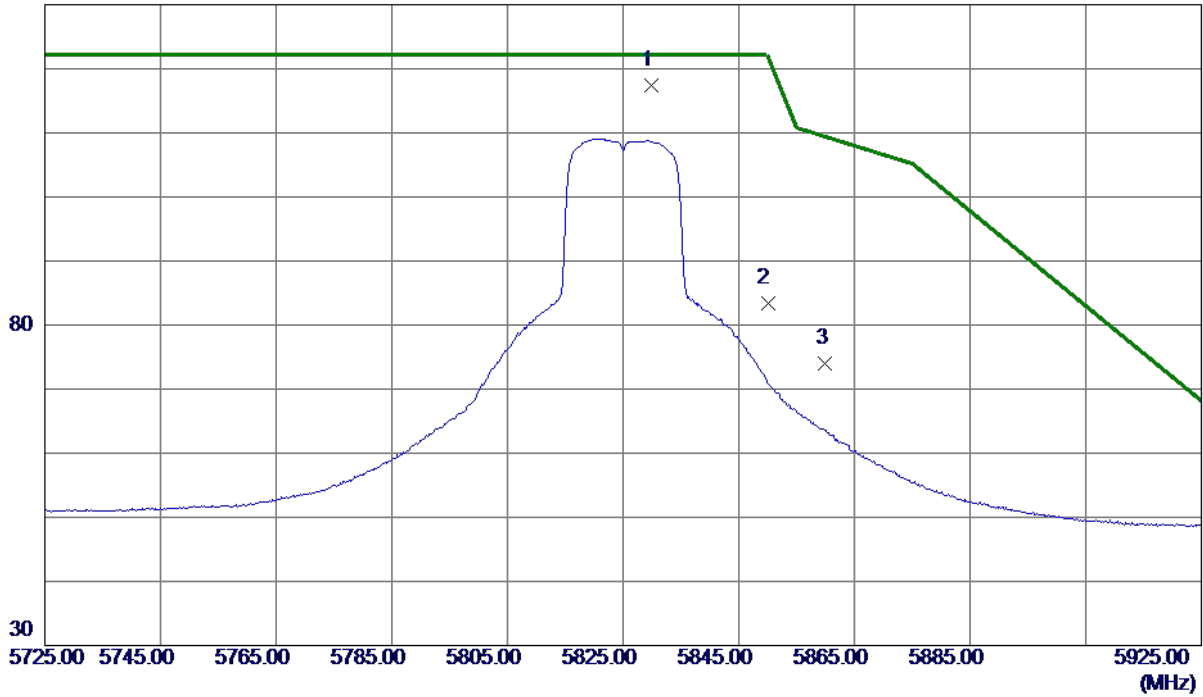

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5829.8000	99.44	17.96	117.40	122.20	-4.80	Peak	No Limit
2	5850.0000	65.32	18.02	83.34	122.20	-38.86	Peak	
3	5860.0000	56.03	18.05	74.08	109.40	-35.32	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5825 MHz_242 Tone

Horizontal

130 dBuV/m

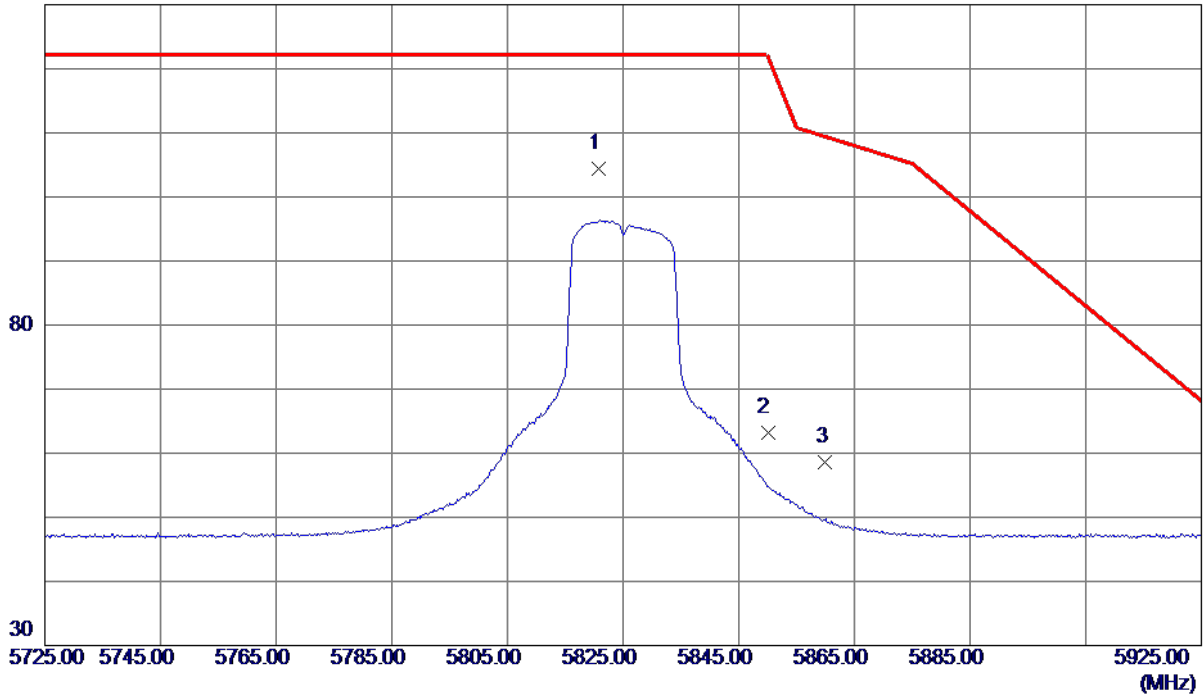

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5820.8000	86.38	17.94	104.32	122.20	-17.88	Peak	No Limit
2	5850.0000	45.13	18.02	63.15	122.20	-59.05	Peak	
3	5860.0000	40.47	18.05	58.52	109.40	-50.88	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5755 MHz_484 Tone

Vertical

130 dBuV/m

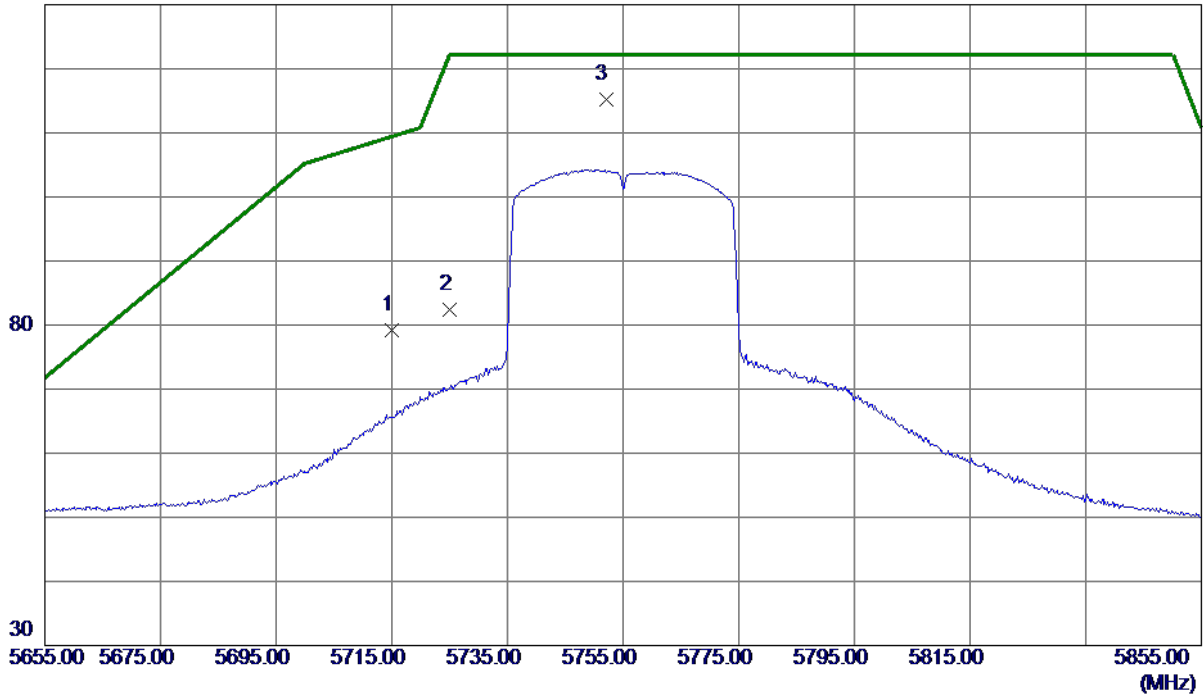


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	61.55	17.62	79.17	109.40	-30.23	Peak	
2	5725.0000	64.68	17.65	82.33	122.20	-39.87	Peak	
3 *	5752.0000	97.46	17.73	115.19	122.20	-7.01	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5755 MHz_484 Tone

Horizontal

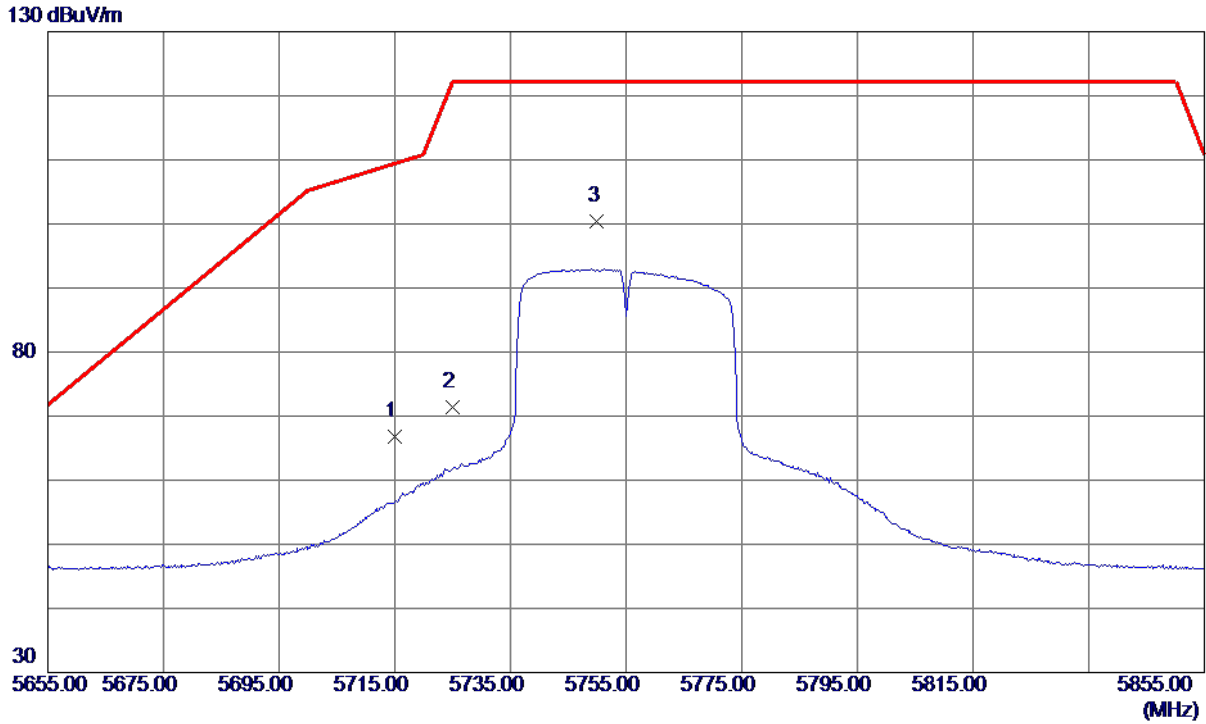

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	49.14	17.62	66.76	109.40	-42.64	Peak	
2	5725.0000	53.82	17.65	71.47	122.20	-50.73	Peak	
3 *	5750.0000	82.61	17.73	100.34	122.20	-21.86	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

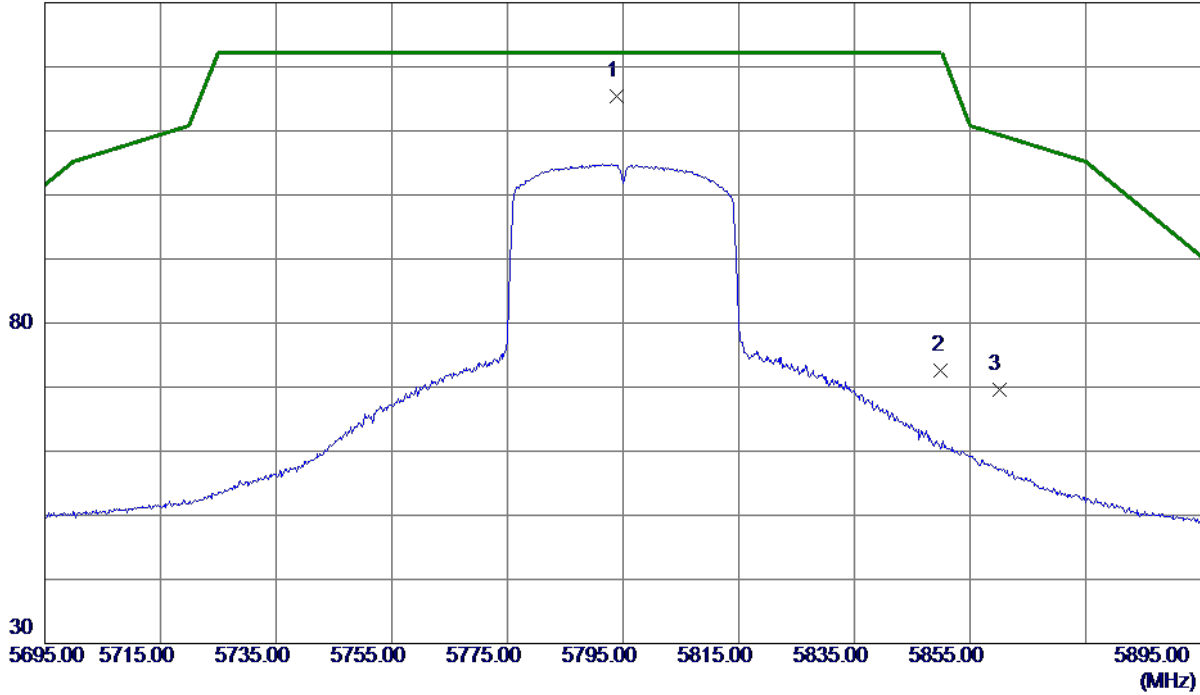

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5793.8000	97.46	17.86	115.32	122.20	-6.88	Peak	No Limit
2	5850.0000	54.55	18.02	72.57	122.20	-49.63	Peak	
3	5860.0000	51.61	18.05	69.66	109.40	-39.74	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

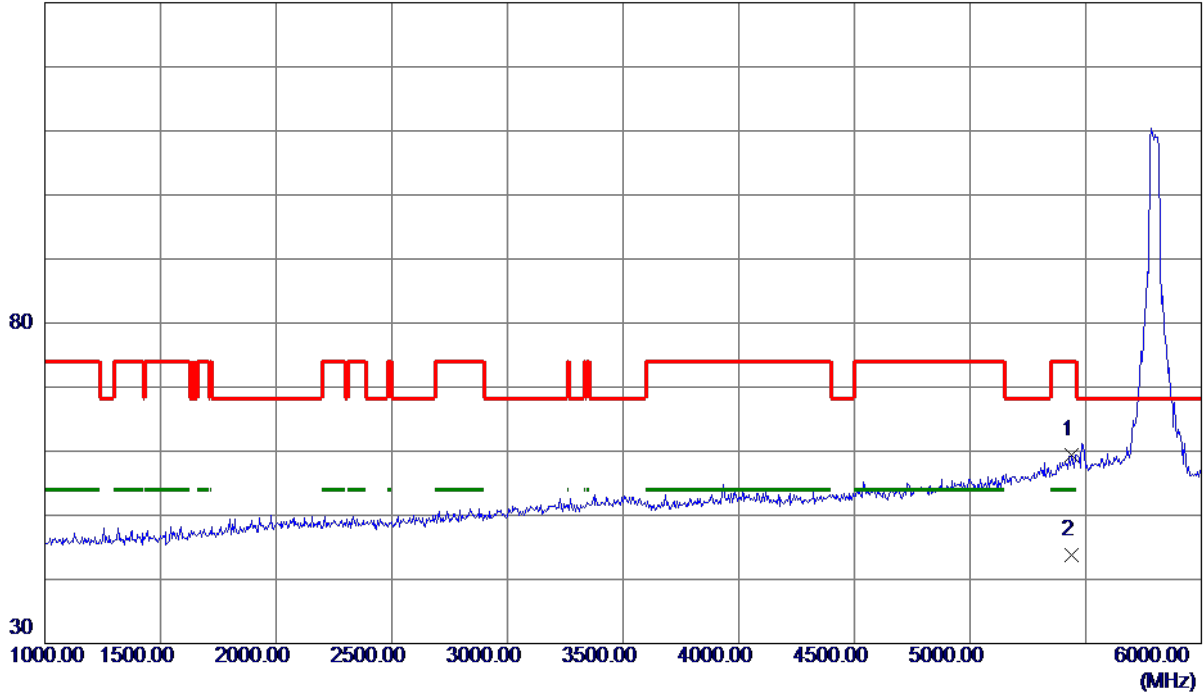

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5440.0000	42.52	16.84	59.36	74.00	-14.64	Peak	
2 *	5440.0000	27.03	16.84	43.87	54.00	-10.13	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

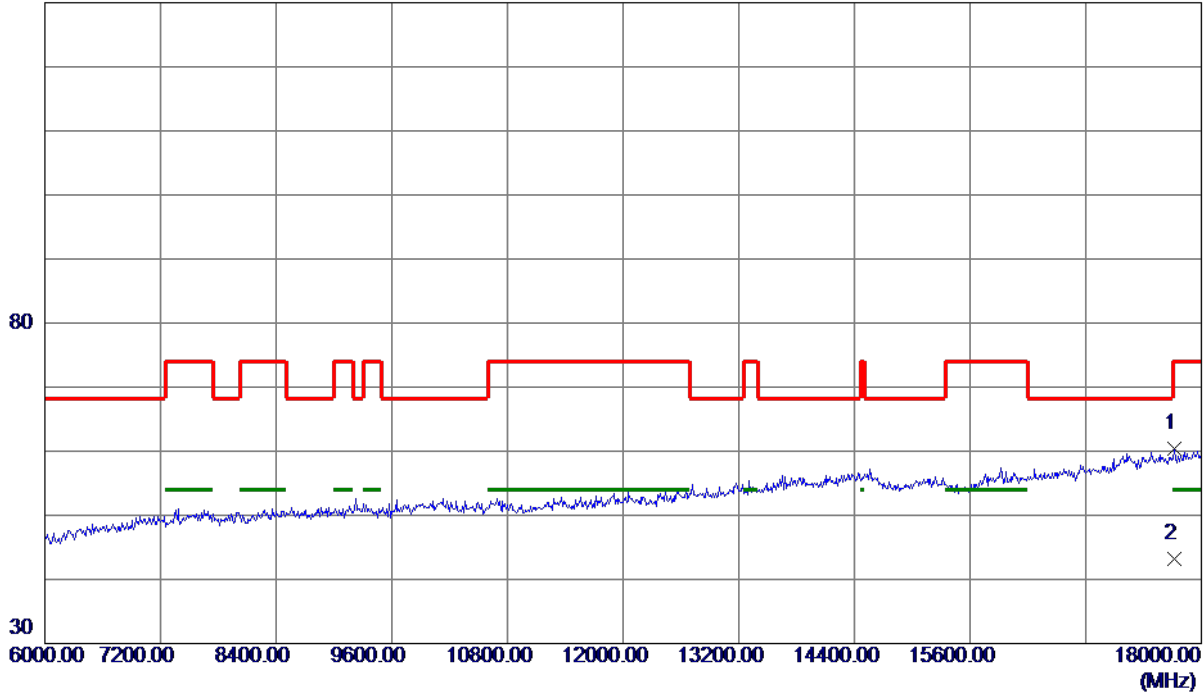

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17724.0000	38.27	22.13	60.40	74.00	-13.60	Peak	
2 *	17724.0000	21.13	22.13	43.26	54.00	-10.74	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

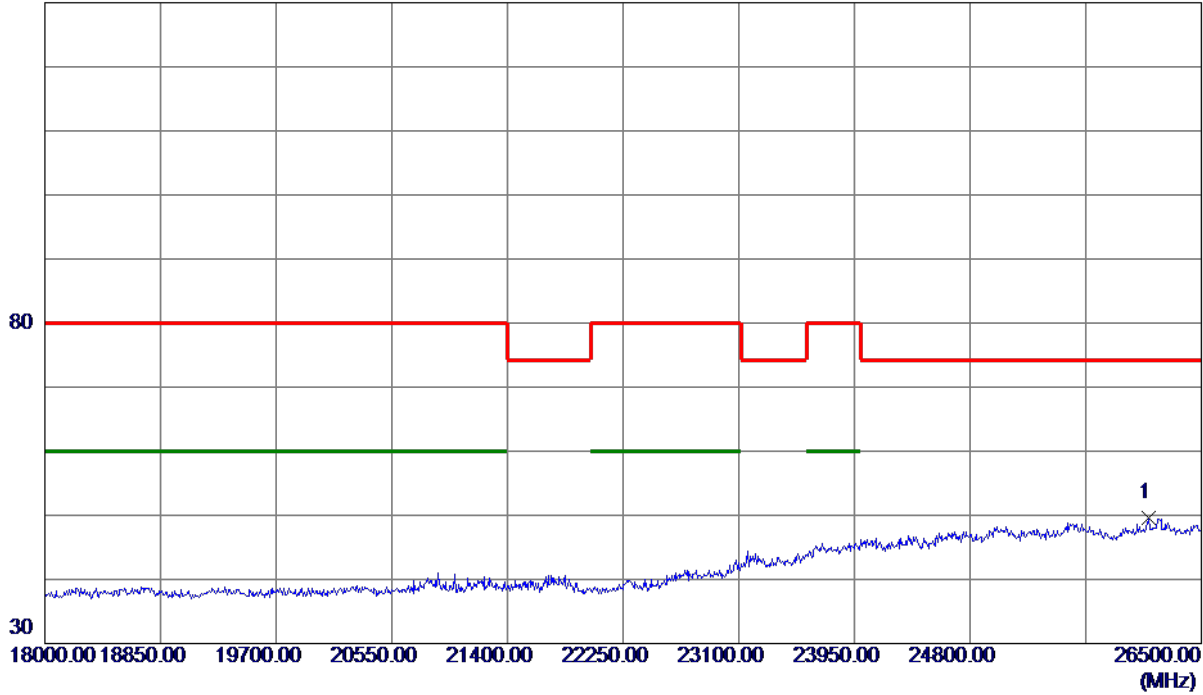


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26109.0000	29.39	20.12	49.51	74.30	-24.79	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

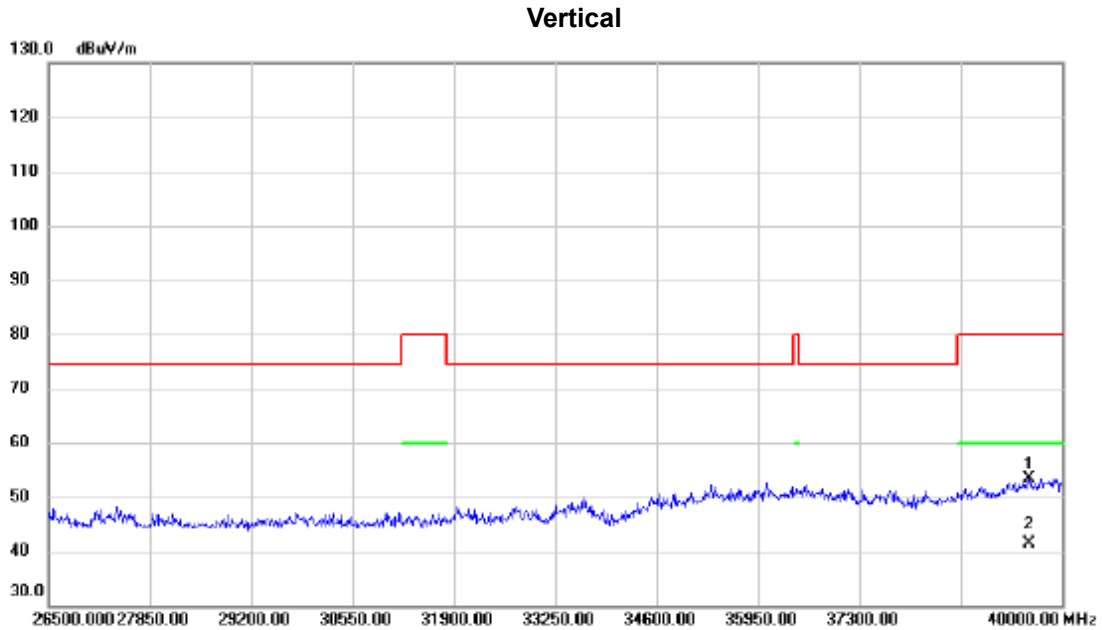

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39561.250	38.10	15.34	53.44	80.00	-26.56	peak	
2	*	39561.250	26.08	15.34	41.42	60.00	-18.58	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

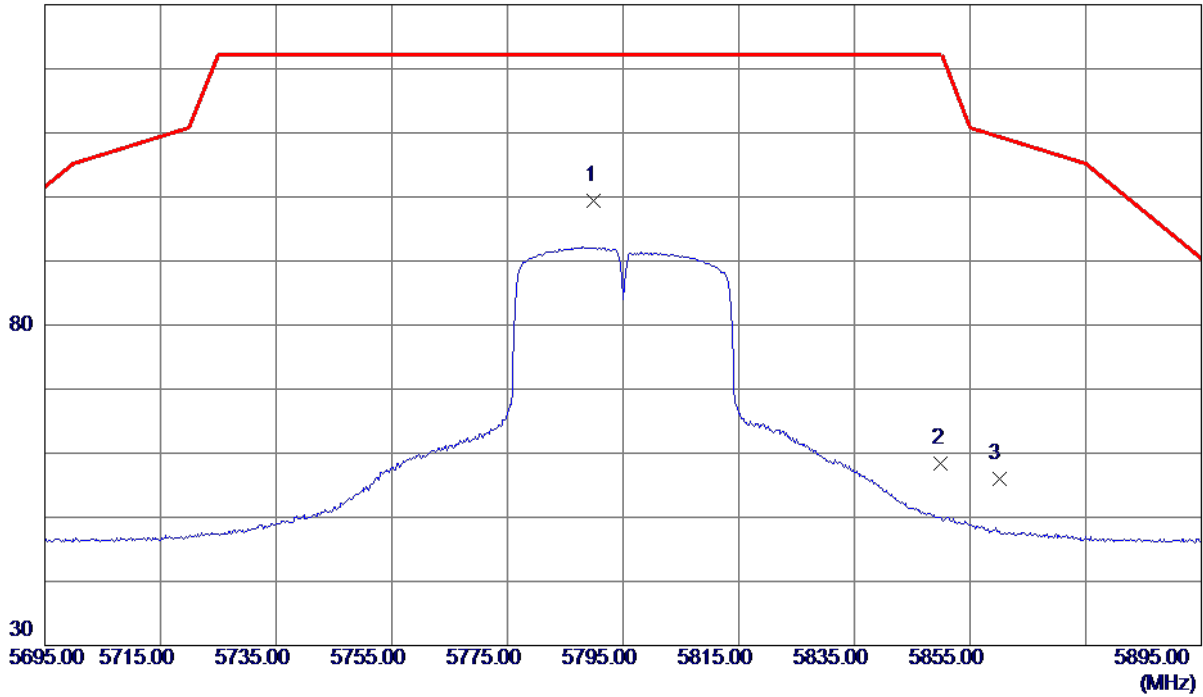

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5790.0000	81.64	17.85	99.49	122.20	-22.71	Peak	No Limit
2	5850.0000	40.34	18.02	58.36	122.20	-63.84	Peak	
3	5860.0000	37.94	18.05	55.99	109.40	-53.41	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

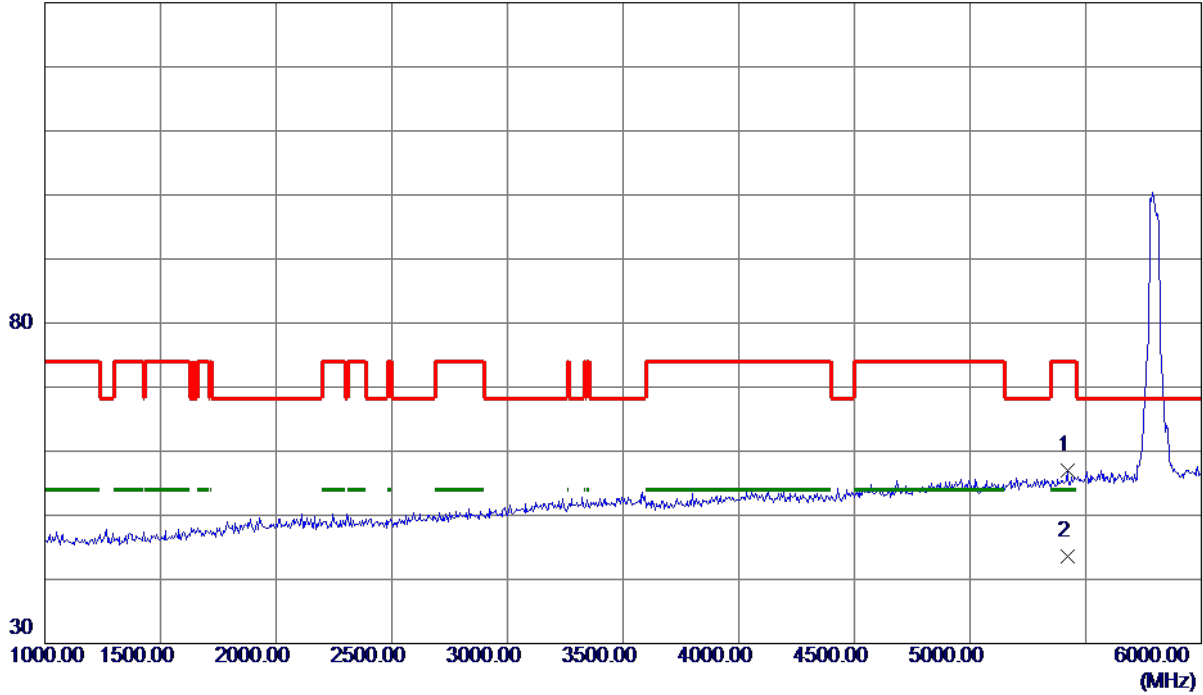

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5420.0000	40.13	16.80	56.93	74.00	-17.07	Peak	
2 *	5420.0000	26.76	16.80	43.56	54.00	-10.44	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

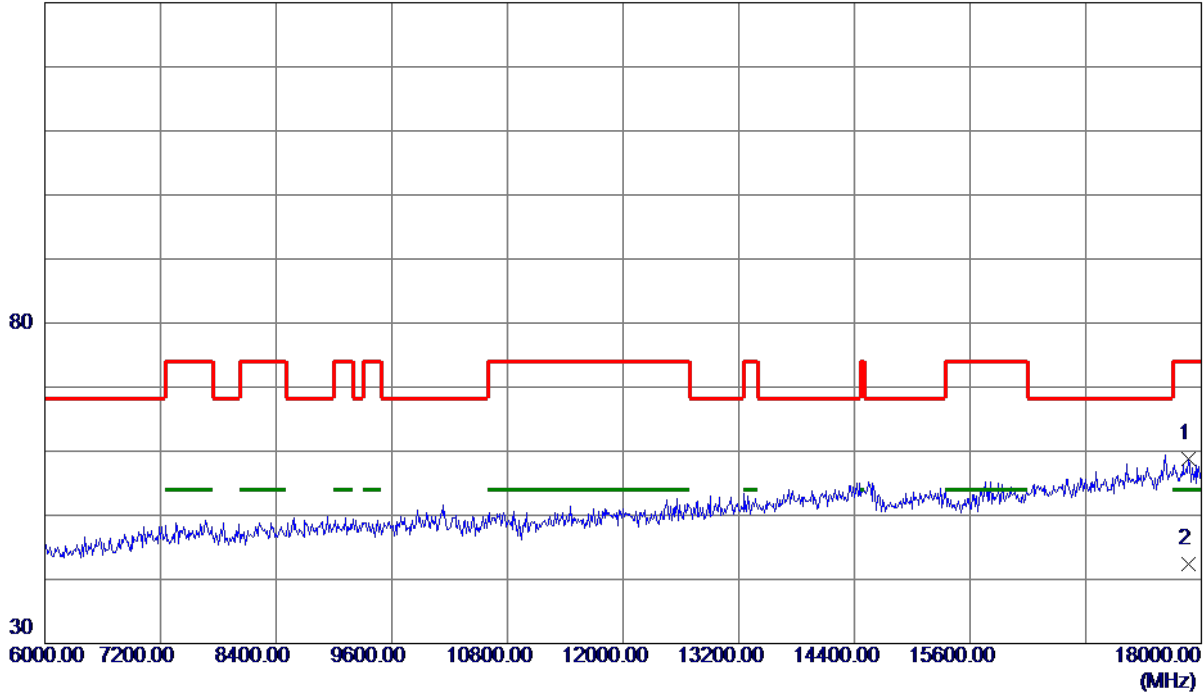

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17868.0000	36.60	22.22	58.82	74.00	-15.18	Peak	
2 *	17868.0000	20.23	22.22	42.45	54.00	-11.55	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

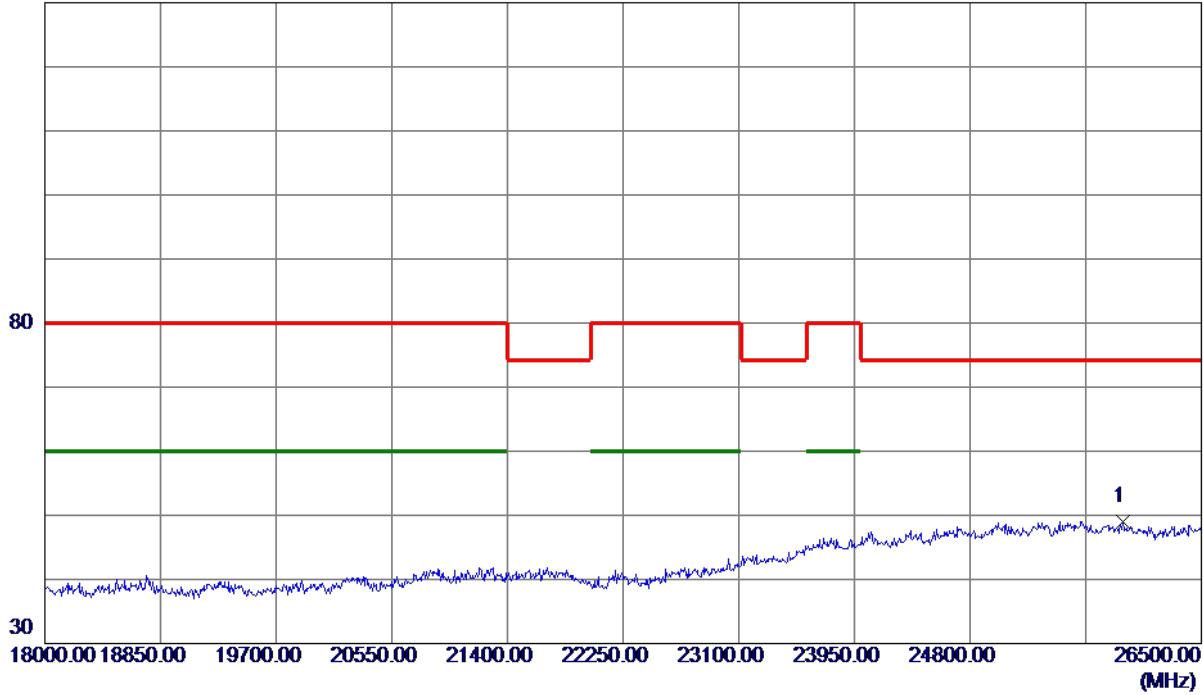


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25922.0000	29.00	20.00	49.00	74.30	-25.30	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

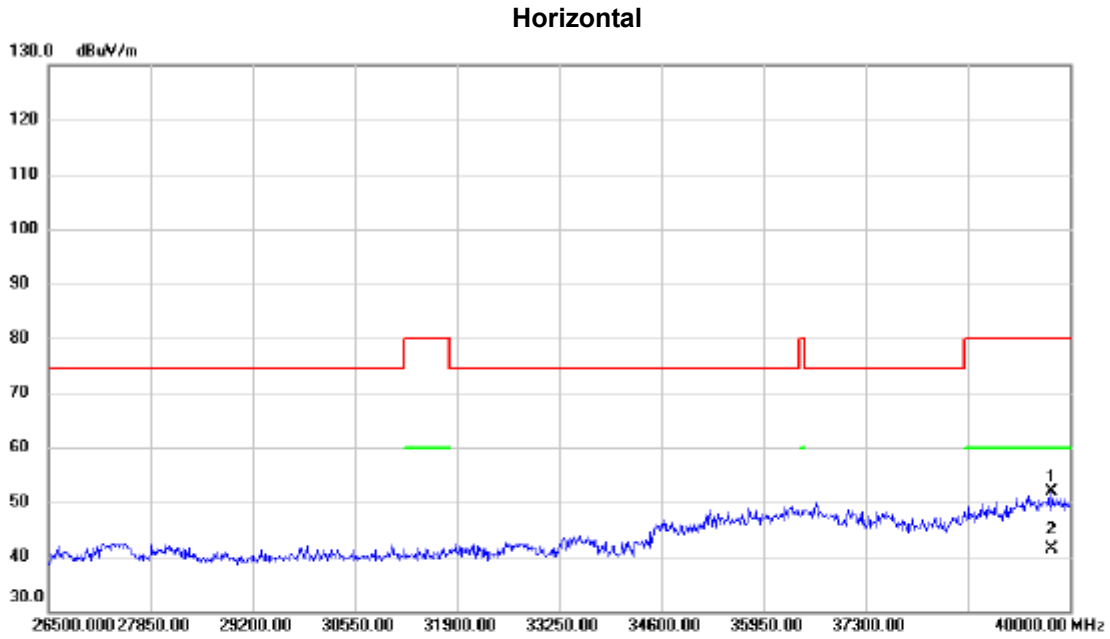

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39763.750	36.52	15.48	52.00	80.00	-28.00	peak	
2	*	39763.750	25.85	15.48	41.33	60.00	-18.67	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

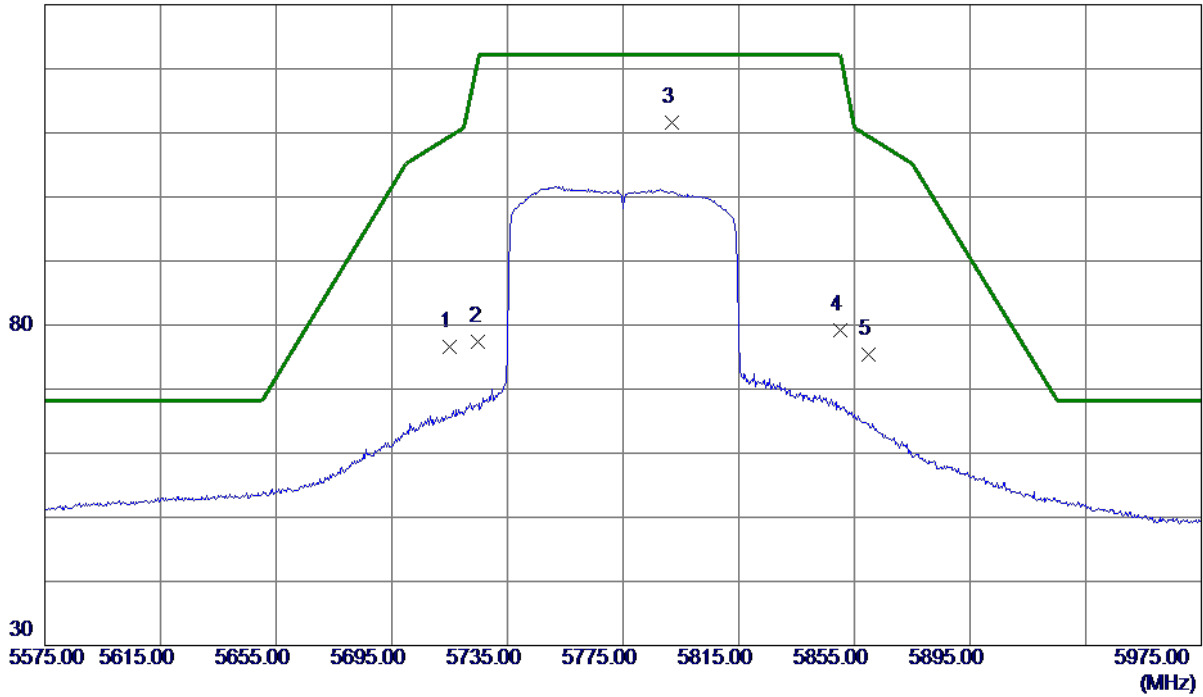

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	58.89	17.62	76.51	109.40	-32.89	Peak	
2	5725.0000	59.79	17.65	77.44	122.20	-44.76	Peak	
3 *	5791.8000	93.69	17.85	111.54	122.20	-10.66	Peak	No Limit
4	5850.0000	61.26	18.02	79.28	122.20	-42.92	Peak	
5	5860.0000	57.28	18.05	75.33	109.40	-34.07	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

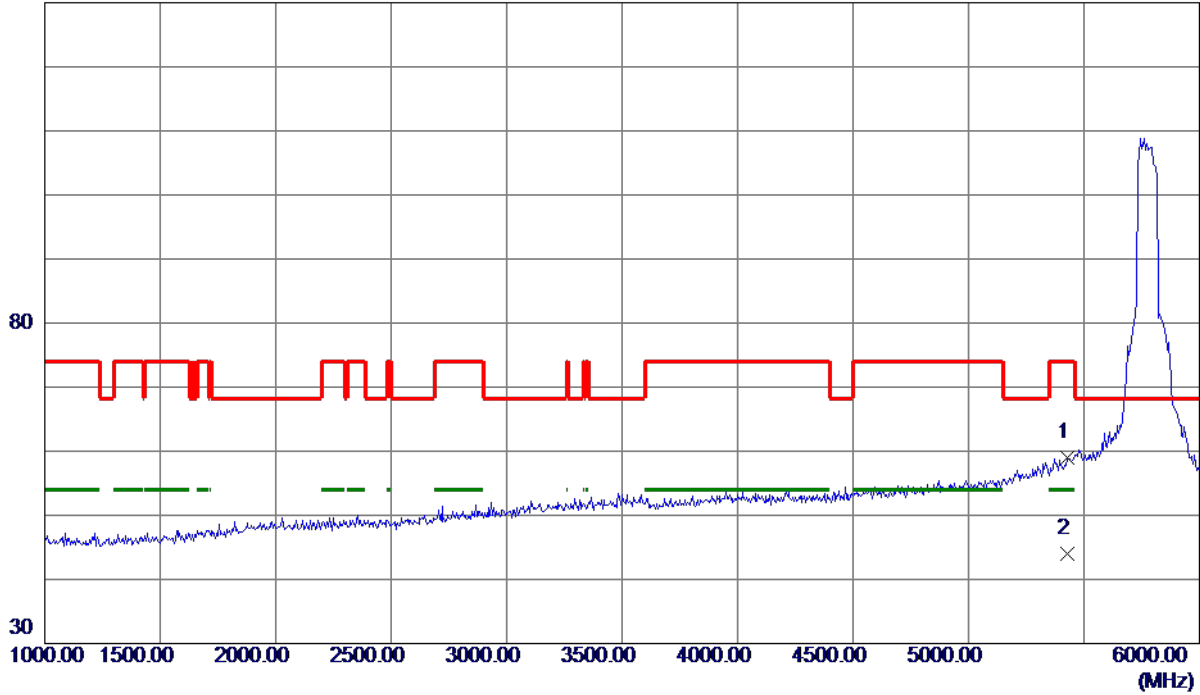

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5430.0000	42.15	16.82	58.97	74.00	-15.03	Peak	
2 *	5430.0000	27.12	16.82	43.94	54.00	-10.06	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

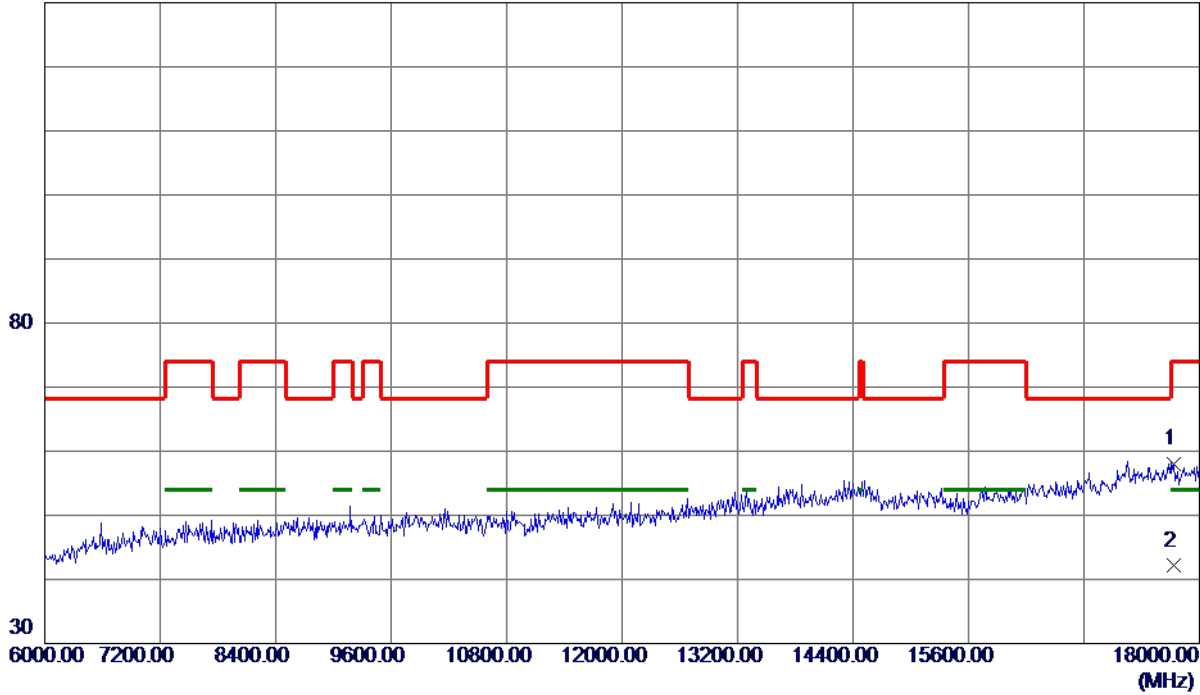

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17736.0000	35.80	22.14	57.94	74.00	-16.06	Peak	
2 *	17736.0000	19.96	22.14	42.10	54.00	-11.90	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

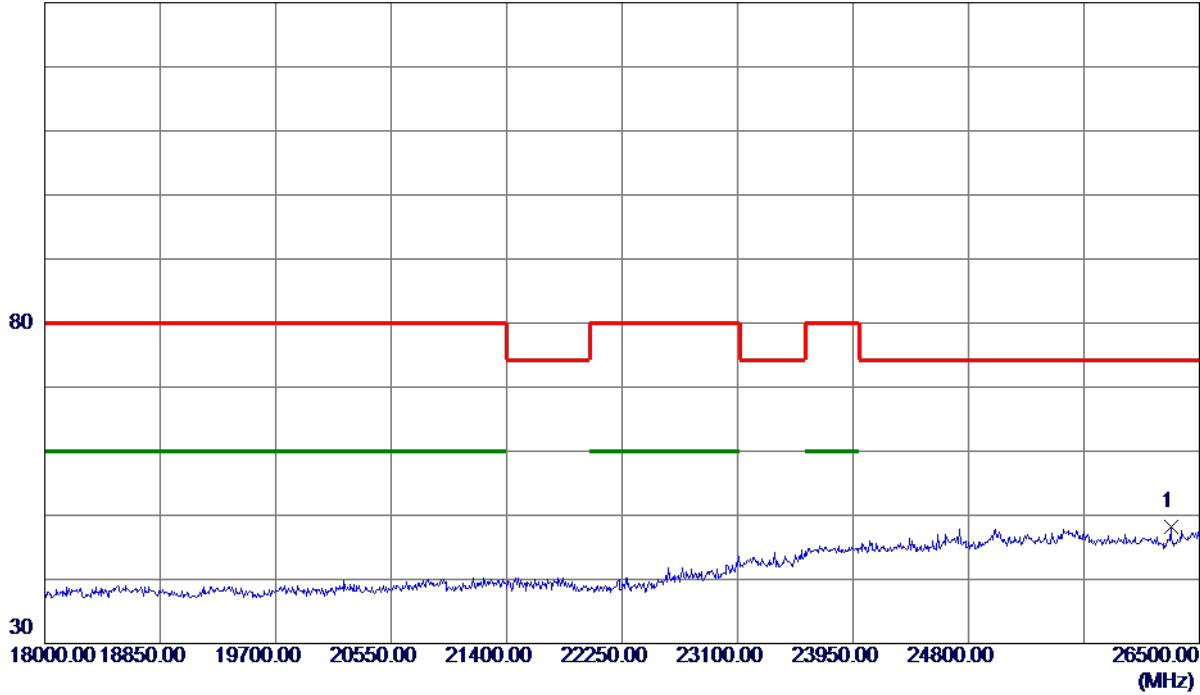


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26291.7500	27.85	20.32	48.17	74.30	-26.13	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

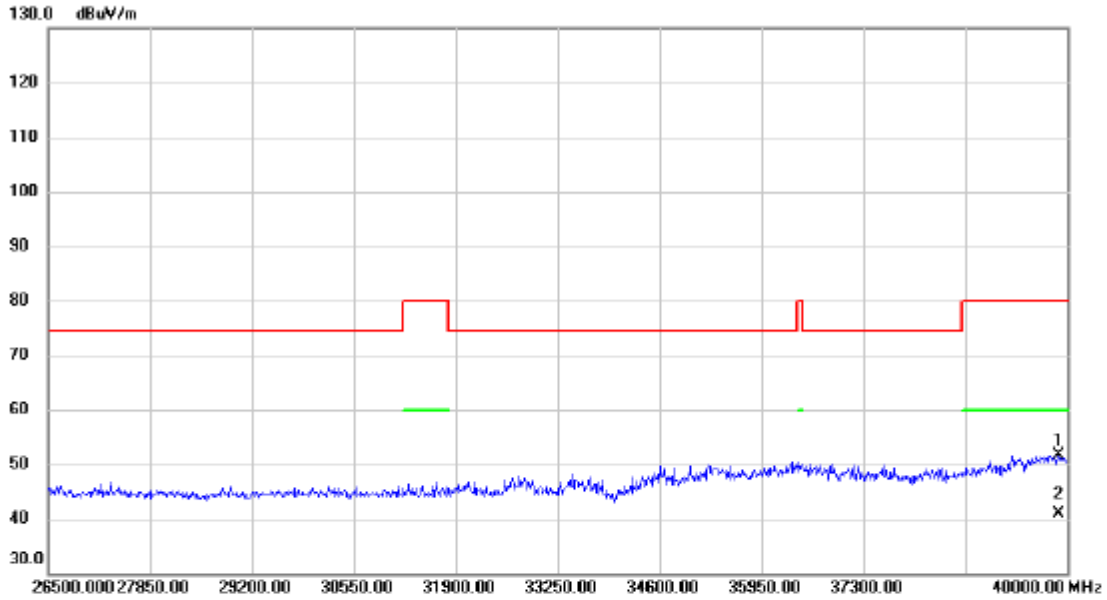

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39885.250	36.09	15.55	51.64	80.00	-28.36	peak	
2	*	39885.250	25.38	15.55	40.93	60.00	-19.07	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

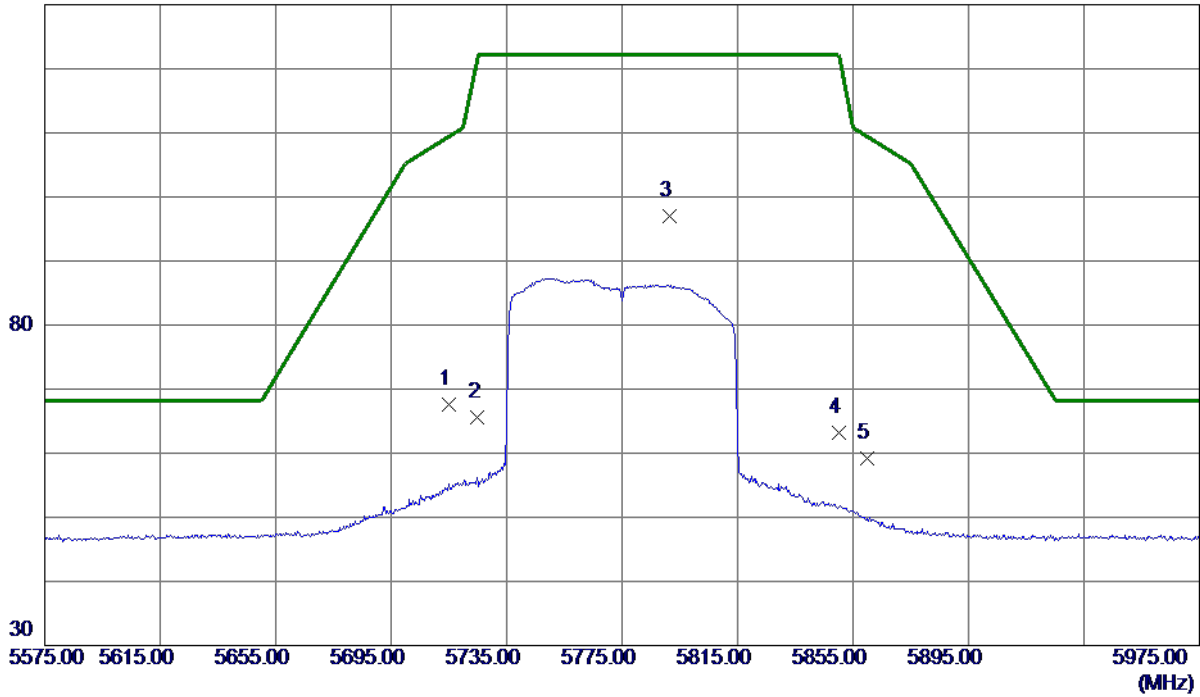

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	49.90	17.62	67.52	109.40	-41.88	Peak	
2	5725.0000	47.89	17.65	65.54	122.20	-56.66	Peak	
3 *	5791.4000	79.05	17.85	96.90	122.20	-25.30	Peak	No Limit
4	5850.0000	45.23	18.02	63.25	122.20	-58.95	Peak	
5	5860.0000	41.06	18.05	59.11	109.40	-50.29	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

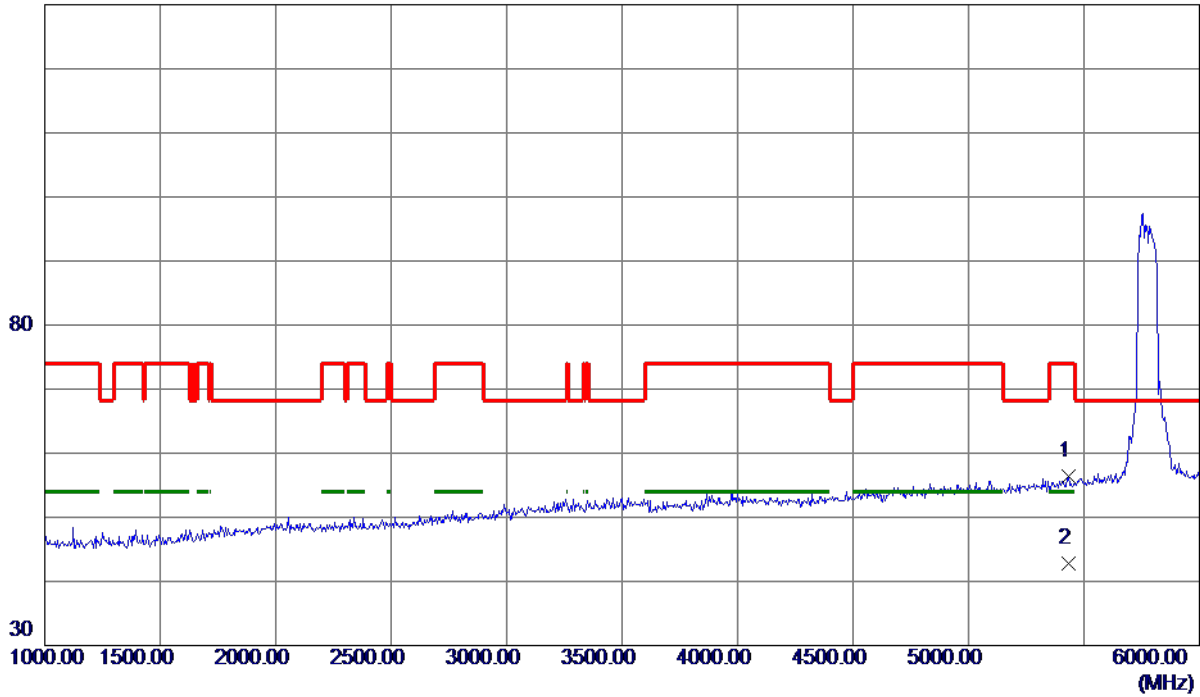

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5435.0000	39.49	16.83	56.32	74.00	-17.68	Peak	
2 *	5435.0000	26.06	16.83	42.89	54.00	-11.11	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

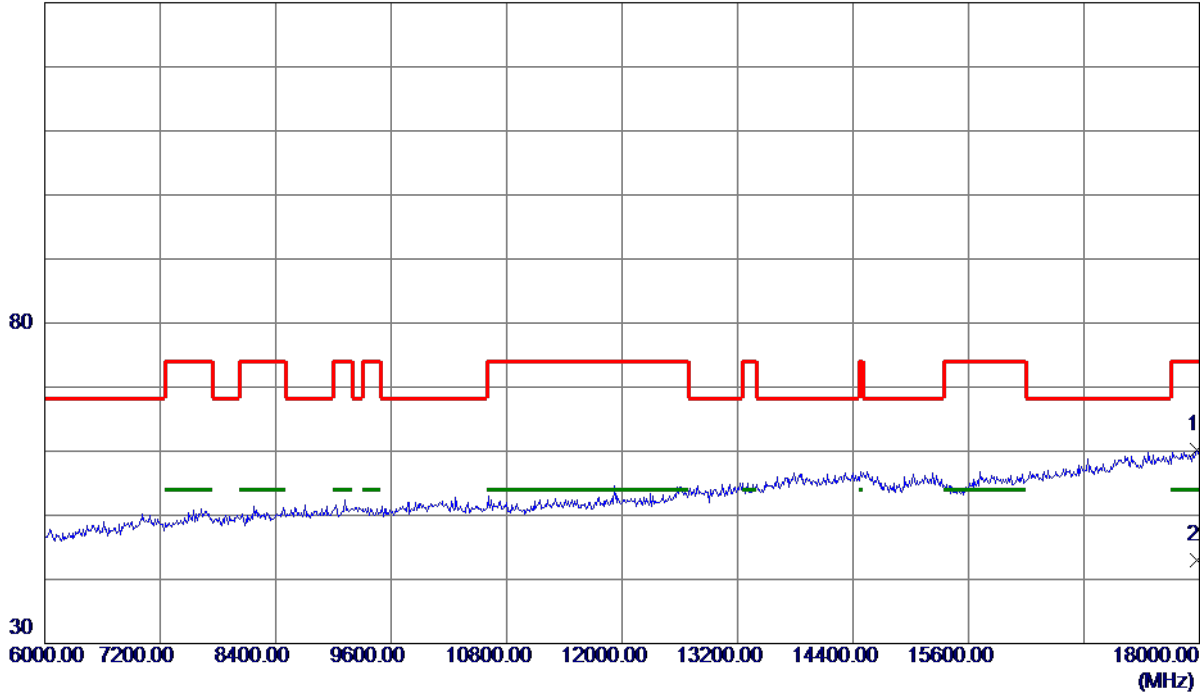

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17976.0000	37.95	22.29	60.24	74.00	-13.76	Peak	
2 *	17976.0000	20.79	22.29	43.08	54.00	-10.92	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

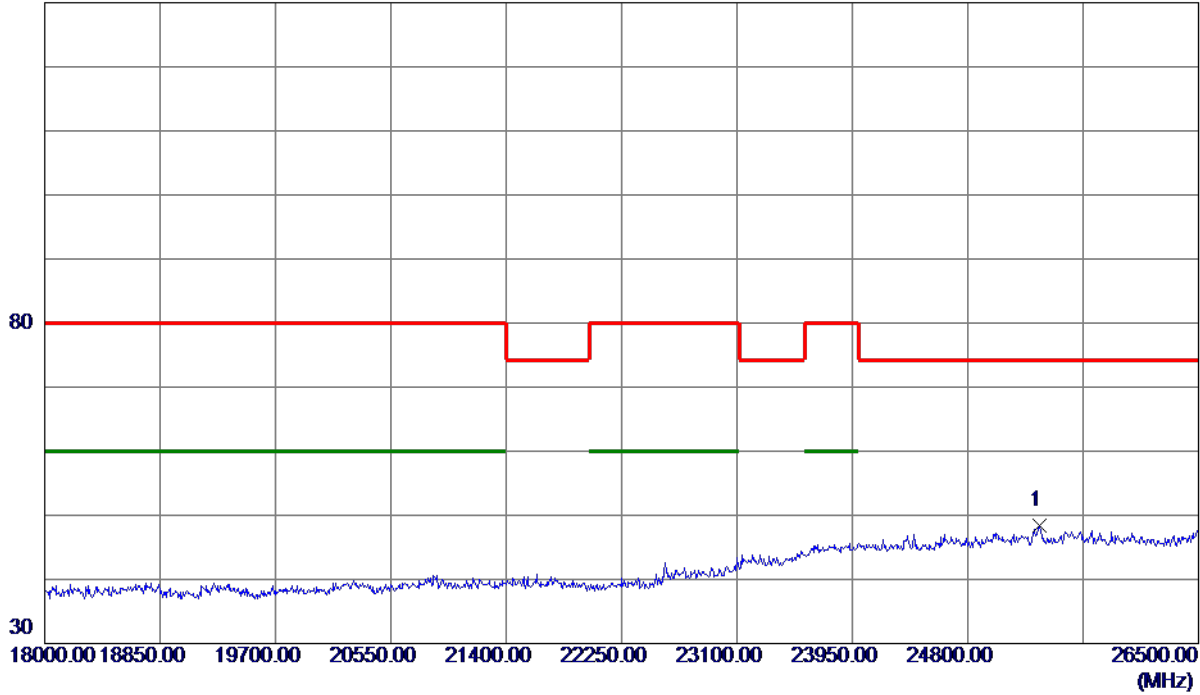


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25327.0000	28.43	20.03	48.46	74.30	-25.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

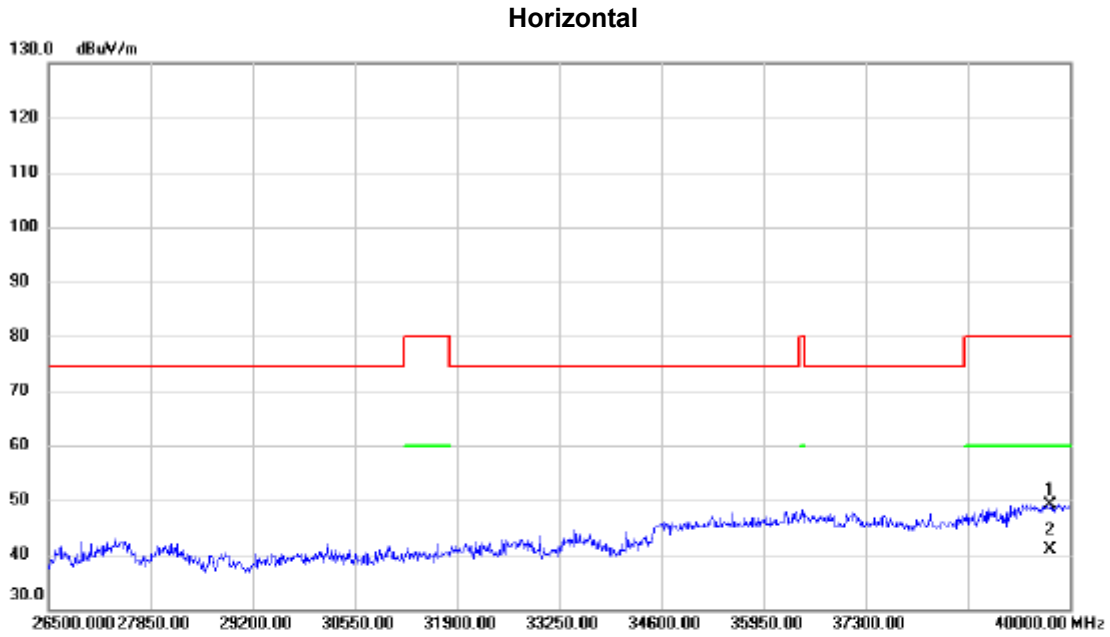

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39743.500	33.75	15.46	49.21	80.00	-30.79	peak	
2	*	39743.500	25.45	15.46	40.91	60.00	-19.09	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.